

LOVOL

Lovol Tractor Illustration books of parts

(TS4A504-029C)

Lovol Heavy Industry International Trading Co.,Ltd


CONTENTS

◆ A498BT1-25QH ENGINE ASSY	1
◆ TS04110060000K AIR FILTER SYSTEM ASSEMBLY	40
◆ TS04131060000K COOLING SYSTEM ASSEMBLY	42
◆ TS04132030000K RADIATOR BACKING BOARD INSTALLATION ASSEMBLY	44
◆ TS04201010000 HAND THROTTLE CONTROL ASSEMBLY	46
◆ TS04202010000 FOOT THROTTLE CONTROL ASSEMBLY	48
◆ TS04203010000K PULL WIRE ASSEMBLY	50
◆ TB550. 211A CLUTCH SUBASSEMBLY	52
◆ TS04212030000K CLUTCH CONTROL ASSEMBLY	54
◆ TS04220010000 EXHAUST SYSTEM ASSEMBLY	57
◆ TC02311210000 FRONT DRIVING AXLE ASSEMBLY	59
◆ TB554. 312 FRONT BRACKET ASSEMBLY	74
◆ TB400. 35C TOWING MECHANISM INSTALLATION ASSEMBLY	76
◆ TB604. 371 GEARBOX HOUSING ASSEMBLY	78
◆ TB604. 372T MAIN GEARSHIFT ASSEMBLY	80
◆ TB604. 373T AUXILIARY GEARSHIFT ASSEMBLY	84
◆ TS04374010000 GEARBOX CONTROL MECHANISM ASSEMBLY	87
◆ TB604. 375B BREATH ASSEMBLY	95
◆ TB554. 381 SHUTTLE SHIFT ASSEMBLY	97
◆ TB504. 382 REAR AXLE CENTRAL TRANSMISSION ASSEMBLY	99
◆ TS04383010000 DIFFERENTIAL LOCK CONTROL MECHANISM ASSEMBLY	103
◆ TC02384010000K REAR AXLE HOUSING ASSEMBLY	105
◆ TS04385010000 SHUTTLE SHIFT CONTROL MECHANISM	107
◆ TB450. 391 LEFT FINAL TRANSMISSION ASSEMBLY	109
◆ TB450. 392 RIGHT FINAL TRANSMISSION ASSEMBLY	112
◆ TC04401080000 REDIRECTOR OR STEERING COLUMN ASSEMBLY	115
◆ TC02402650000K FULL HYDRAULIC STEERING PIPE ASSEMBLY	117
◆ TC02411010000K PTO GEAR ASSEMBLY	122
◆ TB550. 412A PTO SHAFT ASSEMBLY	125
◆ TS04413010000 PTO CONTROL ASSEMBLY	127
◆ TB554. 421E TRANSFER CASE ASSEMBLY	130
◆ TB454. 422 TRANSFER CASE TRANSMISSION ASSEMBLY	133
◆ TS04423010000K TRANSFER CASE CONTROL ASSEMBLY	137
◆ TB504. 431B LEFT BRAKE ASSEMBLY	139
◆ TB504. 432B RIGHT BRAKE ASSEMBLY	141

◆ TS04433040000K BRAKE SYSTEM CONTROL ASSEMBLY	143
◆ TC02440080000K SEAT INSTALLATION ASSEMBLY	149
◆ TS04451050000K DRIVER' S CAB ASSEMBLY	151
◆ TS04453010000 UPHOLSTERY ASSEMBLY	166
◆ TS04455010000 BACK REAR MUD GUARD DECORATION PART	170
◆ TS04456010000 DASHBOARD ASSEMBLY	172
◆ TS04457010000 FRONT CONNECTING ASSEMBLY	174
◆ TS04458010000 REAR CONNECTING ASSEMBLY	176
◆ TS04459010000 INSULATION LAYER	178
◆ TS04471010000K BONNET ASSEMBLY	180
◆ TS04473010000 BONNET LOCKING DEVICE ASSEMBLY	186
◆ TS04475010000K BONNET SEAL INSTALLATION ASSEMBLY	188
◆ TB400. 475A LEFT FRONT MUD GUARD ASSEMBLY	190
◆ TB400. 476A RIGHT FRONT MUD GUARD ASSEMBLY	192
◆ TS04481040000K ENGINE HARNESS INSTALLATION ASSEMBLY	194
◆ TS04482090000K BODY HARNESS INSTALLATION ASSEMBLY	196
◆ TS04483020000K FRONT LAMP HARNESS INSTALLATION ASSEMBLY	198
◆ TS04484080000K REAR LAMP HARNESS INSTALLATION ASSEMBLY	200
◆ TS04485010000 BATTERY INSTALLATION ASSEMBLY	203
◆ TS04486010000K TOP LIGHT HARNESS INSTALLATION ASSEMBLY	205
◆ TS04487010000 COMBINED INSTRUMENT ASSEMBLY	208
◆ TB550. 489 PREHEATING EQUIPMENT ASSEMBLY	210
◆ TS04490010000 TOOL BOX ASSEMBLY	212
◆ TS04501010000 OIL TANK INSTALLATION ASSEMBLY	214
◆ TS04503010000 OIL CONVEYING PIPE ASSEMBLY	218
◆ TC02530010000K TOW	220
◆ TC02551230000K LIFTER INSTALLATION ASSEMBLY	222
◆ TS04552010000 LIFTER OPERATION ASSEMBLY	228
◆ TC02553070000K HYDRAULIC AUXILIARY OIL TANK ASSEMBLY	230
◆ TC02561060000K SUSPENSION ASSEMBLY	232
◆ TC02581510000K OIL PUMP/PIPE/FILTER ASSEMBLY	236
◆ TC02582100000K MULTI-WAY VALVE OIL PIPE ASSEMBLY	238
◆ TB300. 583A SINGLE-WAY HYDRAULIC OUTPUT ASSEMBLY 2	241
◆ TC03620010000K SAFETY BELT INSTALLATION ASSEMBLY	243
◆ TC02740010000K FRONT BALLAST ASSEMBLY	245
◆ TS04741010000K FRONT BALLAST BRACKET ASSEMBLY	247
◆ TS04801010000K PNEUMATIC BRAKE VALVE ASSEMBLY	249

◆ TS0480201000K AIR CYLINDER INSTALLATION ASSEMBLY	251
◆ TS0480301000K AIR CONVEYING PIPELINE ASSEMBLY	253
◆ TS0481104000K AIR CONDITION ASSEMBLY-CAB	257
◆ TS0481204000K AIR CONDITION ASSEMBLY-ENGINE	259
◆ FT300.91.001 REAR BALLAST ASSEMBLY	261

A498BT1-25QH ENGINE ASSY-1

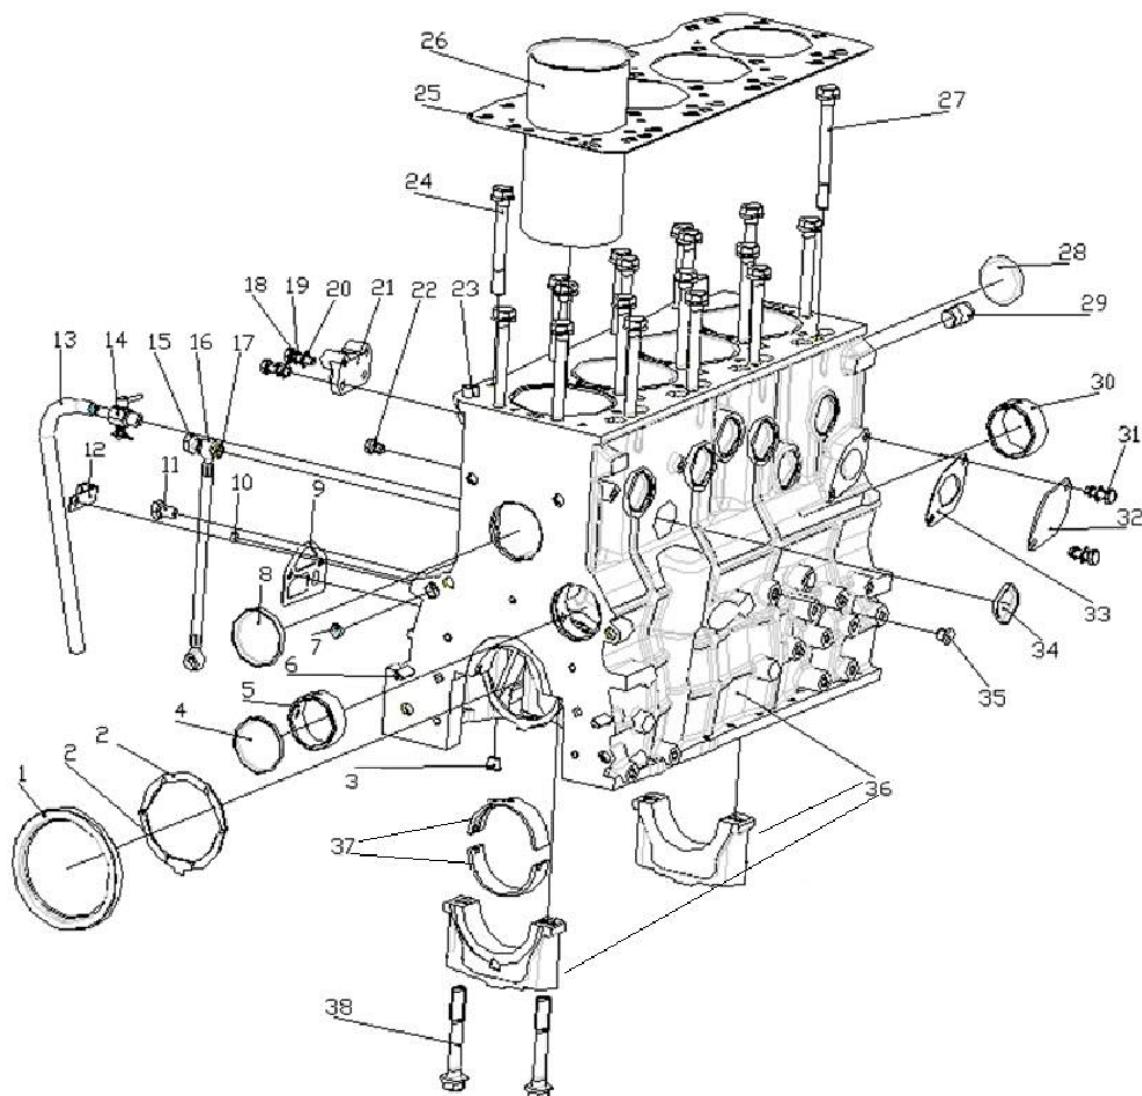


A498BT1-25QH ENGINE ASSY-1

No.	Part No.	Description	Ver-sion	QTY.	Remark
	A498BT1-25QH	ENGINE ASSY			
1	490B-01036	REAR OIL SEAL		1	
2	495B-01022A/01026A	CRANKSHAFT THRUST PIECE		2	
3	490B-01027	MIDDLE PLUG		1	
4	490B-01009	PLUG 58		1	
5	495B-01008A	REAR CAMSHAFT BUSH		1	
6	GBT119.1-10X24	COLUMN PIN		2	
7	490B-01080	BOWL SHIM 15		2	
8	495B-01050	BOWL SHIM 60		1	
9	490B-01073	OIL FILTER GASKET		1	
10	490B-01029	SCREW PLUG R1/8		3	
11	490B-01081-1	PLUG		1	
12	490BT-01105	DRAIN PIPE FIXING BRACKET		1	
13	HG4-404-10X400	RUBBER PIPE		1	
14	490BT-01100	DRAIN SWITCH		1	
15	490BT-21003	OIL INLET T-JOINT OF AIR PUMP		1	
16	490B-21010	PIPE		1	
17	JBT982-10	COMBINED SEAL GASKET		2	
18	GBT5783-M8X25	HEXAGON BOLT		2	
19	GBT93-8	SPRING WASHER		4	
20	GBT97.1-8	WASHER		4	
21	490B-01076B	FUEL FILTER MAT PLATE		1	
22	490B-21002	HEXAGON PLUG		1	
23	GBT119.1-16X20	COLUMN PIN		2	
24	490B-01003A	BOLT		4	
25	4D35T-01004	CYLINDER COVER GASKET		1	
26	A498B-01005	CYLINDER BUSH		4	
27	490B-01002A	BOLT		14	
28	495B-01047	BOWL SHIM 50		1	
29	490B-01074	CONNECTING TUBE		1	
30	495B-01007A	CAMSHAFT BUSH		2	
31	GBT5783-M8X18	HEXAGON BOLT		2	
32	A490BZL-01082-1	COVER PLATE		1	

A498BT1-25QH ENGINE ASSY-1 (cont 'd.)

No.	Part No.	Description	Ver-sion	QTY.	Remark
33	490B-01012	WATER INLET PIPE GASKET		1	
34	490B-01079	BOWL SHIM 40		11	
35	A498BZ-01029	SCREW PLUG		2	
36	A498B-01001	CYLINDER BLOCK		1	
37	495B-01033A/01034A	MAIN BEARING		5	
38	A498B-01019A	MAIN BEARING BOLT M12X32		10	


A498BT1-25QH ENGINE ASSY-2

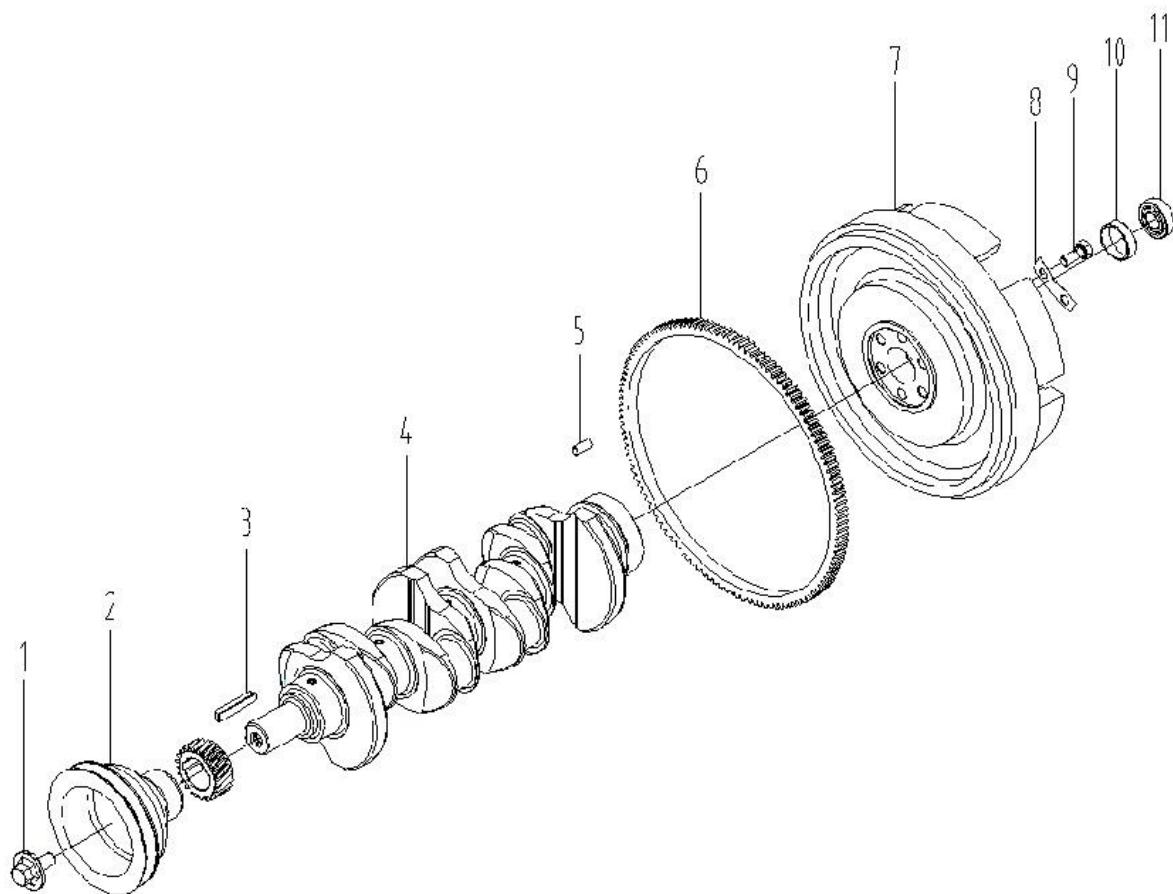

A498BT1-25QH ENGINE ASSY-2

No.	Part No.	Description	Ver-sion	QTY.	Remark
1	490B-05008	BOLT		1	
2	490BT-05006-1	CRANKSHAFT V-BELT		1	
3	GBT1096-C12X8X63	KEY		1	
4	495B-05004A	CRANK SHAFT		1	
5	GBT119.1-8X24	PIN		1	
6	490B-05102	FLYWHEEL GEAR RING		1	
7	490BT-05101-2	FLY WHEEL		1	
8	490B-05001-1	FLYWHEEL BOLT SAFETY PIECE		3	
9	490BT-05002C	FLYWHEEL BOLT		6	
10	490BT-05120C	FLYWHEEL BEARING RETAINER RING		1	
11	GBT276-6204-2Z	ROLLING BEARING		1	


A498BT1-25QH ENGINE ASSY-3

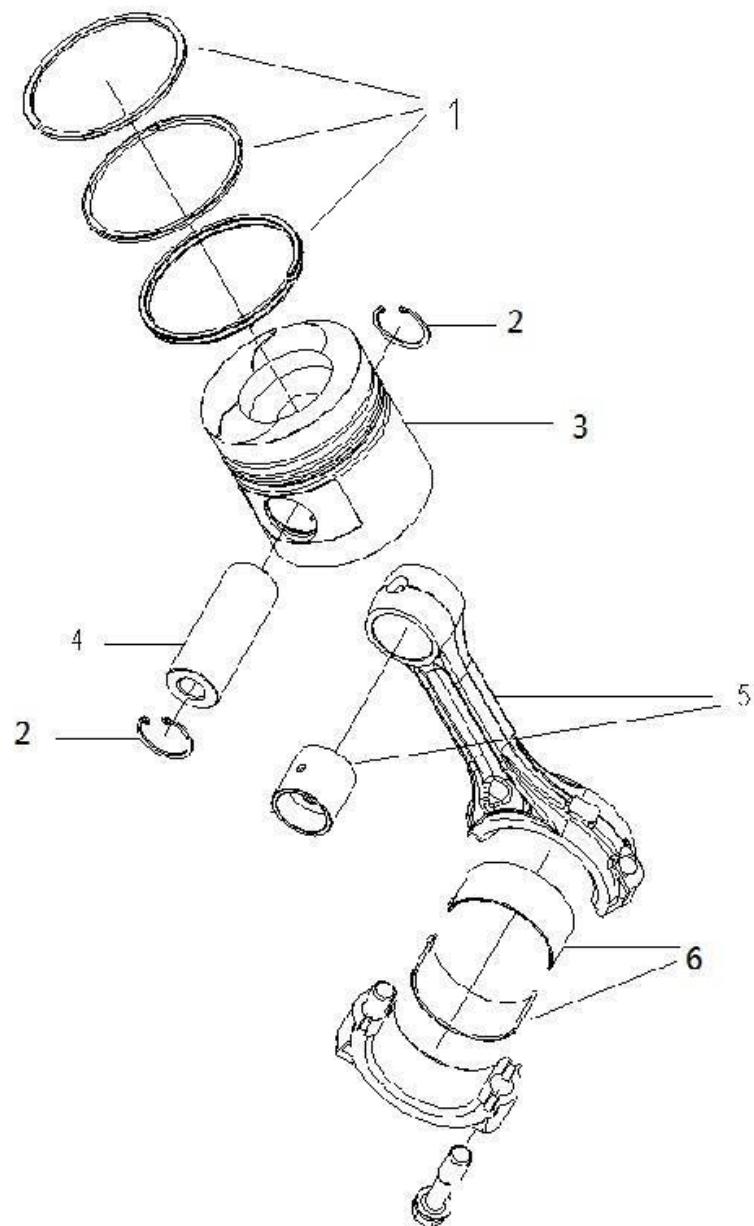

A498BT1-25QH ENGINE ASSY-3

No.	Part No.	Description	Ver-sion	QTY.	Remark
1	498B-04002 (CK)	PISTON RING ASSEMBLY		4	
2	GBT893.1-34	RETAINER RING 34		8	
3	A498B-04001-1A	PISTON		4	
4	A498B-04004A	PISTON PIN		4	
5	A498B-04200	CONNECTING ROD ASSEMBLY		4	
6	495B-04005-1A	CONNECTING ROD TILE		8	


A498BT1-25QH ENGINE ASSY-4

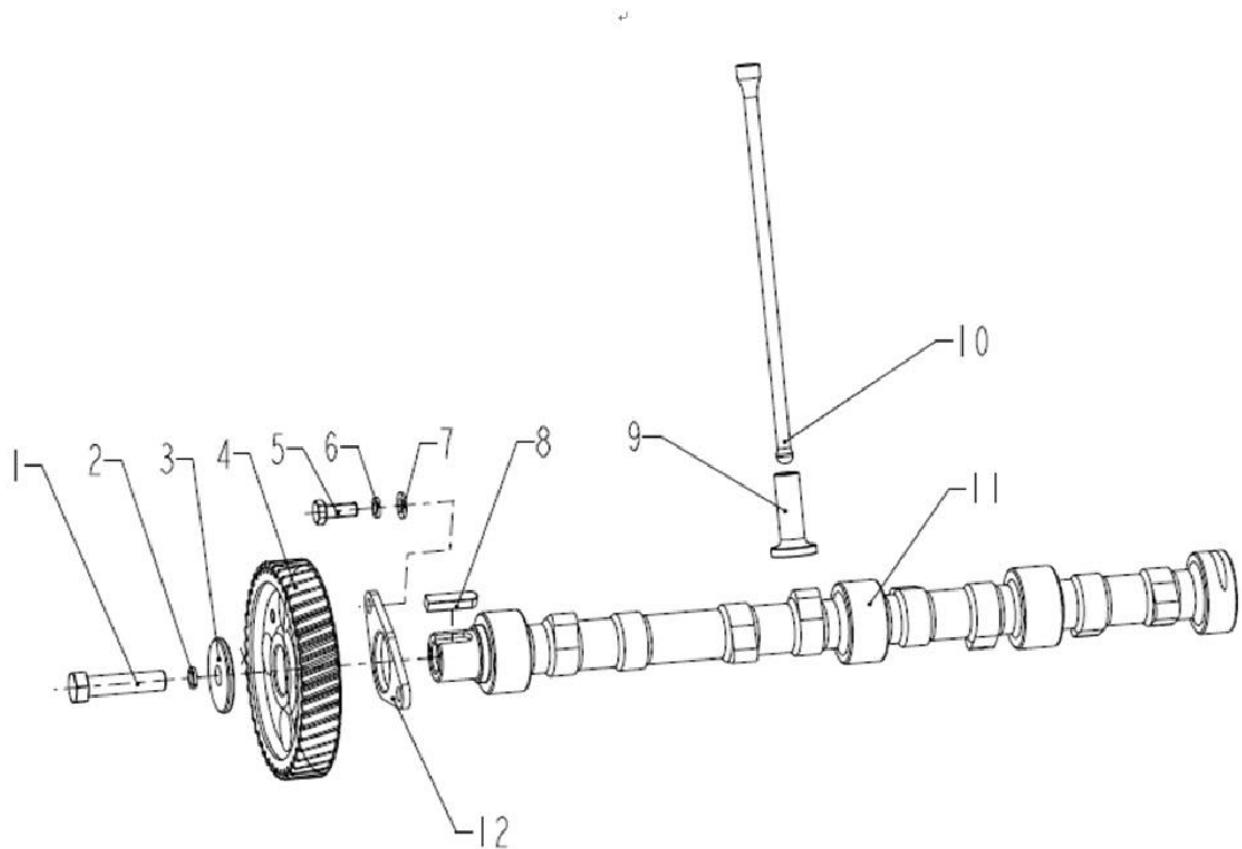

A498BT1-25QH ENGINE ASSY-4

No.	Part No.	Description	Ver-sion	QTY.	Remark
1	GBT5782-M12X45	HEXAGON BOLT		1	
2	GBT93-12	SPRING WASHER		1	
3	490B-02011	CAMSHAFT TIMING GEAR PRESSURE PLATE		1	
4	490B-02009	CAMSHAFT TIMING GEAR		1	
5	GBT5783-M8X18	HEXAGON BOLT		2	
6	GBT93-8	SPRING WASHER		2	
7	GBT97.1-8	FLAT WASHER		2	
8	GBT1096-C8X7X22	FLAT KEY		1	
9	490B-06002	VALVE TAPPET		8	
10	495B-06003	VALVE PUSH ROD		8	
11	495B-06001-2	CAM SHAFT		1	
12	490B-02008	CAMSHAFT THRUST PLATE		1	


A498BT1-25QH ENGINE ASSY-5

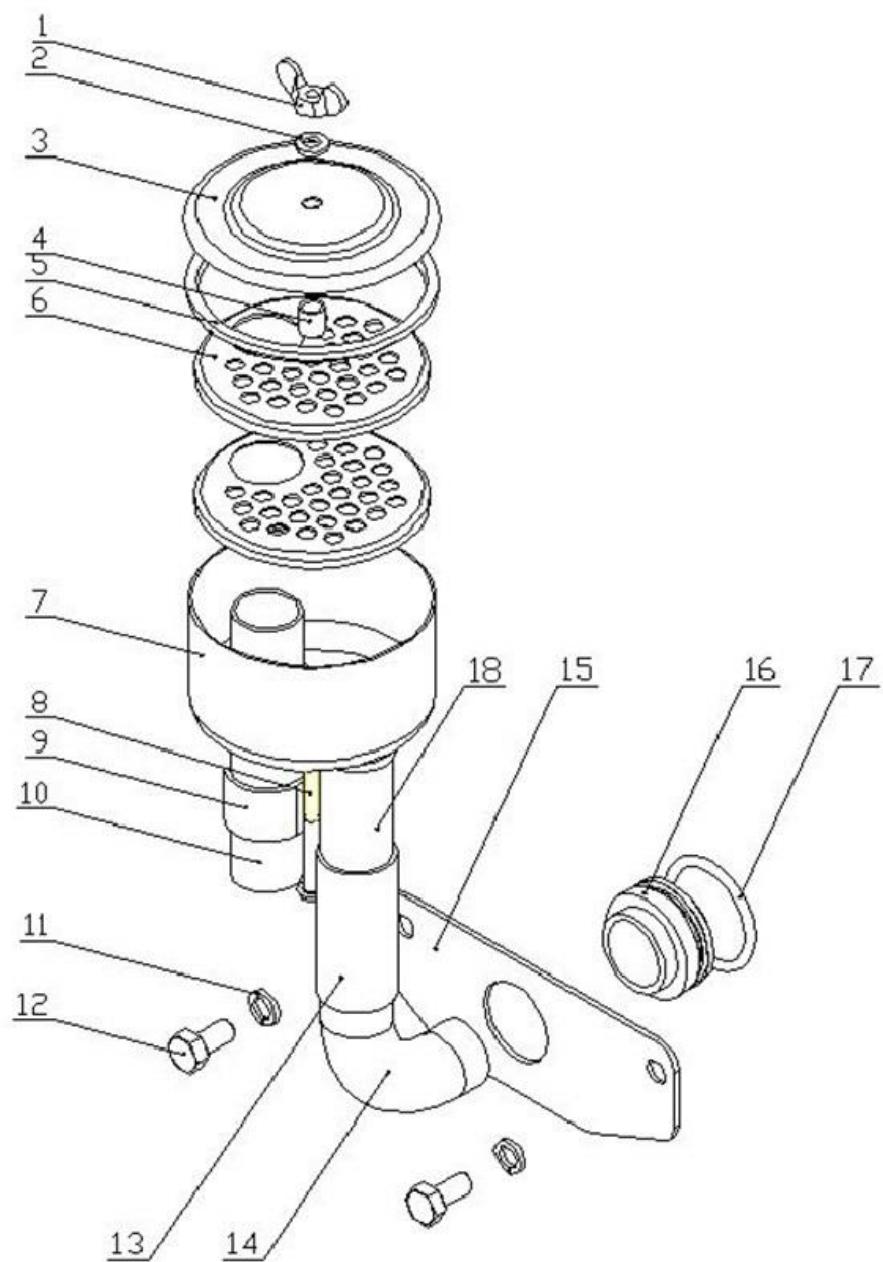

A498BT1-25QH ENGINE ASSY-5

No.	Part No.	Description	Ver-sion	QTY.	Remark
1	GBT62.1-M6	BUTTERFLY NUT		1	
2	GBT97.1-6	FLAT WASHER		1	
3	490B-34005	BREATHER UPPER COVER		1	
4	495B-34019	PIPE		1	
5	490B-34008	RUBBER SEAL RING		1	
6	495B-34018	SPACER PLATE		2	
7	495B-34006-1	BREATHER LOWER PARTS		1	
8	GBT67-M6X70	SLOTTED PAN HEAD SCREW		1	
9	490B-34002A	FIXED PLATE		1	
10	495B-34007-1	AIR VENT 1		1	
11	GBT93-8	SPRING WASHER		2	
12	GBT5783-M8X16	HEXAGON BOLT		2	
13	490B-34017	PIPE		1	
14	490B-34012	AIR VENT-III		1	
15	495B-34003	SPLINT		1	
16	495B-34004	AIR INLET SLEEVE		1	
17	490B-34009	O-SEAL RING		1	
18	490B-34013	AIR VENT-II		1	

A498BT1-25QH ENGINE ASSY-6

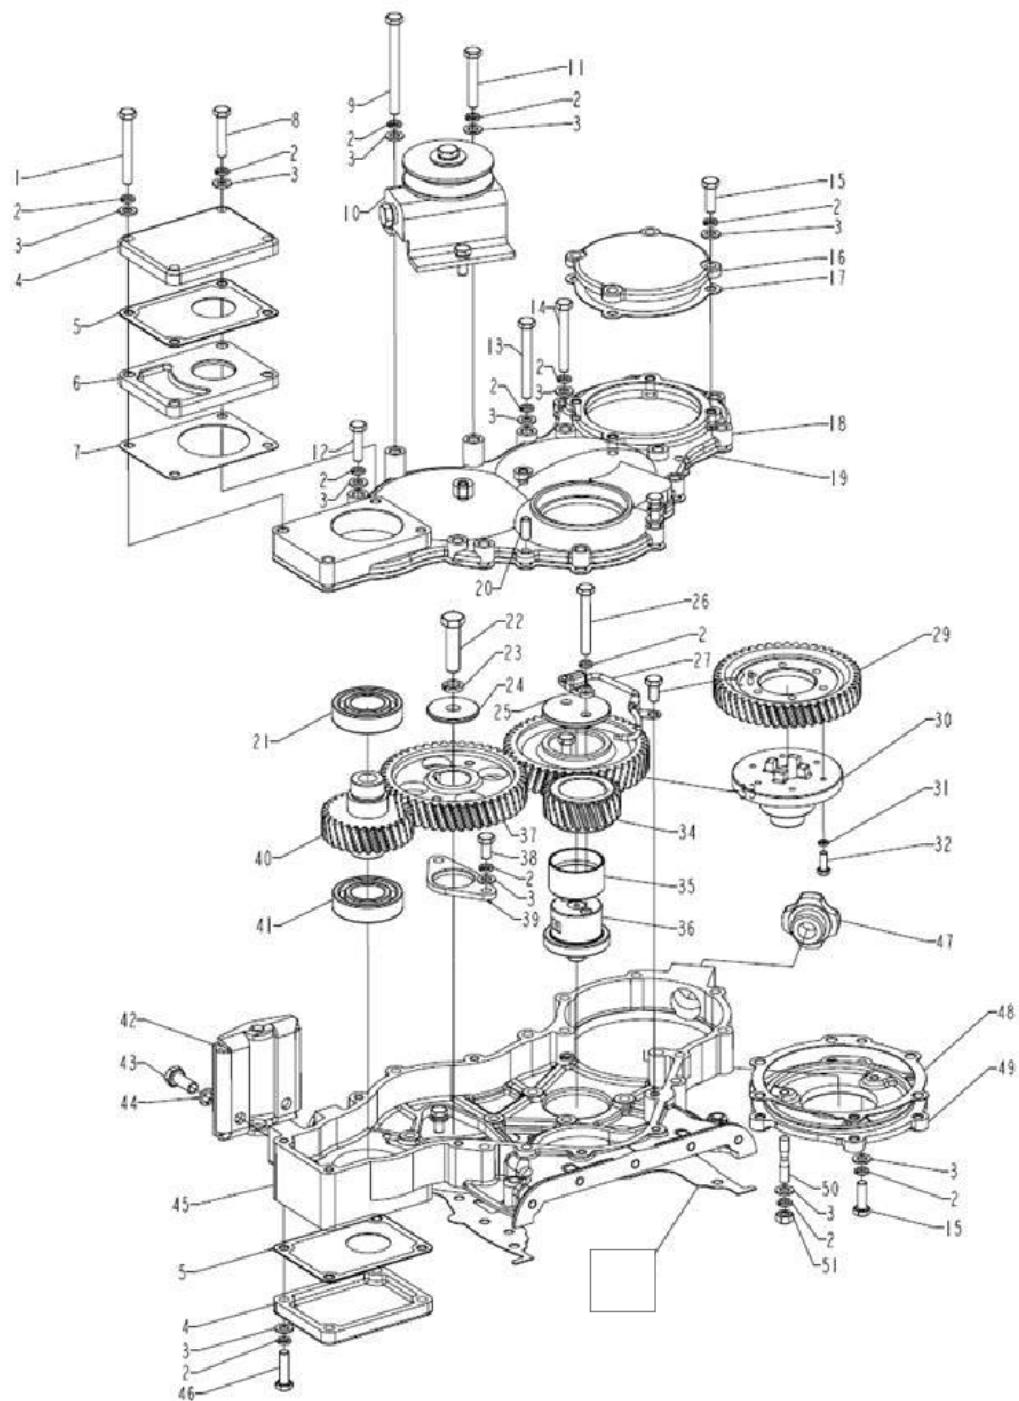


A498BT1-25QH ENGINE ASSY-6

No.	Part No.	Description	Ver-sion	QTY.	Remark
1	GBT5782-M8X65	HEXAGON BOLT		2	
2	GBT93-8	SPRING WASHER		29	
3	GBT97.1-8	FLAT WASHER		31	
4	490BT-16014	HYDRAULIC PUMP END COVER		2	
5	490BT-16013-1	HYDRAULIC PUMP END COVER GASKET		2	
6	490BT-16021	FRONT HYDRAULIC PUMP CONNECTING PLATE		1	
7	490BT-16017	FRONT HYDRAULIC PUMP CONNECTING PLATE GASKET		1	
8	GBT5782-M8X40	HEXAGON BOLT		2	
9	GBT5782-M8X90	HEXAGON BOLT		1	
10	490BT-16200-1	TENSIONER ASSEMBLY		1	
11	GBT5782-M8X50	HEXAGON BOLT		1	
12	GBT5783-M8X30	HEXAGON BOLT		8	
13	GBT5782-M8X70	HEXAGON BOLT		6	
14	GBT5782-M8X62	HEXAGON BOLT		3	
15	GBT5783-M8X25	HEXAGON BOLT		4	
16	490BT-16016	AIR COMPRESSOR COVER PLATE		1	
17	490BT-16005	AIR COMPRESSOR COVER PLATE GASKET		1	
18	490BT-16001-1	TIMING GEAR CASE COVER		1	
19	490BT-16002-1	TIMING GEAR COVER GASKET		1	
20	GBT119.2-8X20	COLUMN PIN		2	
21	GBT276-6206	DEEP GROOVE BALL BEARING		1	
22	GBT5782-M12X45	HEXAGON BOLT		1	
23	GBT93-12	SPRING WASHER		1	
24	490B-02011	CAMSHAFT TIMING GEAR PRESSURE PLATE		1	
25	490B-02012	IDLE GEAR SHAFT PRESS PLATE		1	
26	GBT5782-M8X60	HEXAGON BOLT		2	
27	490BT-02100	OIL INJECTION PIPE WELDMENT		1	

A498BT1-25QH ENGINE ASSY-6 (cont 'd.)

No.	Part No.	Description	Ver-sion	QTY.	Remark
28	GBT5783-M8X16	HEXAGON BOLT		1	
29	490B-02003	OIL INJECTION PUMP TIMING GEAR		1	
30	490BT-02015	OIL INJECTION PUMP TIMING GEAR SHAFT BUSH		1	
31	GBT93-6	SPRING WASHER		6	
32	GBT5783-M6X16	HEXAGON BOLT		6	
33	490BT-02006	TIMING IDLE GEAR		1	
34	490BT-02007	CRANKSHAFT TIMING GEAR		1	
35	490B-02005	TIMING IDLE GEAR BUSH		1	
36	490B-02004	TIMING IDLE GEAR SHAFT		1	
37	490BT-02009	CAMSHAFT TIMING GEAR		1	
38	GBT5783-M8X18	HEXAGON BOLT		2	
39	490B-02008	CAMSHAFT THRUST PLATE		1	
40	490BT-02010-1	HYDRAULIC PUMP GEAR		1	
41	GBT276-7206AC	DEEP GROOVE BALL BEARING		1	
42	490BT-53002-4	BRACKET		1	
43	GBT5783-M10X25	HEXAGON BOLT		2	
44	GBT93-10	SPRING WASHER		2	
45	490BT-16003-1	TIMING CASE		1	
46	GBT5783-M8X30	HEXAGON BOLT		8	
47	495BT-16100	COVER		1	
48	490B-16008	FLANGE GASKET		1	
49	490B-16004-1	FLANGE		1	
50	GBT899-AM8X25	DOUBLE END STUDS		3	
51	GBT6170-M8	HEXAGON NUT		3	


A498BT1-25QH ENGINE ASSY-7

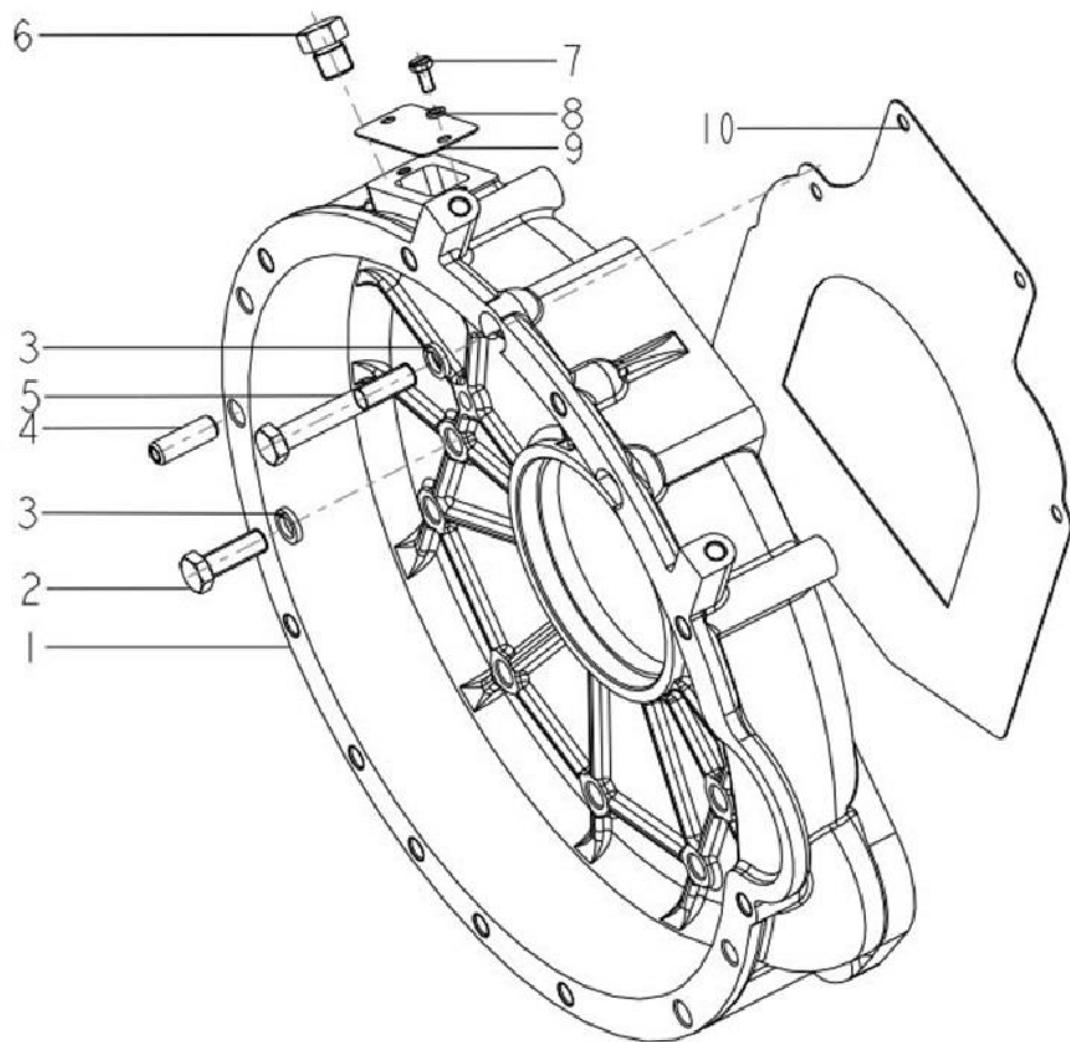

A498BT1-25QH ENGINE ASSY-7

No.	Part No.	Description	Ver-sion	QTY.	Remark
1	490BT-13001-6	FLYWHEEL HOUSING		1	
2	GBT5783-M12X35	HEXAGON BOLT		8	
3	GBT93-12	SPRING WASHER		10	
4	GBT120.2-12X26	COLUMN PIN		2	
5	GBT70.1-M12X80	INNER HEXAGON SCREW		2	
6	490BT-13008-1	SCREW PLUG		1	
7	GBT29.1-M6X12	HEXAGON SLOTTED BOLT		2	
8	GBT93-6	SPRING WASHER		2	
9	490B-13003	INSPECTION HOLE COVER PLATE		1	
10	490BT-13002	FLYWHEEL HOUSING GASKET		1	


A498BT1-25QH ENGINE ASSY-8

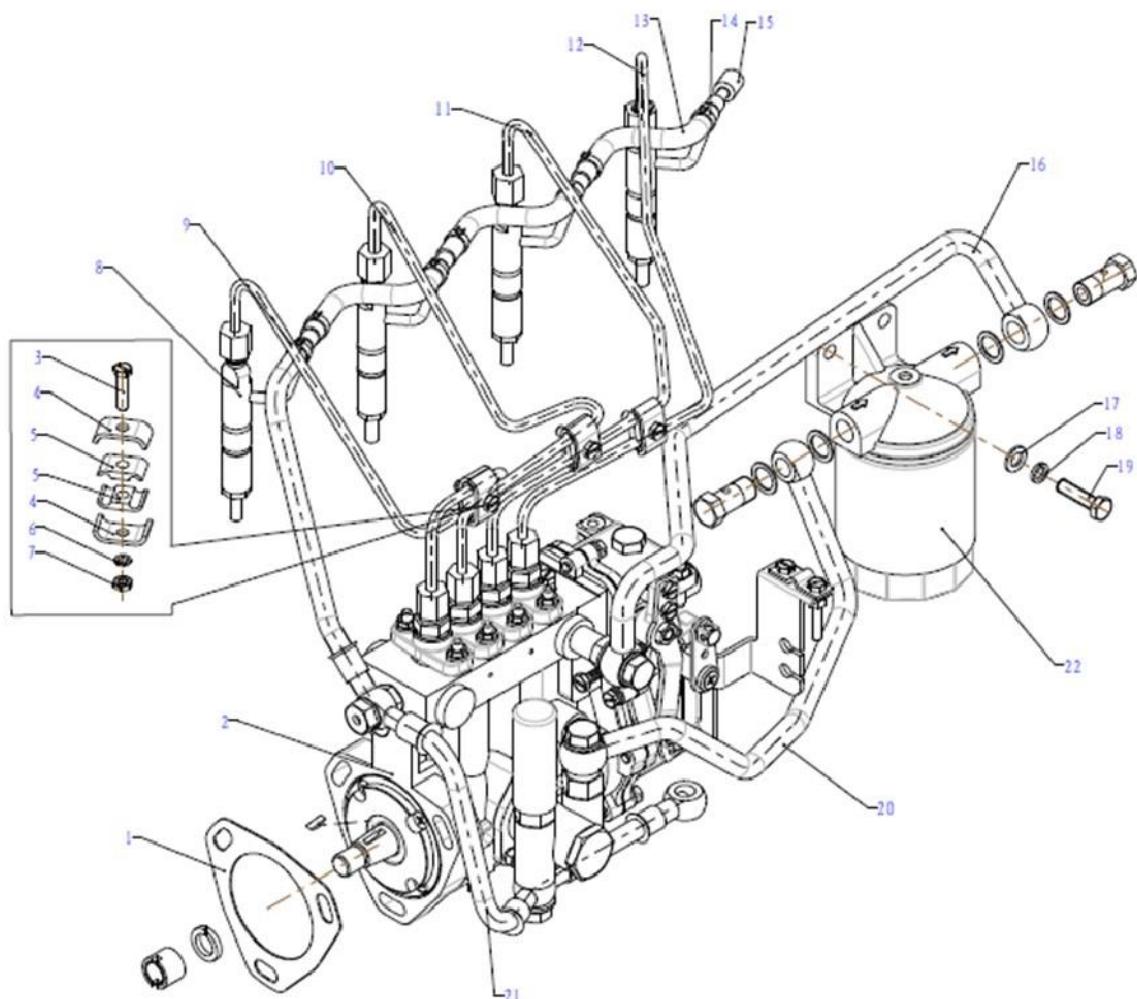

A498BT1-25QH ENGINE ASSY-8

No.	Part No.	Description	Ver-sion	QTY.	Remark
1	490B-16011-1	OIL INJECTION PUMP GASKET		1	
2	B253D1-1	OIL INJECTION PUMP ASSEMBLY		1	
3	GBT29.1-M6X25	HEXAGON SLOTTED BOLT		3	
4	490B-23501	CLAMP HOOP		6	
5	490B-23502	RUBBER WASHER		6	
6	GBT93-6	SPRING WASHER		3	
7	GBT6172-M6	HEXAGON NUT		3	
8	KBAL-P030	OIL INJECTOR ASSEMBLY		4	
9	C490BZG-23100	1ST CYLINDER HIGH PRESSURE FUEL TUBE		1	
9	C490BZG-23000	HIGH PRESSURE OIL PIPE ASSEMBLY			
10	C490BZG-23200	HIGH PRESSURE OIL PIPE UNIT OF SECOND CYLINDER		1	
11	C490BZG-23300	HIGH PRESSURE OIL PIPE UNIT OF THIRD CYLINDER		1	
12	C490BZG-23400	HIGH PRESSURE OIL PIPE UNIT OF FOURTH CYLINDER		1	
13	498B-25002	OIL RETURN PIPE		3	
14	FQ673B121	CLAMP HOOP		7	
15	498B-25001	OIL INJECTOR RETURN CAP		1	
16	490B-25200	OIL CONVEYING PIPE		1	
17	GBT97.1-8	FLAT WASHER		2	
18	GBT93-8	SPRING WASHER		2	
19	GBT5783-M8X30	BOLT		2	
20	490B-25300	OIL CONVEYING PIPE		1	
21	C490BT-25400-3	PIPE		1	
22	490B-24000A	FUelfilter		1	
22.1	CX7085	FUEL FILTER ELEMENT		1	


A498BT1-25QH ENGINE ASSY-9

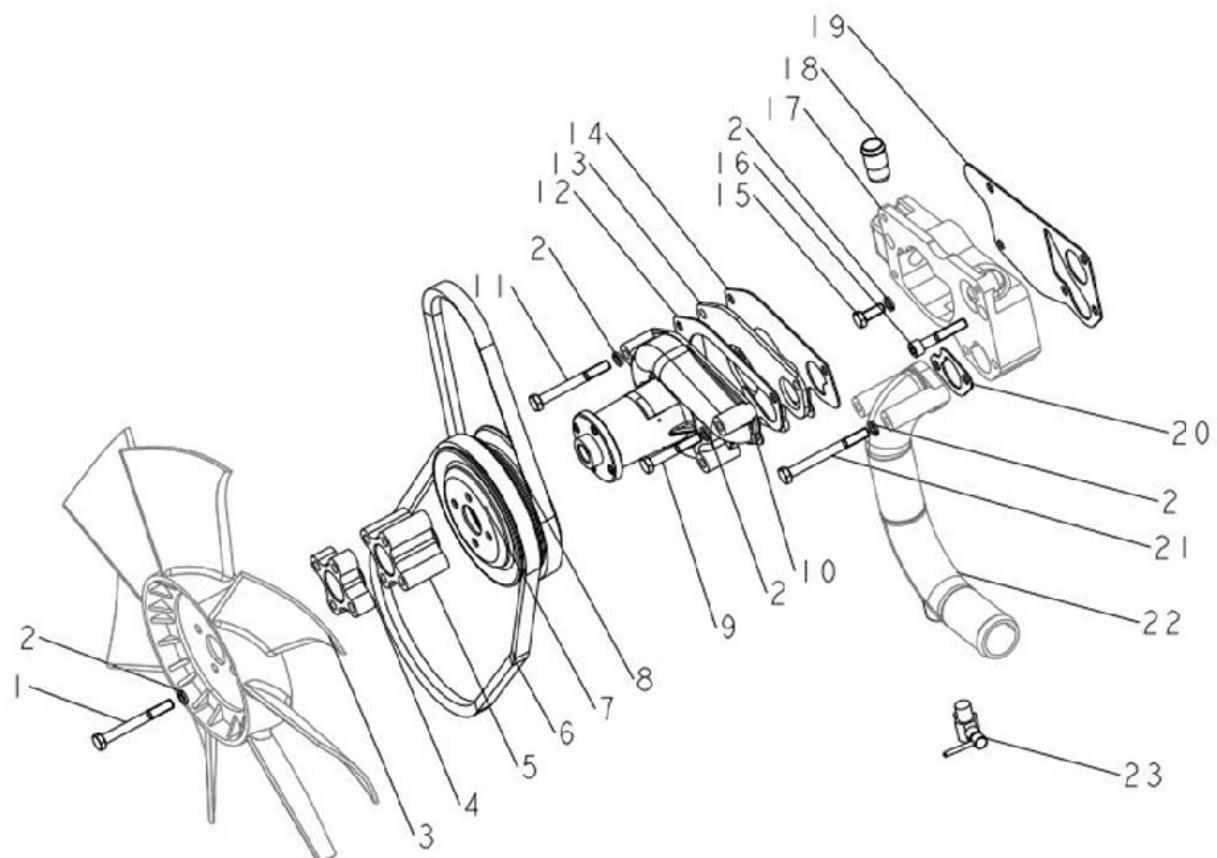

A498BT1-25QH ENGINE ASSY-9

No.	Part No.	Description	Ver-sion	QTY.	Remark
1	GBT5782-M8X75	HEXAGON BOLT		4	
2	GBT93-8	SPRING WASHER		11	
3	Z420-28-52-7	FAN		1	
4	490B-41003-1	FAN GASKET		1	
5	490B-41003-4	FAN GASKET		1	
6	AV15X950Le	BELT		1	
7	490BT-41002-1	FAN BELT PULLEY		1	
8	AV15X680Le	BELT		1	
9	GBT5782-M8X50	HEXAGON BOLT		3	
10	495BT-42000-1A	WATER PUMP ASSEMBLY		1	
11	GBT5782-M8X60	HEXAGON BOLT		1	
12	490B-42005	WATER PUMP HOUSING LINER		1	
13	490BT-42006	WATER PUMP SPACER PLATE		1	
14	490BT-42011	WATER PUMP GASKET		1	
15	GBT5783-M8X20	HEXAGON BOLT		1	
16	GBT70.1-M8X45	INNER HEXAGON SCREW		2	
17	490BT-42010-1A	WATER PUMP JOINT		1	
18	490B-01074	CONNECTING TUBE		1	
19	490BT-42011-1A	WATER PUMP JOINT GASKET		1	
20	490BT-01012	WATER INLET PIPE GASKET		1	
21	GBT5782-M8X110	HEXAGON BOLT		2	
22	490BT-01011-3	WATER INLET PIPE		1	
23	490B-01100-4	DRAIN VALVE BLOCK		1	


A498BT1-25QH ENGINE ASSY-10

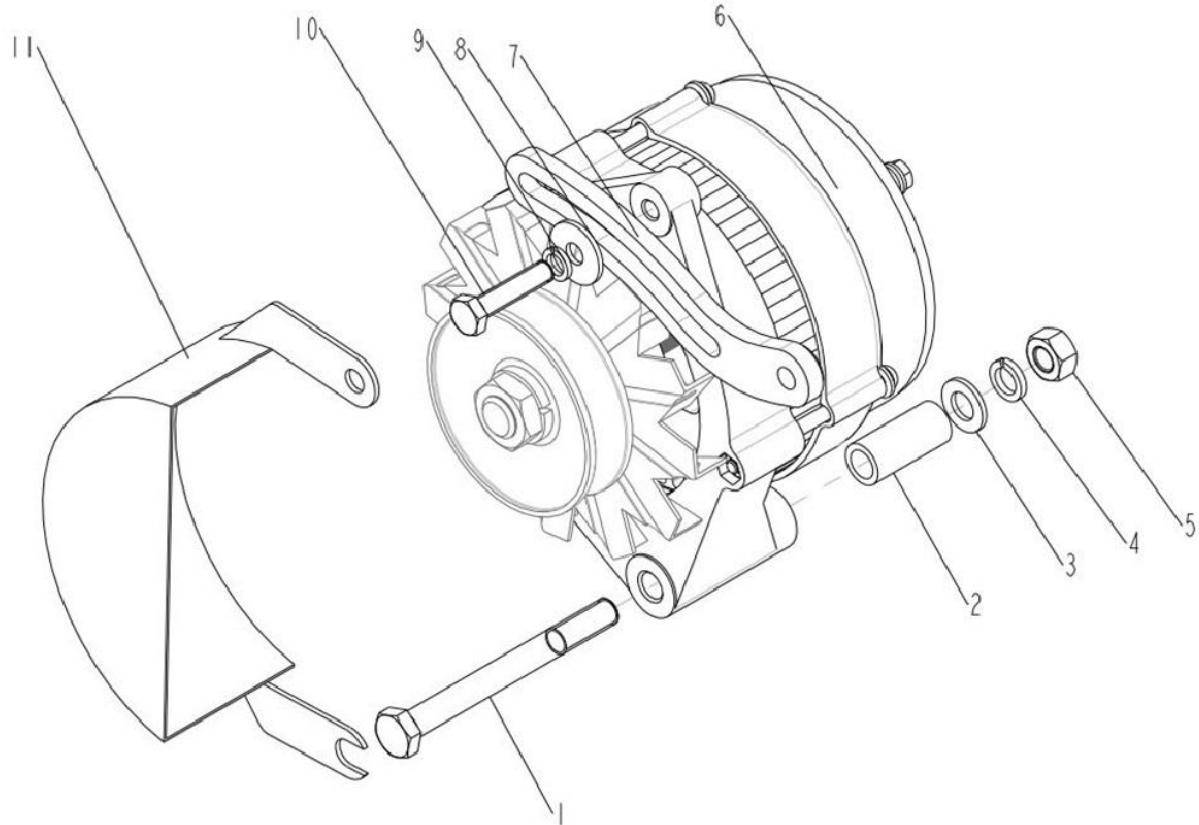

A498BT1-25QH ENGINE ASSY-10

No.	Part No.	Description	Ver-sion	QTY.	Remark
1	GBT5782-M10X110	HEXAGON BOLT		1	
2	490BT-53003	BRACKET PIPE		1	
3	GBT97.1-10	FLAT WASHER		1	
4	GBT93-10	SPRING WASHER		1	
5	GBT6170-M10	HEXAGON NUT		1	
6	JFW17P-1	GENERATOR		1	
7	495BT-53001-3	GENERATOR BRACKET		1	
8	GBT96.1-8	FLAT WASHER		1	
9	GBT93-8	SPRING WASHER		1	
10	GBT5783-M8X35	HEXAGON BOLT		1	
11	4K39T-53005-2	COVER		1	


A498BT1-25QH ENGINE ASSY-11

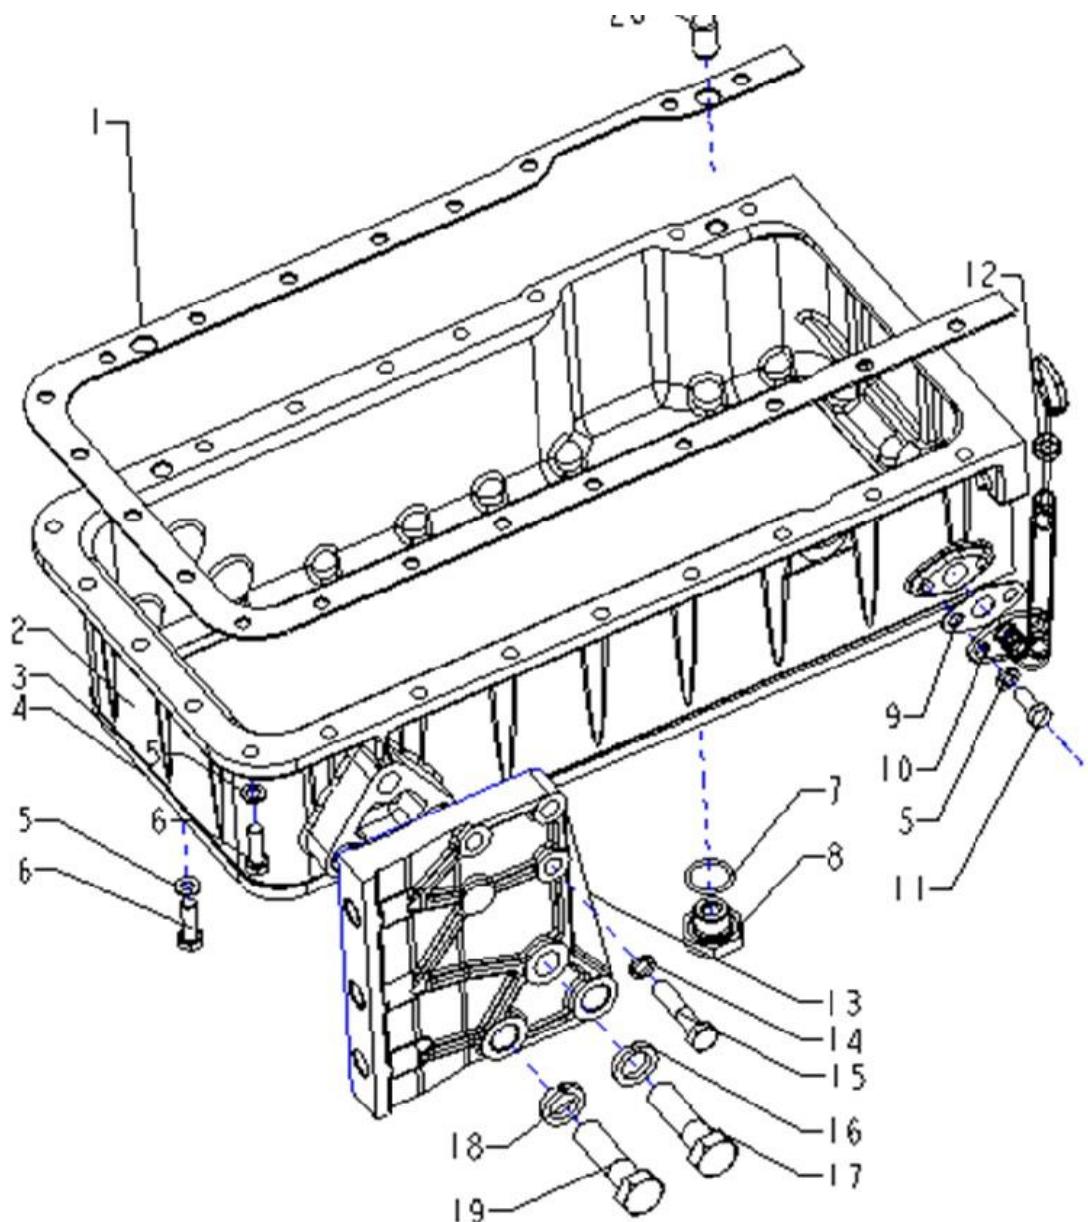

A498BT1-25QH ENGINE ASSY-11

No.	Part No.	Description	Ver-sion	QTY.	Remark
1	490BT-07002	OIL SUMP GASKET		1	
2	495BT-07106A	MAIN OIL SUMP		1	
3	490BT-07004	OIL SUMP BOTTOM PLATE GASKET		1	
4	490BT-07003	OIL SUMP BOTTOM PLATE		1	
5	GBT93-8	SPRING WASHER		45	
6	GBT5783-M8X25	HEXAGON BOLT		43	
7	GBT3452.1-20X3.55	O-RING		1	
8	490B-07601	PLUG		1	
9	490BT-07303A	WASHER		1	
10	490BT-07300	OIL DIPSTICK PIPE		1	
11	GBT5783-M8X20	HEXAGON BOLT		2	
12	NA285B-07200A	OIL DIPSTICK		1	
13	495BT-15001-11L	ENGINE FRONT BRACKET		1	
13	495BT-15001-11R	ENGINE FRONT BRACKET		1	
14	GBT93-10	SPRING WASHER		6	
15	GBT5782-M10X45	HEXAGON BOLT		6	
16	GBT93-18	SPRING WASHER		4	
17	490BT-07800	BOLT		4	
18	GBT93-16	SPRING WASHER		2	
19	GBT5782-M16X55	HEXAGON BOLT		2	
20	490BT-07008	COLUMN PIN		2	


A498BT1-25QH ENGINE ASSY-12

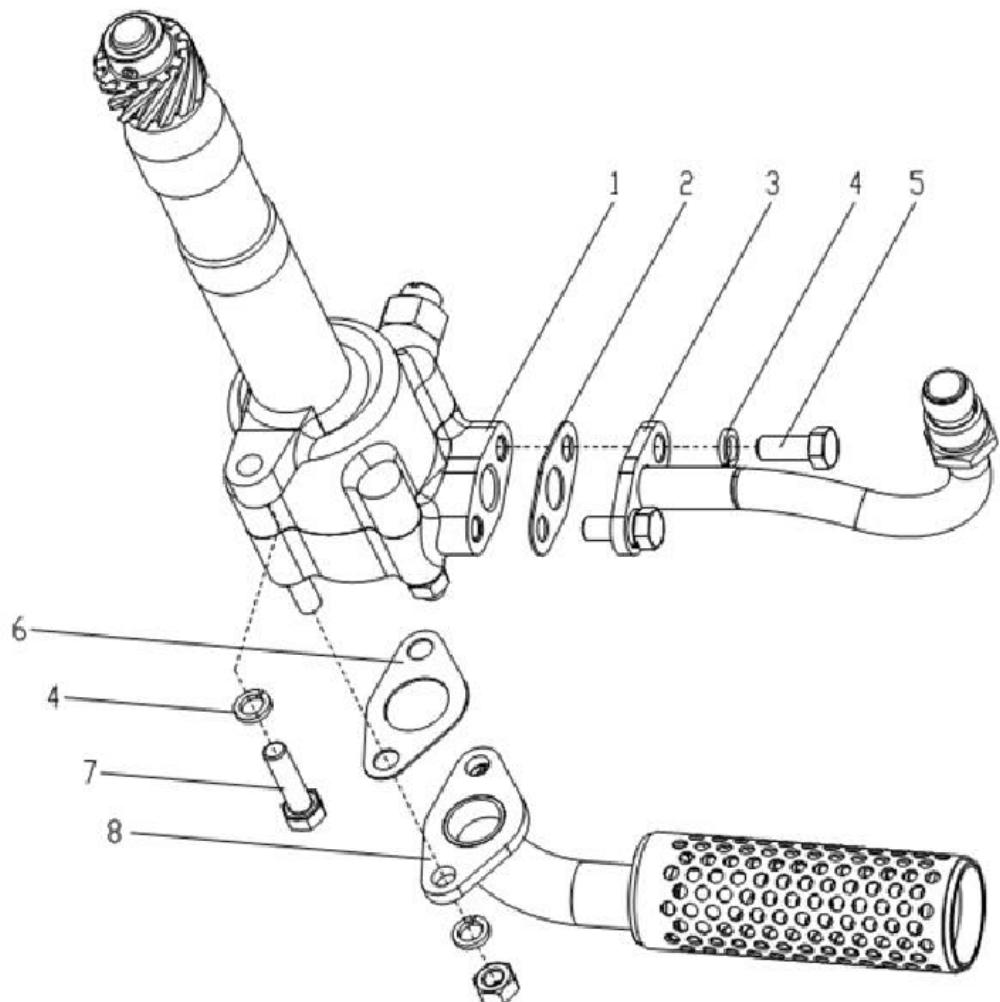

A498BT1-25QH ENGINE ASSY-12

No.	Part No.	Description	Ver-sion	QTY.	Remark
1	495B-31000-2	OIL PUMP ASSEMBLY		1	
2	490B-33005	GASKET		1	
3	495B-33000	OIL PIPELINE ASSEMBLY		1	
4	GBT93-8	SPRING WASHER		3	
5	GBT5783-M8X22	HEXAGON BOLT		2	
6	495B-31006A	OIL FILTER GASKET		1	
7	GBT5783-M8X30	HEXAGON BOLT		1	
8	495B-31100-3	OIL FILTER		1	

A498BT1-25QH ENGINE ASSY-13

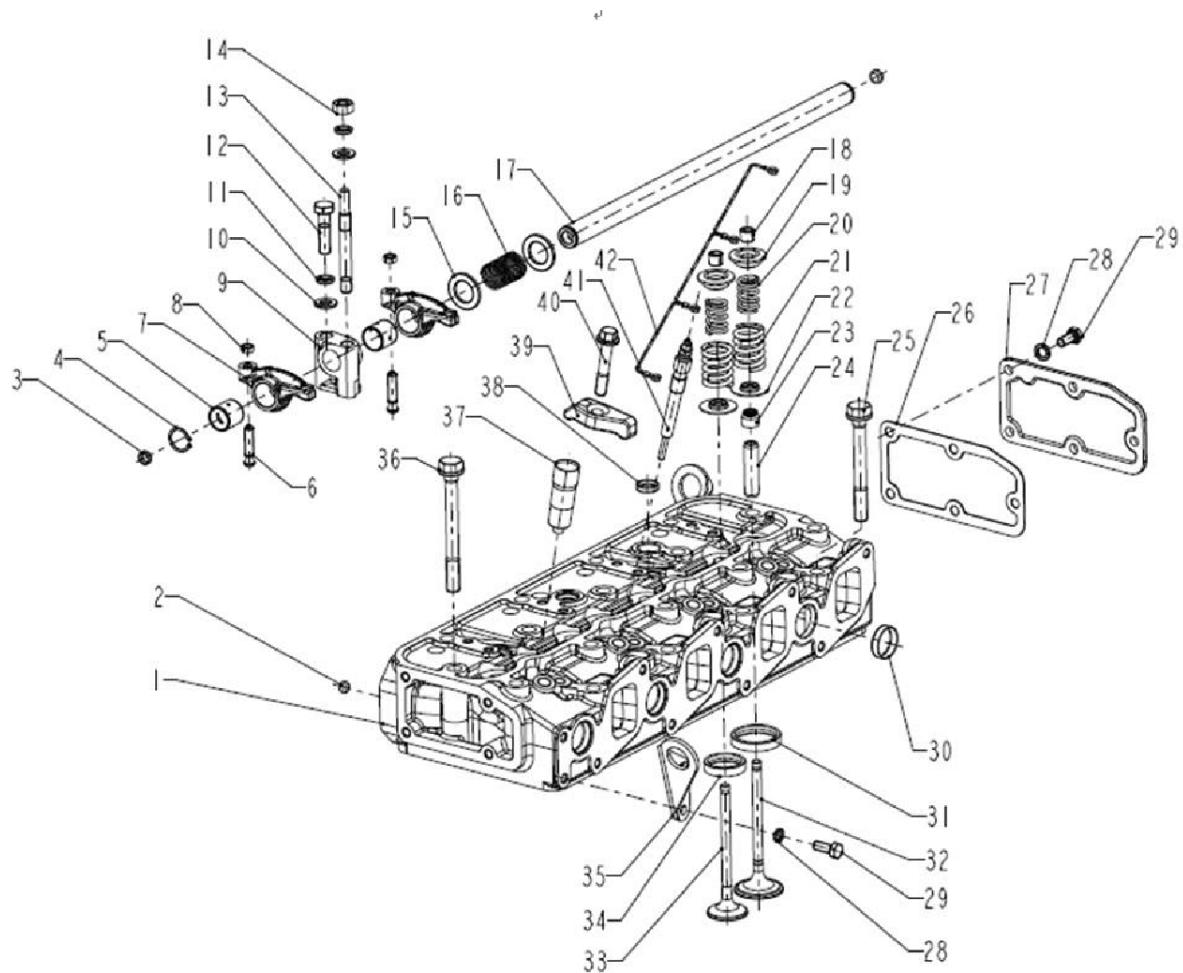


A498BT1-25QH ENGINE ASSY-13

No.	Part No.	Description	Ver-sion	QTY.	Remark
1	A498B-03101A	CYLINDER COVER		1	
2	490B-03105	PLUG		4	
3	490B-03018	BOWL SHIM 12		2	
4	GBT894.1-20	RETAINER RING		2	
5	490B-03212A	VALVE ROCKER BUSH		8	
6	490B-03201	VALVE CLEARANCE ADJUSTING SCREW		8	
7	490B-03211A	VALVE ROCKER		8	
8	GBT6170-M8	HEXAGON NUT, TYPE-1		8	
9	490B-03202	ROCKER SHAFT SUPPORT SEAT		4	
10	GBT97.1-10	FLAT WASHER		8	
11	GBT93-10	SPRING WASHER		8	
12	GBT5782-M10X65	BOLT		4	
13	A498B-03001	STUD		4	
14	GBT6170-M10	HEXAGON NUT, TYPE-1		4	
15	GBT848-20	WASHER		8	
16	490B-03203	VALVE ROCKER SHAFT SPRING		3	
17	490B-03204	VALVE ROCKER SHAFT		1	
18	490B-03006	VALVE COLLET		16	
19	490B-03007	VALVE SPRING UPPER SEAT		8	
20	490B-03005	VALVE INNER SPRING		8	
21	490B-03004	VALVE OUTER SPRING		8	
22	490B-03011	VALVE SPRING LOWER SEAT		8	
23	A490BZL-03016	VALVE GUIDE PIPE OIL SEAL		8	
24	A490BZL-03102A	VALVE GUIDE PIPE		8	
25	490B-01003A	BOLT		4	
26	490B-03013	REAR END COVER GASKET		1	
27	490B-03012	REAR END COVER		1	
28	GBT93-8	SPRING WASHER		9	
29	GBT5783-M8X18	BOLT		9	
30	490B-01078	BOWL SHIM 30		4	
31	A498B-03107	AIR INLET VALVE SEAT		4	

A498BT1-25QH ENGINE ASSY-13 (cont'd.)

No.	Part No.	Description	Ver-sion	QTY.	Remark
32	A498B-03014	AIR INLET VALVE		4	
33	495B-03015	EXHAUST VALVE		4	
34	495B-03108	EXHAUST VALVE SEAT		4	
35	490B-03009-3	CONDOLE EAR		2	
36	490B-01002A	BOLT		14	
37	A490B-03109	OIL INJECTOR COPPER BUSH		4	
38	490B-03017	BOWL SHIM 20		7	
39	A490B-03016	OIL INJECTOR PRESSURE PLATE		4	
40	A490BZL-03017	INJECTER BOLT		4	
41	A490B-55001	HEAT PLUG		4	
42	A490B-55100	HEAT PLUG CONNECTING WIRE		1	


A498BT1-25QH ENGINE ASSY-14

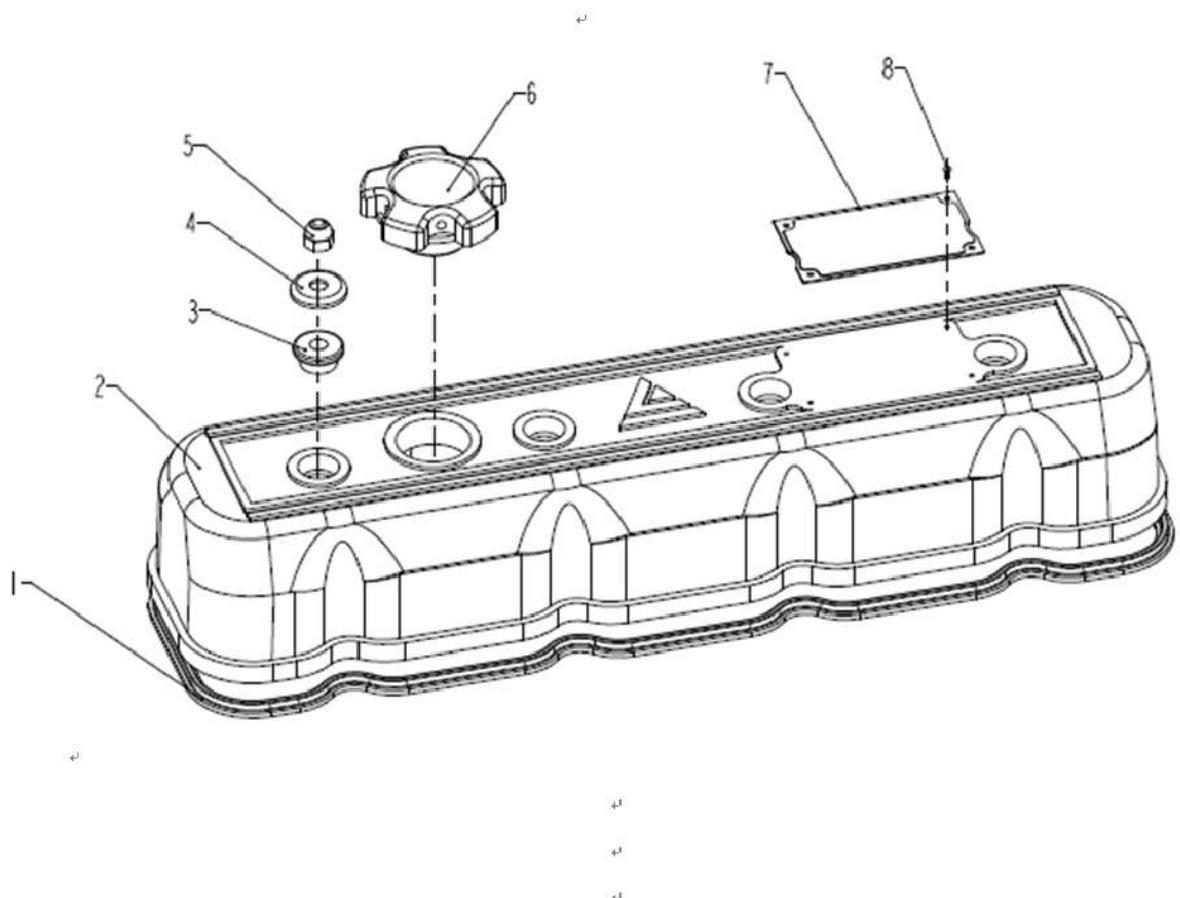

A498BT1-25QH ENGINE ASSY-14

No.	Part No.	Description	Ver-sion	QTY.	Remark
1	A498B-11002	CYLINDER COVER RUB-BER MAT		1	
2	A498B-11001-2	CYLINDER COVER		1	
3	A498B-11003	RUBBER ISOLATION BUSH		4	
4	A498B-11004	WASHER		4	
5	GBT923-M8	CAP NUT		4	
6	490B-11200B	FILLING CAP COVER		1	
7	A498B-11005-2	NAME PLATE		1	
8	GBT827-2X5	RIVET		4	


A498BT1-25QH ENGINE ASSY-15

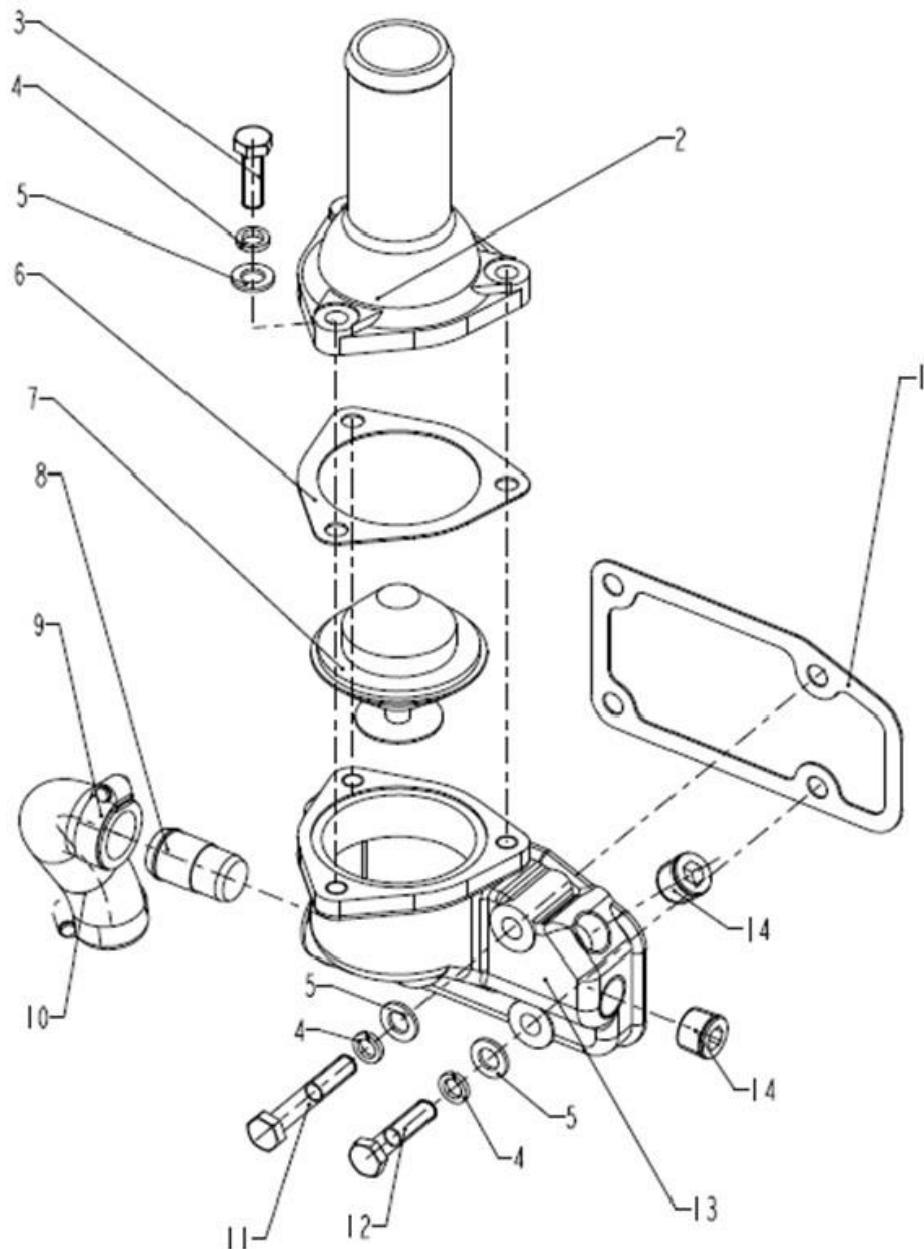

A498BT1-25QH ENGINE ASSY-15

No.	Part No.	Description	Ver-sion	QTY.	Remark
1	490B-43005	THERMOSTAT HOUSING GASKET		1	
2	490BT-43001	THERMOSTAT COVER		1	
3	GBT5783-M8X25	HEXAGON BOLT		3	
4	GBT93-8	SPRING WASHER 8		7	
5	GBT97.1-8	FLAT WASHER		8	
6	490B-43003	THERMOSTAT COVER GASKET		1	
7	490B-43002	THERMOSTAT		1	
8	490B-01074	CONNECTING TUBE		1	
9	JBT8870-D25	HOOP		2	
10	490BT-43007	SMALL CIRCULATING WATER PIPE		1	
11	GBT5782-M8X48	HEXAGON BOLT		1	
12	GBT5782-M8X35	HEXAGON BOLT		3	
13	490B-43101-2	THERMOSTAT HOUSING		1	
14	490B-43008	SCREW PLUG NPT3/8		2	


A498BT1-25QH ENGINE ASSY-16

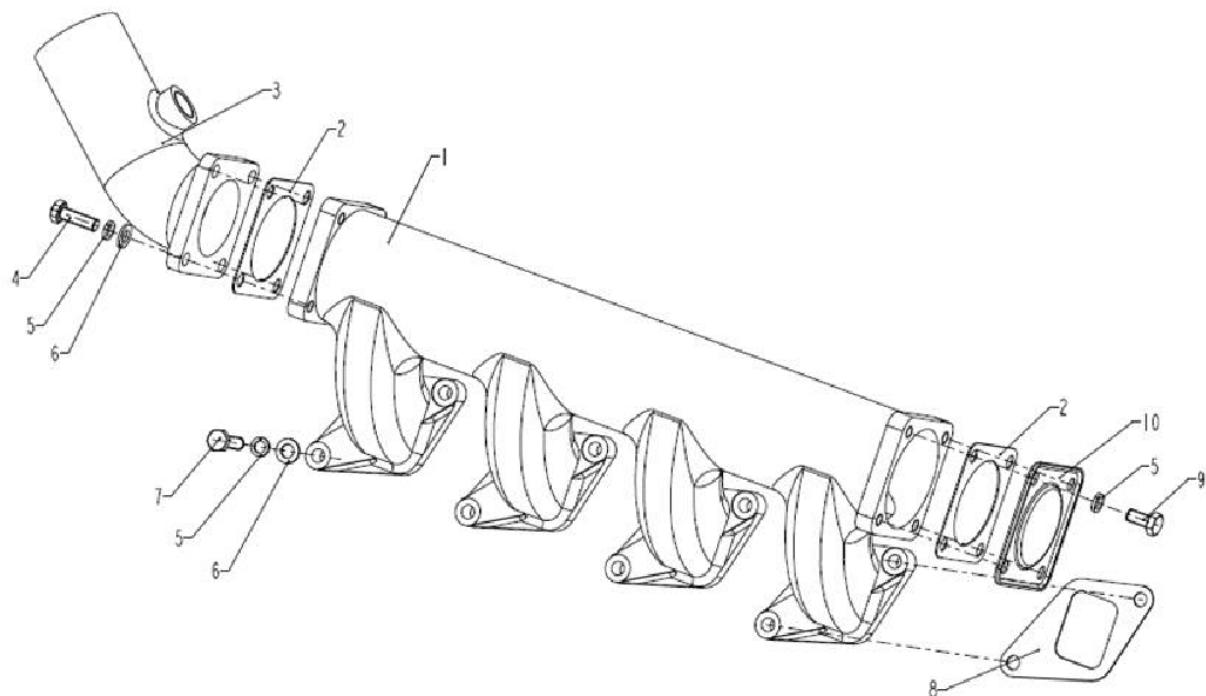

A498BT1-25QH ENGINE ASSY-16

No.	Part No.	Description	Ver-sion	QTY.	Remark
1	490BT-09002-5	AIR INLET PIPE		1	
2	490B-09004	AIR INLET PIPE GASKET		2	
3	490BT-09003-3	AIR INLET CONNECTING PIPE		1	
4	GBT5783-M8X25	HEXAGON BOLT		4	
5	GBT93-8	SPRING WASHER		16	
6	GBT97.1-8	FLAT WASHER		12	
7	GBT5783-M8X30	HEXAGON BOLT		8	
8	490B-09001	AIR INLET PIPE GASKET		4	
9	GBT5783-M8X12	HEXAGON BOLT		4	
10	490B-09005	AIR INLET PIPE END COVER		1	


A498BT1-25QH ENGINE ASSY-17

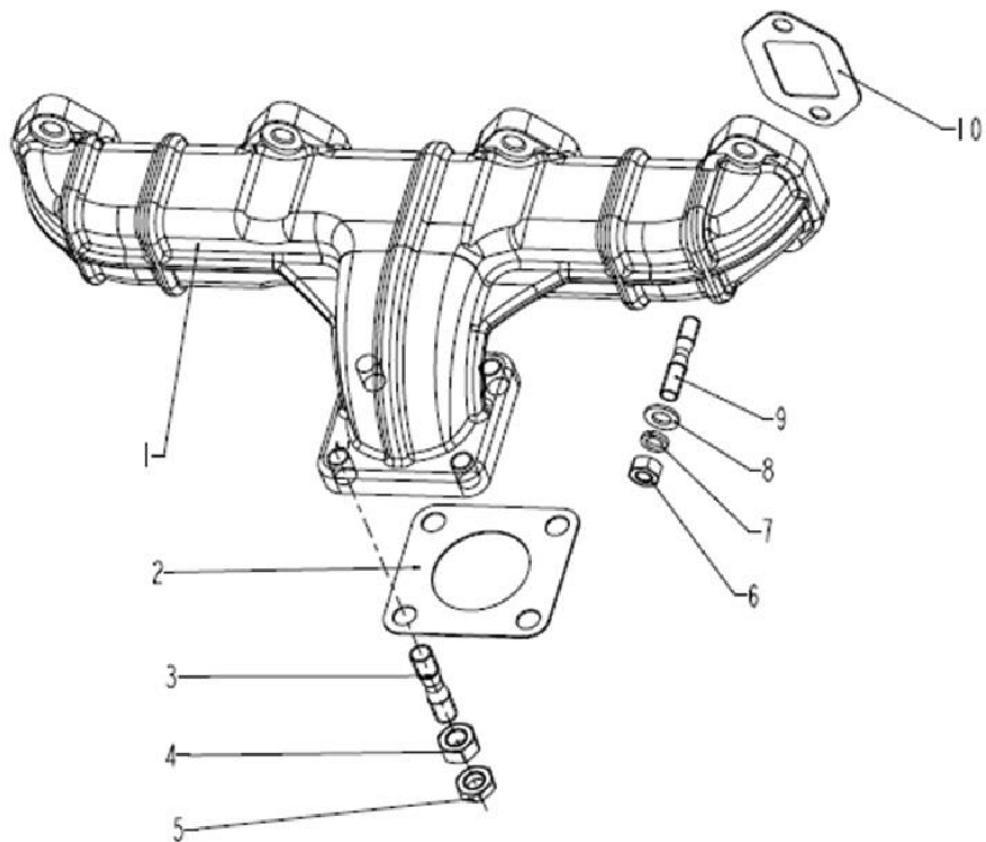

A498BT1-25QH ENGINE ASSY-17

No.	Part No.	Description	Ver-sion	QTY.	Remark
1	490BT-08001-3	EXHAUST PIPE		1	
2	490BT-08004	EXHAUST PIPE GASKET		1	
3	GBT899-AM10X1X25	DOUBLE END STUDS		4	
4	GBT6171-M10X1	HEXAGON NUT		4	
5	GBT6173-M10X1	HEXAGON THIN NUT		4	
6	GBT6170-M8	HEXAGON NUT		8	
7	GBT93-8	SPRING WASHER		8	
8	GBT97.1-8	FLAT WASHER		8	
9	GBT899-AM8X25	DOUBLE END STUDS		8	
10	490B-03003	EXHAUST PIPE GASKET		4	


A498BT1-25QH ENGINE ASSY-18

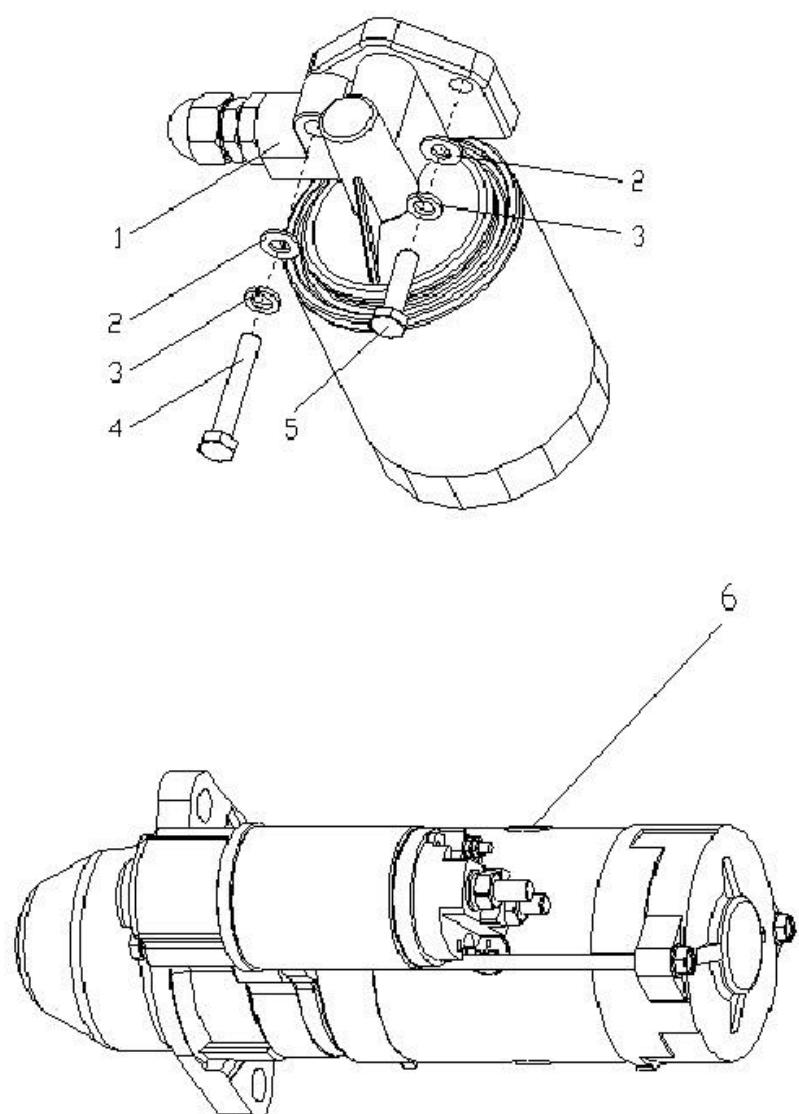

A498BT1-25QH ENGINE ASSY-18

No.	Part No.	Description	Ver-sion	QTY.	Remark
1	490B-32000B	OIL FILTER		1	
1.1	JX85100C	OIL FILTER ELEMENT		1	
2	GBT97.1-8	FLAT WASHER		2	
3	GBT93-8	SPRING WASHER		2	
4	GBT5782-M8X50	BOLT		1	
5	GBT5783-M8X30	BOLT		1	
6	QDJ1409	STARTOR		1	
7	490BT-56000-3	AIR PUMP		1	
8	4D32T31-56000	AIR CONDITION BRACKET		1	
9	495B-53001-3	AIR COMPRESSOR BRACKET		1	


TS04110060000K AIR FILTER SYSTEM ASSEMBLY

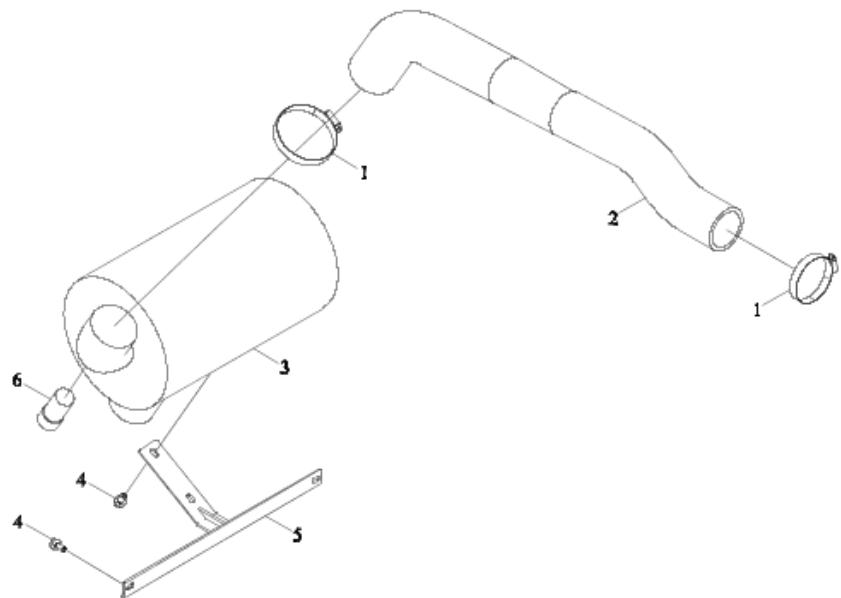

TS04110060000K AIR FILTER SYSTEM ASSEMBLY

No.	Part No.	Description	Ver-sion	QTY.	Remark
	TS04110060000K	AIR FILTER SYSTEM ASSEMBLY		1	
1	Q67676	B-TYPE WORM TRANSMISSION HOSE CLAMP		1	
2	TS04110060001K	HOSE		1	
3	TB400.11.1	AIR FILTER ASSEMBLY		1	
4	GBT5789-M8X16-8.8-A2L	HEXAGON FLANGE NUT		4	
5	TB500.11B.2	AIR FILTER BRACKET		1	
6	TD900.11A-01	AIR FILTER MAINTENANCE INDICATOR		1	
7	Q67683	B-TYPE WORM TRANSMISSION HOSE CLAMP		1	


TS04131060000K COOLING SYSTEM ASSEMBLY

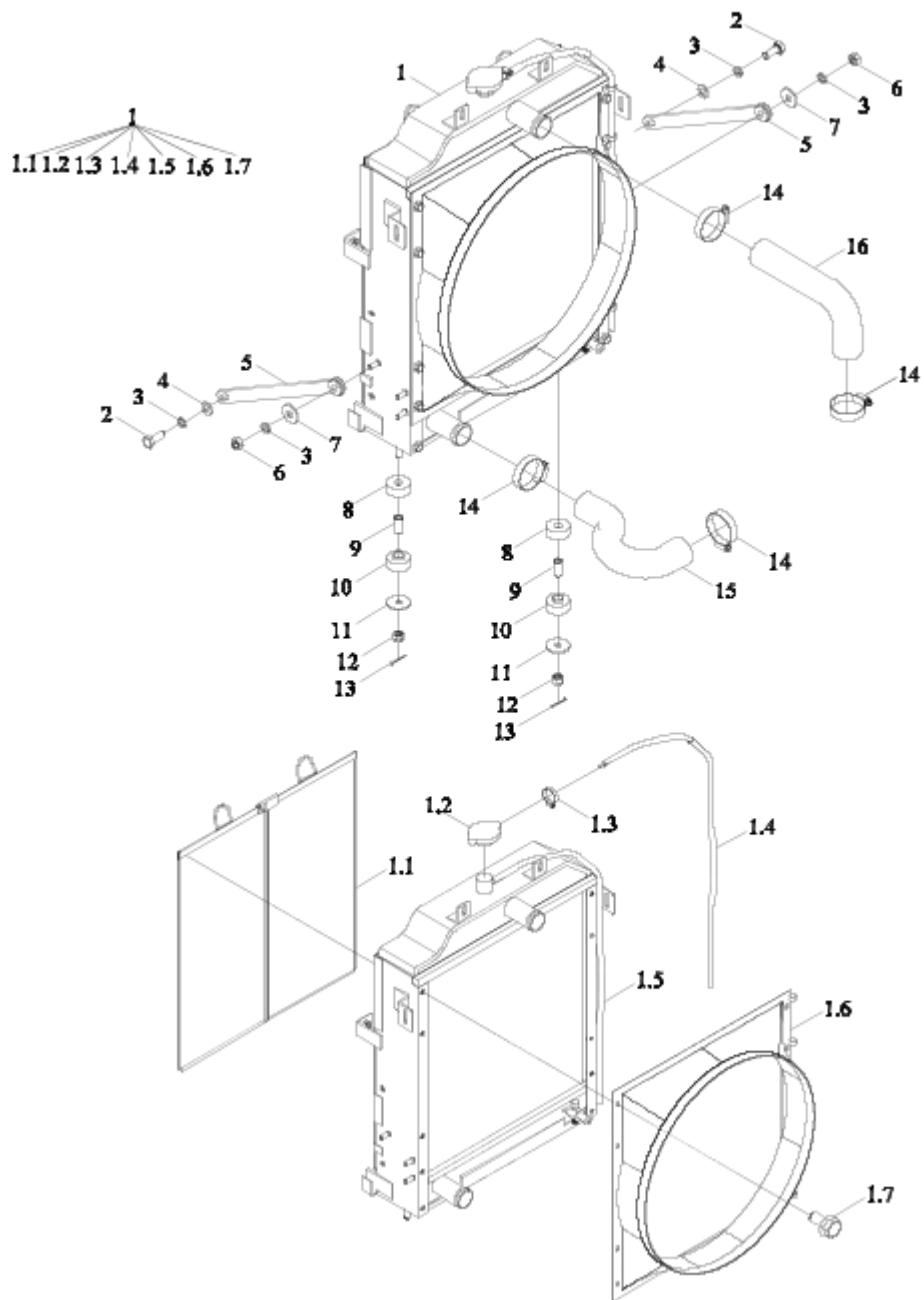

TS04131060000K COOLING SYSTEM ASSEMBLY

No.	Part No.	Description	Ver-sion	QTY.	Remark
	TS04131060000K	COOLING SYSTEM ASSEMBLY		1	
1	TS04131070001K	RADIATOR INSTALLATION ASSEMBLY		1	
1.1	TS04131070003K	GUARD NET		1	
1.2	TB400.13.1	RADIATOR COVER		1	
1.3	Q676B12	C-TYPE WORM TRANSMISSION HOSE CLAMP		1	
1.4	TH400.13.1-03	WATER HOSE		1	
1.5	TS04131070004K	RADIATOR ASSEMBLY		1	
1.6	TS04131070002K	WINDGUIDECOVER		1	
1.7	GBT5789-M8X16-8.8-A2L	HEXAGON FLANGE NUT		10	
2	GBT5783-M8X20-8.8-A2L	HEXAGON BOLT		2	
3	GBT93-8-A0P	STANDARD SPRING WASHER		4	
4	GBT97.1-8-A0P	FLAT WASHER		2	
5	TS04132010005	PULL ROD UNIT		2	
6	GBT6170-M8-8-A2L	HEXAGON NUT, TYPE-1		2	
7	GBT96.1-8-A0P	BIG WASHER		2	
8	TA700.131-01	RUBBER PAD		2	
9	TA700.131-02	SLEEVE		2	
10	TD800.131-11	RUBBER WASHER		2	
11	FT650.13.116	GASKET		2	
12	GBT6178-M10-8-A3L	HEXAGON SLOTTED NUT, STYLE I		2	
13	GBT91-2.5X28-A0P	SPLIT PIN		2	
14	Q67657	B-TYPE WORM TRANSMISSION HOSE CLAMP		4	
15	FT450.13.102	WATER TANK OUTLET HOSE		1	
16	TS04131060001K	WATER TANK INLET HOSE		1	


TS0413203000K RADIATOR BACKING BOARD INSTALLATION ASSEMBLY

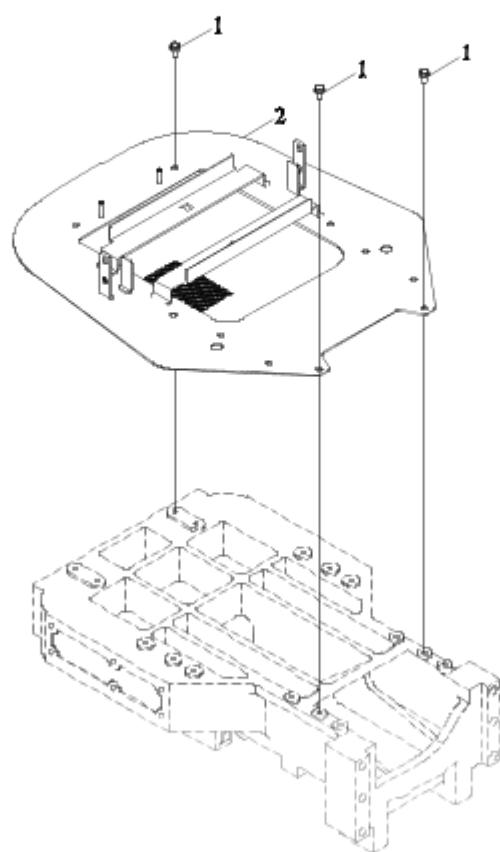

TS0413203000K RADIATOR BACKING BOARD INSTALLATION ASSEMBLY

No.	Part No.	Description	Ver-sion	QTY.	Remark
	TS0413203000K	RADIATOR BACKING BOARD INSTALLATION ASSEMBLY		1	
1	GBT5789-M8X16-8.8-A2L	HEXAGON FLANGE NUT		3	
2	TS04132030001K	RADIATOR BACKING BOARD WELDMENT		1	


TS04201010000 HAND THROTTLE CONTROL ASSEMBLY

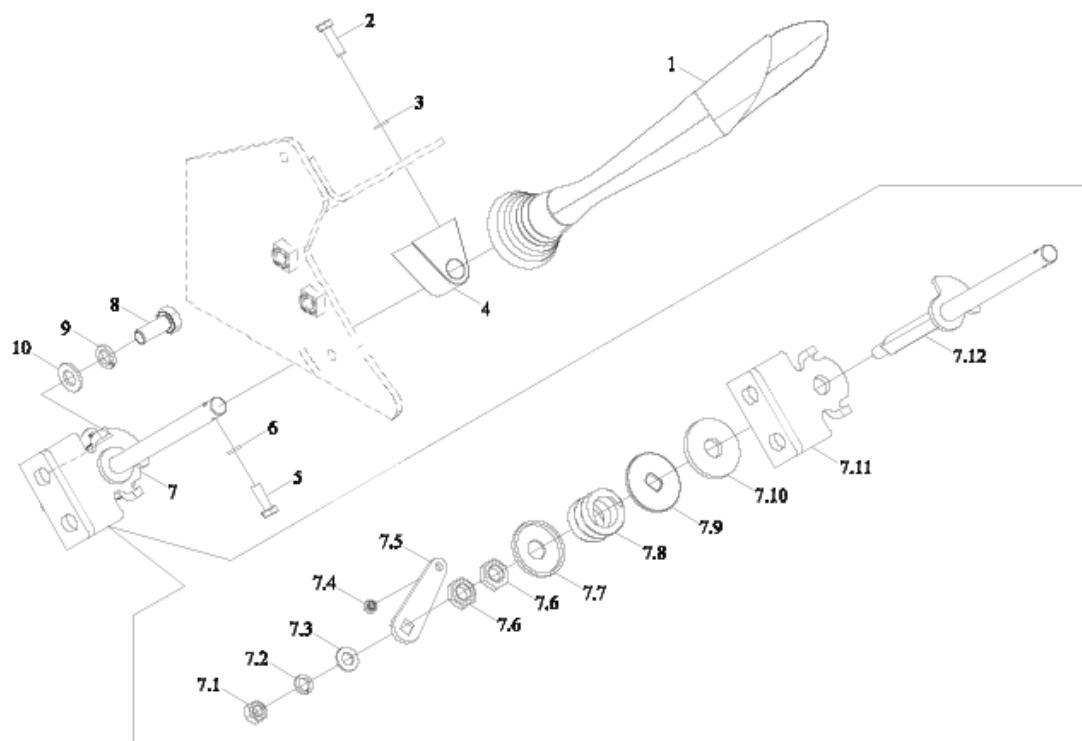

TS04201010000 HAND THROTTLE CONTROL ASSEMBLY

No.	Part No.	Description	Ver-sion	QTY.	Remark
	TS04201010000	HAND THROTTLE CON-TROL ASSEMBLY		1	
1	TS06201010001	HANDLE ASSEMBLY		1	
2	GBT5783-M8X16-8.8-A2L	HEXAGON BOLT		2	
3	GBT93-8-A0P	STANDARD SPRING WASHER		2	
4	TS06201010002	GUIDE SEAT		1	
5	GBT5783-M6X20-8.8-A2L	HEXAGON BOLT		1	
6	GBT93-6-A0P	STANDARD SPRING WASHER		1	
7	TS04201010001	HAND THROTTLE CON-TROL MECHANISM		1	
8	GBT5783-M10X25-8.8-A3L	HEXAGON BOLT		2	
9	GBT93-10-A0P	STANDARD SPRING WASHER		2	
10	GBT97.1-10-A0P	FLAT WASHER		2	


TS04202010000 FOOT THROTTLE CONTROL ASSEMBLY

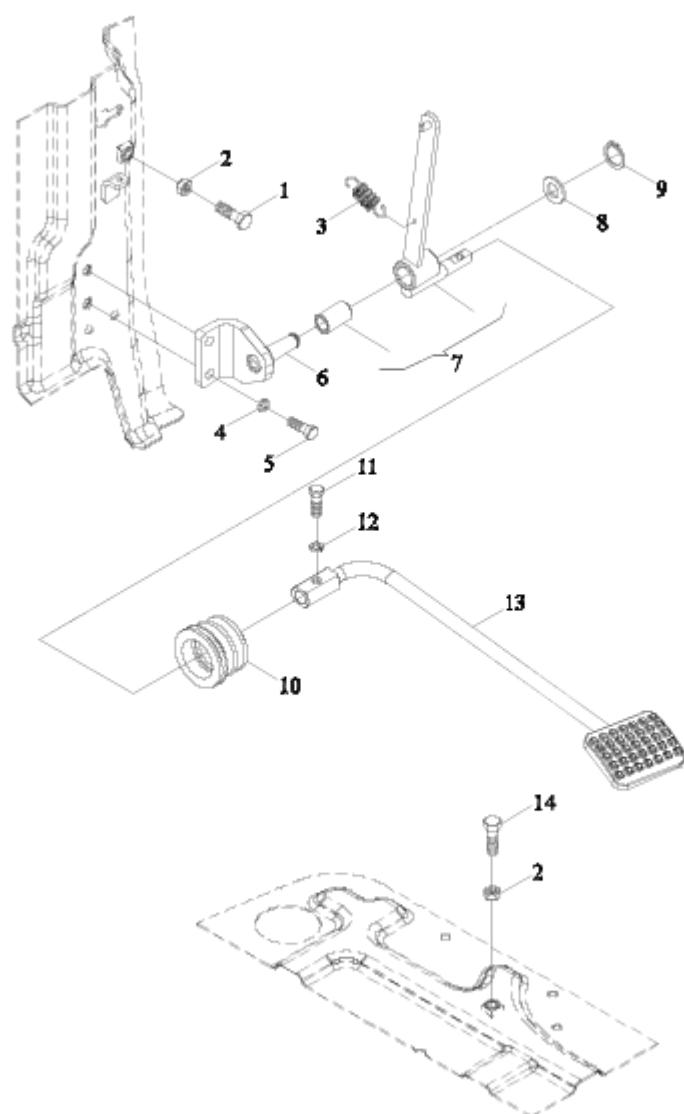

TS04202010000 FOOT THROTTLE CONTROL ASSEMBLY

No.	Part No.	Description	Ver-sion	QTY.	Remark
	TS04202010000	FOOT THROTTLE CON-TROL ASSEMBLY		1	
1	GBT5782-M8X45-8.8-A2L	HEXAGON BOLT		1	
2	GBT6170-M8-8-A2L	HEXAGON NUT, TYPE-1		2	
3	TB604.202A-01	RETURN SPRING		1	
4	GBT93-8-A0P	STANDARD SPRING WASHER		2	
5	GBT5783-M8X20-8.8-A2L	HEXAGON BOLT		2	
6	TS04202010003	BRACKET WELDMENT		1	
7	TS04202010002	ROTARY SHAFT BUSH		1	
8	GBT97.1-12-A0P	FLAT WASHER		1	
9	GBT894.1-12	CIRCLIP FOR SHAFT		1	
10	TB400.474E-01	DUSTPROOF SLEEVE		1	
11	GBT5783-M6X20-8.8-A2L	HEXAGON BOLT		1	
12	GBT93-6-A0P	STANDARD SPRING WASHER		1	
13	TS04202010001	FOOT PEDAL ROCKER WELDMENT		1	
14	GBT5783-M8X35-8.8-A2L	HEXAGON BOLT		1	


TS04203010000K PULL WIRE ASSEMBLY

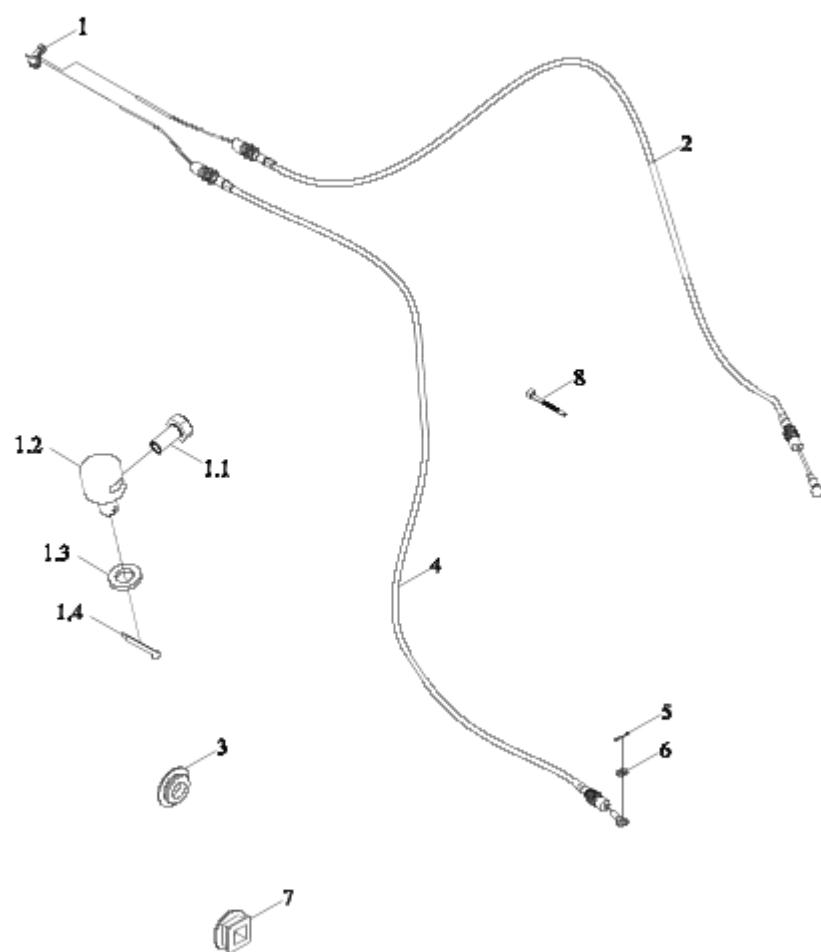

TS04203010000K PULL WIRE ASSEMBLY

No.	Part No.	Description	Ver-sion	QTY.	Remark
	TS04203010000K	PULL WIRE ASSEMBLY		1	
1	TF1354.203.1	FIXING SEAT UNIT		1	
1.1	GBT5781-M5X10-4.8-A2L	HEXAGON BOLT		1	
1.2	TF1354.203.1-01	FIXING SEAT		1	
1.3	GBT848-6-A0P	SMALL WASHER		1	
1.4	GBT91-1.6X12-A0P	SPLIT PIN		1	
2	TS04203010001	HAND THROTTLE WIRE ASSEMBLY		1	
3	TS04203010001K	PROCESS PLUG COVER 16		3	
4	TS04203010003K	FOOT THROTTLE WIRE ASSEMBLY		1	
5	GBT91-2X12-A0P	SPLIT PIN		1	
6	GBT97.1-6-A0P	FLAT WASHER		1	
7	TS04203010002K	PLUG COVER OF EXTINGUISH WIRE FIXING HOLE		1	
8	Q67405100	PLASTIC FASTENING STRIP		999	


TB550. 211A CLUTCH SUBASSEMBLY

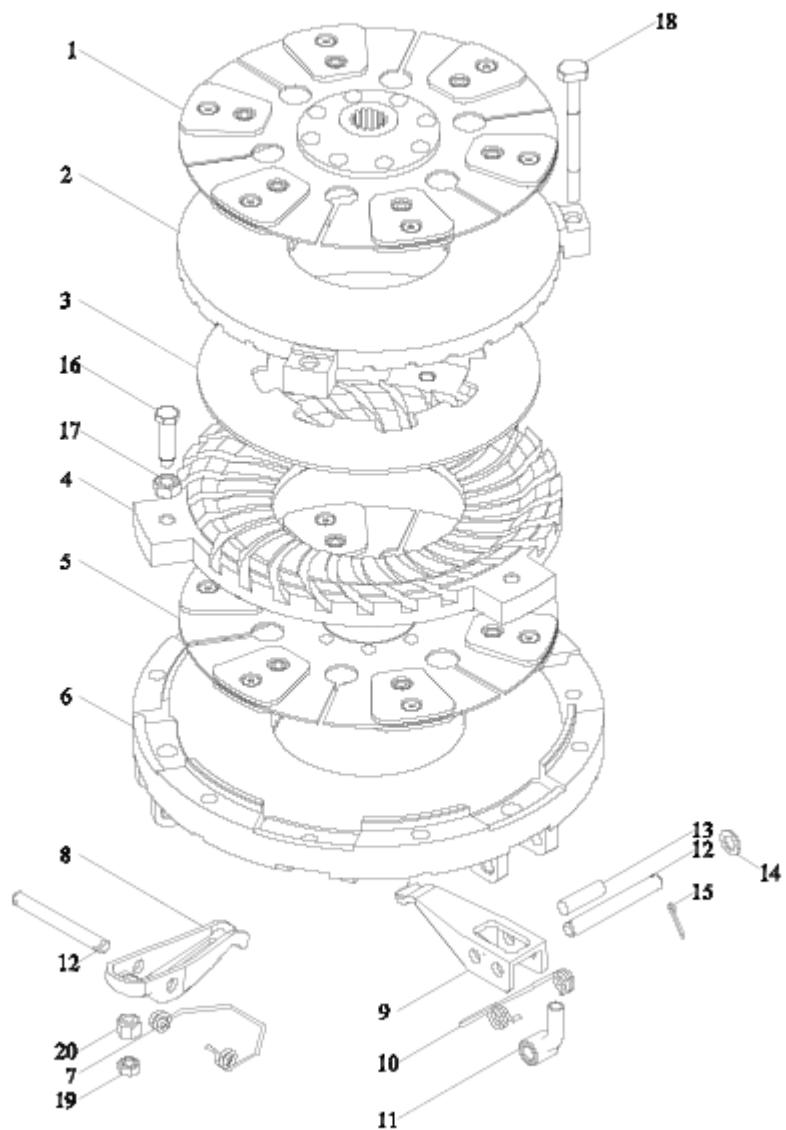

TB550. 211A CLUTCH SUBASSEMBLY

No.	Part No.	Description	Ver-sion	QTY.	Remark
	TB550.211A	CLUTCH SUBASSEMBLY		1	
1	CF550A.21.025	AUXILIARY CLUTCH FRICTION PLATE ASSEMBLY		1	
2	FT400.21B.102	AUXILIARY CLUTCH PRESSURE PLATE		1	
3	TB550.211-01	BUTTERFLY SPRING		1	
4	FT400.21B.113	MAIN CLUTCH PRESSURE PLATE		1	
5	CF550A.21.024	MAIN CLUTCH FRICTION PLATE ASSEMBLY		1	
6	FT400.21B.112	CLUTCH COVER		1	
7	FT300.21B.120	AUXILIARY RELEASE LEVER SPRING		1	
8	FT400.21B.106	AUXILIARY CLUTCH RELEASE LEVER		1	
9	FT400.21B.107	MAIN CLUTCH RELEASE LEVER		1	
10	FT400.21B.108	MAIN RELEASE LEVER SPRING		1	
11	FT400.21B.110	TOP ROD		1	
12	FT300.21B.111	LONG PIN		1	
13	FT300.21B.109	PIN SHAFT		1	
14	GBT848-10-A0P	SMALL WASHER		1	
15	GBT91-3.2X16-A0P	SPLIT PIN		1	
16	FT300.21B.114	MAIN CLUTCH ADJUSTING SCREW		1	
17	GBT6171-M10X1-A2L	HEXAGON NUT, TYPE-1		1	
18	FT400.21B.104	AUXILIARY CLUTCH PULL ROD		1	
19	GBT6171-M8X1-A2L	HEXAGON NUT, TYPE-1		1	
20	FT300.21B.105	BALL NUT		1	

TS04212030000K CLUTCH CONTROL ASSEMBLY

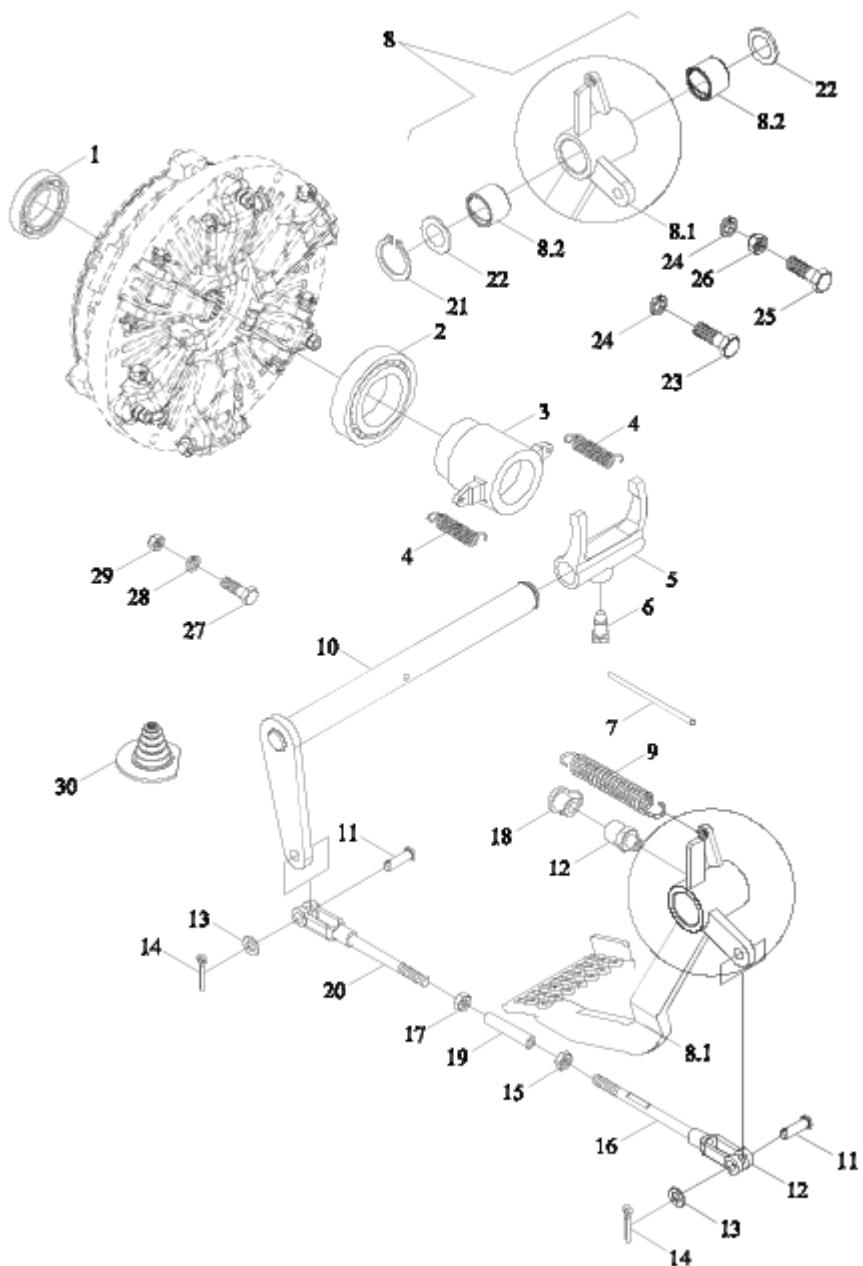


TS04212030000K CLUTCH CONTROL ASSEMBLY

No.	Part No.	Description	Ver-sion	QTY.	Remark
	TS04212030000K	CLUTCH CONTROL ASSEMBLY		1	
1	GBT276-6204-2RS	DEEP GROOVE BALL BEARING		1	
2	TA800.212-02	RELEASE BEARING 996713		1	
3	FT400.21B.101	RELEASE BEARING SEAT		1	
4	TB604.212-03	THRUST BEARING SEAT RETURN SPRING		2	
5	FT300.21.103	RELEASE FORK		1	
6	FT300.21.113	THRUST SCREW		1	
7	TA800.212B-02	LOW CARTON STEEL WIRE SZ-1.4		1	
8	TS04212020001K	CLUTCH PEDAL UNIT		1	
9	TD800.43-01	PEDAL RETURN SPRING		1	
10	TB604.212.3	CLUTCH ROCKER SHAFT WELDMENT		1	
11	GBT882-B10X32-A3L	PIN SHAFT		2	
12	JBT7940.1-M8X1	STRAIGHT FORCED FILL-ING OIL CUP		1	
13	GBT97.1-10-A3L	FLAT WASHER		2	
14	GBT91-3.2X20-A3L	SPLIT PIN		2	
15	GBT6171-M12X1.5-8-A3L	HEXAGON NUT, TYPE-1		1	
16	TB604.212A.5	UPPER PULL ROD WELDMENT		1	
17	GBT6171-M12X1.5-LH-8-A3L	HEXAGON NUT, TYPE-1		1	
18	TD800.311C.1-01	DUSTPROOF CAP OF OIL CUP		1	
19	TE354.433-03	CONNECTING ROD		1	
20	TB604.212.6	LOWER PULL ROD WELDMENT		1	
21	GBT894.1-25	CIRCLIP FOR SHAFT		1	
22	TE250.433C-02	GASKET		2	
23	GBT5783-M10X40-8.8-A3L	HEXAGON BOLT		6	
24	GBT93-10-A3L	STANDARD SPRING WASHER		7	
25	GBT5783-M10X70-8.8-A2L	HEXAGON BOLT		1	
26	GBT6170-M10-8-A3L	HEXAGON NUT, TYPE-1		1	
27	GBT5783-M8X30-8.8-A2L	HEXAGON BOLT		1	

TS0421203000K CLUTCH CONTROL ASSEMBLY (cont'd.)

No.	Part No.	Description	Ver-sion	QTY.	Remark
28	GBT93-8-A3L	STANDARD SPRING WASHER		1	
29	GBT6172.1-M8-04-A2L	HEXAGON THIN NUT		1	
30	TB604.212-02	DUSTPROOF SLEEVE		1	


TS04220010000 EXHAUST SYSTEM ASSEMBLY

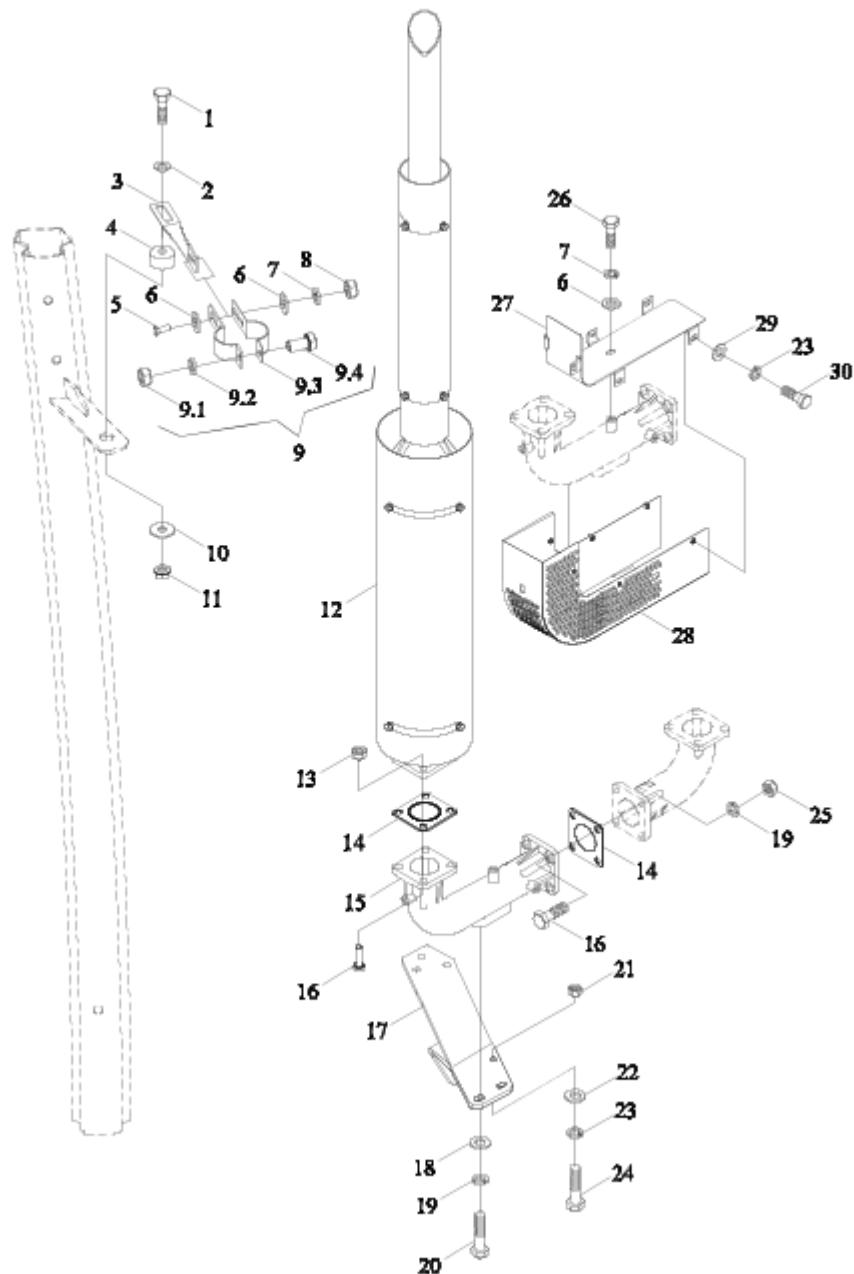

TS04220010000 EXHAUST SYSTEM ASSEMBLY

No.	Part No.	Description	Ver-sion	QTY.	Remark
	TS04220010000	EXHAUST SYSTEM ASSEMBLY		1	
1	GBT5782-M12X50-8.8-A3L	HEXAGON BOLT		1	
2	GBT97.1-12-A0P	FLAT WASHER		1	
3	TD900.22B-04	PULL ROD		1	
4	TD900.22B-03	UPPER RUBBER GASKET		1	
5	GBT5783-M8X20-8.8-A2L	HEXAGON BOLT		2	
6	GBT97.1-8-A0P	FLAT WASHER		5	
7	GBT93-8-A0P	STANDARD SPRING WASHER		5	
8	GBT6170-M8-8-A2L	HEXAGON NUT, TYPE-1		2	
9	TS04220010004	CLIP INSTALLATION ASSEMBLY		1	
10	GBT96.1-12-A0P	BIG WASHER		1	
11	SPL6177.1-M12-F3	HEXAGON FLANGE NUT		1	
12	TS04220010001	MUFFLER ASSEMBLY		1	
13	SPL6175PT-M10X1.5-8F3	HEXAGON SELF-LOCKING NUT, STYLE 2		4	
14	FT300.22.030	SEAL GASKET UNIT		2	
15	TS04220010002	EXHAUST BENDING PIPE 1		1	
16	GBT5783-M10X35-8.8-A3L	HEXAGON BOLT		8	
17	TS04220010005	BRACKET		1	
18	GBT97.1-10-A0P	FLAT WASHER		2	
19	GBT93-10-A0P	STANDARD SPRING WASHER		9	
20	GBT5783-M10X25-8.8-A3L	HEXAGON BOLT		5	
21	GBT13681-M6-A2L	NUT		1	
22	GBT96.1-6-A0P	BIG WASHER		1	
23	GBT93-6-A0P	STANDARD SPRING WASHER		7	
24	GBT5783-M6X20-8.8-A2L	HEXAGON BOLT		1	
25	GBT6170-M10-8-A3L	HEXAGON NUT, TYPE-1		4	
26	GBT5783-M8X16-8.8-A2L	HEXAGON BOLT		3	
27	TS04220010011	UPPER SHIELD NET		1	
28	TS04220010010	DOWN GUARD NET WELDMENT		1	
29	GBT97.1-6-A0P	FLAT WASHER		6	
30	GBT5783-M6X12-8.8-A2L	HEXAGON BOLT		6	


TC02311210000 FRONT DRIVING AXLE ASSEMBLY-1

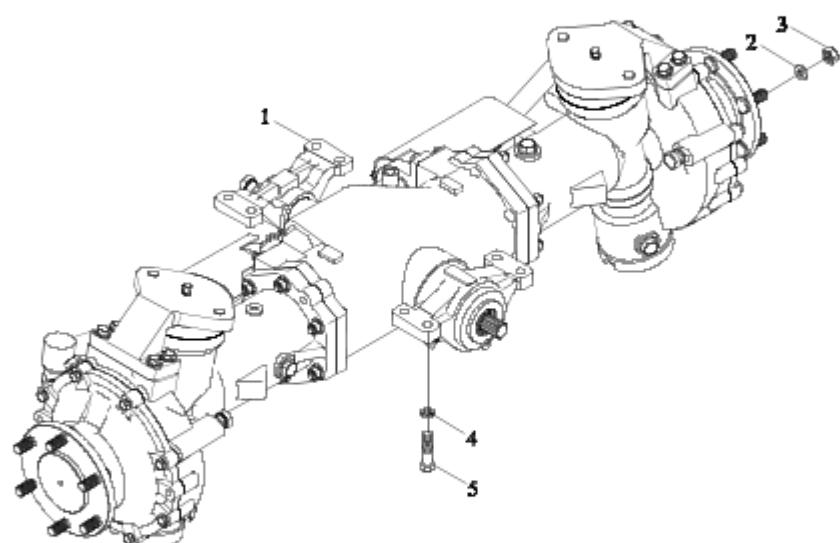

TC02311210000 FRONT DRIVING AXLE ASSEMBLY-1

No.	Part No.	Description	Ver-sion	QTY.	Remark
	TC02311210000	FRONT DRIVING AXLE ASSEMBLY		1	
1	TC02311210001	FRONT DRIVING AXLE SUB-ASSEMBLY		1	
2	FT400.31B.103	WASHER		12	
3	GBT6176-M14X1.5-10-A3L	HEXAGON NUT, TYPE-2		12	
4	GBT93-14-A0P	STANDARD SPRING WASHER		8	
5	GBT5783-M14X45-10.9-A3L	HEXAGON BOLT		8	

TC02311210000 FRONT DRIVING AXLE ASSEMBLY-2

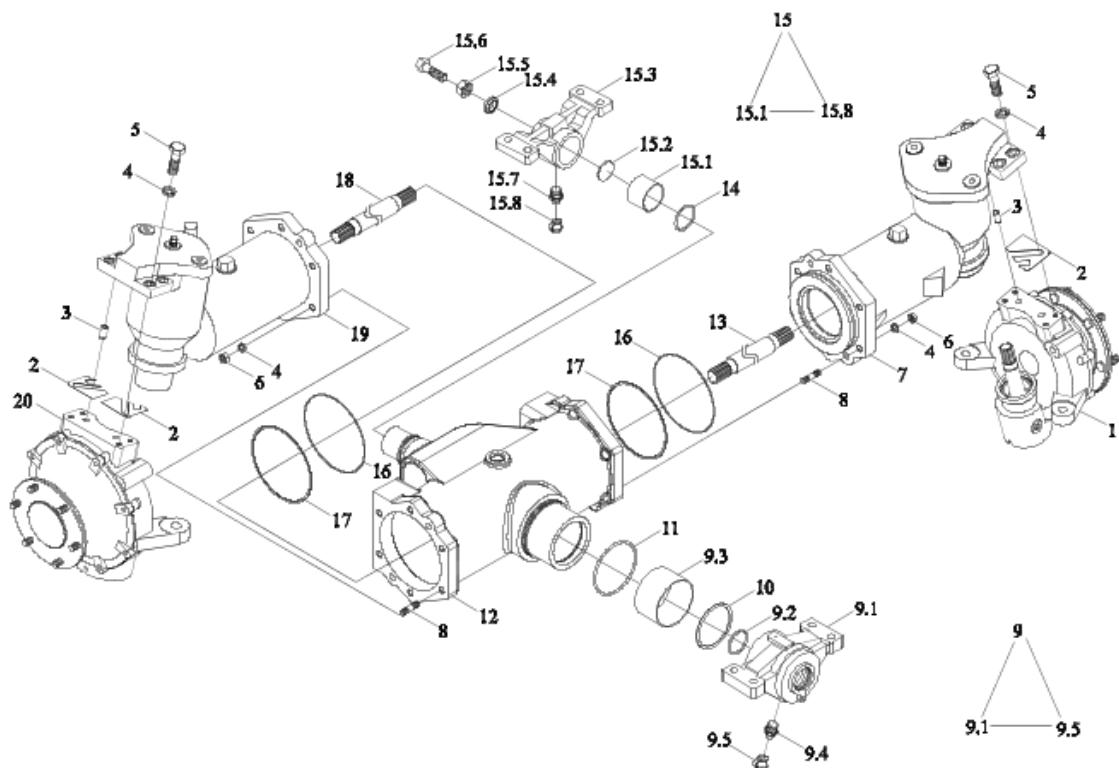


TC02311210000 FRONT DRIVING AXLE ASSEMBLY-2

No.	Part No.	Description	Ver-sion	QTY.	Remark
	TC02311210000	FRONT DRIVING AXLE ASSEMBLY		1	
1	TC02311020013	RIGHT FINAL TRANSMISSION ASSEMBLY		1	
2	TC02311010012	ADJUSTING GASKET		1	
3	GBT119.1-12m6X22-A0P	COLUMN PIN		1	
4	GBT93-12-A0P	STANDARD SPRING WASHER		8	
5	GBT5783-M12X40-10.9-A3L	HEXAGON BOLT		8	
6	GBT6170-M12-8-A3L	HEXAGON NUT, TYPE-1		12	
7	TC02311020003	RIGHT TRANSMISSION ASSEMBLY		1	
8	GBT5783-M12X45-10.9-A3L	HEXAGON BOLT		12	
9	TC02311010009	REAR BRACKET		1	
9.1	TC02311010071	REAR BRACKET		1	
9.2	GBT3452.1-45.0X3.55G	RUBBER O-SEAL RING		1	
9.3	TC02311010072	SLIDING BEARING		1	
9.4	JBT7940.1-M10X1	STRAIGHT FORCED FILLING OIL CUP		1	
9.5	TD800.311C.1-01	DUSTPROOF CAP OF OIL CUP		1	
10	TC02311010017	COPPER WASHER		1	
11	GBT3452.1-97.5X3.55G	RUBBER O-SEAL RING		1	
12	TC02311010002	MAIN REDUCER BOX ASSEMBLY		1	
13	TC02311020010	RIGHT HALF SHAFT		1	
14	GBT3452.1-48.7X2.65G	RUBBER O-SEAL RING		1	
15	TC02311010008	FRONT BRACKET ASSEMBLY		1	
15.1	TC02311010066	SLIDING BEARING		1	
15.2	TC02311010067	GASKET		1	
15.3	TC02311010065	FRONT BRACKET		1	
15.4	TC02311010068	SEAL GASKET		1	
15.5	GBT6170-M16-8-A3L	HEXAGON NUT, TYPE-1		1	
15.6	GBT5783-M16X50-8.8-A3L	HEXAGON BOLT		1	
15.7	JBT7940.1-M10X1	STRAIGHT FORCED FILLING OIL CUP		1	
15.8	TD800.311C.1-01	DUSTPROOF CAP OF OIL CUP		1	

TC02311210000 FRONT DRIVING AXLE ASSEMBLY-2 (cont'd.)

No.	Part No.	Description	Ver-sion	QTY.	Remark
16	GBT3452.1-136X3.55G	RUBBER O-SEAL RING		2	
17	TC02311010081	ADJUSTING WASHER		1	
18	TC02311020009	LEFT HALF SHAFT		1	
19	TC02311020002	LEFT TRANSMISSION ASSEMBLY		1	
20	TC02311020012	LEFT FINAL TRANSMISSION ASSEMBLY		1	


TC02311210000 FRONT DRIVING AXLE ASSEMBLY-3

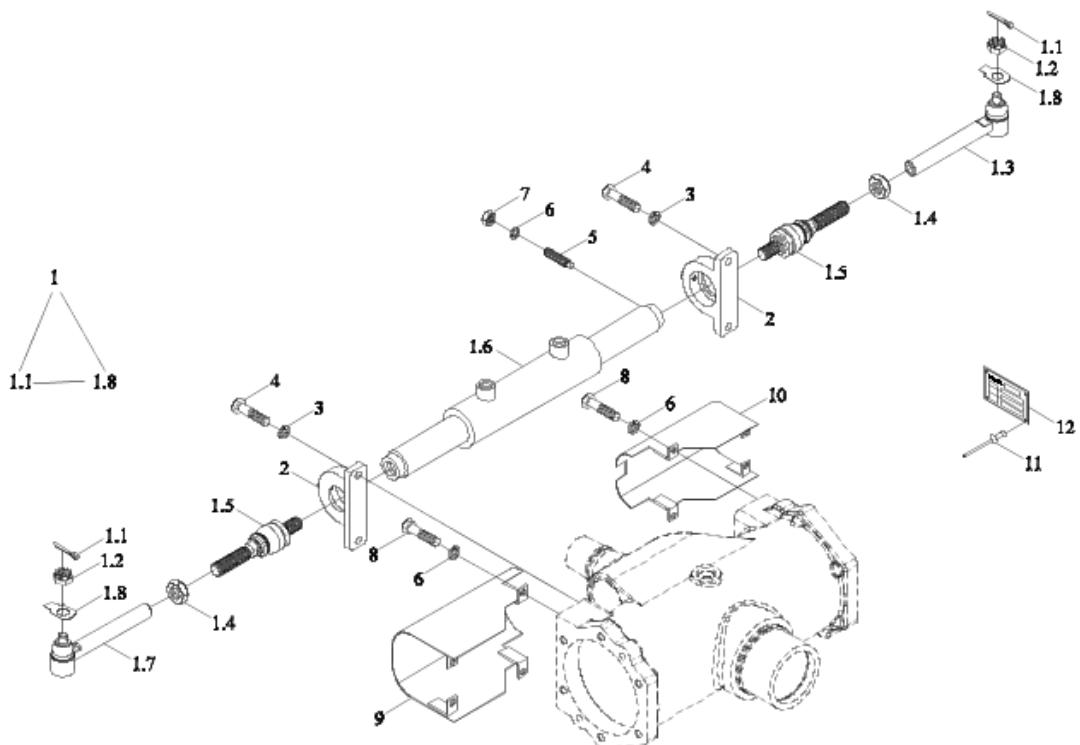

TC02311210000 FRONT DRIVING AXLE ASSEMBLY-3

No.	Part No.	Description	Ver-sion	QTY.	Remark
	TC02311210000	FRONT DRIVING AXLE ASSEMBLY		1	
1	TC02311210003	STEERING OIL CYLINDER ASSEMBLY		1	
1.1	GBT91-3.2X40-A0P	SPLIT PIN		2	
1.2	TC02311010075	HEXAGON SLOTTED NUT		2	
1.3	TC02311020011	RIGHT STEERING CONNECTING		1	
1.4	GBT6173-M22X1.5-05-A3L	HEXAGON THIN NUT		2	
1.5	TC02311010077	JOINT		2	
1.6	TC02311170004	STEERING OIL CYLINDER		1	
1.7	TC02311020008	LEFT STEERING CONNECTING		1	
1.8	GBT854-22	STOPPING WASHER		2	
2	TC02311010085	OIL CYLINDER SUPPORT SEAT		2	
3	GBT93-12-A0P	STANDARD SPRING WASHER		4	
4	GBT5783-M12X35-10.9-A3L	HEXAGON BOLT		4	
5	GBT75-M8X35-14H-A2L	SLOTTED LOCKING SCREW		2	
6	GBT93-8-A0P	STANDARD SPRING WASHER		10	
7	TC02311020021	RIM BOLT COVER		12	
8	GBT5783-M8X16-8.8-A2L	HEXAGON BOLT		8	
9	TC02311170050	BONNET		2	
10	TC02311010015	BONNET		2	
11	GBT827-2.5X4-A0P	LABEL RIVET		4	
12	9F650-26B010004A0	NAME PLATE		1	

TC02311210000 FRONT DRIVING AXLE ASSEMBLY-4

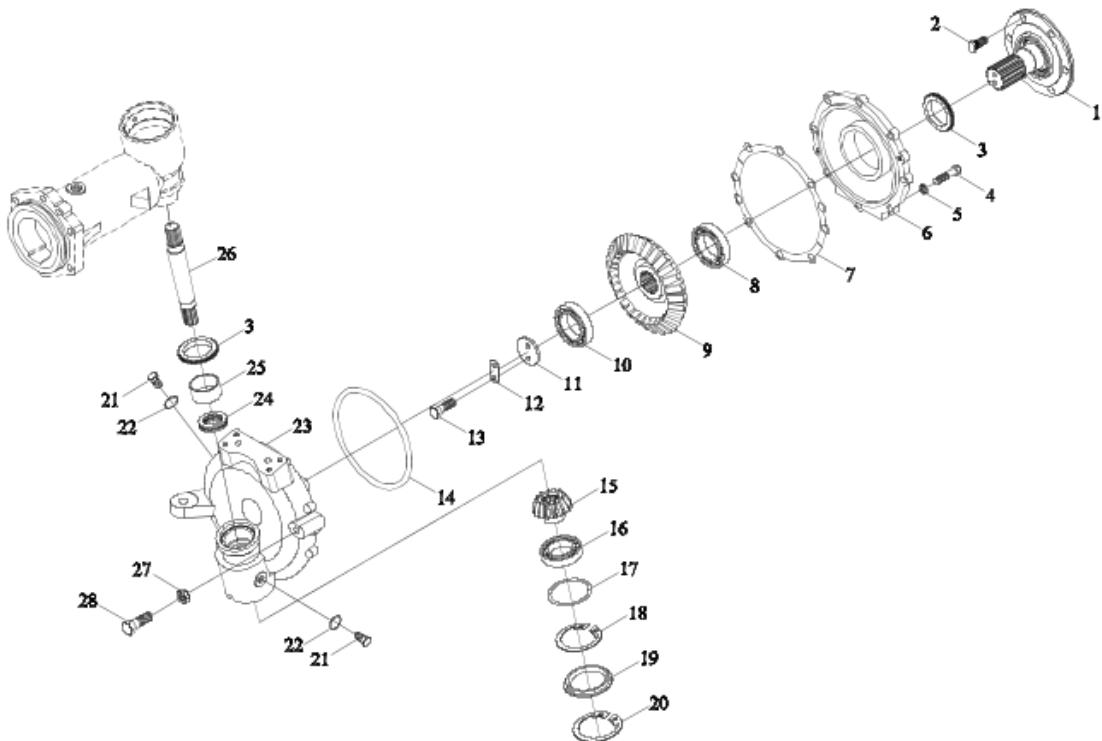


TC02311210000 FRONT DRIVING AXLE ASSEMBLY-4

No.	Part No.	Description	Ver-sion	QTY.	Remark
	TC02311210000	FRONT DRIVING AXLE ASSEMBLY		1	
	TC02311020012	LEFT FINAL TRANSMISSION ASSEMBLY		1	
	TC02311020013	RIGHT FINAL TRANSMISSION ASSEMBLY		1	
1	TC02311020014	FRONT DRIVING SHAFT		1	
2	TC02311020015	BOLT		6	
3	TC02311010032	FLOATING OIL SEAL		2	
4	GBT5783-M10X40-10.9-A3L	HEXAGON BOLT		8	
5	GBT93-10-A0P	STANDARD SPRING WASHER		8	
6	TC02311010050	BIG END COVER		1	
7	TC02311010060	ADJUSTING GASKET		1	
8	GBT276-6410	DEEP GROOVE BALL BEARING		1	
9	TC02311020019	BIG END GEAR		1	
10	GBT276-6310	DEEP GROOVE BALL BEARING		1	
11	TC02311010055	GASKET		1	
12	TC02311010054	LOCK WASHER		1	
13	GBT5783-M10X30-10.9-A3L	HEXAGON BOLT		2	
14	GBT3452.1-243X5.30G	RUBBER O-SEAL RING		1	
15	TC02311020020	END PINION		1	
16	GBT276-6308	DEEP GROOVE BALL BEARING		1	
17	TC02311010059	ADJUSTING GASKET		1	
18	GBT893.1-90	CIRCLIPS FOR HOLE		1	
19	TC02311010058	SEAL COVER		1	
20	GBT893.1-102	CIRCLIPS FOR HOLE		1	
21	TD904.311K.1-13	SCREW PLUG		2	
22	GBT3452.1-21.2X2.65G	RUBBER O-SEAL RING		2	
23	TC02311010048	RIGHT FINAL TRANSMISSION HOUSING		1	
23	TC02311010047	LEFT FINAL TRANSMISSION HOUSING		1	
24	GBT301-51107	THRUSTBEARING		1	
25	TC02311010057	BUSH		1	

TC02311210000 FRONT DRIVING AXLE ASSEMBLY-4 (cont 'd.)

No.	Part No.	Description	Ver-sion	QTY.	Remark
26	TC02311010056	END SPLINE SHAFT		1	
27	GBT6172.1-M16-04-A3L	HEXAGON THIN NUT		1	
28	GBT5783-M16X40-10.9-A3L	HEXAGON BOLT		1	


TC02311210000 FRONT DRIVING AXLE ASSEMBLY-5

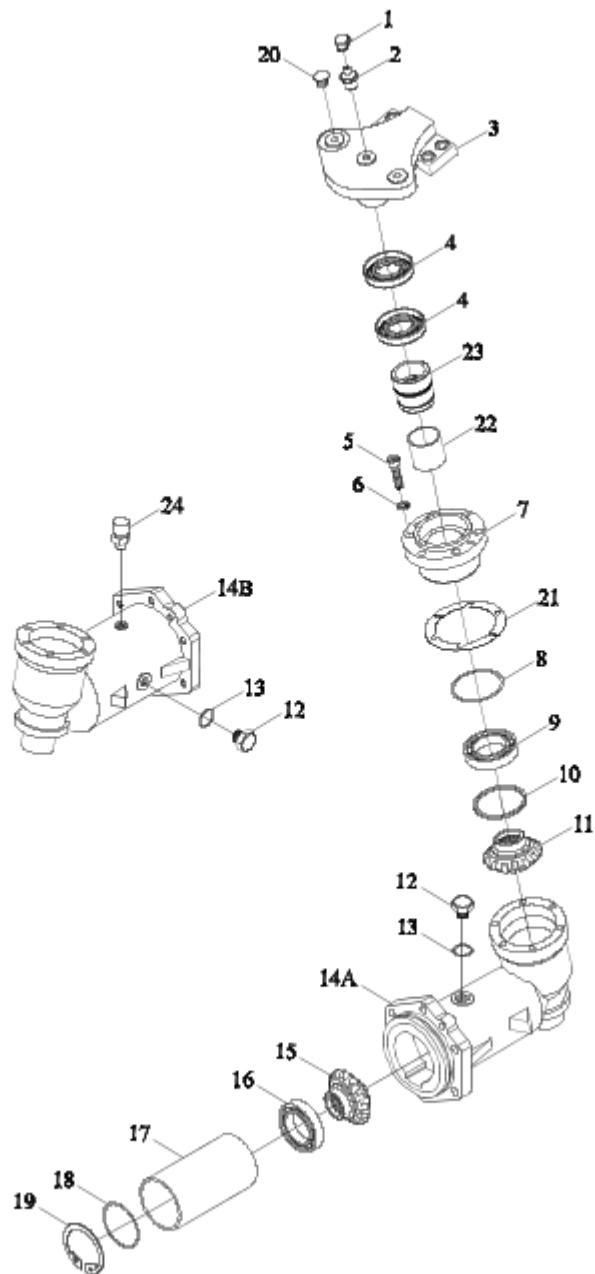

TC02311210000 FRONT DRIVING AXLE ASSEMBLY-5

No.	Part No.	Description	Ver-sion	QTY.	Remark
	TC02311210000	FRONT DRIVING AXLE ASSEMBLY		1	
	TC02311020002	LEFT TRANSMISSION ASSEMBLY		1	
	TC02311020003	RIGHT TRANSMISSION ASSEMBLY		1	
1	TD800.311C.1-01	DUSTPROOF CAP OF OIL CUP		1	
2	JBT7940.1-M10X1	STRAIGHT FORCED FILLING OIL CUP		1	
3	TC02311010041	CONNECTING COVER		1	
4	GBT9877.1-FB65X85X10D	SEAL RING		2	
5	GBT70.1-M8X25-8.8	INNER HEXAGON SCREW		6	
6	GBT93-8-A0P	STANDARD SPRING WASHER		6	
7	TC02311010044	OIL SEAL END COVER		1	
8	GBT3452.1-92.5X5.30G	RUBBER O-SEAL RING		1	
9	GBT276-6211	DEEP GROOVE BALL BEARING		1	
10	TC02311010039	WASHER		1	
11	TC02311020018	GEAR		1	
12	TD904.311K.1-13	SCREW PLUG		1	
13	GBT3452.1-21.2X2.65G	RUBBER O-SEAL RING		1	
14	TC02311020006	RIGHT HALF SHAFT HOUSING		1	
14	TC02311020004	LEFT HALF SHAFT HOUSING BODY		1	
15	TC02311020017	DRIVING GEAR		1	
16	GBT276-6309	DEEP GROOVE BALL BEARING		1	
17	TC02311020005	SLEEVE		1	
18	TC02311010073	ADJUSTING WASHER		1	
19	GBT893.1-100	CIRCLIPS FOR HOLE		1	
20	TC02311010074	PLUG		2	
21	TC02311010040	ADJUSTING GASKET		1	
22	TC02311010043	SLIDING BEARING		1	
23	TC02311010042	BUSH		1	
24	TD904.311K.1.6	PLUG		1	

TC02311210000 FRONT DRIVING AXLE ASSEMBLY-6

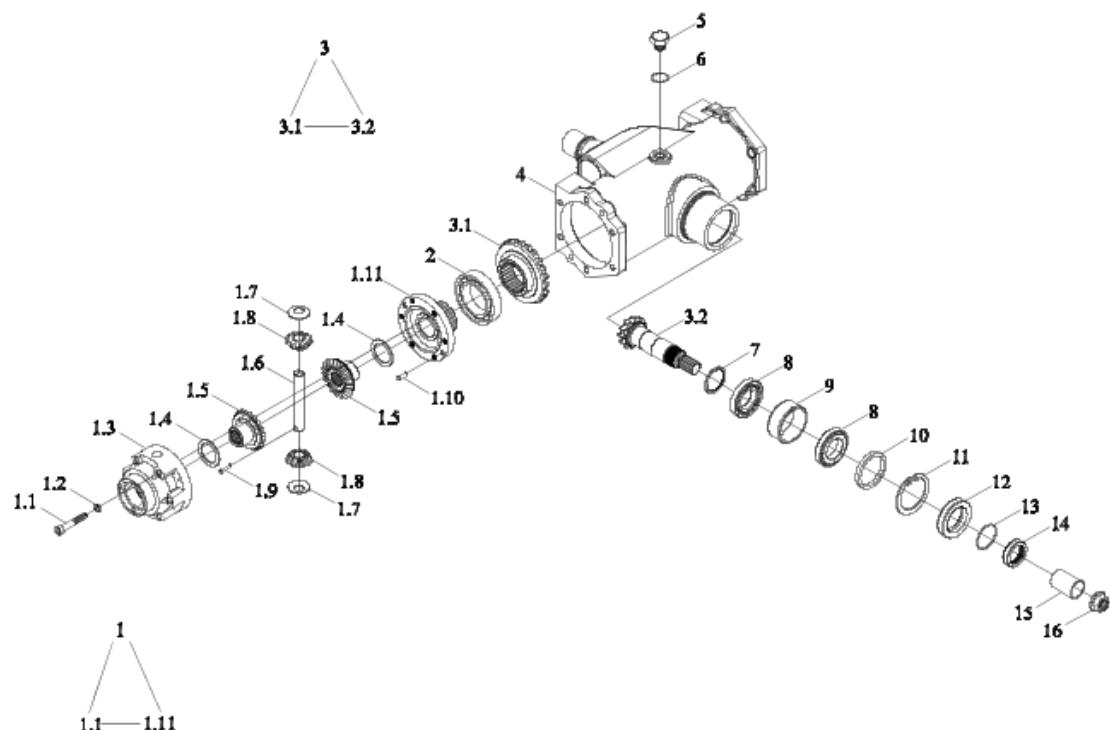


TC02311210000 FRONT DRIVING AXLE ASSEMBLY-6

No.	Part No.	Description	Ver-sion	QTY.	Remark
	TC02311210000	FRONT DRIVING AXLE ASSEMBLY		1	
	TC02311010002	MAIN REDUCER BOX ASSEMBLY		1	
1	TC02311010018	DIFFERENTIAL ASSEMBLY		1	
1.1	GBT70.1-M10X70-8.8	INNER HEXAGON SCREW		6	
1.2	GBT93-10	STANDARD SPRING WASHER		6	
1.3	TC02311010027	DIFFERENTIAL LEFT HOUSING		1	
1.4	TC02311010030	HALF SHAFT GEAR WASHER		2	
1.5	TC02311010035	HALF SHAFT GEAR		2	
1.6	TC02311010033	PLANET GEAR SHAFT		1	
1.7	TC02311010031	PLANET GEAR WASHER		2	
1.8	TC02311010034	PLANET GEAR		2	
1.9	GBT119.1-8h8X45-A0P	COLUMN PIN		1	
1.10	GBT119.1-8h8X20-A0P	COLUMN PIN		2	
1.11	TC02311010028	DIFFERENTIAL RIGHT HOUSING		1	
2	GBT276-6216	DEEP GROOVE BALL BEARING		2	
3	TC02311010026	GEAR		1	
3.1	TC02311010029	CENTRAL TRANSMISSION BIG SPIRAL BEVEL GEAR		1	
3.2	TC02311010020	DRIVING SPIRAL BEVEL GEAR SHAFT		1	
4	TC02311010019	MAIN REDUCER BOX HOUSING		1	
5	TD904.311K.1-13	SCREW PLUG		1	
6	GBT3452.1-21.2X2.65G	RUBBER O-SEAL RING		1	
7	TC02311010083	ADJUSTING GASKET		1	
8	GBT297-32208	TAPERED ROLLER BEARING		2	
9	TC02311010022	SPACER BUSH		1	
10	TC02311010023	ADJUSTING GASKET		1	
11	GBT893.1-80	CIRCLIPS FOR HOLE		1	
12	GBT9877.1-FB55X80X8D	SEAL RING		1	
13	GBT3452.1-41.2X3.55G	RUBBER O-SEAL RING		1	

TC02311210000 FRONT DRIVING AXLE ASSEMBLY-6 (cont'd.)

No.	Part No.	Description	Ver-sion	QTY.	Remark
14	TC02311010025	OIL SEAL SEAT		1	
15	TC02311010024	PROTECTION BUSH		1	
16	TC02311010088	LOCKING NUT		1	


TB554. 312 FRONT BRACKET ASSEMBLY

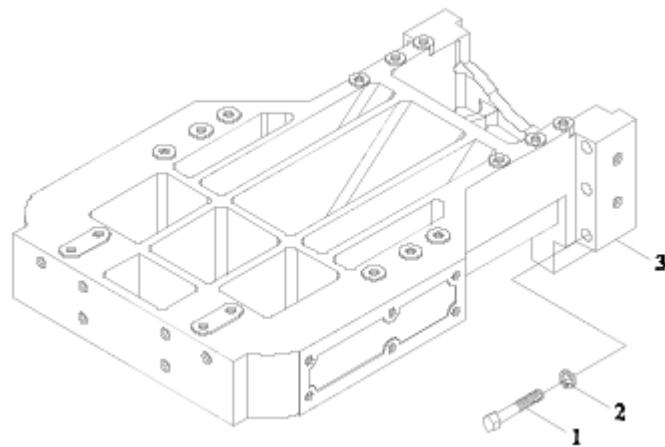

TB554. 312 FRONT BRACKET ASSEMBLY

No.	Part No.	Description	Ver-sion	QTY.	Remark
1	TC02312010002	BOLT		6	
2	TB604.312-04	WASHER		6	
3	TB554.312-01	FRONT BRACKET		1	


TB400. 35C TOWING MECHANISM INSTALLATION ASSEMBLY

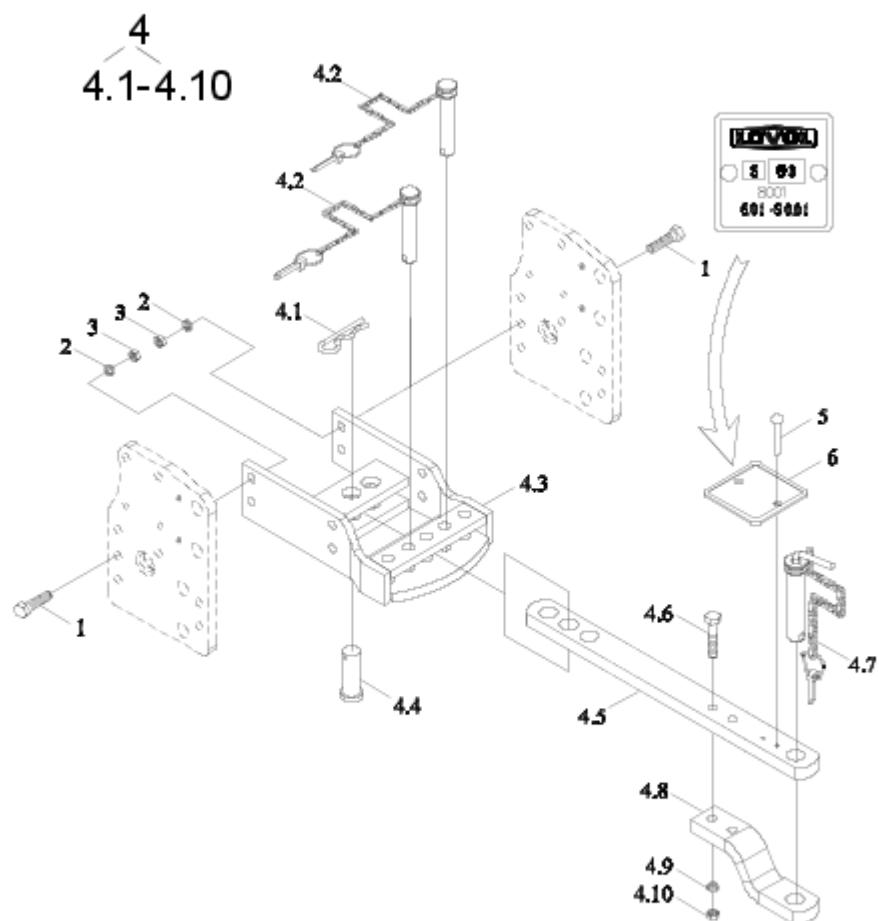

TB400. 35C TOWING MECHANISM INSTALLATION ASSEMBLY

No.	Part No.	Description	Ver-sion	QTY.	Remark
	TB400.35C	TOWING MECHANISM IN-STALLATION ASSEMBLY		1	
1	GBT5783-M16X60-8.8-A3L	HEXAGON BOLT		8	
2	GBT93-16-A0P	STANDARD SPRING WASHER		8	
3	GBT6170-M16-8-A3L	HEXAGON NUT, TYPE-1		8	
4	TB400.35C.1	TRACTION DEVICE ASSEMBLY		1	
4.1	FT65.35.103	SPRING LOCK PIN		1	
4.2	TB400.35.1.1	LIMITING PIN AND LOCK PIN ASSEMBLY		2	
4.3	TB400.35C.1.1	TOWING BRACKET WELDMENT		1	
4.4	FT300.35A.103	CONNECTING PIN		1	
4.5	TB400.35C.1-01	SWING ROD		1	
4.6	TB400.35.1-03	BOLT M16X75		2	
4.7	TB400.35.1.2	TOWING PIN AND LOCK PIN ASSEMBLY		1	
4.8	TB400.35.1-02	CONNECTING SWING ROD		1	
4.9	GBT93-16-A0P	STANDARD SPRING WASHER		2	
4.10	GBT6170-M16-8-A3L	HEXAGON NUT, TYPE-1		2	
5	GBT827-3X8-A0P	LABEL RIVET		2	
6	TB400.35-01	TOWING SIGN PLATE		1	


TB604. 371 GEARBOX HOUSING ASSEMBLY

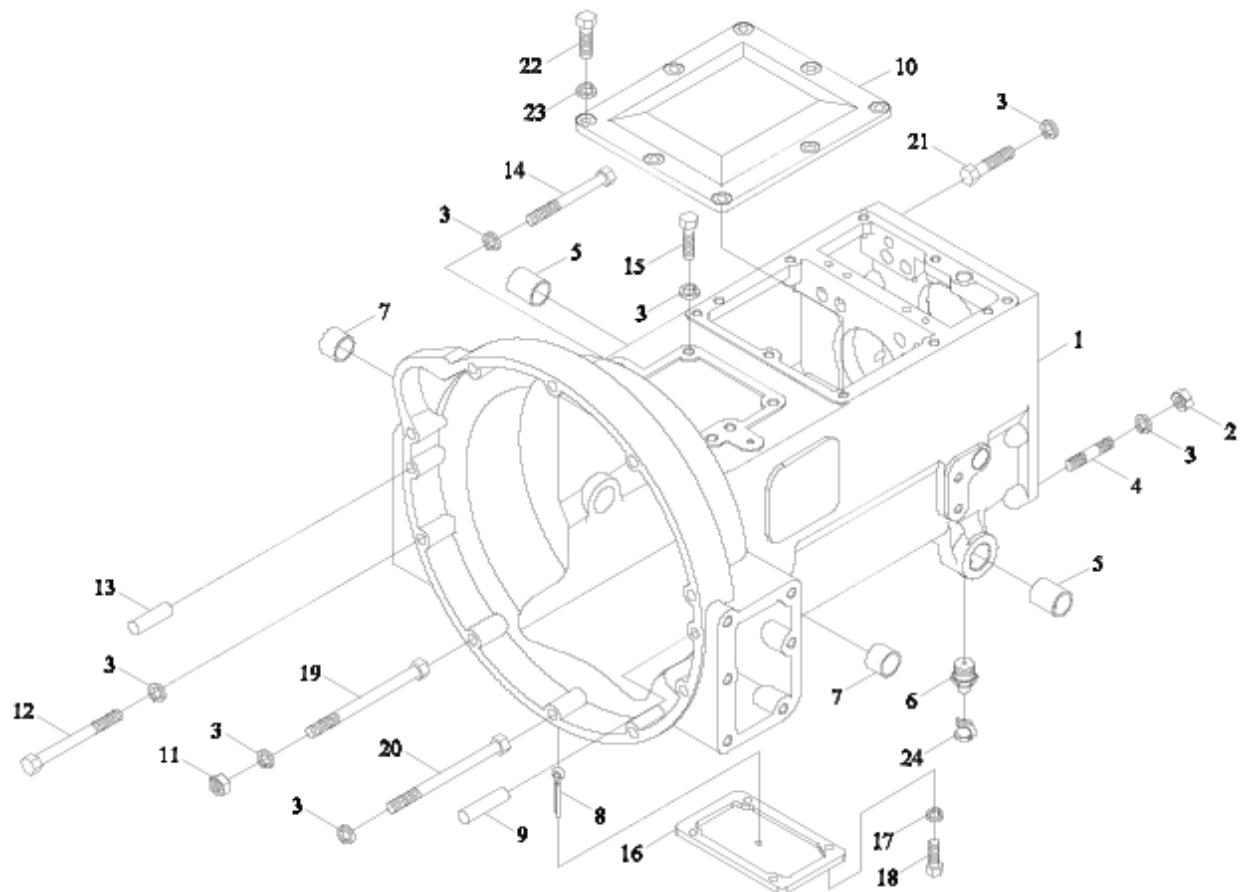

TB604. 371 GEARBOX HOUSING ASSEMBLY

No.	Part No.	Description	Ver-sion	QTY.	Remark
	TB604.371	GEARBOX HOUSING ASSEMBLY		1	
1	TB604.371-01	GEARBOX HOUSING		1	
2	GBT6171-M12X1.5-8-A3L	NUT		10	
3	GBT93-12-A0P	WASHER		24	
4	GBT899-AM12-M12X1.5X35-8.8-A3L	STUD		10	
5	FT300.37.158	PEDAL SHAFT BUSH		2	
6	JBT7940.1-M10X1	OIL CUP		2	
7	FT300.37.159	RELEASE FORK SHAFT BUSH		2	
8	GBT91-5X32-A0P	SPLIT PIN		1	
9	GBT119.1-12m6X30-A0P	PIN		3	
10	TB604.371-02	GEARBOX UPPER COVER		1	
11	GBT6170-M12-8-A3L	NUT		3	
12	GBT5782-M12X110-8.8-A2L	BOLT		1	
13	GBT119.1-12m6X22-A0P	PIN		1	
14	GBT5782-M12X70-8.8-A2L	BOLT		2	
15	GBT5783-M12X35-8.8-A3L	BOLT		4	
16	TB400.371E-03	LOWER PLUG COVER		1	
17	GBT93-10-A0P	WASHER		4	
18	GBT5783-M10X25-8.8-A3L	BOLT		4	
19	TB550.371-01-M12X160	BOLT		3	
20	TB550.371-02-M12X125	BOLT		1	
21	GBT5785-M12X1.5X55-8.8-A3L	HEXAGON BOLT		2	
22	GBT5783-M8X20-8.8-A2L	HEXAGON BOLT		8	
23	GBT93-8-A0P	STANDARD SPRING WASHER		8	
24	TD800.311C.1-01	DUSTPROOF CAP OF OIL CUP		2	


TB604. 372T MAIN GEARSHIFT ASSEMBLY-1

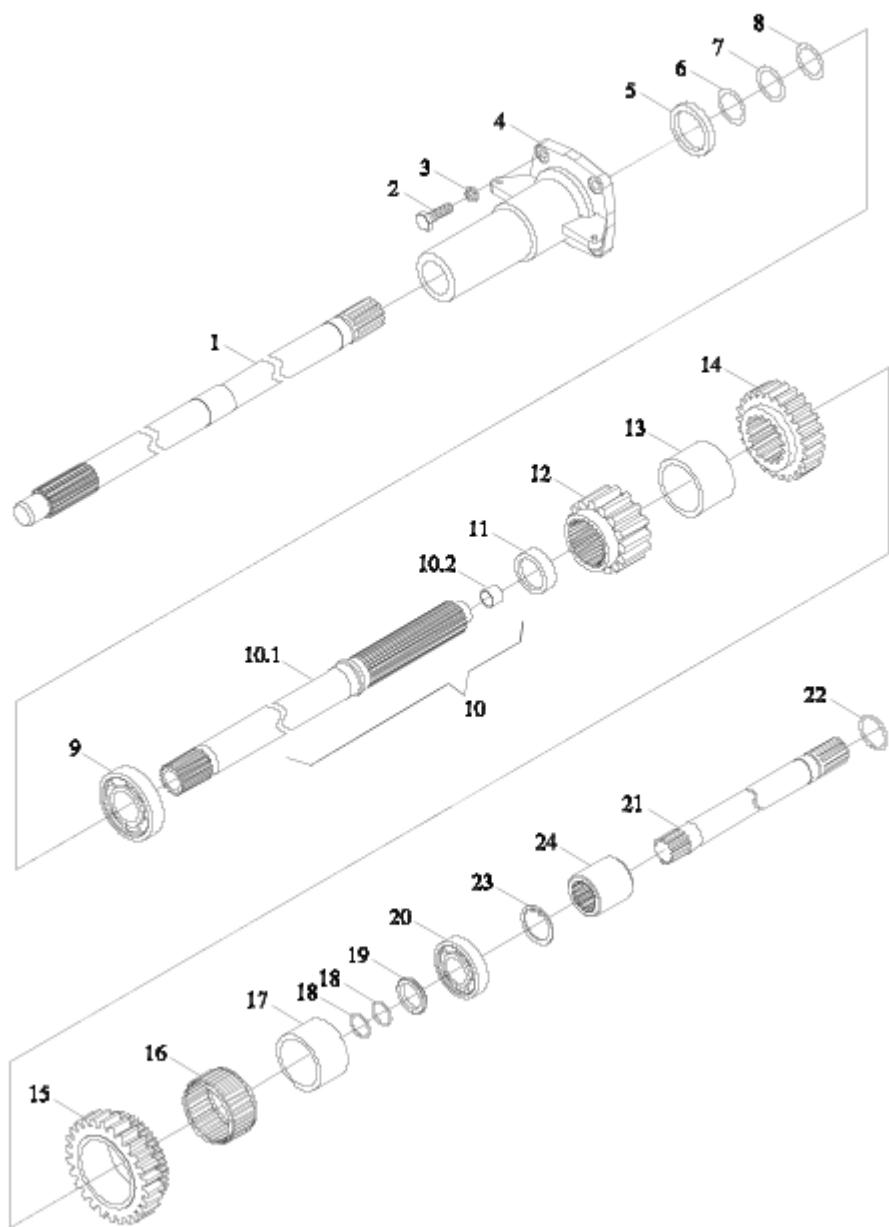

TB604. 372T MAIN GEARSHIFT ASSEMBLY-1

No.	Part No.	Description	Ver-sion	QTY.	Remark
	TB604.372T	MAIN GEARSHIFT ASSEMBLY		1	
1	FT400.37B.201	AUXILIARY CLUTCH SHAFT		1	
2	GBT5783-M8X25-8.8-A2L	HEXAGON BOLT		4	
3	GBT93-8-A0P	WASHER		4	
4	FT300.37B.124	SHAFT I BEARING COVER		1	
5	GBT9877.1-FB40X62X8D	SEAL RING		1	
6	TB604.372T-12	I SHAFT ADJUSTING WASHER		999	
7	TB604.372T-13	I SHAFT ADJUSTING WASHER		999	
8	TB604.372T-14	I SHAFT ADJUSTING WASHER		999	
9	GBT276-6208	BEARING		1	
10	TB604.372T.1	SHAFT I UNIT		1	
10.1	TB604.372T.1-01	SHAFT I		1	
10.2	FT300.37.170	BUSH		1	
11	TB604.372T-15	I GEAR SPACER		1	
12	TB604.372T-01	I DRIVING GEAR		1	
13	TB604.372T-02	I-II GEAR SPACER		1	
14	TB604.372T-03	II DRIVING GEAR		1	
15	TB604.372T-05	III DRIVING GEAR		1	
16	TB604.372T-17	ROLLER NEEDLE BEARING K47X52X28		1	
17	TB604.372T-16	III GEAR BUSH		1	
18	GBT3452.1-23.6X1.80G	O-RING		2	
19	TB604.372T-04	RETAINER RING		1	
20	GBT276-6007	BEARING		1	
21	FT300.37J.137	PTO CONNECTING SHAFT		1	
22	GBT895.2-24	RETAINER RING		1	
23	GBT893.1-21	CIRCLIPS FOR HOLE		1	
24	FT300.37.136	CONNECTING SLEEVE		1	

TB604. 372T MAIN GEARSHIFT ASSEMBLY-2

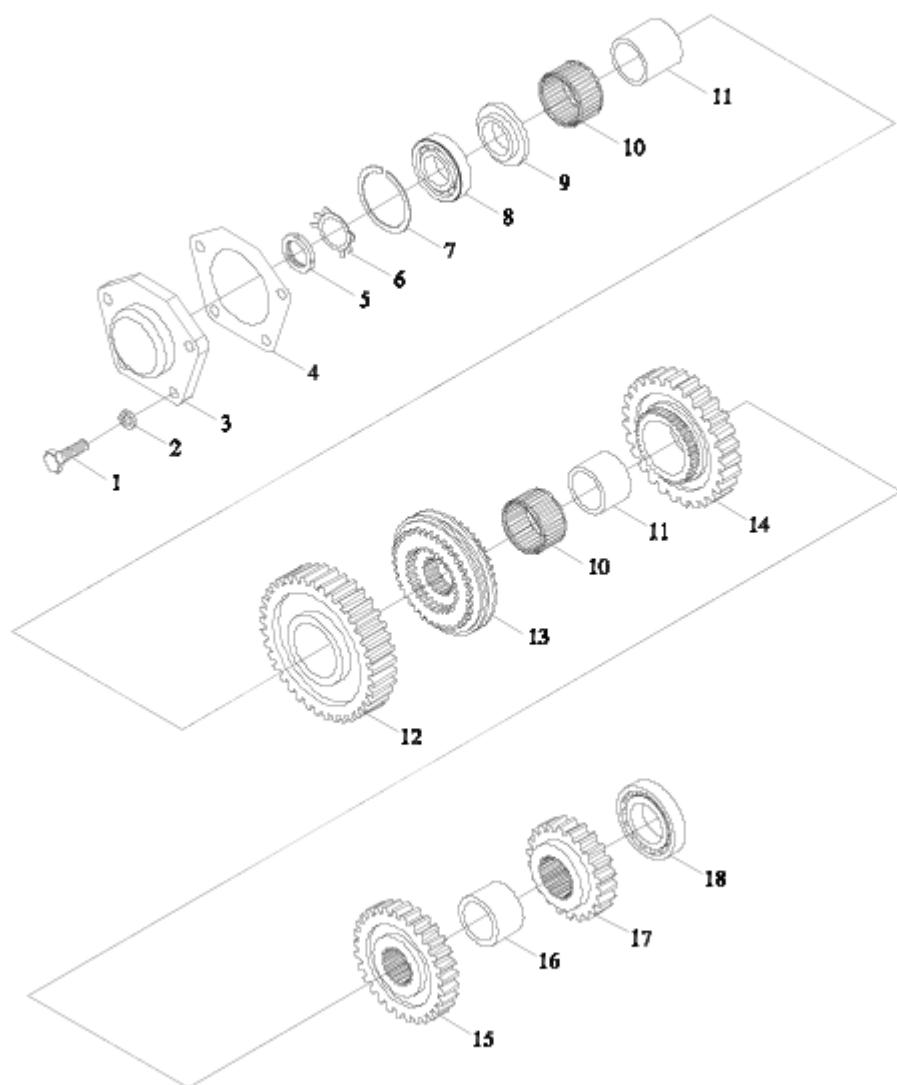


1. Lock washer
2. Lock nut
3. Nut
4. Housing
5. Flange
6. Gear
7. Bearing
8. Sleeve
9. Lock washer
10. Lock nut
11. Shaft
12. Gear
13. Gear
14. Lock nut
15. Gear
16. Gear
17. Lock washer
18. Lock nut

TB604. 372T MAIN GEARSHIFT ASSEMBLY-2

No.	Part No.	Description	Ver-sion	QTY.	Remark
	TB604.372T	MAIN GEARSHIFT ASSEMBLY		1	
1	GBT5783-M8X25-8.8-A2L	HEXAGON BOLT		4	
2	GBT93-8-A0P	WASHER		4	
3	FT300.37.120	SHAFT II BEARING COVER		1	
4	FT300.37.119	SHAFT II BEARING COVER PAPER GASKET		1	
5	GBT812-M24X1.5	NUT		1	
6	GBT858-24	WASHER		1	
7	GBT305-72-78.6	THRUST RING		1	
8	GBT276-6306N	BEARING		1	
9	TB604.372T-11	SHAFT II END RETAINER RING		1	
10	TB550.372-05	ROLLER NEEDLE BEARING K43X49X30		2	
11	FT300.37M.114	I-II GEAR BUSH		2	
12	TB604.372T-10	I DRIVEN GEAR		1	
13	TE354.361T.3	SYNCHRONIZER ASSEMBLY		1	
14	TB604.372T-09	II DRIVEN GEAR		1	
15	TB604.372T-07	III DRIVEN GEAR		1	
16	FT300.37.110	III-IV GEAR SPACER		1	
17	TB604.372T-06	IV DRIVEN GEAR		1	
18	GBT283-NUP208E	BEARING		1	

TB604. 373T AUXILIARY GEARSHIFT ASSEMBLY

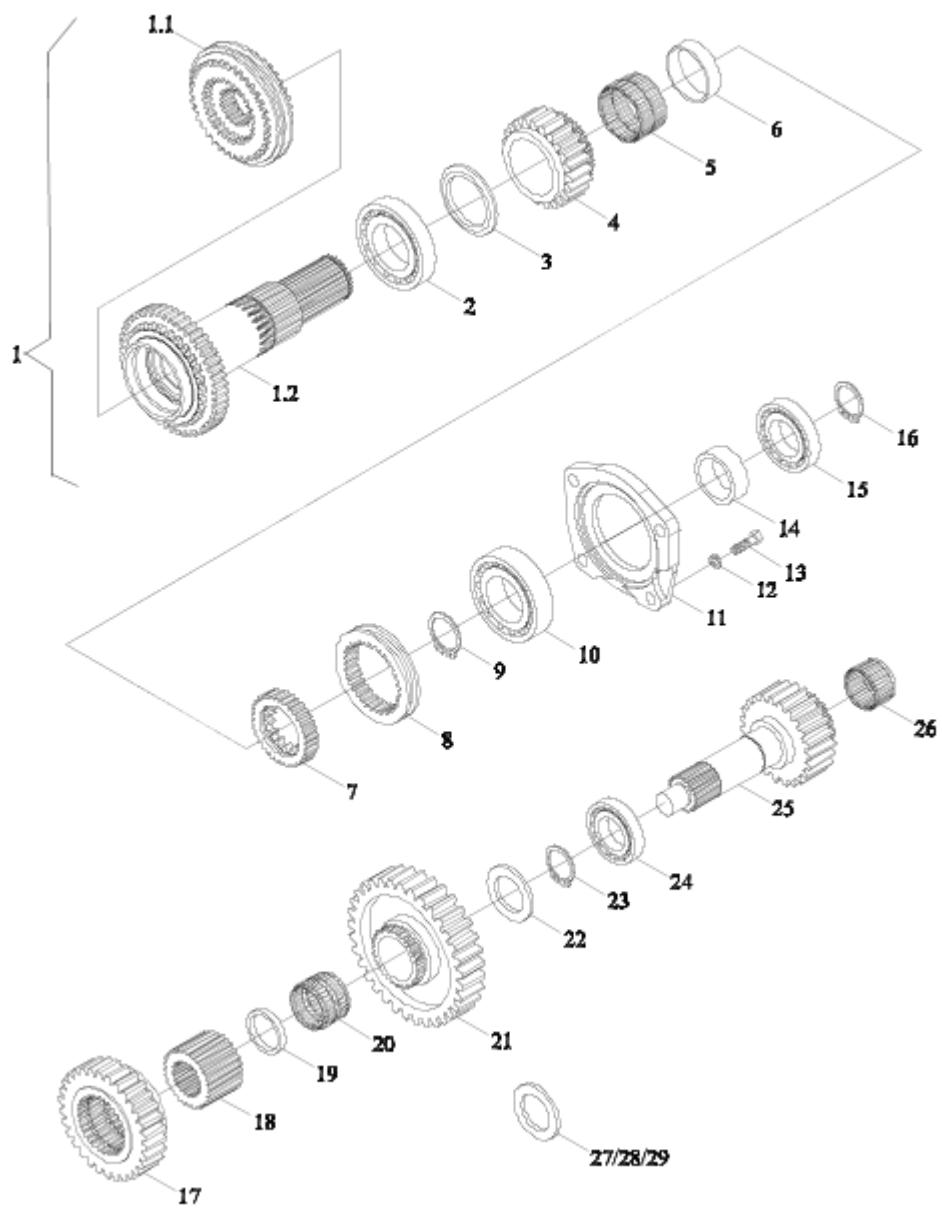


TB604. 373T AUXILIARY GEARSHIFT ASSEMBLY

No.	Part No.	Description	Ver-sion	QTY.	Remark
	TB604.373T	AUXILIARY GEARSHIFT ASSEMBLY		1	
1	TB604.373T.4	SYNCHRONIZER ASSEMBLY		1	
1.1	TB604.372T.3	SYNCHRONIZER ASSEMBLY		1	
1.2	TB604.373T.3	CONE RING WELDMENT		1	
2	GBT283-NUP210E	BEARING		1	
3	TB550.373-02	RETAINER RING		1	
4	TB550.373-03b	MIDDLE GEAR DRIVING GEAR		1	
5	TB550.373-12	ROLLING BEARING KK50X55X30		1	
6	TB550.373-04b	SPACER BUSH		1	
7	TB550.373-05b	MIDDLE GEAR MESHING GEAR SEAT		1	
8	TB550.373-06a	MIDDLE GEAR SHIFT COLLAR		1	
9	GBT894.1-50	RETAINER RING		1	
10	GBT283-NUP308E	BEARING		1	
11	FT300.37.139	AUXILIARY GEARSHIFT BEARING COVER		1	
12	GBT93-10-A0P	WASHER		4	
13	GBT5783-M10X30-8.8-A3L	HEXAGON BOLT		4	
14	FT300.37J.180	SPACER BUSH		1	
15	GBT283-NF208	BEARING		1	
16	GBT894.1-40	RETAINER RING		1	
17	TB550.373-08	MIDDLE GEAR DRIVEN GEAR		1	
18	TB550.373-09	REVERSE GEAR MESHING SEAT		1	
19	FT300.37.111	SPACER BUSH		1	
20	QLWZB120-K35X43X34ZW	ROLLER NEEDLE BEARING		1	
21	FT450.37.103	AUXILIARY GEARSHIFT DRIVEN GEAR		1	
22	TB550.373-11a	LIMITING RETAINER RING		1	
23	GBT894.1-35	RETAINER RING		1	
24	GBT283-NUP307E	BEARING		1	
25	TB550.373-16	AUXILIARY GEARSHIFT DRIVEN SHAFT		1	

TB604. 373T AUXILIARY GEARSHIFT ASSEMBLY (cont'd.)

No.	Part No.	Description	Ver-sion	QTY.	Remark
26	GBT20056-K25X31X20	NEEDLE AND CARRIER COMBINATION		1	
27	TB550.373-15	LIMITING RETAINER RING		1	
28	TB550.373-13	LIMITING RETAINER RING		1	
29	TB550.373-14	LIMITING RETAINER RING		1	


TS04374010000 GEARBOX CONTROL MECHANISM ASSEMBLY-1

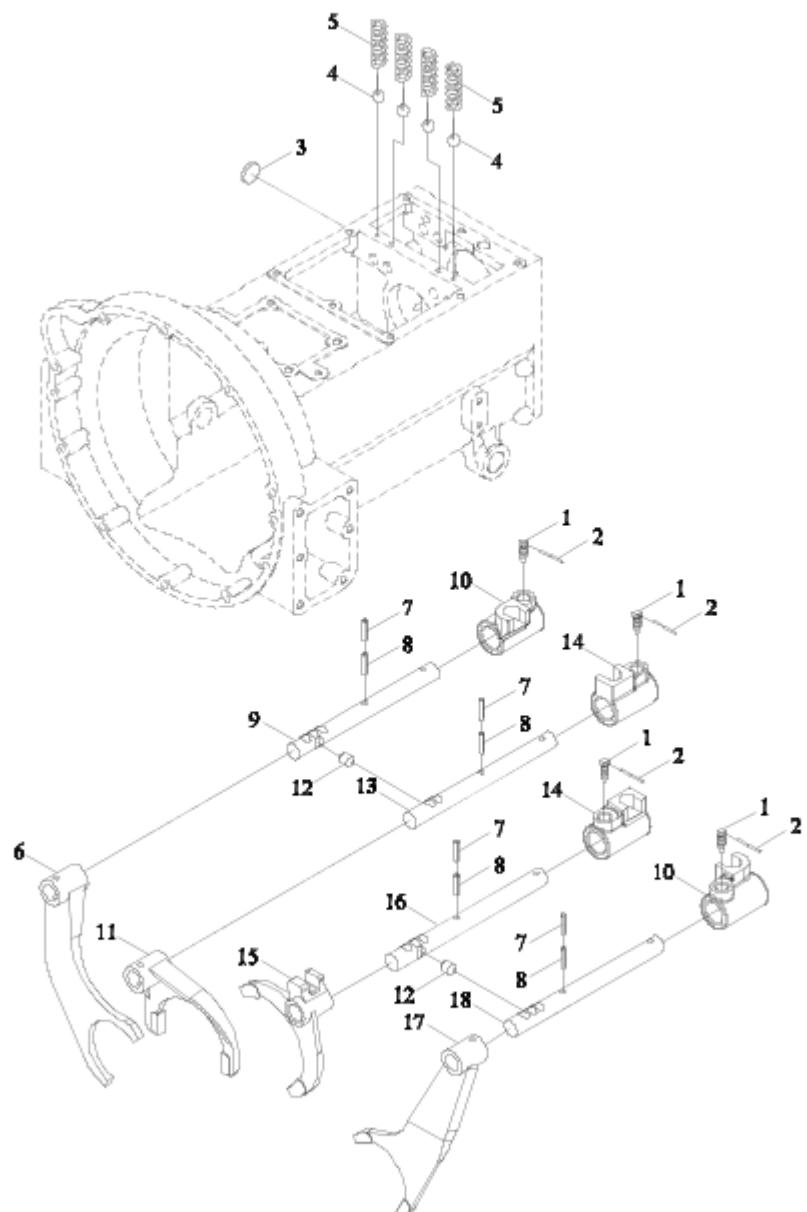

TS04374010000 GEARBOX CONTROL MECHANISM ASSEMBLY-1

No.	Part No.	Description	Ver-sion	QTY.	Remark
	TS04374010000	GEARBOX CONTROL MECHANISM ASSEMBLY		1	
1	TB504.374-01	LOCKING SCREW		4	
2	TF1004.374-02	LOW CARBON STEEL WIRE		2	
3	Q72214	PLUG PIECE		2	
4	GBT308-8-G100-b	STEEL BALL		4	
5	FT300.37.135	FORK SHAFT LOCATING SPRING		4	
6	TB550.374-03a	HIGH AND LOW GEAR FORK		1	
7	GBT879.1-3X24	SPRING COLUMN PIN		4	
8	GBT879.1-5X24	SPRING COLUMN PIN		4	
9	TB604.374B-03	HIGH AND LOW GEAR FORK SHAFT		1	
10	TB604.374B-05	I-II GEAR FORK HEAD		2	
11	TB550.374-04a	MIDDLE GEAR FORK		1	
12	FT300.37.151	MUTUAL PIN		2	
13	TB604.374B-04	MIDDLE GEAR FORK SHAFT		1	
14	TB604.374B-06	III-IV FORK HEAD		2	
15	TB604.374A-01	III-IV FORK		1	
16	TB604.374B-02	III-IV FORK SHAFT		1	
17	TB604.374A-04	I-II GEAR FORK		1	
18	TB604.374B-01	I-II GEAR FORK SHAFT		1	


TS04374010000 GEARBOX CONTROL MECHANISM ASSEMBLY-2

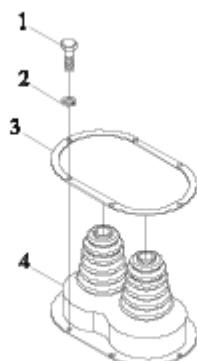

TS04374010000 GEARBOX CONTROL MECHANISM ASSEMBLY-2

No.	Part No.	Description	Ver-sion	QTY.	Remark
	TS04374010000	GEARBOX CONTROL MECHANISM ASSEMBLY		1	
1	GBT5783-M6X20-8.8-A2L	HEXAGON BOLT		6	
2	GBT93-6-A0P	STANDARD SPRING WASHER		6	
3	TB604.374B-09	SLEEVE PRESSURE PLATE		1	
4	TB604.374B-08	GEARLEVER SLEEVE		1	


TS04374010000 GEARBOX CONTROL MECHANISM ASSEMBLY-3

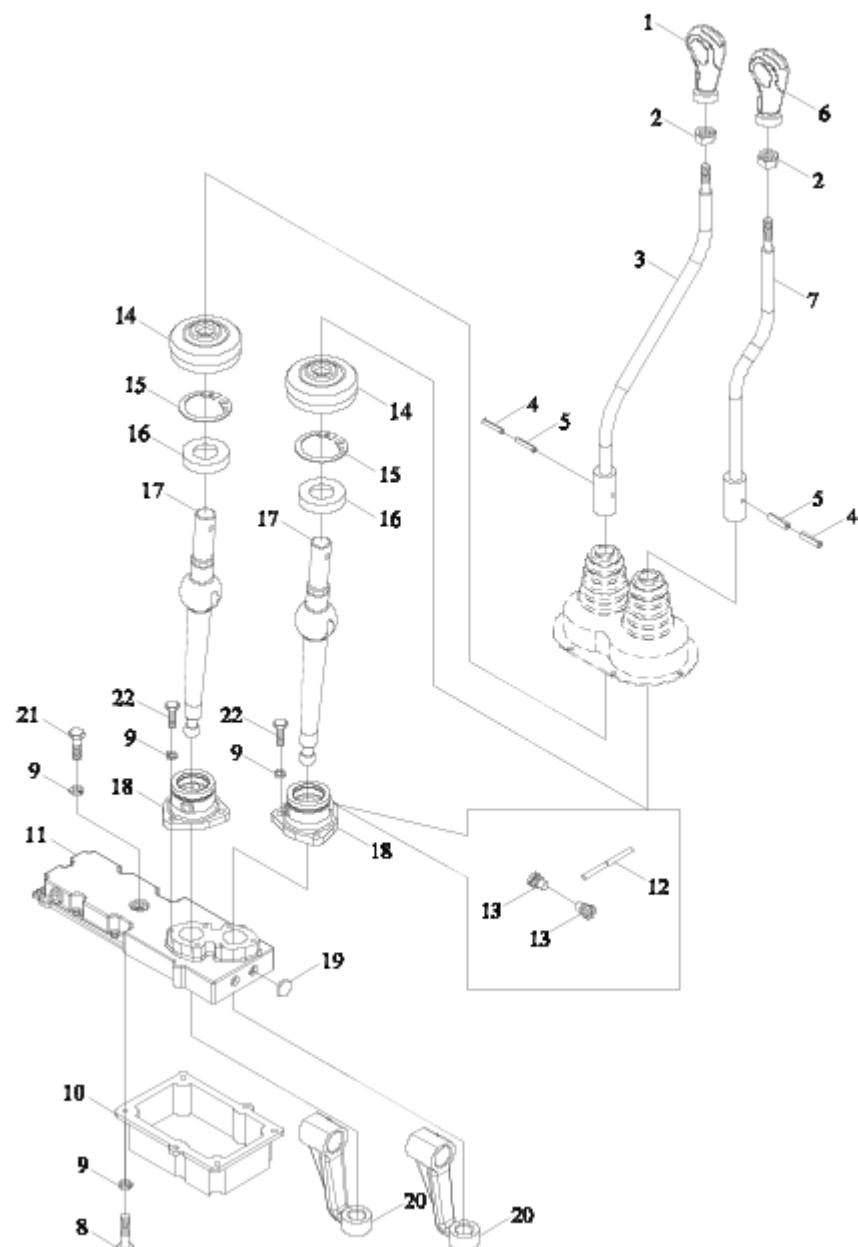

TS04374010000 GEARBOX CONTROL MECHANISM ASSEMBLY-3

No.	Part No.	Description	Ver-sion	QTY.	Remark
	TS04374010000	GEARBOX CONTROL MECHANISM ASSEMBLY		1	
	TS04374010000	GEARBOX CONTROL MECHANISM ASSEMBLY		1	
1	TS04374010001	MAIN GEARSHIFT CONTROL HANDLE		1	
2	GBT6172.1-M10-04-A3L	HEXAGON THIN NUT		2	
3	TB604.374B.1.1	MAIN GEARLEVER WELDMENT		1	
4	GBT879.1-3X28	SPRING COLUMN PIN		2	
5	GBT879.1-5X28	SPRING COLUMN PIN		2	
6	TS04374010002	AUXILIARY GEARSHIFT CONTROL HANDLE		1	
7	TS04374010007	ASSISTANT GEARLEVER WELDMENT		1	
8	GBT5783-M8X20-10.9-A2L	HEXAGON BOLT		6	
9	GBT93-8-A0P	STANDARD SPRING WASHER		20	
10	TB604.374B.1-02	SIDE CONTROL LOWER COVER		1	
11	TB604.374B.1-01	SIDE CONTROL UPPER COVER		1	
12	TF1004.374-02	LOW CARBON STEEL WIRE		4	
13	FT800A.37.326	GEARLEVER LOCATING PIN		4	
14	FT300.37.166a	GEARLEVER DUSTPROOF BONNET		2	
15	GBT893.1-40	CIRCLIPS FOR HOLE		2	
16	FT800A.37.305	NYLON SEAT		2	
17	TB604.374B.1-09	LOWER CONTROL ROD		2	
18	TB504.374-06	AUXILIARY GEARLEVER SEAT		2	
19	Q72220	PLUG PIECE		2	
20	TB604.374B.1-06	FORK HEAD		2	
21	GBT5782-M8X55-8.8-A2L	HEXAGON BOLT		1	
22	GBT5783-M8X25-8.8-A2L	HEXAGON BOLT		13	


TS04374010000 GEARBOX CONTROL MECHANISM ASSEMBLY-4

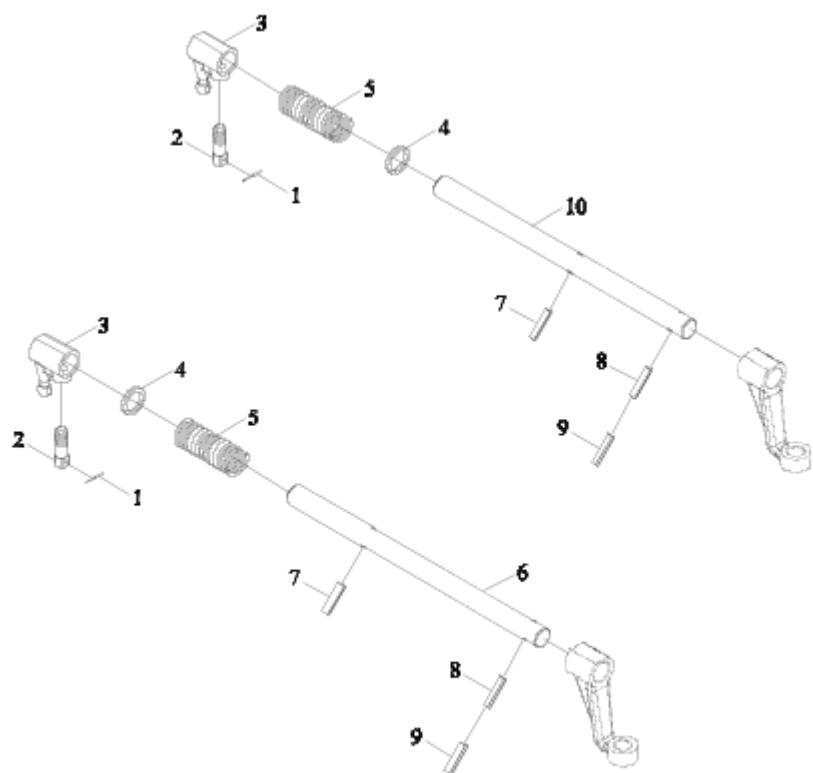

TS04374010000 GEARBOX CONTROL MECHANISM ASSEMBLY-4

No.	Part No.	Description	Ver-sion	QTY.	Remark
	TS04374010000	GEARBOX CONTROL MECHANISM ASSEMBLY		1	
	TS04374010000	GEARBOX CONTROL MECHANISM ASSEMBLY		1	
1	TF1004.374-02	LOW CARBON STEEL WIRE		2	
2	TB504.374-01	LOCKING SCREW		2	
3	TB604.374B.1-05	SIDE CONTROL INNER FORK HEAD		2	
4	TB604.374B.1-08	SPRING WASHER		2	
5	TB604.374B.1-07	LOCATING SPRING		2	
6	TB604.374B.1-03	MAIN SPEED TRANSMISSION ROD		1	
7	GBT879.1-6X24	SPRING COLUMN PIN		2	
8	GBT879.1-3.5X28	SPRING COLUMN PIN		2	
9	GBT879.1-6X28	SPRING COLUMN PIN		1	
10	TB604.374B.1-04	AUXILIARY GEAR ROD		1	


TB604. 375B BREATH ASSEMBLY

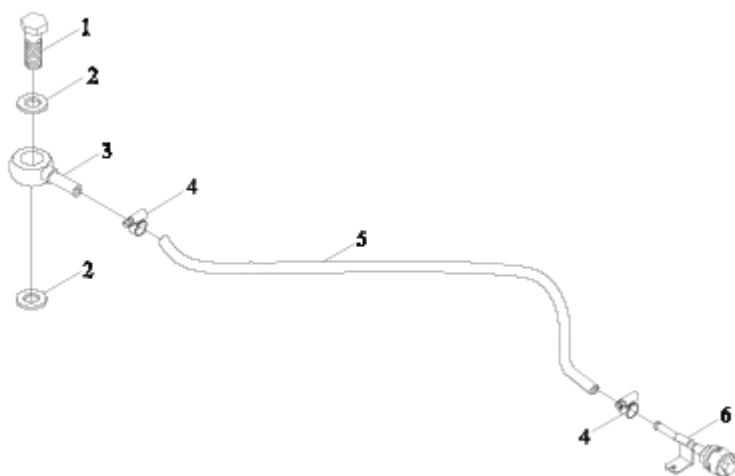

TB604. 375B BREATH ASSEMBLY

No.	Part No.	Description	Ver-sion	QTY.	Remark
1	TB604.375B	BREATH ASSEMBLY		1	
1	FT800.40.172	HOLLOW BOLT		1	
2	JB982-14	COMBINED SEAL GASKET		2	
3	FT65.37.186	PIPE JOINT		1	
4	Q67512	A-TYPE WORM TRANSMISSION HOSE CLAMP		2	
5	TS04374010010	BREATH HOSE		1	
6	TB604.375.1	BREATH ASSEMBLY		1	


TB554. 381 SHUTTLE SHIFT ASSEMBLY

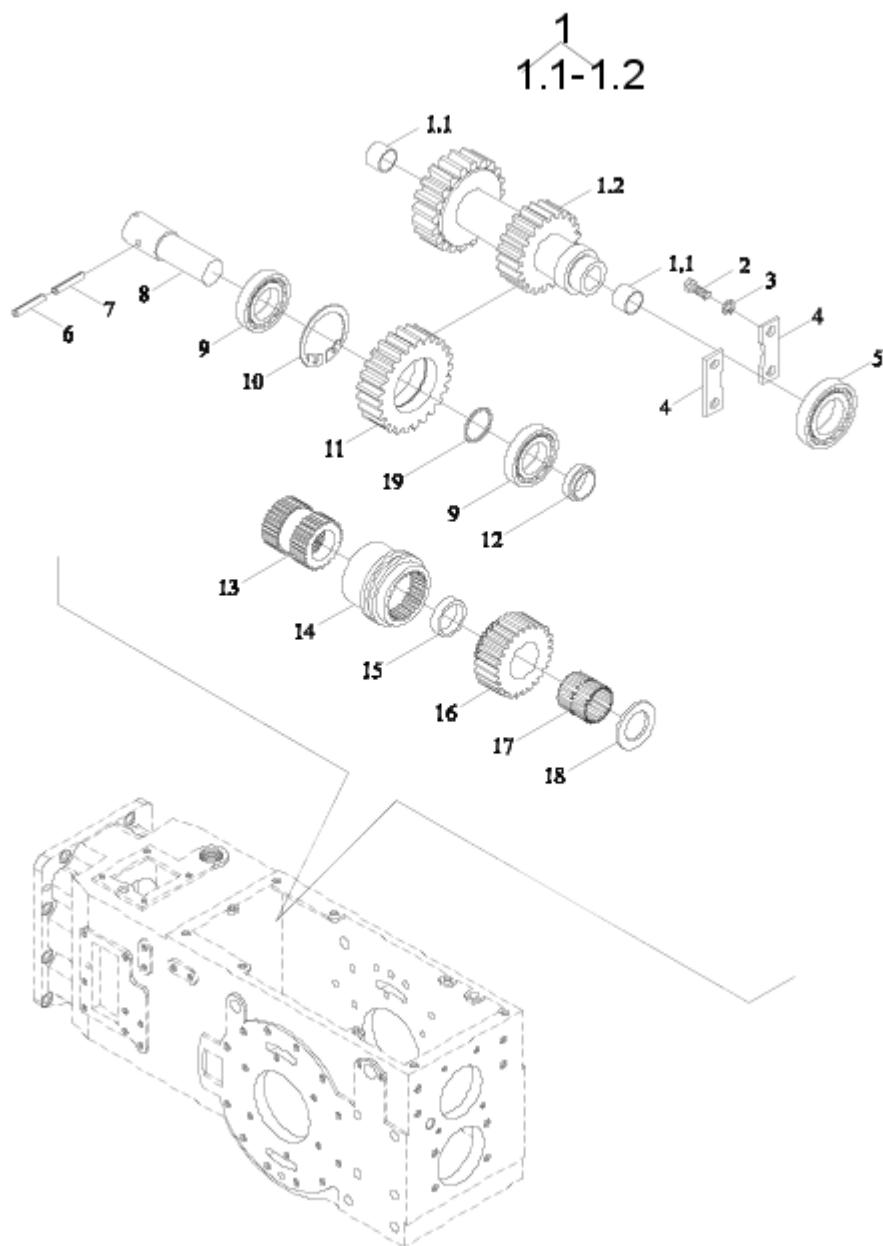

TB554. 381 SHUTTLE SHIFT ASSEMBLY

No.	Part No.	Description	Ver-sion	QTY.	Remark
	TB554.381	SHUTTLE SHIFT ASSEMBLY		1	
1	TB450.38J.1	REVERSE MIDDLE SHAFT ASSEMBLY		1	
2	GBT5783-M10X25-8.8-A3L	BOLT		4	
3	GBT93-10-A0P	WASHER		4	
4	FT300.38J.204	BEARING PRESSURE PLATE		2	
5	GBT283-NJ208E	BEARING		1	
6	GBT879.1-5X30	PIN		1	
7	GBT879.1-8X30	PIN		1	
8	TB450.38J-07	REVERSE IDLER GEAR SHAFT		1	
9	GBT283-NJ206E	BEARING		2	
10	GBT893.1-62	RETAINER RING		1	
11	TB450.38J-06	REVERSE IDLER GEAR		1	
12	TB450.38J-08	REVERSE IDLER GEAR SHAFT SPACER SLEEVE		1	
13	TB450.38J-01	MESHING SEAT		1	
14	TB450.38J-02	SHIFT COLLAR		1	
15	TB450.38J-03	SPACER BUSH		1	
16	TB450.38J-04	REVERSE DRIVEN GEAR		1	
17	QSFZB019-K35X43X34ZW	ROLLER NEEDLE BEARING		1	
18	FT300.38J.202	ADJUSTING WASHER		1	
19	TB554.381-02	GASKET		1	


TB504. 382 REAR AXLE CENTRAL TRANSMISSION ASSEMBLY-1

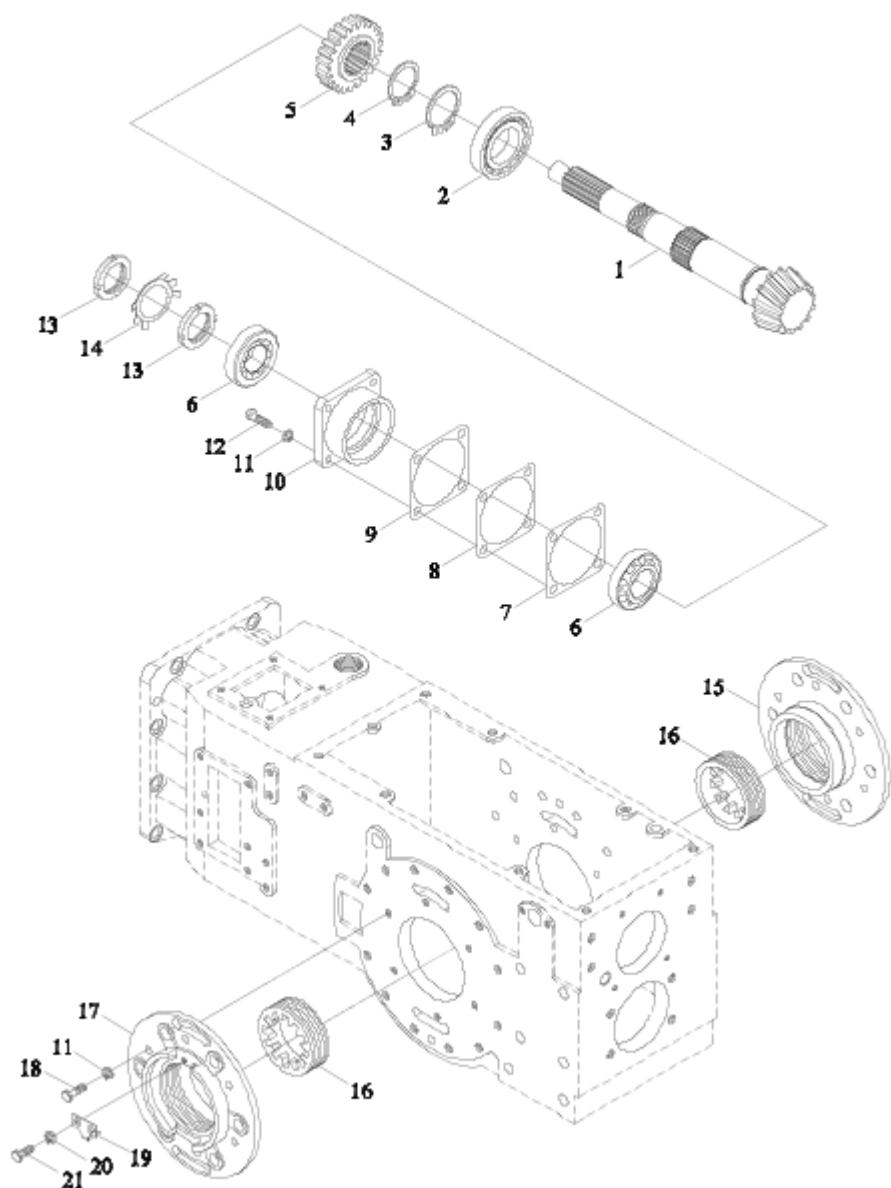

TB504. 382 REAR AXLE CENTRAL TRANSMISSION ASSEMBLY-1

No.	Part No.	Description	Ver-sion	QTY.	Remark
	TB504.382	REAR AXLE CENTRAL TRANSMISSION ASSEMBLY		1	
1	TB450.38J-05	SMALL TAPER GEAR SHAFT		1	
2	GBT283-NUP2210E	BEARING		1	
3	GBT894.1-50	RETAINER RING		1	
4	GBT894.1-48	RETAINER RING		1	
5	FT404.38G.116	FRONT DRIVE OUTPUT GEAR		1	
6	GBT297-32208	BEARING		2	
7	FT300.38.118	TAPER GEAR SHAFT ADJUSTING GASKET		999	
8	FT300.38.119	TAPER GEAR SHAFT ADJUSTING GASKET		999	
9	FT300.38.120	TAPER GEAR SHAFT ADJUSTING GASKET		999	
10	FT300.38.117	BEARING SEAT		1	
11	GBT93-10-A0P	WASHER		16	
12	GBT5783-M10X30-8.8-A3L	BOLT		4	
13	GBT812-M39X1.5	NUT		2	
14	GBT858-39	WASHER		1	
15	FT300.38.177	RIGHT DIFFERENTIAL BEARING SEAT		1	
16	FT300.38.151	ADJUSTING NUT		2	
17	FT300.38.142	LEFT DIFFERENTIAL BEARING SEAT		1	
18	GBT5783-M10X25-8.8-A3L	BOLT		12	
19	FT300.38.161	LOCK WASHER		2	
20	GBT93-8-A0P	WASHER		4	
21	TB554.382-01	BOLT		4	


TB504. 382 REAR AXLE CENTRAL TRANSMISSION ASSEMBLY-2

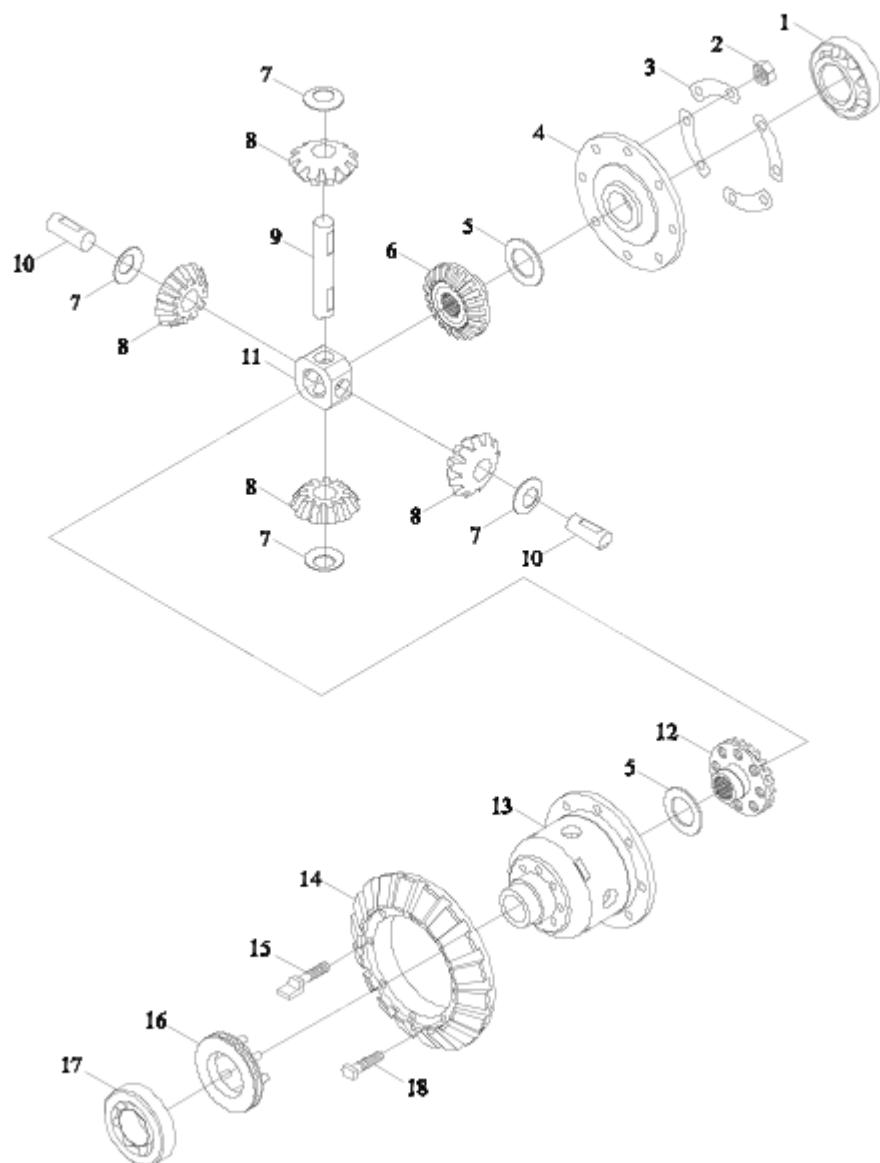

TB504. 382 REAR AXLE CENTRAL TRANSMISSION ASSEMBLY-2

No.	Part No.	Description	Ver-sion	QTY.	Remark
	FT300.38.012	DIFFERENTIAL ASSEMBLY		1	
1	GBT297-32013	BEARING		1	
2	GBT6170-M12-8-A3L	NUT		8	
3	FT300.38.152	LOCKING WASHER		4	
4	FT300.38.181	DIFFERENTIAL COVER		1	
5	FT300.38.147	HALF SHAFT GEAR WASHER		2	
6	FT300.38.144	RIGHT HALF SHAFT GEAR		1	
7	FT300.38.148	PLANET GEAR WASHER		4	
8	FT300.38.145	PLANET GEAR		4	
9	FT300.38.182	LONG PLANETARY GEAR SHAFT		1	
10	FT300.38.183	SHORT PLANETARY GEAR SHAFT		2	
11	FT300.38.184	CENTRAL RING		1	
12	FT300.38.143	LEFT HALF SHAFT GEAR		1	
13	FT300.38.180	DIFFERENTIAL HOUSING		1	
14	FT300.38.141	BIG TAPER GEAR		1	
15	FT300.38.185	PLANET GEAR SHAFT THRUST BOLT		4	
16	FT300.38.019	DIFFERENTIAL LOCK ASSEMBLY		1	
17	GBT297-30211	BEARING		1	
18	FT300.38.186	FIXING BOLT		4	


TS04383010000 DIFFERENTIAL LOCK CONTROL MECHANISM ASSEMBLY

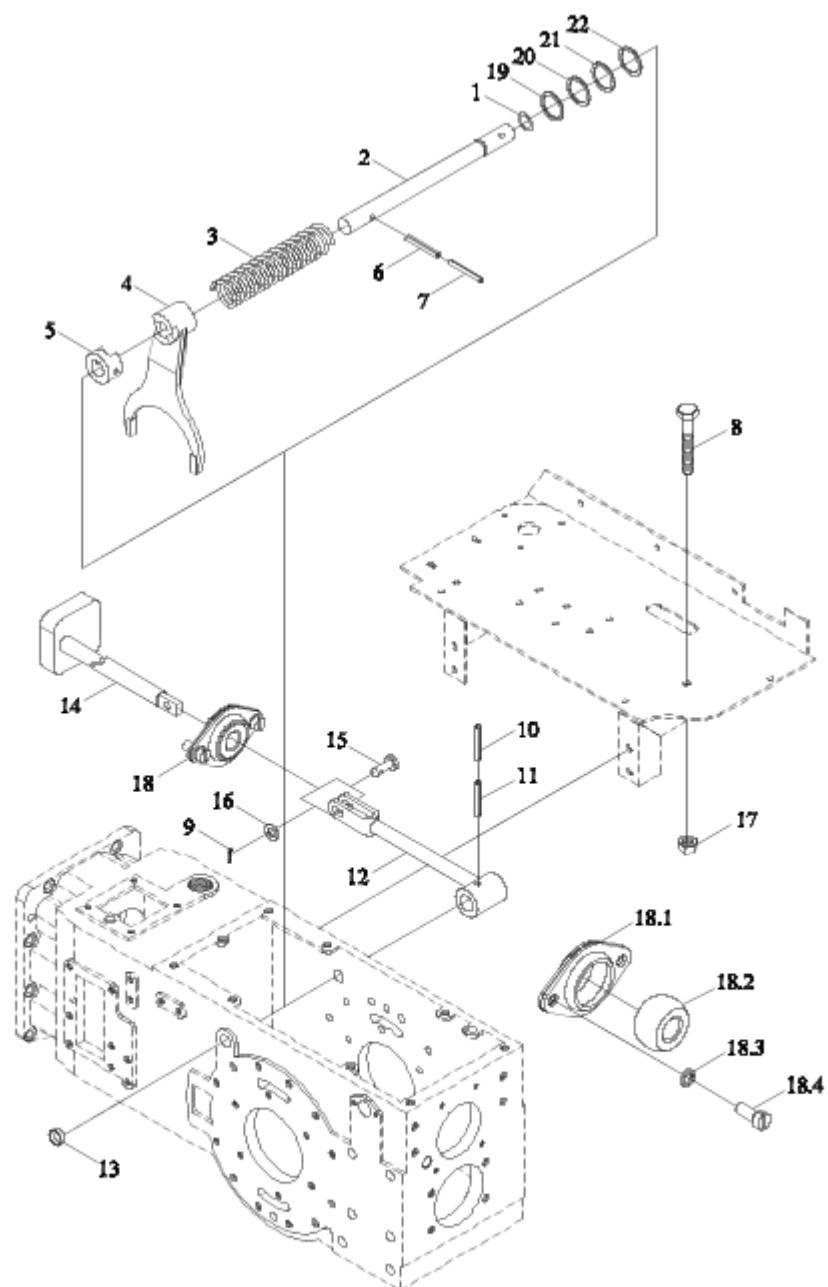

TS04383010000 DIFFERENTIAL LOCK CONTROL MECHANISM ASSEMBLY

No.	Part No.	Description	Ver-sion	QTY.	Remark
	TS04383010000	DIFFERENTIAL LOCK CONTROL MECHANISM ASSEMBLY		1	
1	GBT3452.1-15.0X2.65G	RUBBER O-SEAL RING		1	
2	FT300.38.158a	DIFFERENTIAL LOCK FORK SHAFT		1	
3	FT300.38.160	DIFFERENTIAL LOCK RETURN SPRING		1	
4	FT300.38.159a	DIFFERENTIAL LOCK FORK		1	
5	FT300.38.190	DIFFERENTIAL LOCK DIAL BLOCK		1	
6	GBT879.1-6X40	SPRING COLUMN PIN		1	
7	GBT879.2-3.5X40	SPRING COLUMN PIN		1	
8	GBT5781-M8X40-4.8-A2L	HEXAGON BOLT		1	
9	GBT91-2X14-A0P	SPLIT PIN		1	
10	GBT879.1-6X35	SPRING COLUMN PIN		1	
11	GBT879.2-3.5X35	SPRING COLUMN PIN		1	
12	TS04383010003	ROCKER WELDMENT		1	
13	Q72220	PLUG PIECE		1	
14	TS04383010001	DIFFERENTIAL LOCK PEDAL		1	
15	GBT882-B6X28	PIN SHAFT		1	
16	GBT97.1-6-A0P	FLAT WASHER		1	
17	GBT6170-M8-8-A2L	HEXAGON NUT, TYPE-1		1	
18	TG1204.435.4	SEAL LINER SEAT ASSEMBLY		1	
18.1	TG1204.435.2-01	SPHERICAL SHAFT LINING SEAT		1	
18.2	TG1204.435.2-02	SPHERICAL SHAFT LINING		1	
18.3	GBT93-6	STANDARD SPRING WASHER		1	
18.4	GBT818-M6X14-4.8-A2L	CROSS SCREW		1	
19	TB554.383-05	WASHER		999	
20	TB554.383-06	WASHER		999	
21	TB554.383-07	WASHER		999	
22	TB554.383-08	WASHER		999	


TC02384010000K REAR AXLE HOUSING ASSEMBLY

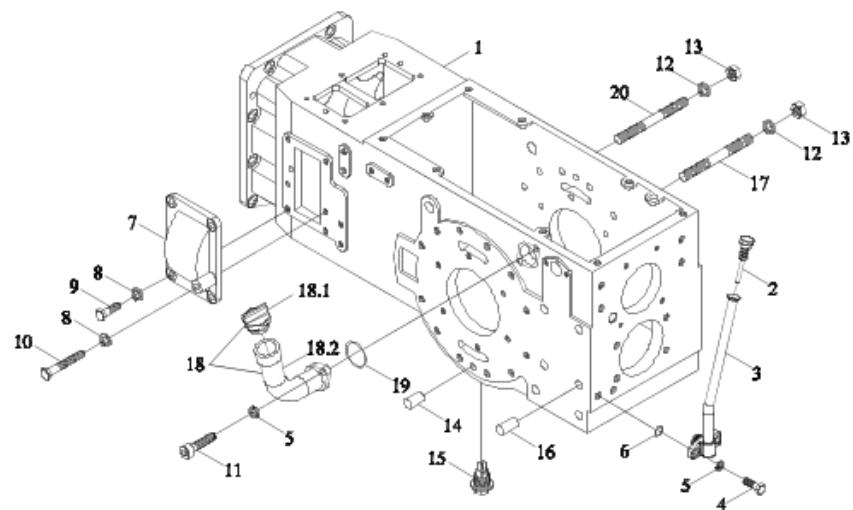

TC02384010000K REAR AXLE HOUSING ASSEMBLY

No.	Part No.	Description	Ver-sion	QTY.	Remark
	TC02384010000K	REAR AXLE HOUSING ASSEMBLY		1	
1	TB604.384-01	REAR AXLE HOUSING		1	
2	TB604.384.4	DIPSTICK ASSEMBLY		1	
3	TC02384010001K	OIL DIPSTICK PIPE WELDMENT		1	
4	GBT5783-M8X20-8.8-A2L	HEXAGON BOLT		2	
5	GBT93-8-A0P	STANDARD SPRING WASHER		2	
6	GBT3452.1-15.0X2.65G	RUBBER O-SEAL RING		1	
7	FT300.38J.206	REVERSE SIDE COVER		1	
8	GBT93-10-A0P	STANDARD SPRING WASHER		9	
9	GBT5783-M10X25-8.8-A3L	HEXAGON BOLT		5	
10	GBT5782-M10X60-8.8-A2L	HEXAGON BOLT		1	
11	GBT70.1-M8X20-8.8	INNER HEXAGON SCREW		2	
12	GBT93-12-A0P	STANDARD SPRING WASHER		24	
13	GBT6171-M12X1.25-10-A2L	HEXAGON NUT, TYPE-1		24	
14	GBT119.1-12m6X28-A0P	COLUMN PIN		2	
15	FT65.38.026	OIL PLUG ASSEMBLY		1	
16	TB554.384-02	PIN		4	
17	GB899-AM12-M12X1.25X150-10.9-A 2L	DOUBLE END STUDS		22	
18	TB604.384.3	FILLING CAP ASSEMBLY		1	
18.1	TB604.384.3.1	FILLING CAP WELDMENT ASSEMBLY		1	
18.2	TB604.384.3.2	PLUG SCREW		1	
19	GBT3452.1-32.5X1.80G	RUBBER O-SEAL RING		1	
20	GB899-AM12-M12X1.25X160-10.9-A 2L	DOUBLE END STUDS		2	


TS04385010000 SHUTTLE SHIFT CONTROL MECHANISM

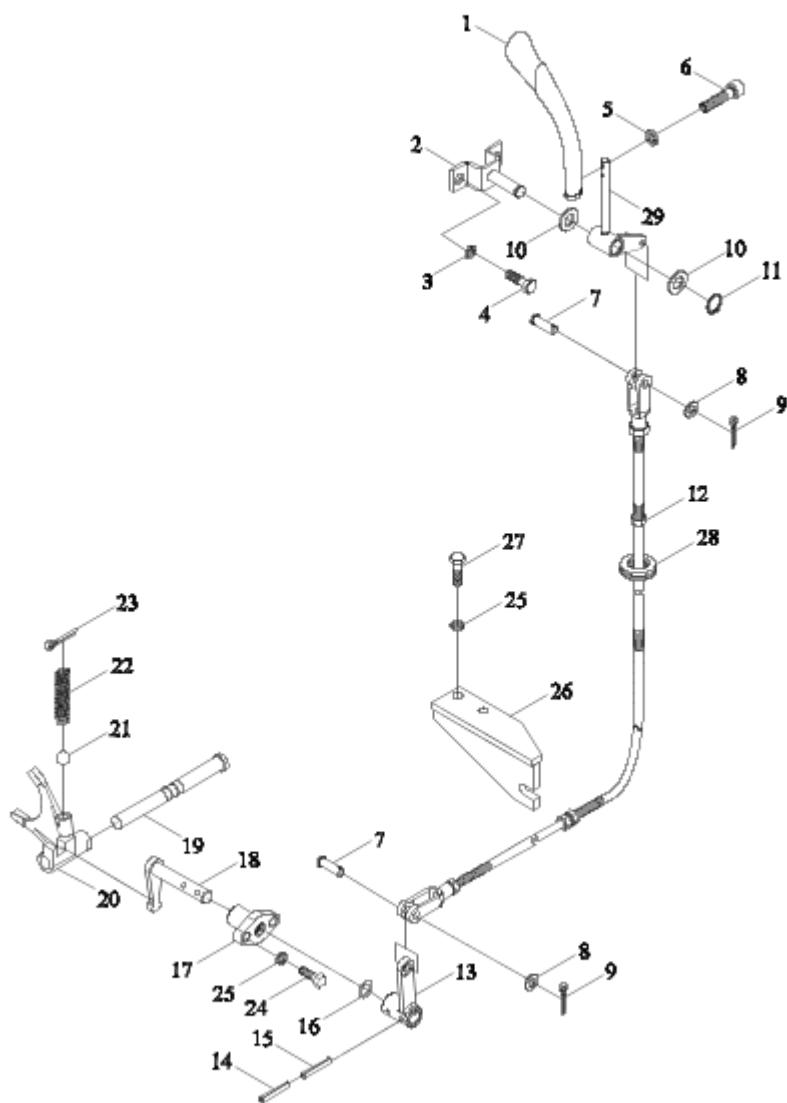

TS04385010000 SHUTTLE SHIFT CONTROL MECHANISM

No.	Part No.	Description	Ver-sion	QTY.	Remark
	TS04385010000	SHUTTLE SHIFT CONTROL MECHANISM		1	
1	TS04385010008	CONTROL HANDLE		1	
2	TS04385010003	BRACKET WELDMENT		1	
3	GBT93-8-A0P	STANDARD SPRING WASHER		2	
4	GBT5783-M8X20-8.8-A2L	HEXAGON BOLT		2	
5	GBT93-6-A0P	STANDARD SPRING WASHER		2	
6	GBT70.1-M6X20-10.9-A3L	INNER HEXAGON SCREW		2	
7	TG1654.373B.1-01	PIN SHAFT		2	
8	GBT97.1-8-A0P	FLAT WASHER		2	
9	GBT91-3.2X20-A0P	SPLIT PIN		2	
10	TD950.373.2-02	BUSH		2	
11	GBT894.2-20	CIRCLIP FOR SHAFT		1	
12	TB604.385.3	SOFT SHAFT WELD		1	
13	TB604.385-02	ROCKER ARM		1	
14	GBT879.1-3.5X28	SPRING COLUMN PIN		2	
15	GBT879.1-6X28	SPRING COLUMN PIN		2	
16	GBT3452.1-16.0X2.65G	RUBBER O-SEAL RING		1	
17	TB554.385A-01	LEVER SHAFT SLEEVE		1	
18	TB554.385-01	ROCKER		1	
19	FT300.38J.203	REVERSE FORK SHAFT		1	
20	FT300.38J.218	REVERSE GEAR FORK		1	
21	GBT308-9.5-G100-b	STEEL BALL		1	
22	FT704.42B.163	FORK SHAFT LOCATING SPRING		1	
23	GBT91-4X32-A0P	SPLIT PIN		1	
24	TB400.385-09	BOLT		2	
25	GBT93-10-A0P	STANDARD SPRING WASHER		4	
26	TB604.385.2	SUPPORT PLATE WELDMENT		1	
27	GBT5783-M10X25-8.8-A3L	HEXAGON BOLT		2	
28	FT800A.48L.101	RUBBER RING-1		1	
29	TS04385010005	CONTROL ROD WELDMENT		1	

TB450. 391 LEFT FINAL TRANSMISSION ASSEMBLY

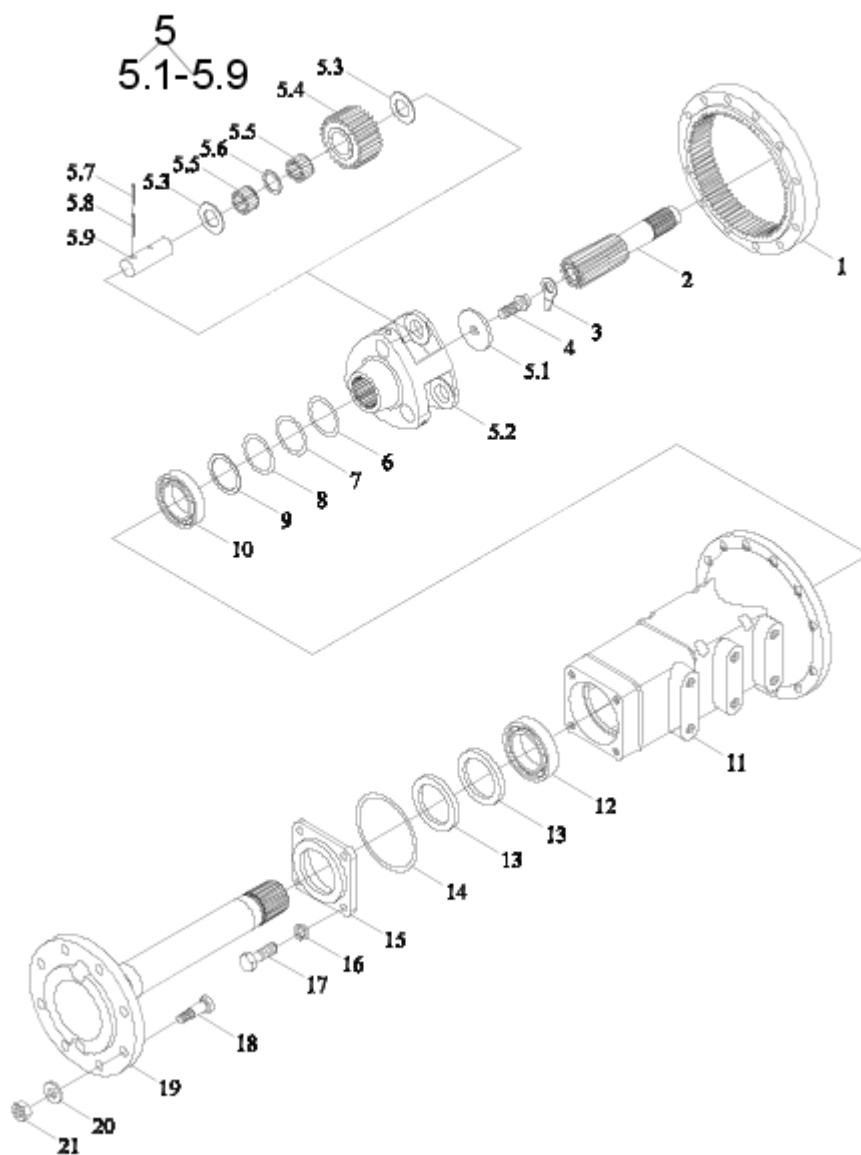


TB450. 391 LEFT FINAL TRANSMISSION ASSEMBLY

No.	Part No.	Description	Ver-sion	QTY.	Remark
	TB450.391	LEFT FINAL TRANSMISSION ASSEMBLY		1	
1	TB450.391-02	FINAL TRANSMISSION GEAR RING		1	
2	TB450.391-01	LEFT FINAL TRANSMISSION HALF SHAFT		1	
3	FT300.39.110	DRIVING SHAFT LOCK PIECE		1	
4	FT300.39.112	DRIVING SHAFT LOCK BOLT		1	
5	TB450.391.1	FINAL TRANSMISSION PLANET BRACKET ASSEMBLY		1	
5.1	FT300.39.111	RETAINER BLOCK		1	
5.2	FT300.39.104	PLANET CARRIER		1	
5.3	FT300.39.109	NEEDLE OUTER SPACER RING		6	
5.4	TB450.391.1-01	FINAL TRANSMISSION PLANET GEAR		3	
5.5	GBT309-P5X23.8-G2	NEEDLE		132	
5.6	FT300.39.105	NEEDLE INNER SPACER RING		3	
5.7	GBT879.1-5X26	SPRING COLUMN PIN		3	
5.8	QLWZB140-8X26	PIN		3	
5.9	FT300.39.106	PLANET GEAR SHAFT		3	
6	FT300.39.121	ADJUSTING WASHER		999	
7	FT300.39.122	ADJUSTING WASHER		999	
8	FT300.39.123	ADJUSTING WASHER		999	
9	FT300.39.113	SPACER BUSH		1	
10	GBT276-6211	DEEP GROOVE BALL BEARING		1	
11	FT300.39.115	LEFT DRIVING SHAFT HOUSING		1	
12	GBT276-6212	DEEP GROOVE BALL BEARING		1	
13	GBT9877.1-FB70X95X10D	SEAL RING		2	
14	GBT3452.1-115X3.55G	O-RING		1	
15	FT300.39.116	OIL SEAL SEAT		1	
16	GBT93-12-A0P	STANDARD SPRING WASHER		4	

TB450. 391 LEFT FINAL TRANSMISSION ASSEMBLY (cont'd.)

No.	Part No.	Description	Ver-sion	QTY.	Remark
17	GBT5783-M12X30-8.8-A3L	HEXAGON BOLT		4	
18	FT300.39.136	REAR HUB BOLT LEFT		8	
19	FT300.39.118	DRIVING SHAFT		1	
20	FT300.39.137	WASHER		8	
21	GBT6176-M16X1.5-LH-10-A3L	HEXAGON NUT, TYPE-2		8	

TB450. 392 RIGHT FINAL TRANSMISSION ASSEMBLY

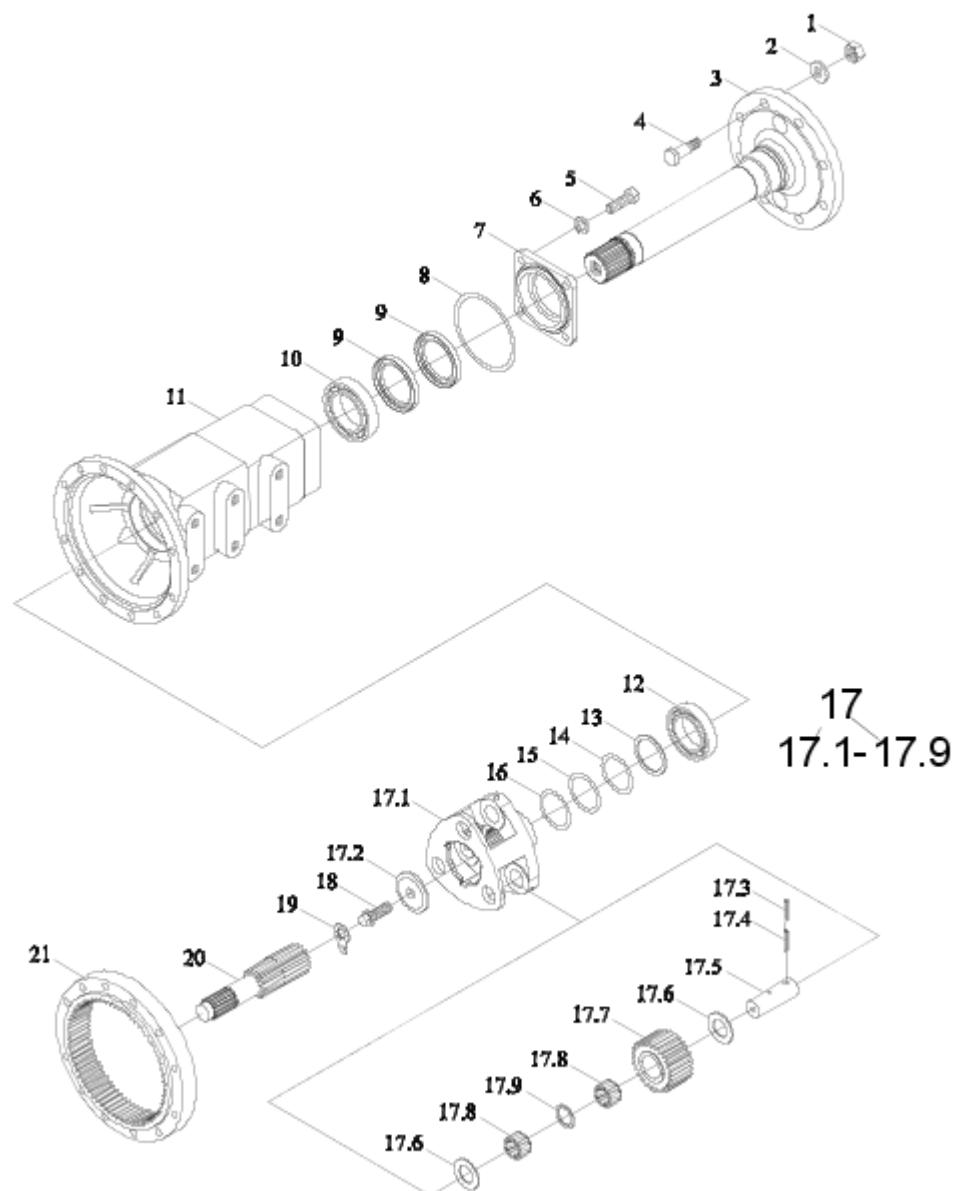


TB450. 392 RIGHT FINAL TRANSMISSION ASSEMBLY

No.	Part No.	Description	Ver-sion	QTY.	Remark
	TB450.392	RIGHT FINAL TRANSMISSION ASSEMBLY		1	
1	GBT6176-M16X1.5-10-A3L	HEXAGON NUT, TYPE-2		8	
2	FT300.39.137	WASHER		8	
3	FT300.39.118	DRIVING SHAFT		1	
4	FT300.39.135	REAR HUB BOLT		8	
5	GBT5783-M12X30-8.8-A3L	HEXAGON BOLT		4	
6	GBT93-12-A0P	STANDARD SPRING WASHER		4	
7	FT300.39.116	OIL SEAL SEAT		1	
8	GBT3452.1-115X3.55G	O-RING		1	
9	GBT9877.1-FB70X95X10D	SEAL RING		2	
10	GBT276-6212	DEEP GROOVE BALL BEARING		1	
11	FT300.39.114	RIGHT DRIVING SHAFT HOUSING		1	
12	GBT276-6211	DEEP GROOVE BALL BEARING		1	
13	FT300.39.113	SPACER BUSH		1	
14	FT300.39.121	ADJUSTING WASHER		999	
15	FT300.39.122	ADJUSTING WASHER		999	
16	FT300.39.123	ADJUSTING WASHER		999	
17	TB450.391.1	FINAL TRANSMISSION PLANET BRACKET ASSEMBLY		1	
17.1	FT300.39.104	PLANET CARRIER		1	
17.2	FT300.39.111	RETAINER BLOCK		1	
17.3	GBT879.1-5X26	SPRING COLUMN PIN		3	
17.4	QLWZB140-8X26	SPRING COLUMN PIN		3	
17.5	FT300.39.106	PLANET GEAR SHAFT		3	
17.6	FT300.39.109	NEEDLE OUTER SPACER RING		6	
17.7	TB450.391.1-01	FINAL TRANSMISSION PLANET GEAR		3	
17.8	GBT309-P5X23.8-G2	NEEDLE		132	
17.9	FT300.39.105	NEEDLE INNER SPACER RING		3	
18	FT300.39.112	DRIVING SHAFT LOCK BOLT		1	

TB450. 392 RIGHT FINAL TRANSMISSION ASSEMBLY (cont'd.)

No.	Part No.	Description	Ver-sion	QTY.	Remark
19	FT300.39.110	DRIVING SHAFT LOCK PIECE		1	
20	TB450.392-01	RIGHT FINAL TRANSMIS- SION HALF SHAFT		1	
21	TB450.391-02	FINAL TRANSMISSION GEAR RING		1	


TC04401080000 REDIRECTOR OR STEERING COLUMN ASSEMBLY

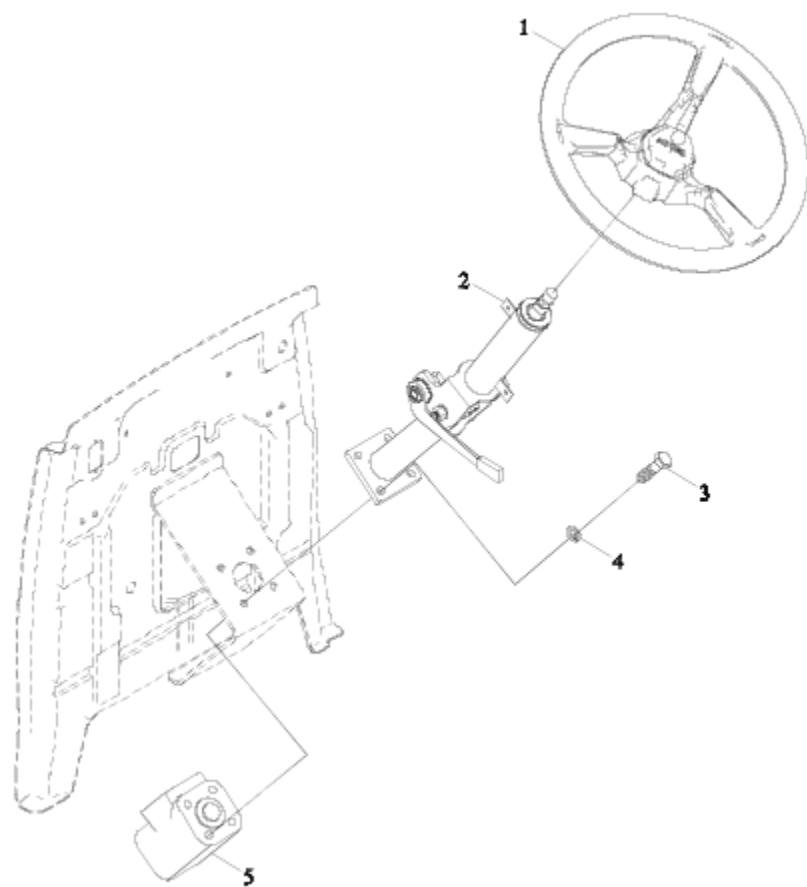

TC04401080000 REDIRECTOR OR STEERING COLUMN ASSEMBLY

No.	Part No.	Description	Ver-sion	QTY.	Remark
	TC04401080000	REDIRECTOR OR STEER-ING COLUMN ASSEMBLY		1	
1	TS04401010001	STEERING WHEEL ASSEMBLY		1	
2	TS04401010002	STEERING PIPE COLUMN ASSEMBLY		1	
3	GBT5783-M10X30-8.8-A3L	HEXAGON BOLT		4	
4	GBT93-10-A0P	STANDARD SPRING WASHER		4	
5	TC04400010009	HYDRAULIC STEERING MECHANISM ASSEMBLY		1	

TC02402650000K FULL HYDRAULIC STEERING PIPE ASSEMBLY-1

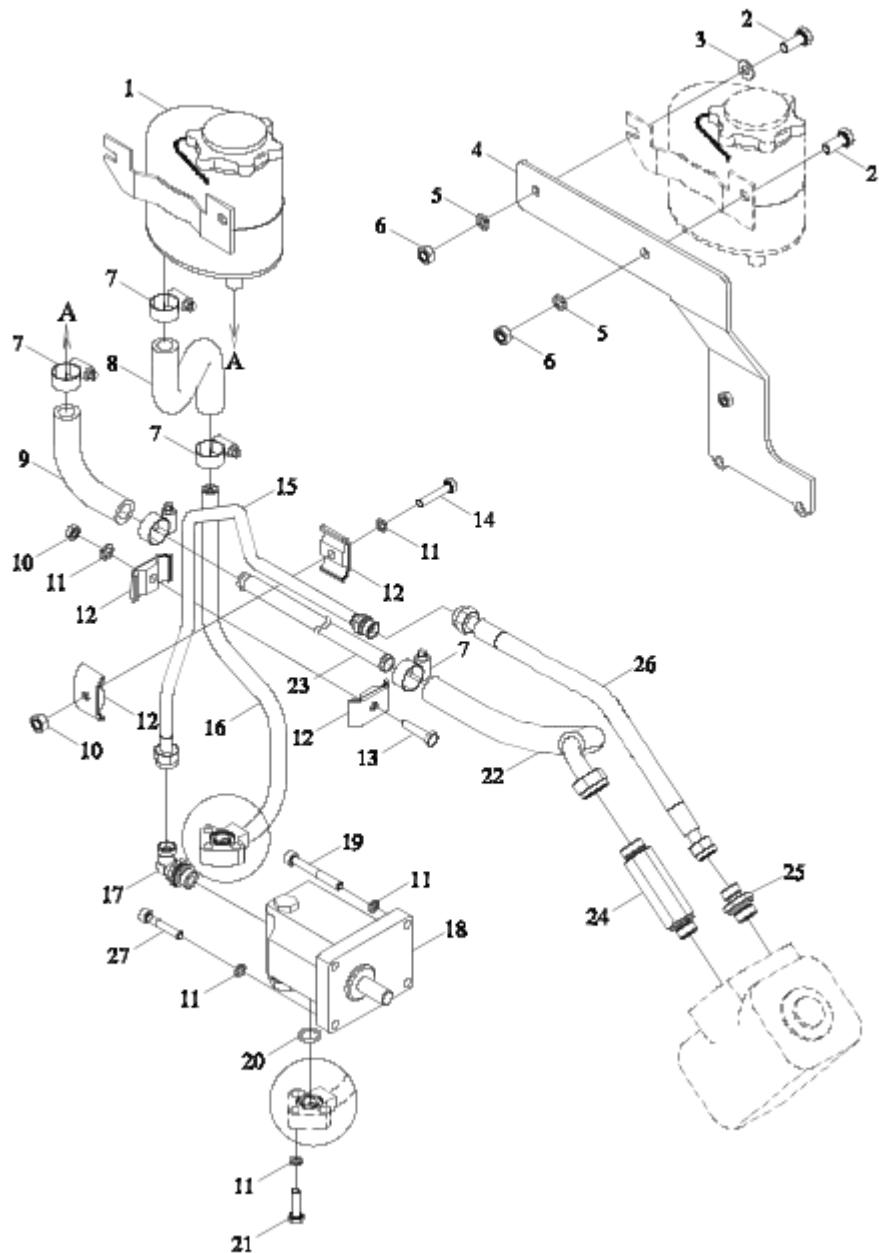


TC02402650000K FULL HYDRAULIC STEERING PIPE ASSEMBLY-1

No.	Part No.	Description	Ver-sion	QTY.	Remark
	TC02402650000K	FULLHYDRAULICSTEER-INGPIPEASSEMBLY		1	
1	TS04402010019	STEERING OIL TANK AND BREATH ASSEMBLY		1	
2	GBT5783-M10X25-8.8-A3L	HEXAGON BOLT		2	
3	GBT97.1-10-A3L	FLAT WASHER		1	
4	TC02402200020K	BRACKET WELDMENT		1	
5	GBT93-10-A3L	STANDARD SPRING WASHER		2	
6	GBT6170-M10-8-A3L	HEXAGON NUT, TYPE-1		2	
7	Q67627	B-TYPE WORM TRANSMISSION HOSE CLAMP		5	
8	TC02402200024K	OIL SUCTION RUBBER HOSE D16		1	
9	TC02402200025K	OIL RETURN RUBBER HOSE		1	
10	GBT6170-M8-8-A2L	HEXAGON NUT, TYPE-1		1	
11	GBT93-8-A3L	STANDARD SPRING WASHER		10	
12	TC02402200015K	OIL PIPE CLAMP AND RUBBER WASHER 16-12		4	
13	GBT5783-M8X35-8.8-A2L	HEXAGON BOLT		1	
14	GBT5783-M8X40-8.8-A2L	HEXAGON BOLT		1	
15	TC02402200002K	OIL PUMP OUTLET STEEL PIPE WELDMENT		1	
16	TC02402200004K	ABSORB OIL PIPE WELDMENT OF OIL PUMP		1	
17	TC04400020003	ADJUSTABLE JOINT		1	
18	TC02402270002K	PERMANENT OVERFLOW PUMP		1	
19	GBT70.1-M8X65-8.8	INNER HEXAGON SCREW		2	
20	GBT3452.1-17.0X2.65G	RUBBER O-SEAL RING		1	
21	GBT5783-M8X30-8.8-A2L	HEXAGON BOLT		3	
22	TC02402200029K	REDIRECTOR OIL RETURN PIPE ASSEMBLY		1	
23	TC02402200028K	OIL RETURN STEEL PIPE		1	
24	TC04402080012	END STRAIGHT THREAD CONNECTOR BODY L16		1	
25	GE20D18.24.93.5	END STRAIGHT THREAD CONNECTOR BODY		2	

TC02402650000K FULL HYDRAULIC STEERING PIPE ASSEMBLY-1 (cont'd.)

No.	Part No.	Description	Ver-sion	QTY.	Remark
26	TC02402200001K	HIGH PRESSURE HOSE ASSEMBLY		1	
27	GBT70.1-M8X45-8.8-A2L	INNER HEXAGON SCREW		2	


TC02402650000K FULL HYDRAULIC STEERING PIPE ASSEMBLY-2

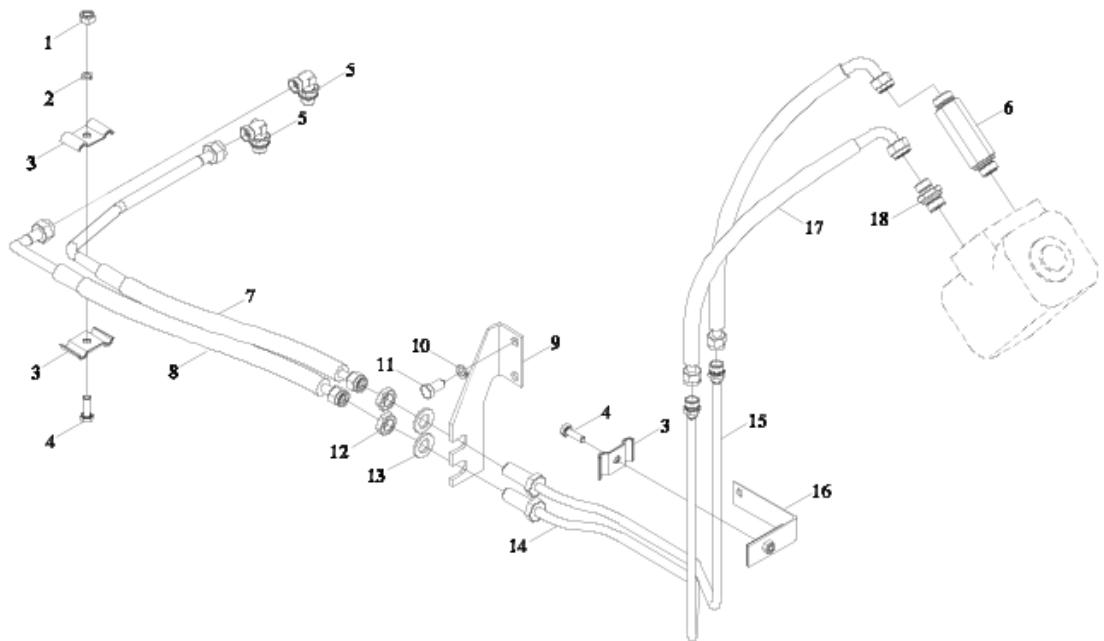

TC02402650000K FULL HYDRAULIC STEERING PIPE ASSEMBLY-2

No.	Part No.	Description	Ver-sion	QTY.	Remark
	TC02402650000K	FULLHYDRAULICSTEER- INGPIPEASSEMBLY		1	
1	GBT6170-M8-8-A2L	HEXAGON NUT, TYPE-1		1	
2	GBT93-8-A3L	STANDARD SPRING WASHER		1	
3	TC02402200018K	OIL PIPE CLAMP		3	
4	GBT5783-M8X25-8.8-A2L	HEXAGON BOLT		2	
5	GL06701050023	CONNECTING JOINT L12		2	
6	TC04402080010	END STRAIGHT THREAD CONNECTOR BODY L12		1	
7	TC02402660001K	RIGHT STEERING OIL PIPE ASSEMBLY		1	
8	TC02402660002K	LEFT STEERING OIL PIPE ASSEMBLY		1	
9	TC02402200011K	BRACKET		1	
10	GBT93-10-A3L	STANDARD SPRING WASHER		2	
11	GBT5783-M10X20-8.8-A3L	HEXAGON BOLT		2	
12	GBT6173-M16X1.5-05-A3L	HEXAGON THIN NUT		2	
13	GBT97.1-16-A3L	FLAT WASHER		2	
14	TC02402200009K	RIGHT STEERING STEEL PIPE WELDMENT		1	
15	TC02402200007K	LEFT STEERING STEEL PIPE WELDMENT		1	
16	TC02402200026K	BRACKET WELDMENT		1	
17	TC02402200006K	OIL OUTLET PIPE ASSEMBLY		2	
18	GE20D18.24.93.5	END STRAIGHT THREAD CONNECTOR BODY		1	

TC0241101000K PTO GEAR ASSEMBLY

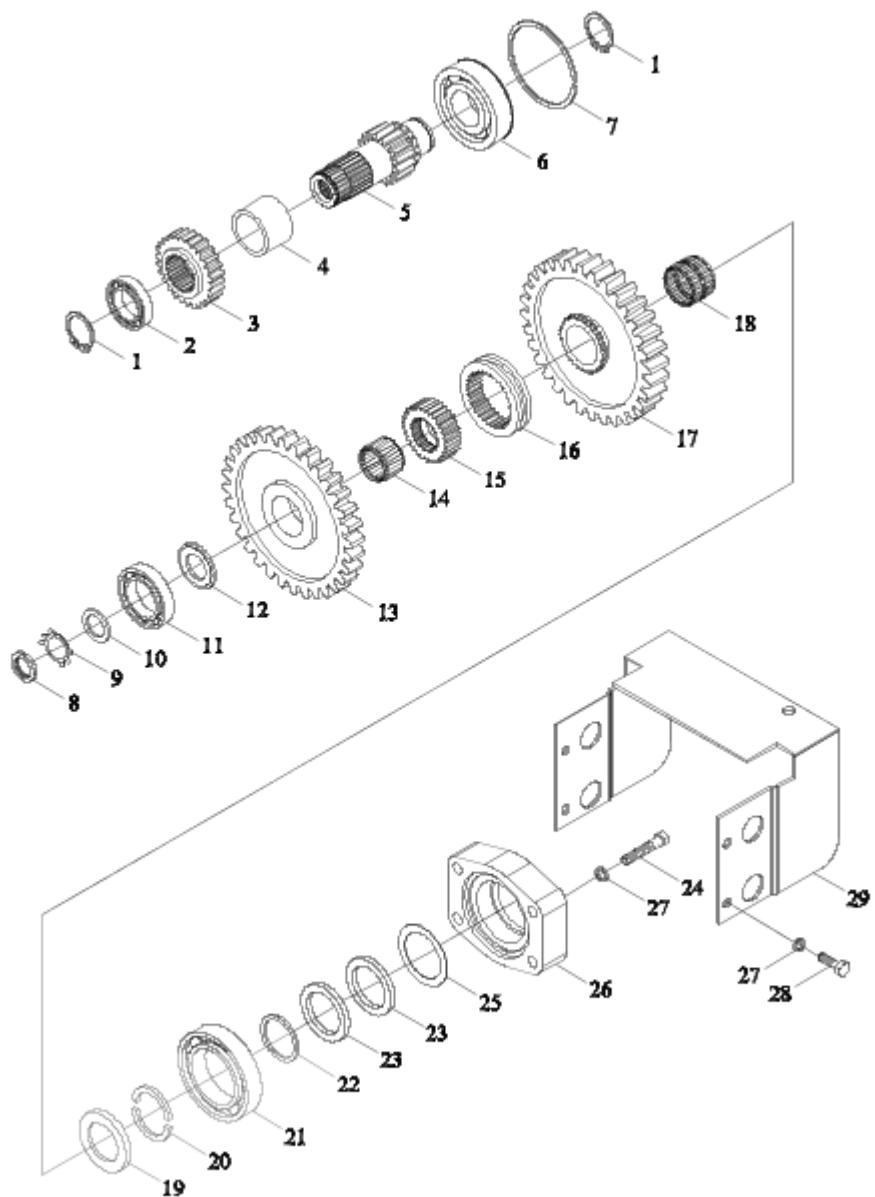


TC0241101000K PTO GEAR ASSEMBLY

No.	Part No.	Description	Ver-sion	QTY.	Remark
	TC0241101000K	PTO GEAR ASSEMBLY		1	
1	GBT894.1-40	CIRCLIP FOR SHAFT		2	
2	GBT276-6208	DEEP GROOVE BALL BEARING		1	
3	FT300.41E.120	PTO HIGH GEAR DRIVING GEAR		1	
4	FT300.41E.121	SPACER BUSH		1	
5	FT300.41E.106	PTO LOW GEAR DRIVING GEAR		1	
6	GBT276-6308N	DEEP GROOVE BALL BEARING		1	
7	GBT305-90-96.5	THRUST RING		1	
8	GBT812-M25X1.5	ROUND NUT		1	
9	GBT858-25	THRUST WASHER FOR ROUND NUT		1	
10	FT300.41.122	WASHER		1	
11	GBT276-6306	DEEP GROOVE BALL BEARING		1	
12	FT300.41C.118	OUTPUT SHAFT FRONT RETAINER RING		1	
13	FT300.41E.105	PTO DRIVEN SMALL GEAR		1	
14	JBT7918-K35X40X27	NEEDLE AND CARRIER COMBINATION		1	
15	FT300.41C.117	PTO MESHING SEAT		1	
16	FT300.41C.116	PTO SHIFT COLLAR		1	
17	FT300.41E.103	PTO DRIVEN BIG GEAR		1	
18	QLWZB120-K40X46X34ZW	ROLLER NEEDLE BEARING		1	
19	FT300.41E.114	REAR RETAINER RING		1	
20	FT300.41E.119	THRUST RING		1	
21	GBT276-6309	DEEP GROOVE BALL BEARING		1	
22	FT300.41E.113	OUTPUT SHAFT BEARING WASHER		1	
23	GBT9877.1-FB50X72X8D	SEAL RING		2	
24	GBT5783-M12X25-8.8-A3L	HEXAGON BOLT		4	
25	FT300.41E.115	OIL SEAL RETAINER RING		1	
26	FT300.41E.101	REAR END COVER I		1	
27	GBT93-12-A0P	STANDARD SPRING WASHER		8	

TC0241101000K PTO GEAR ASSEMBLY (cont'd.)

No.	Part No.	Description	Ver-sion	QTY.	Remark
28	GBT5782-M12X55-8.8-A3L	HEXAGON BOLT		4	
29	TC02411010001K	PTO BONNET WELDMENT		1	


TB550. 412A PTO SHAFT ASSEMBLY

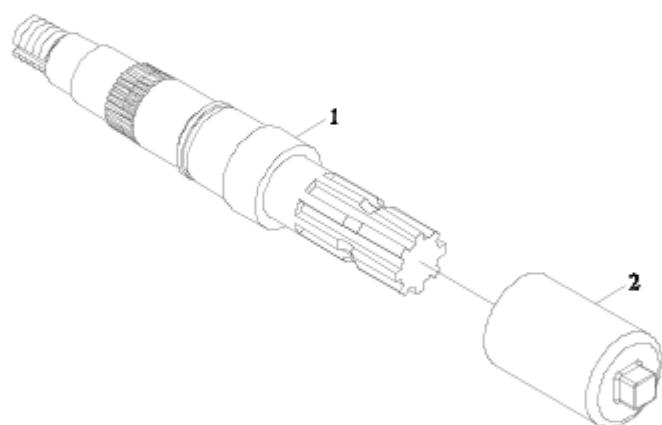

TB550. 412A PTO SHAFT ASSEMBLY

No.	Part No.	Description	Ver-sion	QTY.	Remark
1	TB550.412A	PTO SHAFT ASSEMBLY		1	
1	TB550.412A-01	TYPE-I 35 PTO SHAFT		1	
2	TB550.412-02	PTO SHAFT HOOD SHIELD		1	

TS04413010000 PTO CONTROL ASSEMBLY

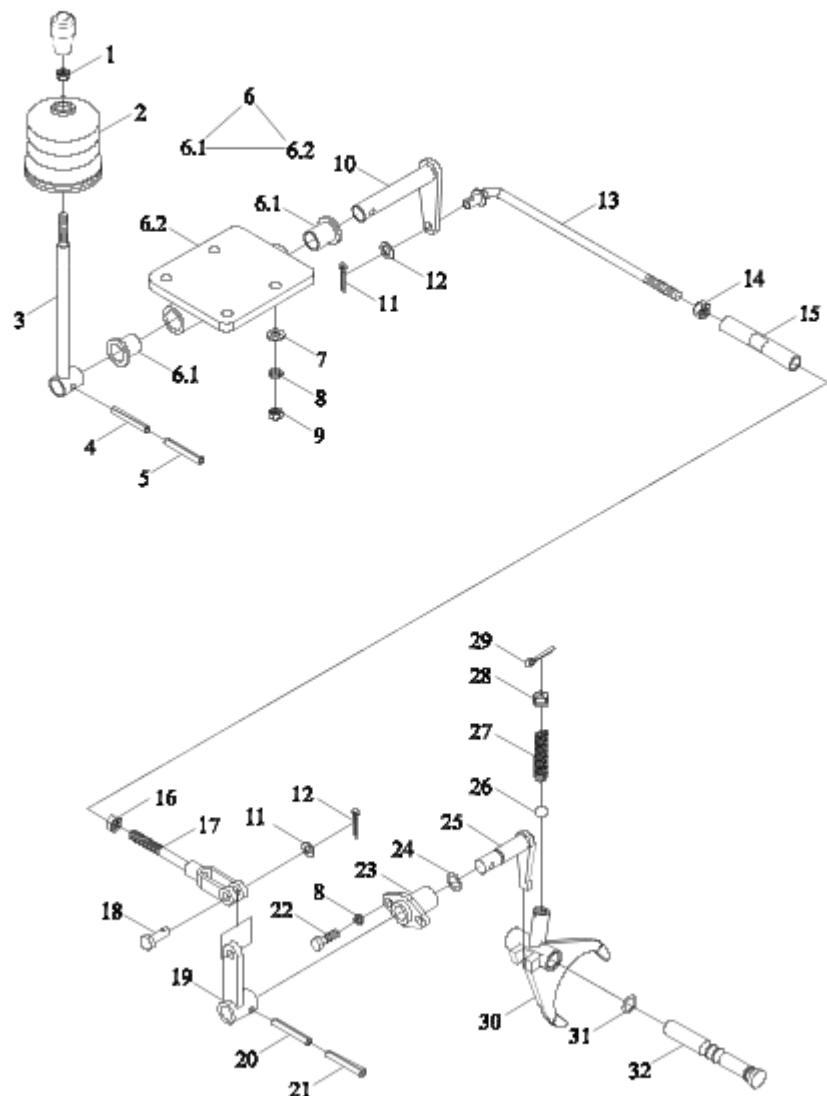


TS04413010000 PTO CONTROL ASSEMBLY

No.	Part No.	Description	Ver-sion	QTY.	Remark
	TS04413010000	PTO CONTROL ASSEMBLY		1	
1	GBT6170-M10-8-A3L	HEXAGON NUT, TYPE-1		1	
2	TB704.413A-02	DUSTPROOF RING		1	
3	TB504.413A.2	PTO GEARSHIFT CONTROL ROD WELDMENT		1	
4	GBT879.1-6X32	SPRING COLUMN PIN		1	
5	GBT879.1-3.5X32	SPRING COLUMN PIN		1	
6	TS04413010003	SUPPORT SEAT		1	
7	GBT97.1-8-A0P	FLAT WASHER		4	
8	GBT93-8-A0P	STANDARD SPRING WASHER		6	
9	GBT6170-M8-8-A2L	HEXAGON NUT, TYPE-1		4	
10	TS04413010004	CONTROL ROCKER WELDMENT		1	
11	GBT91-3.2X16-A0P	SPLIT PIN		2	
12	GBT97.1-10-A0P	FLAT WASHER		2	
13	TS04413010005	MIDDLE PULL ROD WELDMENT		1	
14	GBT6171-M10X1-LH-8-A2L	HEXAGON NUT, TYPE-1		1	
15	FT800A.21.353	MIDDLE ROD		1	
16	GBT6171-M10X1-8-A2L	HEXAGON NUT, TYPE-1		1	
17	TB504.413A.5	PULL ROD WELDMENT		1	
18	GBT882-B10X30	PIN SHAFT		1	
19	TB480.413.2	ROCKER WELDMENT		1	
20	GBT879.1-6X26	SPRING COLUMN PIN		1	
21	GBT879.1-3.5X26	SPRING COLUMN PIN		1	
22	GBT5783-M8X20-8.8-A2L	HEXAGON BOLT		2	
23	FT300.41E.109	LEVER SHAFT SLEEVE		1	
24	GBT3452.1-16.0X2.65G	RUBBER O-SEAL RING		1	
25	TB550.413-04	LEVER		1	
26	GBT308-9.5-G100-b	STEEL BALL		1	
27	FT704.42B.163	FORK SHAFT LOCATING SPRING		1	
28	TB550.413-03	SCREW NECK		1	
29	GBT91-2.5X32-A0P	SPLIT PIN		1	
30	TB550.413-01a	OPERATION FORK OF PTO		1	

TS04413010000 PTO CONTROL ASSEMBLY (cont'd.)

No.	Part No.	Description	Ver-sion	QTY.	Remark
31	GBT3452.1-11.2X2.65G	RUBBER O-SEAL RING		1	
32	FT300.41C.107a	PTO FORK SHAFT		1	

TB554. 421E TRANSFER CASE ASSEMBLY

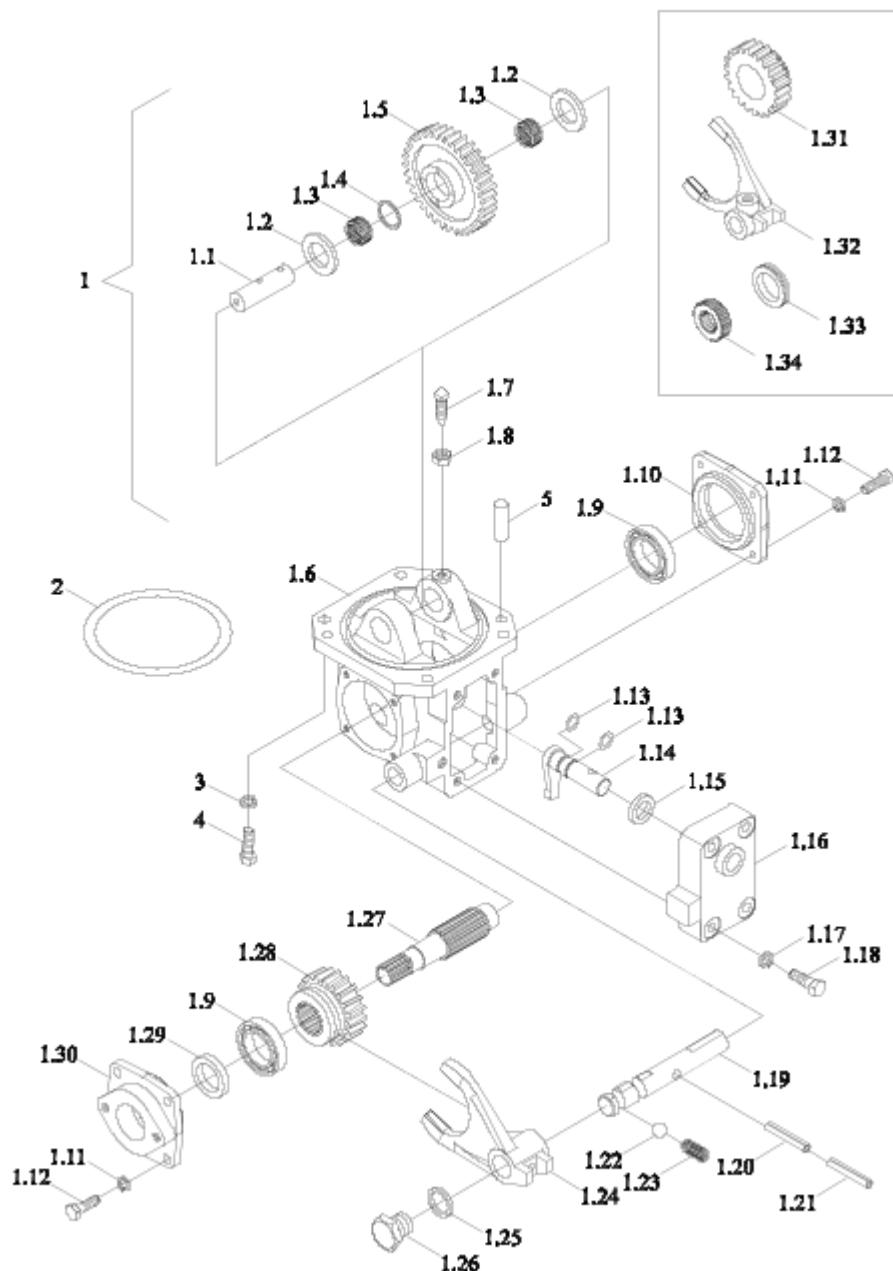


TB554. 421E TRANSFER CASE ASSEMBLY

No.	Part No.	Description	Ver-sion	QTY.	Remark
	TB554.421E	TRANSFER CASE ASSEMBLY		1	
1	TB554.421E.1	TRANSFER CASE BODY INSTALLATION ASSEMBLY		1	
1.1	FT304.42.102	IDLER SHAFT		1	
1.2	FT304.42F.103	THRUST RING		2	
1.3	JBT7918-K25X31X20	NEEDLE AND CARRIER COMBINATION		2	
1.4	FT304.42.126	NEEDLE INNER SPACER SLEEVE		1	
1.5	TB554.421E.1-02	TRANSFER CASE IDLER		2	
1.6	TB554.421E.1-01	TRANSFER CASE BODY		2	
1.7	FT304.42.112	THRUST SCREW		1	
1.8	GBT6173-M10X1-05-A2L	HEXAGON THIN NUT		1	
1.9	GBT276-6306	DEEP GROOVE BALL BEARING		2	
1.10	FT304.42.117	BEARING COVER		1	
1.11	GBT93-8-A0P	STANDARD SPRING WASHER		8	
1.12	GBT5783-M8X20-8.8-A2L	HEXAGON BOLT		8	
1.13	GBT3452.1-17.0X1.80G	RUBBER O-SEAL RING		2	
1.14	TB554.421E.1.1	ROTARY SHAFT WELDMENT		2	
1.15	TB554.423B-02	ROTARY SHAFT SPACER BUSH		1	
1.16	TB554.421E.1-05	SIDE COVER		2	
1.17	GBT93-10-A0P	STANDARD SPRING WASHER		4	
1.18	GBT5782-M10X45-8.8-A3L	HEXAGON BOLT		4	
1.19	TB554.421E.1-04	FORK SHAFT		2	
1.20	GBT879.1-6X30	SPRING COLUMN PIN		1	
1.21	GBT879.1-3.5X30	SPRING COLUMN PIN		1	
1.22	GBT308-10-G100-b	STEEL BALL		1	
1.23	FT800.37.139	SPRING		1	
1.24	TB554.421E.1-06	RELEASE FORK		2	
1.25	JBT982-18	COMBINED SEAL GASKET		2	
1.26	FT804.42.110	SCREW PLUG		2	
1.27	FT304.42F.105	TRANSFER CASE OUTPUT SHAFT		1	

TB554. 421E TRANSFER CASE ASSEMBLY (cont'd.)

No.	Part No.	Description	Ver-sion	QTY.	Remark
1.28	TB554.421E.1-03	TRANSFER CASE DRIVEN GEAR		2	
1.29	GBT9877.1-FB30X52X7D	SEAL RING		1	
1.30	FT304.42F.106	BEARING SEAT		1	
1.31	TB554.421D.1-01	TRANSFER CASE DRIVEN GEAR		1	
1.32	TB554.421B.1-07	RELEASE FORK		1	
1.33	TB604.421.1-03	SHIFT COLLAR		1	
1.34	FT804.42.115	MESH GEAR SEAT		1	
2	GBT3452.1-132X3.55G	RUBBER O-SEAL RING		1	
3	GBT93-10-A0P	STANDARD SPRING WASHER		4	
4	GBT5783-M10X30-8.8-A3L	HEXAGON BOLT		4	
5	GBT119.1-10m6X20-A0P	COLUMN PIN		2	


TB454. 422 TRANSFER CASE TRANSMISSION ASSEMBLY-1

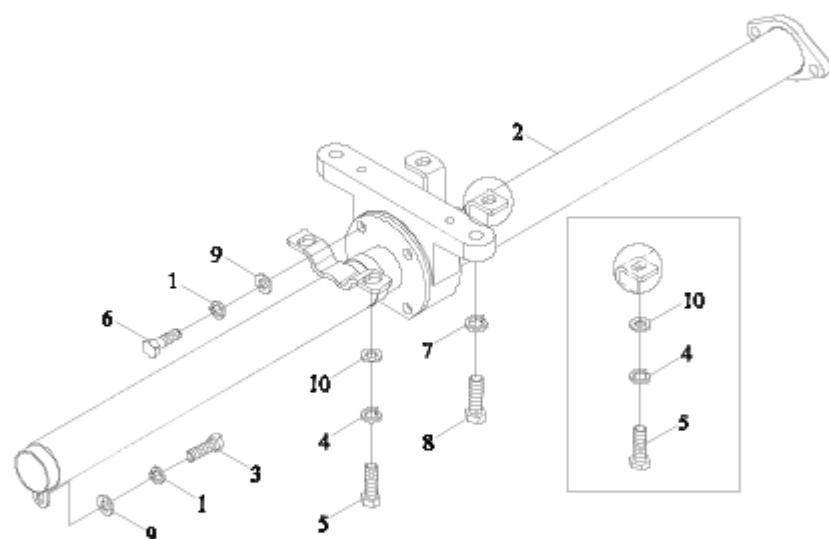

TB454. 422 TRANSFER CASE TRANSMISSION ASSEMBLY-1

No.	Part No.	Description	Ver-sion	QTY.	Remark
	TB454.422	TRANSFER CASE TRANSMISSION ASSEMBLY		1	
1	GBT93-8	STANDARD SPRING WASHER		1	
2	TB454.422.1	TRANSMISSION SHAFT ASSEMBLY		2	
3	GBT5783-M8X16-8.8-A2L	HEXAGON BOLT		3	
4	GBT93-10	STANDARD SPRING WASHER		4	
5	GBT5783-M10X25-8.8-A3L	HEXAGON BOLT		5	
6	GBT5783-M8X20-8.8-A2L	HEXAGON BOLT		6	
7	GBT93-12	STANDARD SPRING WASHER		7	
8	GBT5783-M12X40-8.8-A3L	HEXAGON BOLT		8	
9	GBT95-8-A0P	FLAT WASHER		9	
10	GBT97.1-10-A0P	FLAT WASHER		10	


TB454. 422 TRANSFER CASE TRANSMISSION ASSEMBLY-2

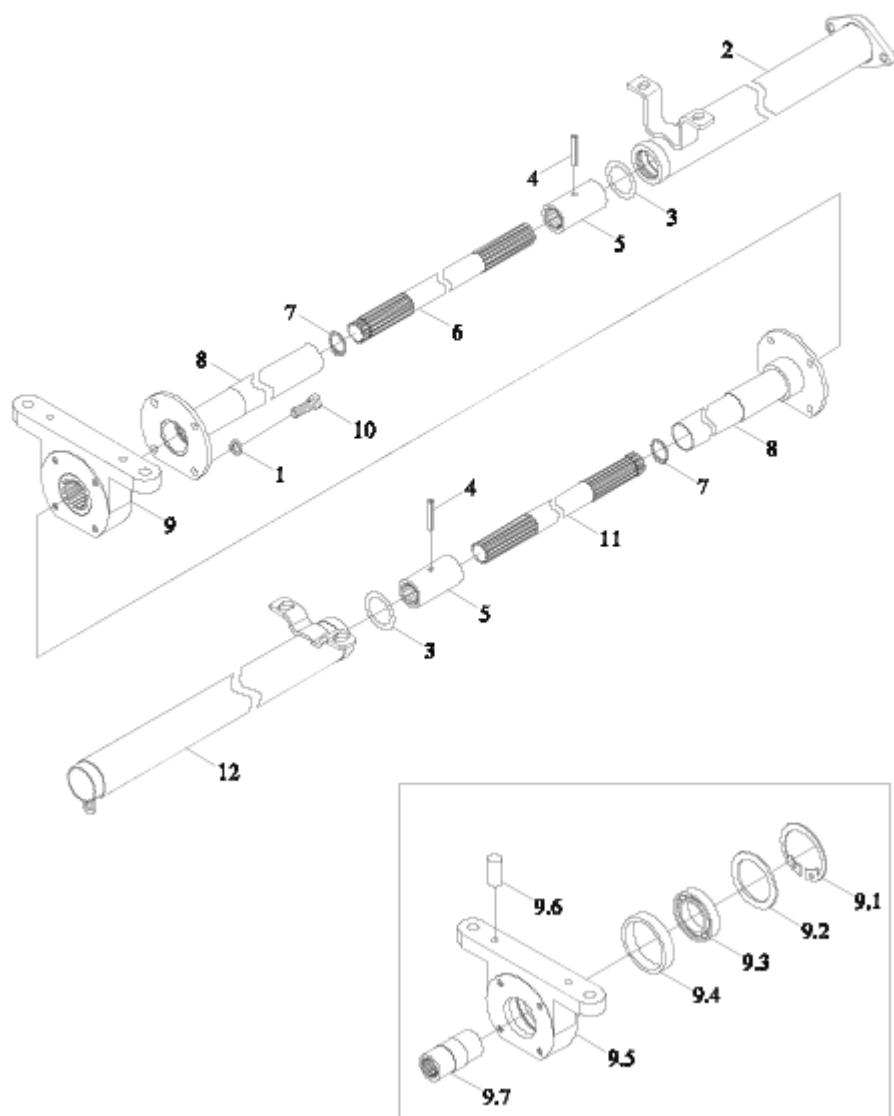

TB454. 422 TRANSFER CASE TRANSMISSION ASSEMBLY-2

No.	Part No.	Description	Ver-sion	QTY.	Remark
	TB454.422.1	TRANSMISSION SHAFT ASSEMBLY		1	
1	GBT93-8	STANDARD SPRING WASHER		8	
2	FT304.42F.015	GUARD SLEEVE WELD-MENT-1		1	
3	GBT3452.1-34.5X3.55G	RUBBER O-SEAL RING		2	
4	GBT879.1-6X35	SPRING COLUMN PIN		2	
5	FT304.42.107a	SPLINE BUSH		2	
6	FT404.42.128	REAR TRANSMISSION SHAFT		1	
7	GBT894.1-26	CIRCLIP FOR SHAFT		2	
8	FT304.42X.017	GUARD SLEEVE WELD-MENT-2		2	
9	TB554.422.1	MIDDLE BEARING SEAT ASSEMBLY		1	
9.1	GBT893.2-72	CIRCLIPS FOR HOLE		1	
9.2	FT304.42X.136	SPACER RING		1	
9.3	GBT276-6007-2RS	DEEP GROOVE BALL BEARING		1	
9.4	FT304.42X.137	RUBBER RING		1	
9.5	FT304.42X.138	MIDDLE BEARING SEAT		1	
9.6	GBT119.1-8m6X20-A0P	COLUMN PIN		2	
9.7	FT304.42X.135	MIDDLE SPLINE BUSH		1	
10	GBT5783-M8X20-8.8-A2L	HEXAGON BOLT		8	
11	FT404.42.139	FRONT TRANSMISSION SHAFT		1	
12	FT404.42.016	GUARD SLEEVE WELD-MENT-3		1	


TS0442301000K TRANSFER CASE CONTROL ASSEMBLY

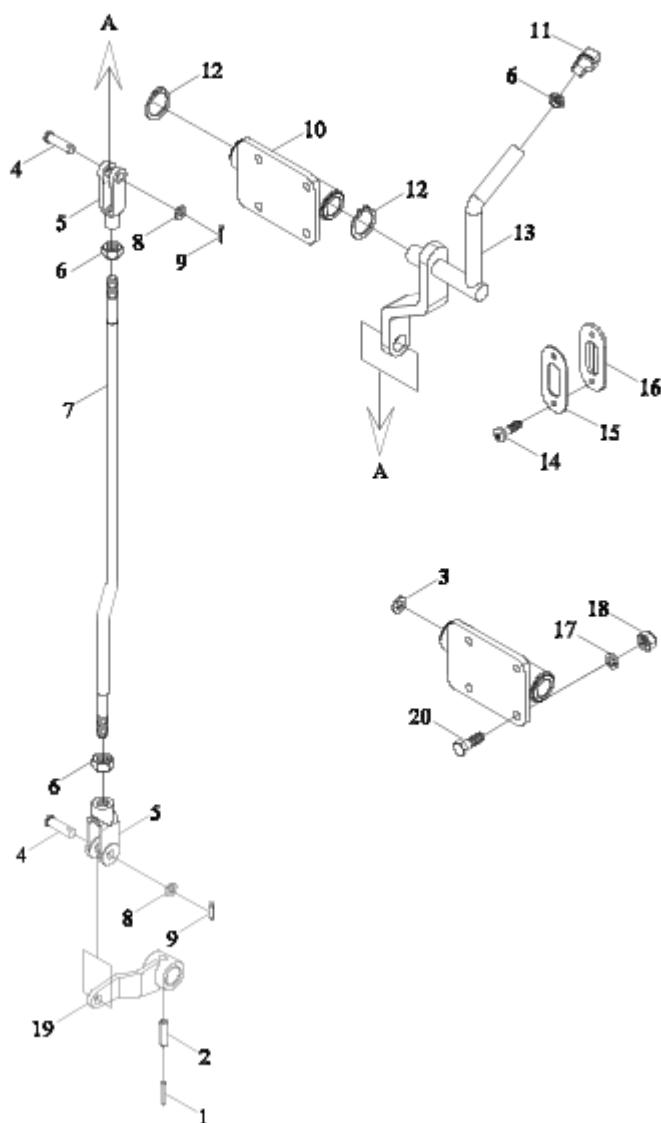

TS0442301000K TRANSFER CASE CONTROL ASSEMBLY

No.	Part No.	Description	Ver-sion	QTY.	Remark
	TS0442301000K	TRANSFER CASE CONTROL ASSEMBLY		1	
1	GBT879.1-5X32	SPRING COLUMN PIN		1	
2	GBT879.1-8X32	SPRING COLUMN PIN		1	
3	GBT95-24-A0P	FLAT WASHER		1	
4	GBT882-B10X30-A0P	PIN SHAFT		2	
5	FT300.43.108	PULL ROD FRONT FORK		2	
6	GBT6170-M10-8-A3L	HEXAGON NUT, TYPE-1		3	
7	TS04423010002K	PULL ROD		1	
8	GBT97.1-10-A0P	FLAT WASHER		2	
9	GBT91-3.2X16-A0P	SPLIT PIN		2	
10	TS04423010003	SUPPORT SEAT		1	
11	TS04423010001K	TRANSFER CASE CONTROL HANDLE		1	
12	GBT894.1-22	CIRCLIP FOR SHAFT		2	
13	TS04423010003K	STEERING AXLE WELDMENT		1	
14	GBT823-M6X12-4.8-A2L	SCREW		2	
15	TS04423010013	PRESSURE PLATE		1	
16	TS04423010012	SEAL GASKET		1	
17	GBT93-8-A0P	STANDARD SPRING WASHER		4	
18	GBT6170-M8-8-A2L	HEXAGON NUT, TYPE-1		4	
19	TS04423010005	ROCKER WELDMENT		1	
20	GBT5783-M8X16-8.8-A2L	HEXAGON BOLT		4	


TB504. 431B LEFT BRAKE ASSEMBLY

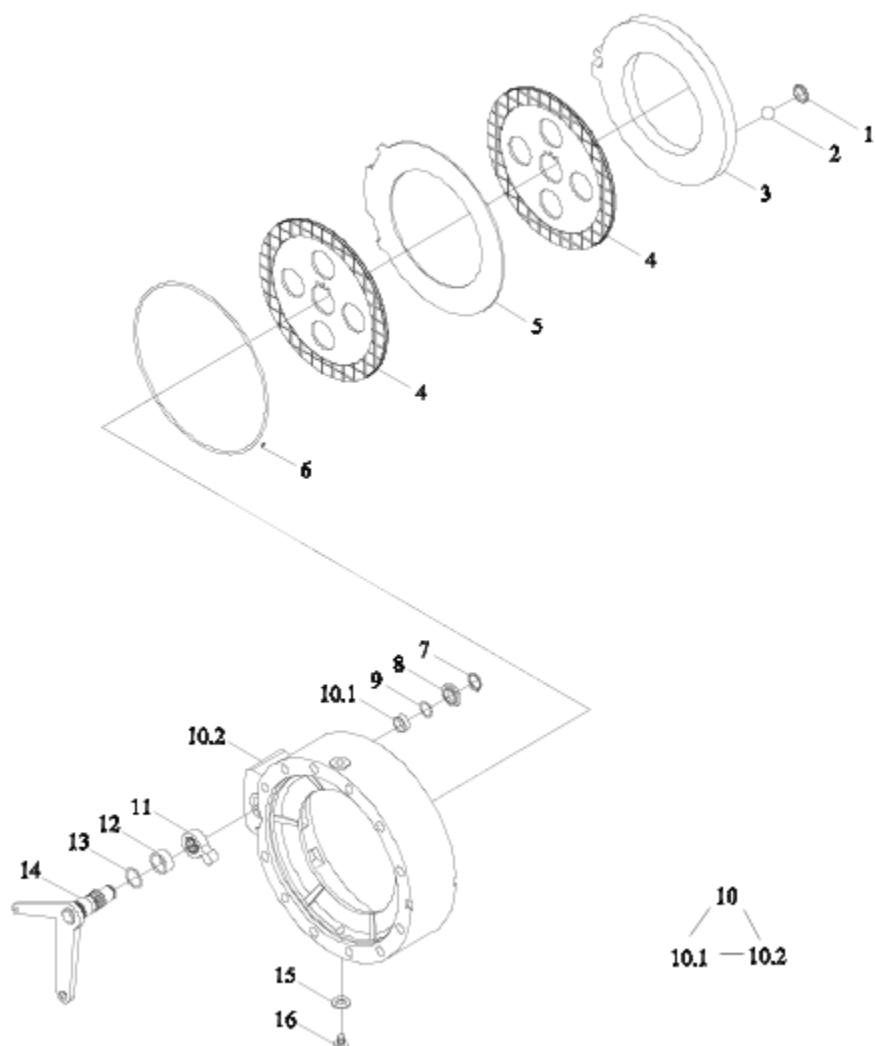

TB504. 431B LEFT BRAKE ASSEMBLY

No.	Part No.	Description	Ver-sion	QTY.	Remark
	TB504.431B	LEFT BRAKE ASSEMBLY		1	
1	FT300.43.102	BOWL PLUG		6	
2	GBT308-18-G100-b	STEEL BALL		6	
3	FT300.43.103	LEFT BRAKE PRESSURE PLATE		1	
4	TB450.431.1	BRAKE FRICTION PLATE ASSEMBLY		2	
5	FT300.43.105	SPACER PLATE		1	
6	FT300.43.101	O-RING		1	
7	GBT894.1-18	CIRCLIP FOR SHAFT		1	
8	FT300.43.109a	WASHER		1	
9	GBT3452.1-18.0X2.65G	RUBBER O-SEAL RING		1	
10	FT300.43.012	LEFT BRAKE HOUSING ASSEMBLY		1	
10.1	FT300.43.114	CRANK SHAFT BUSH		1	
10.2	FT300.43.121	LEFT BRAKE HOUSING		1	
11	FT300.43.106	DIAL BLOCK		1	
12	FT300.43.107	SPACER BUSH		1	
13	GBT3452.1-20.0X2.65G	RUBBER O-SEAL RING		1	
14	TB504.431B.1	LEFT CRANK UNIT		1	
15	JBT982-12	COMBINED SEAL GASKET		1	
16	FT300.43.154	SCREW PLUG		1	


TB504. 432B RIGHT BRAKE ASSEMBLY

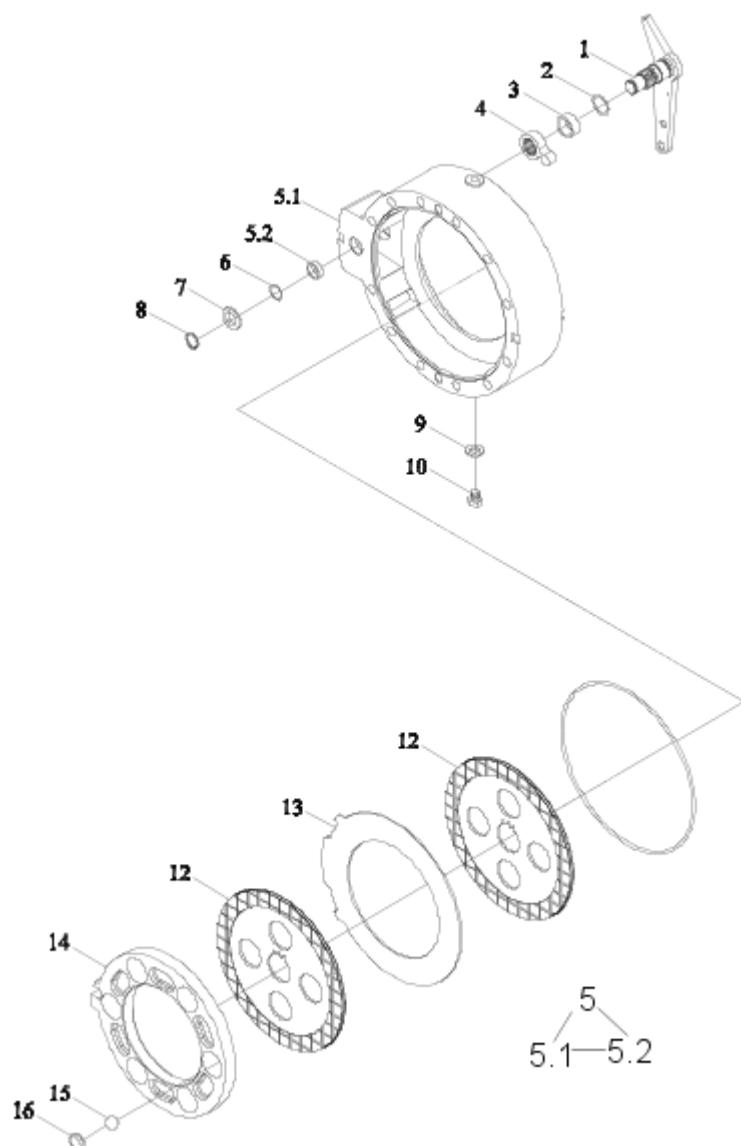

TB504. 432B RIGHT BRAKE ASSEMBLY

No.	Part No.	Description	Ver-sion	QTY.	Remark
	TB504.432B	RIGHT BRAKE ASSEMBLY		1	
1	TB504.432B.1	RIGHT CRANK UNIT		1	
2	GBT3452.1-20.0X2.65G	RUBBER O-SEAL RING		1	
3	FT300.43.107	SPACER BUSH		1	
4	FT300.43.106	DIAL BLOCK		1	
5	FT300.43.013	RIGHT BRAKE HOUSING ASSEMBLY		1	
5.1	FT300.43.122	RIGHT BRAKE HOUSING		1	
5.2	FT300.43.114	CRANK SHAFT BUSH		1	
6	GBT3452.1-18.0X2.65G	RUBBER O-SEAL RING		1	
7	FT300.43.109a	WASHER		1	
8	GBT894.1-18	CIRCLIP FOR SHAFT		1	
9	JBT982-12	COMBINED SEAL GASKET		1	
10	FT300.43.154	SCREW PLUG		1	
12	TB450.431.1	BRAKE FRICTION PLATE ASSEMBLY		2	
13	FT300.43.105	SPACER PLATE		1	
14	FT300.43.104	RIGHT BRAKE PLATEN		1	
15	GBT308-18-G100-b	STEEL BALL		6	
16	FT300.43.102	BOWL PLUG		6	


TS04433040000K BRAKE SYSTEM CONTROL ASSEMBLY-1

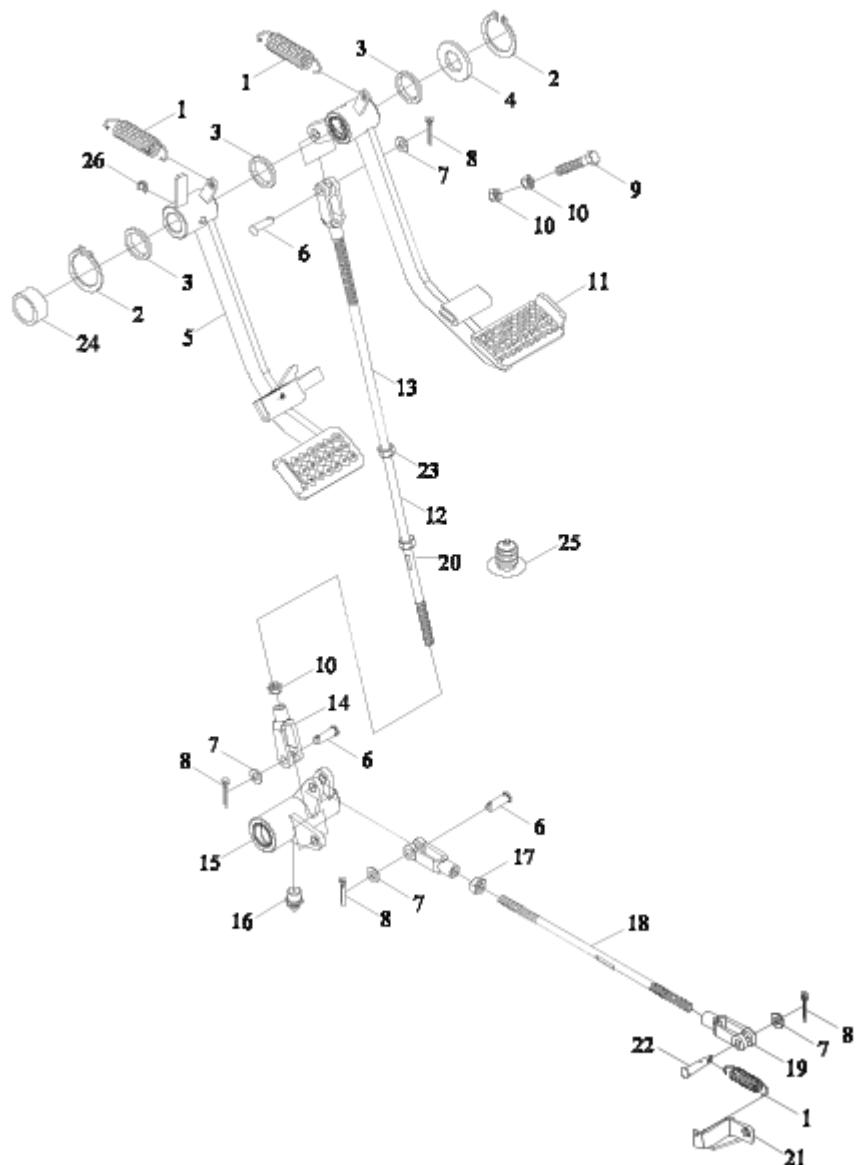

TS04433040000K BRAKE SYSTEM CONTROL ASSEMBLY-1

No.	Part No.	Description	Ver-sion	QTY.	Remark
	TS04433040000K	BRAKE SYSTEM CONTROL ASSEMBLY		1	
1	TE250.212D-05	CLUTCH PEDAL RETURN SPRING		3	
2	GBT894.1-25	CIRCLIP FOR SHAFT		2	
3	GBT97.1-24-A3L	FLAT WASHER		1	
4	TE250.433C-02	GASKET		7	
5	TS04433020001K	LEFT BRAKE PEDAL UNIT		1	
6	GBT882-B10X30-A3L	PIN SHAFT		4	
7	GBT97.1-10-A3L	FLAT WASHER		4	
8	GBT91-3.2X22-A3L	SPLIT PIN		4	
9	GBT5783-M10X45-8.8-A3L	HEXAGON BOLT		2	
10	GBT6170-M10-8-A3L	HEXAGON NUT, TYPE-1		4	
11	TS04433020004K	RIGHT BRAKE PEDAL UNIT		1	
12	TE354.433-03	CONNECTING ROD		2	
13	TB604.212A.5	UPPER PULL ROD WELDMENT		2	
14	TB604.433E.10	LOWER PULL ROD WELDMENT		2	
15	TB604.433E.5	ROCKER UNIT HUB		1	
16	JBT7940.1-M8X1	STRAIGHT FORCED FILL-ING OIL CUP		3	
17	GBT6170-M10-LH-8-A3L	HEXAGON NUT, TYPE-1		1	
18	TB604.433E-03	LOWER PULL ROD		1	
19	TA700.431A-01	DEXTROROTATION LONG HOLE CONNECT FORK		1	
20	TB704.433.5	RIGHT RETURN SPRING CONNECTING PLATE WELDMENT		1	
21	GBT6171-M12X1.5-8-A3L	HEXAGON NUT, TYPE-1		2	
22	TB704.433-04	CONNECTING PIN		1	
23	GBT6171-M12X1.5-LH-8-A3L	HEXAGON NUT, TYPE-1		2	
24	TS04433010011	SPACER BUSH		1	
25	TB604.433E-06	DUSTPROOF SLEEVE		1	
26	TD800.311C.1-01	DUSTPROOF CAP OF OIL CUP		1	


TS04433040000K BRAKE SYSTEM CONTROL ASSEMBLY-2

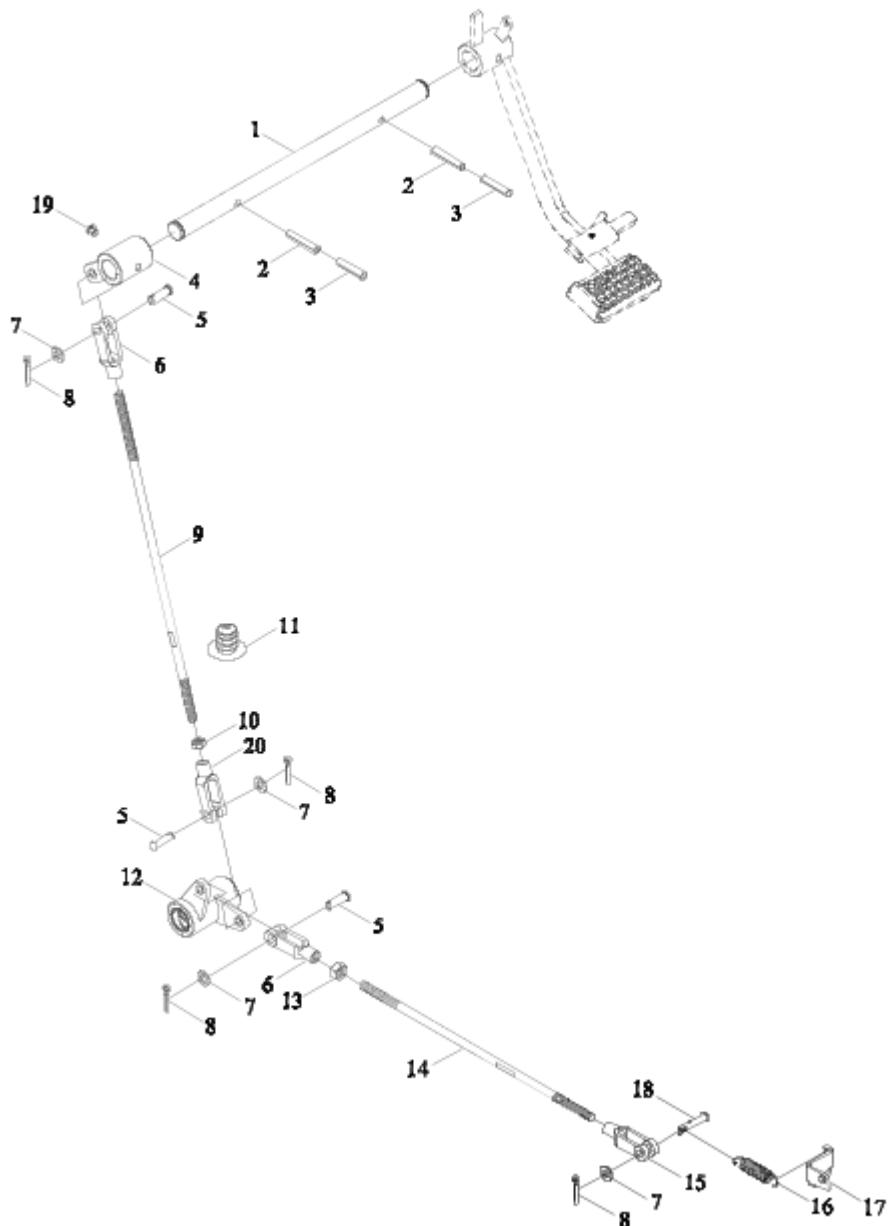

TS04433040000K BRAKE SYSTEM CONTROL ASSEMBLY-2

No.	Part No.	Description	Ver-sion	QTY.	Remark
	TS04433040000K	BRAKE SYSTEM CONTROL ASSEMBLY		1	
1	TB604.433E-01	SUPPORT SHAFT		1	
2	GBT879.1-5X40	SPRING COLUMN PIN		2	
3	GBT879.1-8X40	SPRING COLUMN PIN		2	
4	TB604.433E.3	LEFT DRAW ARM WELDMENT		1	
5	GBT882-B10X30-A3L	PIN SHAFT		3	
6	FT300.43.110	PULL ROD REAR FORK		2	
7	GBT97.1-10-A3L	FLAT WASHER		4	
8	GBT91-3.2X22-A3L	SPLIT PIN		4	
9	TE354.433-03	CONNECTING ROD		1	
10	GBT6170-M10-8-A3L	HEXAGON NUT, TYPE-1		1	
11	TB604.433E-06	DUSTPROOF SLEEVE		1	
12	TB604.433E.4	ROCKER UNIT HUB		1	
13	GBT6170-M10-LH-8-A3L	HEXAGON NUT, TYPE-1		1	
14	TB604.433E-03	LOWER PULL ROD		1	
15	TA700.431A-01	DEXTROROTATION LONG HOLE CONNECT FORK		1	
16	TE250.212D-05	CLUTCH PEDAL RETURN SPRING		1	
17	TB704.433.6	LEFT RETURN SPRING CONNECTING PLATE WELDMENT		1	
18	TB704.433-04	CONNECTING PIN		1	
19	TD800.311C.1-01	DUSTPROOF CAP OF OIL CUP		1	
20	FT300.43.108	PULL ROD FRONT FORK		2	


TS04433040000K BRAKE SYSTEM CONTROL ASSEMBLY-3

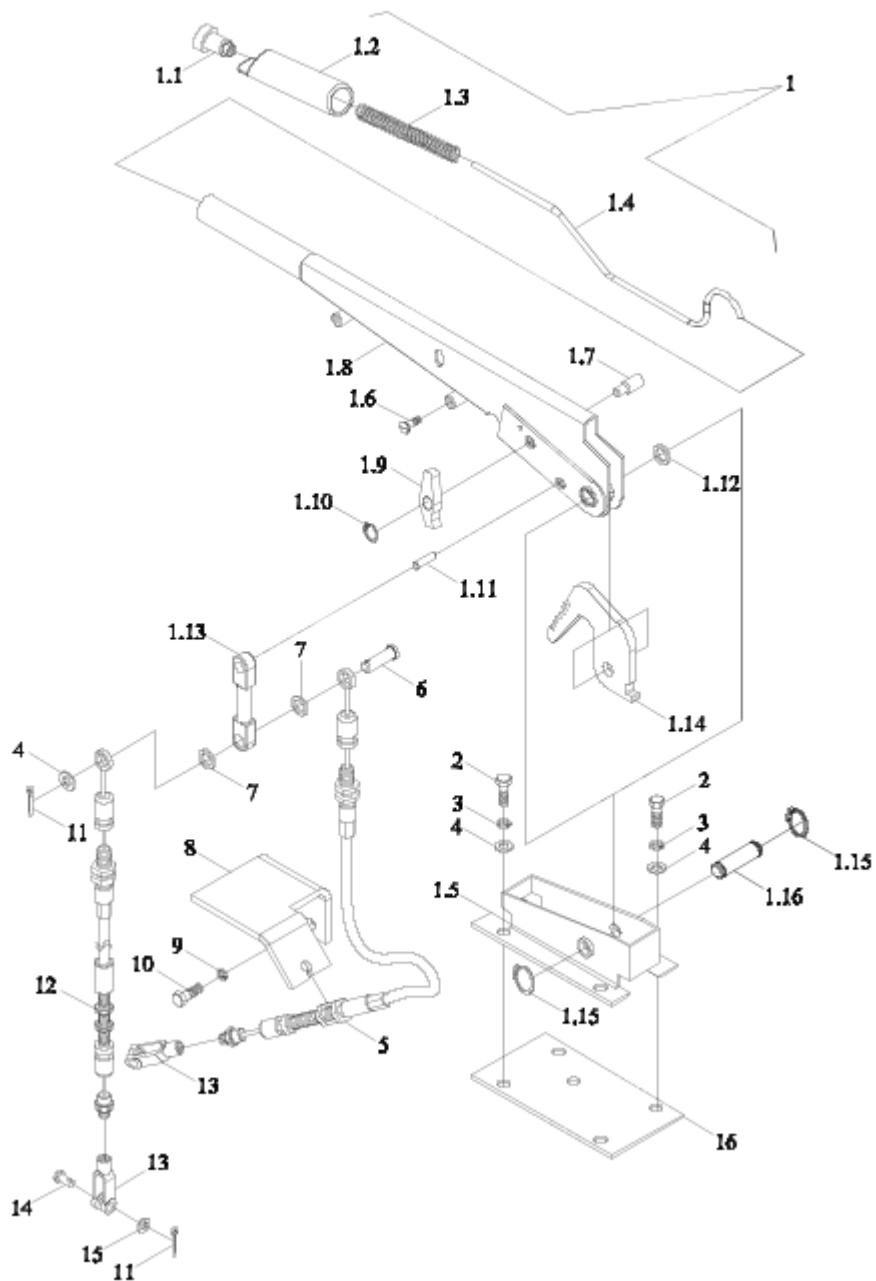

TS04433040000K BRAKE SYSTEM CONTROL ASSEMBLY-3

No.	Part No.	Description	Ver-sion	QTY.	Remark
	TS04433040000K	BRAKE SYSTEM CONTROL ASSEMBLY		1	
1	TS04433010001	CONTROLLING HANDLE ASSEMBLY		1	
2	GBT5783-M8X20-8.8-A2L	HEXAGON BOLT		4	
3	GBT93-8-A3L	STANDARD SPRING WASHER		4	
4	GBT97.1-8-A3L	FLAT WASHER		5	
5	TS04433010006	RIGHT BRAKE PULL WIRE ASSEMBLY		1	
6	GBT882-B8X40-A3L	PIN SHAFT		2	
7	TB604.433E-04	SMALL RETAINER RING		2	
8	TB604.433E.6	LEFT PULL WIRE SUPPORT SEAT WELDMENT		1	
9	GBT93-10-A3L	STANDARD SPRING WASHER		2	
10	GBT5783-M10X20-8.8-A3L	HEXAGON BOLT		2	
11	GBT91-3.2X22-A3L	SPLIT PIN		2	
12	TS04433010007	LEFT BRAKE WIRE ASSEMBLY		1	
13	TA700.431A-01	DEXTROROTATION LONG HOLE CONNECT FORK		2	
14	GBT882-B10X30-A3L	PIN SHAFT		1	
15	GBT97.1-10-A3L	FLAT WASHER		2	
16	TS04433010002	DUSTPROOF MAT		1	


TC02440080000K SEAT INSTALLATION ASSEMBLY

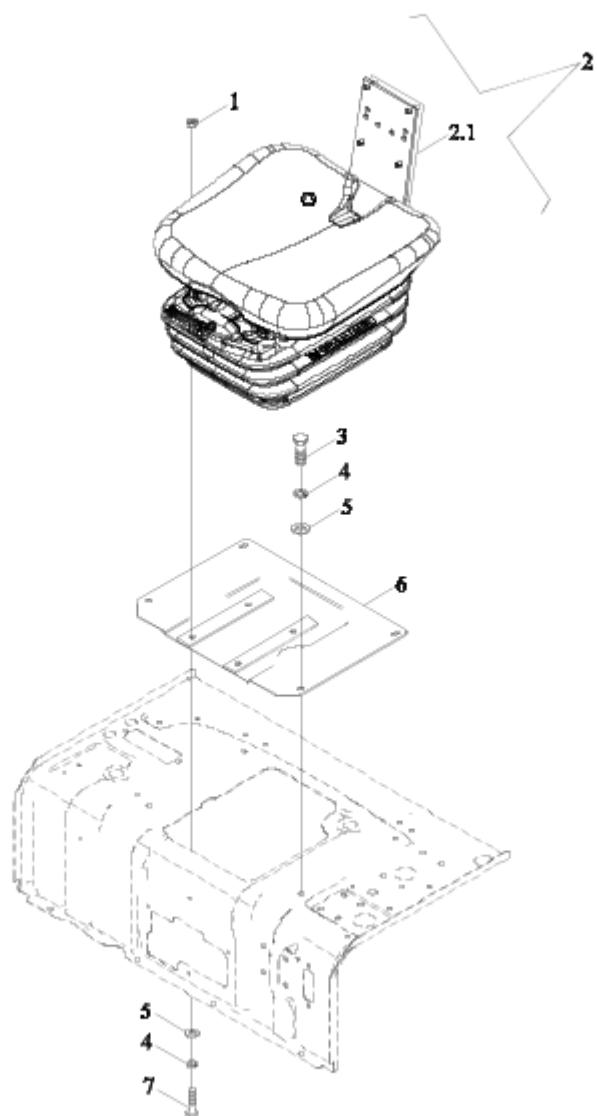

TC02440080000K SEAT INSTALLATION ASSEMBLY

No.	Part No.	Description	Ver-sion	QTY.	Remark
	TC02440080000K	SEAT INSTALLATION ASSEMBLY		1	
1	GBT6170-M8-8-A2L	HEXAGON NUT, TYPE-1		4	
2	TC02440050001K	SEAT ASSEMBLY		1	
2.1	TC02440050002K	SEAT		1	
3	GBT5783-M8X25-8.8-A2L	HEXAGON BOLT		4	
4	GBT93-8-A3L	STANDARD SPRING WASHER		8	
5	GBT97.1-8-A3L	FLAT WASHER		8	
6	TC02440080003K	SEAT INSTALLATION PLATE WELDMENT		1	
7	GBT5783-M8X30-8.8-A2L	HEXAGON BOLT		4	


TS04451050000K DRIVER' S CAB ASSEMBLY-1

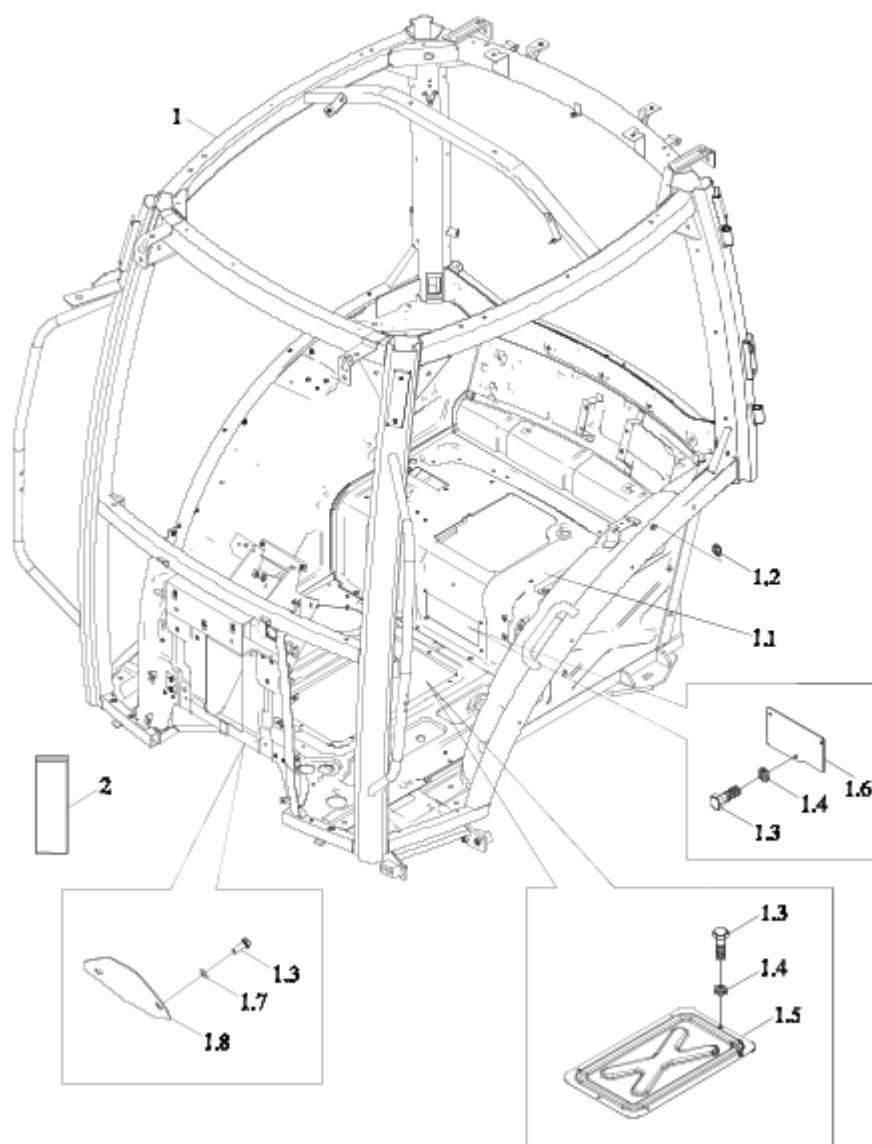

TS04451050000K DRIVER' S CAB ASSEMBLY-1

No.	Part No.	Description	Ver-sion	QTY.	Remark
	TS04451050000K	DRIVER'S CAB ASSEMBLY		1	
1	TS04451010001	CAB WELDMENT		1	
1.1	TS04451011000	CAB WELDMENT		1	
1.2	TS06451011153	DOOR PNEUMATIC SPRING INSTALLATION SEAT		2	
1.3	GBT5783-M6X16-8.8-A2L	HEXAGON BOLT		11	
1.4	GBT93-6-A3L	STANDARD SPRING WASHER		11	
1.5	TS04451012001	BONNET		1	
1.6	TS04451012005	REAR FLOOR COVER		1	
1.7	GBT97.1-6-A3L	FLAT WASHER		2	
1.8	TS04451012002	COVER PLATE		1	
2	TS04451030001K	EC NAMEPLATE CAB		1	


TS04451050000K DRIVER' S CAB ASSEMBLY-2

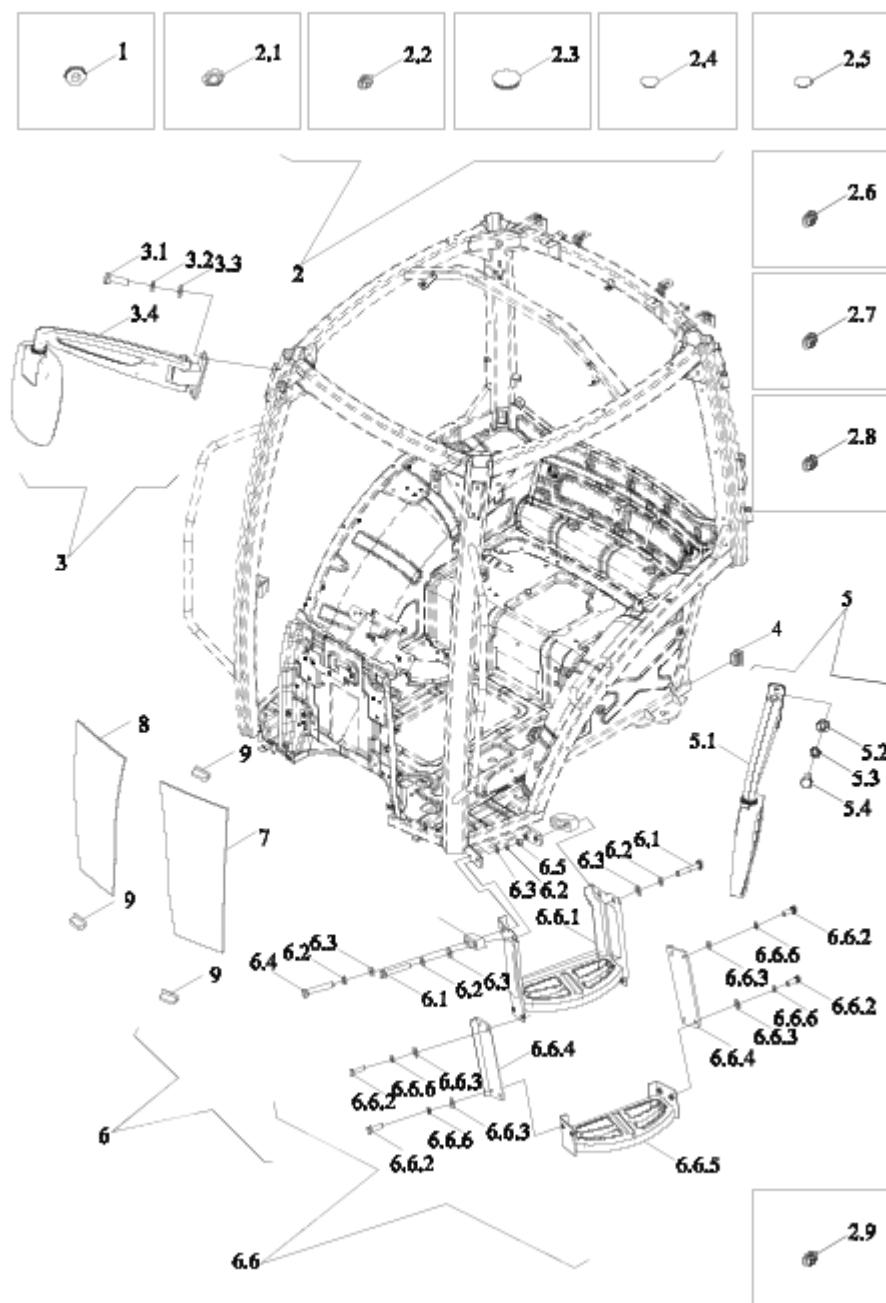

TS04451050000K DRIVER' S CAB ASSEMBLY-2

No.	Part No.	Description	Ver-sion	QTY.	Remark
	TS04451050000K	DRIVER'S CAB ASSEMBLY		1	
	TS04451010002	CAB ACCESSORY		1	
1	FT65.48.093	THROUGH HARNESS WASHER-1		4	
2	TS04451019000	CAB SEAL		1	
2.1	TS04451010020	PLUG COVER		2	
2.2	TS06451019001	PROCESS PLUG COVER 1		14	
2.3	TD800.452-13	PLUG COVER		4	
2.4	TS06451019002	PROCESS PLUG COVER 2		4	
2.5	TS06451019004	PROCESS PLUG COVER 4		1	
2.6	TS06451019003	PROCESS PLUG COVER 3		6	
2.7	TS04451010030	PLUG COVER		6	
2.8	TD800.452Z-01	PLUG COVER		1	
2.9	TS04451010050	PLUG COVER		1	
3	TS06451018201	RIGHT REAR MIRROR IN- STALLATION ASSEMBLY		1	
4	TS04451010010	PLUG COVER		2	
5	TS06451018101	LEFT REAR VIEW MIRROR INSTALLATION ASSEMBLY		1	
6	TS04451017000	LEFT LADDER		1	
6.1	GBT5782-M10X50-8.8	HEXAGON BOLT		3	
6.2	GBT93-10-A0P	STANDARD SPRING WASHER		4	
6.3	GBT95-10-A0P	FLAT WASHER		5	
6.4	GBT5782-M10X55-8.8-A2L	HEXAGON BOLT		1	
6.5	GBT6170-M10-8-A3L	HEXAGON NUT, TYPE-1		1	
6.6	TS04451017206	LADDER		1	
7	TS04451015002	LEFT FRONT LOWER WIN- DOW GLASS		1	
8	TS04451015003	RIGHT FRONT LOWER WINDOW GLASS		1	
9	TS06451011269	GLASS MOUNTINGS MAT		4	

TS04451050000K DRIVER' S CAB ASSEMBLY-3

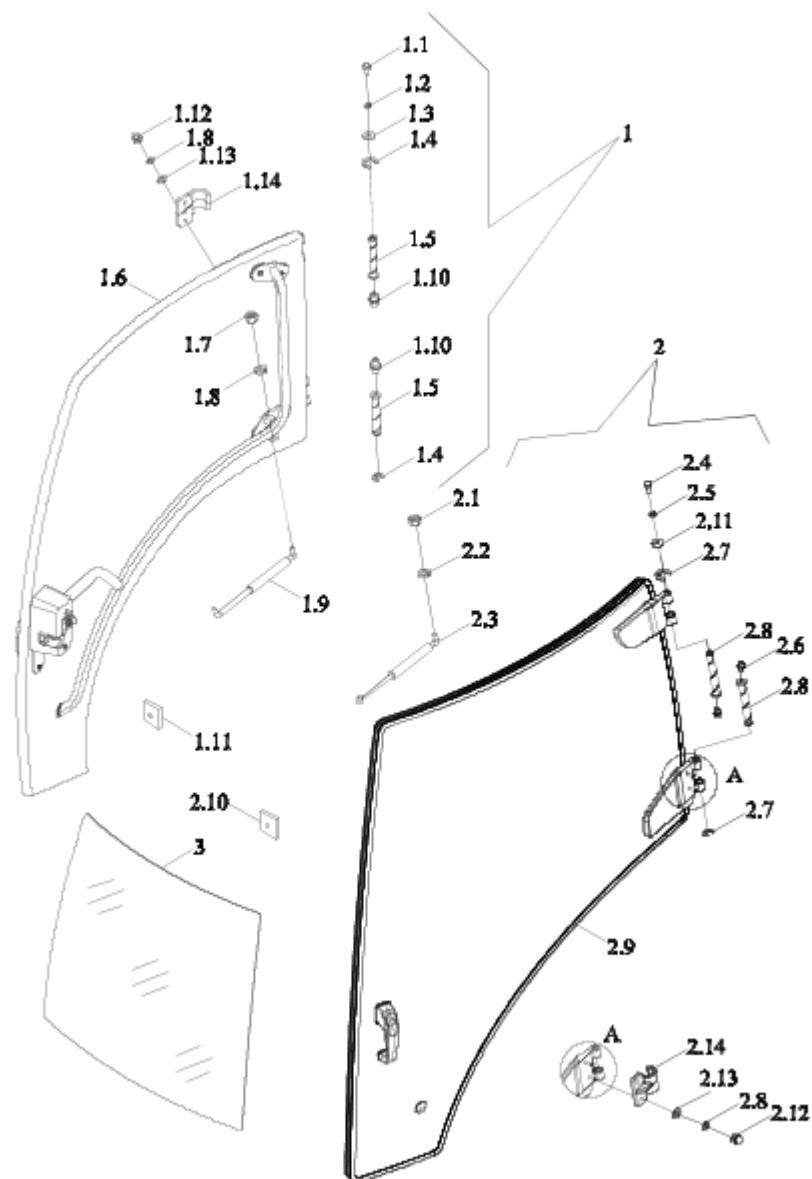


TS04451050000K DRIVER' S CAB ASSEMBLY-3

No.	Part No.	Description	Ver-sion	QTY.	Remark
	TS04451050000K	DRIVER'S CAB ASSEMBLY		1	
1	TS04451044000	RIGHT DOOR ASSEMBLY		1	
1.1	GBT5783-M6X12-8.8	HEXAGON BOLT		1	
1.2	GBT93-6-O	STANDARD SPRING WASHER		1	
1.3	GBT96.1-6	BIG WASHER		1	
1.4	GBT896-12-A3L	SPLIT RETAINER RING		2	
1.5	TS06451013002	DOOR LOCK PIN SHAFT		2	
1.6	TS04451044100	RIGHT DOOR		1	
1.7	GBT6170-M8-8-A2L	HEXAGON NUT, TYPE-1		1	
1.8	GBT93-8-A3L	STANDARD SPRING WASHER		3	
1.9	TD904.451C.2-12	DOOR PNEUMATIC SPRING		1	
1.10	JBT7940.1-M6	STRAIGHT FORCED FILL-ING OIL CUP		2	
1.11	TS04451013002	DOOR LOCK NUT SEAT		1	
1.12	GBT923-M8-5	CAP NUT		2	
1.13	GBT97.1-8-A3L	FLAT WASHER		2	
1.14	TS04451043225	DOOR STOPPER		1	
2	TS04451043000	LEFT DOOR ASSEMBLY		1	
2.1	GBT6170-M8-8-A2L	HEXAGON NUT, TYPE-1		1	
2.2	GBT93-8-A3L	STANDARD SPRING WASHER		3	
2.3	TD904.451C.2-12	DOOR PNEUMATIC SPRING		1	
2.4	GBT5783-M6X12-8.8	HEXAGON BOLT		1	
2.5	GBT93-6-O	STANDARD SPRING WASHER		1	
2.6	JBT7940.1-M6	STRAIGHT FORCED FILL-ING OIL CUP		2	
2.7	GBT896-12-A3L	SPLIT RETAINER RING		2	
2.8	TS06451013002	DOOR LOCK PIN SHAFT		2	
2.9	TS04451043100	LEFT DOOR		1	
2.10	TS04451013002	DOOR LOCK NUT SEAT		1	
2.11	GBT96.1-6	BIG WASHER		1	
2.12	TS04451043225	DOOR STOPPER		1	
2.13	GBT97.1-8-A3L	FLAT WASHER		2	

TS04451050000K DRIVER' S CAB ASSEMBLY-3 (cont'd.)

No.	Part No.	Description	Ver-sion	QTY.	Remark
2.14 3	GBT923-M8-5 TS04451015001	CAP NUT FRONT WINDSHIELD		2 1	


TS04451050000K DRIVER' S CAB ASSEMBLY-4

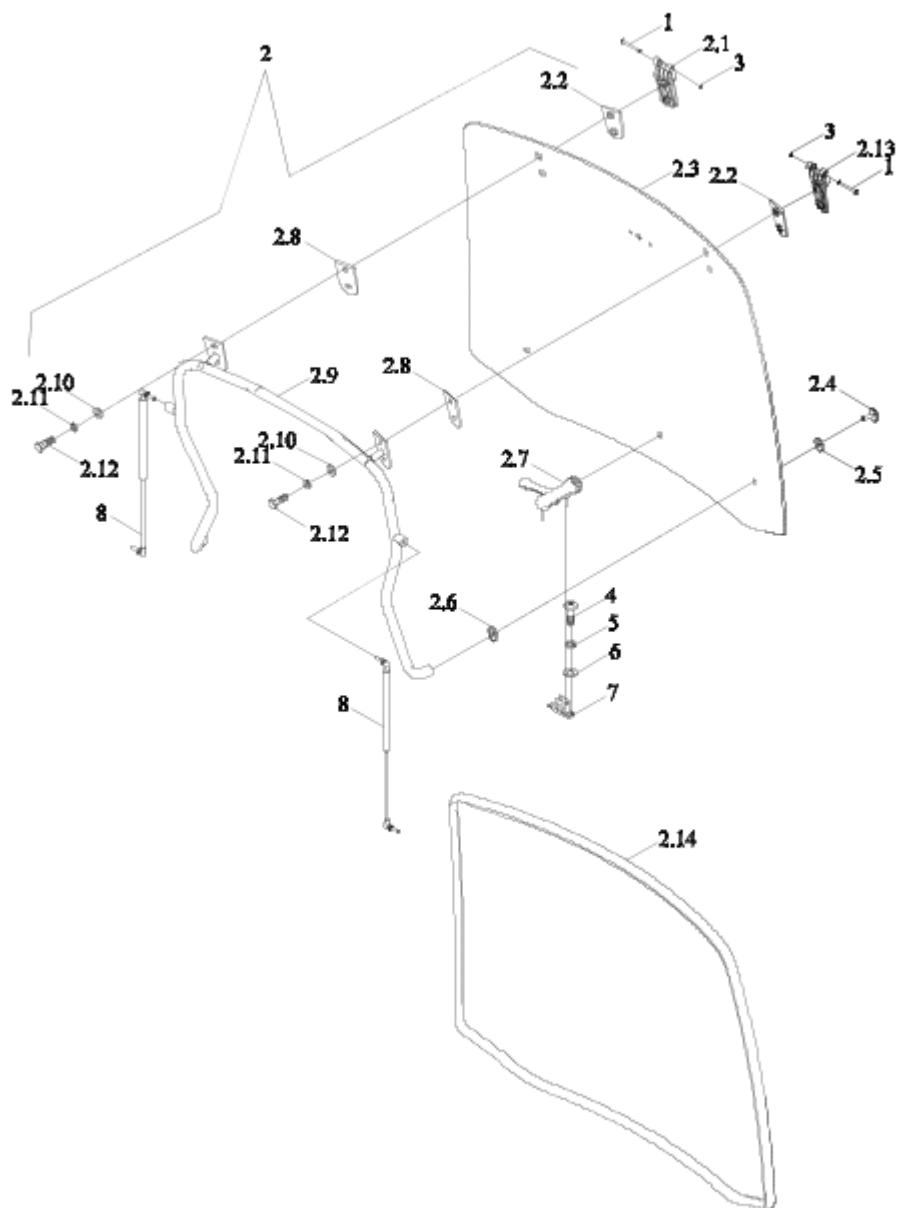

TS04451050000K DRIVER' S CAB ASSEMBLY-4

No.	Part No.	Description	Ver-sion	QTY.	Remark
	TS04451050000K	DRIVER'S CAB ASSEMBLY		1	
	TS04451010002	CAB ACCESSORY		1	
	TS04451046000	REAR WINDOW ASSEMBLY		1	
1	TS06451016004	BACK WINDOWS HINGED PIN SHAFT		2	
2	TS04451046100	BACK WIND WINDOWS		1	
2.1	TS04451046111	BACK WINDOWS RIGHT HINGED SEAT		1	
2.2	TS06451016112	BACK WINDOWS HINGED OUT PAD BOARD		2	
2.3	TS04451016101	BACK WIND WINDOW GLASS		1	
2.4	TS04451013106	CAST BOLT		2	
2.5	TD904.451C.2-10	GLASS OUT WASHER		2	
2.6	TD904.451C.2-09	GLASS IN WASHER		2	
2.7	TS06451016109	HANDLE ASSEMBLY		1	
2.8	TS04451046113	BACK WINDOWS HINGED INTO PAD BOARD		2	
2.9	TS04451016102	REAR WINDOW ARMREST WELDMENT		1	
2.10	GBT97.1-8-A0P	FLAT WASHER		4	
2.11	GBT93-8-A0P	STANDARD SPRING WASHER		4	
2.12	GBT5783-M8X25-8.8-A2L	HEXAGON BOLT		4	
2.13	TS04451046110	BACK WINDOWS LEFT HINGED SEAT		1	
2.14	TS04451016108	REAR WINDOW SEAL STRIP		1	
3	GBT896-6	SPLIT RETAINER RING		2	
4	GBT818-M6x20-4.8	CROSS SCREW		2	
5	GBT93-6-A0P	STANDARD SPRING WASHER		2	
6	GBT97.1-6-A0P	FLAT WASHER		2	
7	TS06451016003	SEAT		1	
8	TS06451016001	REAR WINDOW PNEUMATIC SPRING		2	


TS04451050000K DRIVER' S CAB ASSEMBLY-5

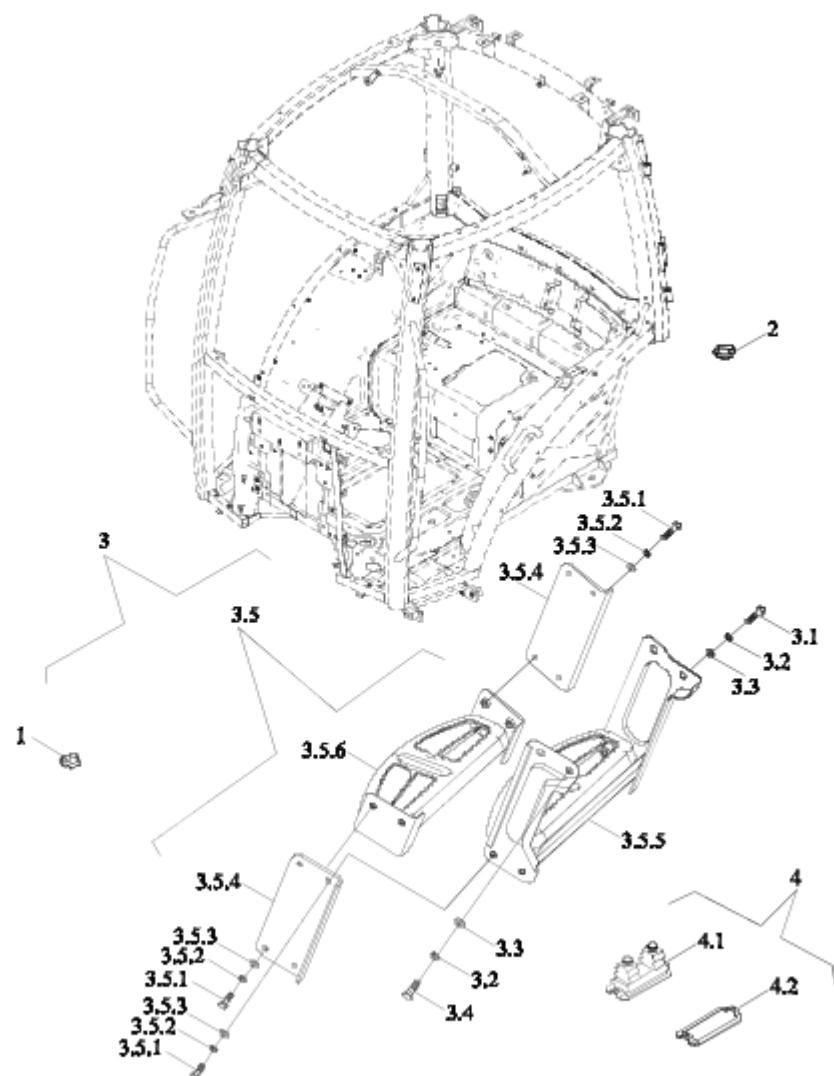

TS04451050000K DRIVER' S CAB ASSEMBLY-5

No.	Part No.	Description	Ver-sion	QTY.	Remark
	TS04451050000K	DRIVER'S CAB ASSEMBLY		1	
	TS04451010002	CAB ACCESSORY		1	
1	TS06811010009	RETAINER RING 2		1	
2	TS06811010008	RETAINER RING 1		1	
3	TS04451017509	RIGHT LADDER		1	
3.1	GBT5782-M10X50-8.8-A3L	HEXAGON BOLT		2	
3.2	GBT93-10-A3L	STANDARD SPRING WASHER		4	
3.3	GBT95-10-A3L	FLAT WASHER		4	
3.4	GBT5783-M10X35-8.8-A3L	HEXAGON BOLT		2	
3.5	TS04451017514	RIGHT LADDER		1	
4	TS04451010040	HANDLE BONNET		1	
4.1	TS04451010041	HANDLE BONNET		1	
4.2	TS04451010042	BONNET PRESSURE PLATE		1	


TS04451050000K DRIVER' S CAB ASSEMBLY-6

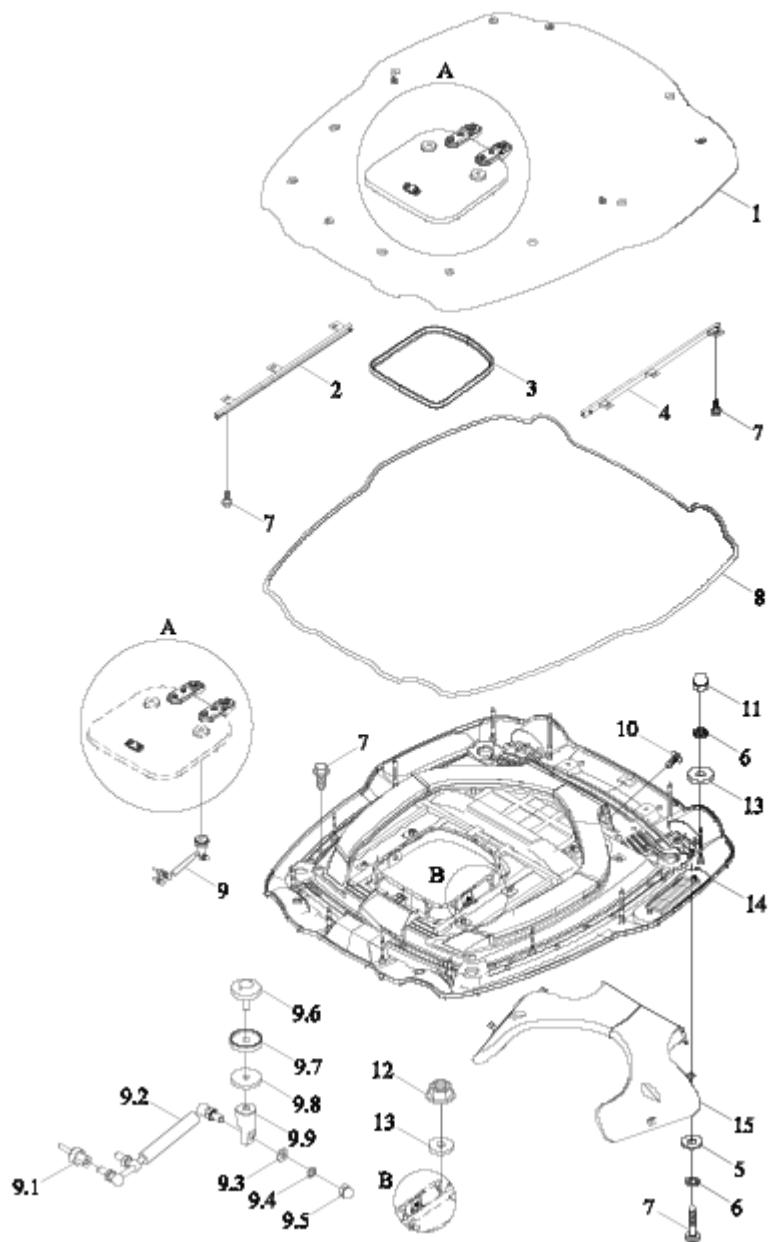

TS04451050000K DRIVER' S CAB ASSEMBLY-6

No.	Part No.	Description	Ver-sion	QTY.	Remark
	TS04451050000K	DRIVER'S CAB ASSEMBLY		1	
	TS04453015000K	TOP COVER ASSEMBLY		1	
1	TS04453015100	OUT TOP		1	
2	TS06453015800	RIGHT SLIDEWAY		1	
3	TS04453015400	SEAL STRIP		1	
4	TS06453015700	LEFT SLIDEWAY		1	
5	GBT96.1-6-A3L	BIG WASHER		18	
6	GBT93-6-A3L	STANDARD SPRING WASHER		12	
7	GBT16674.1-M6X20-8.8-A2L	HEXAGON FLANGE NUT		30	
8	TS04453015500	TOP SEAL STRIP		1	
9	TS06453015600	PNEUMATIC SPRING IN-STALLATION ASSEMBLY		2	
9.1	TS06453015602	INSTALLATION SEAT 1		1	
9.2	TS06453015601	PNEUMATIC SPRING		1	
9.3	GBT97.1-8	FLAT WASHER		1	
9.4	GBT93-8-O	STANDARD SPRING WASHER		1	
9.5	GBT923-M8-5	CAP NUT		1	
9.6	TS04451013106	CAST BOLT		1	
9.7	TS06453015605	FIXING SLEEVE OUT MAT		1	
9.8	TS06453015606	FIXING SLEEVE IN MAT		1	
9.9	TS06453015603	INSTALLATION SEAT 2		1	
10	Q69208	PLASTIC SPLIT PIN		2	
11	GBT923-M6-A1-50	NUT		12	
12	GBT6177.1-M6-8-A2L	HEXAGON FLANGE NUT		6	
13	TS06453015001	SEAL GASKET		18	
14	TS04453015200K	INNER TOP AIR CONDITION		1	
15	TS04453015320	LOWER WIND WAY		1	


TS04451050000K DRIVER' S CAB ASSEMBLY-7

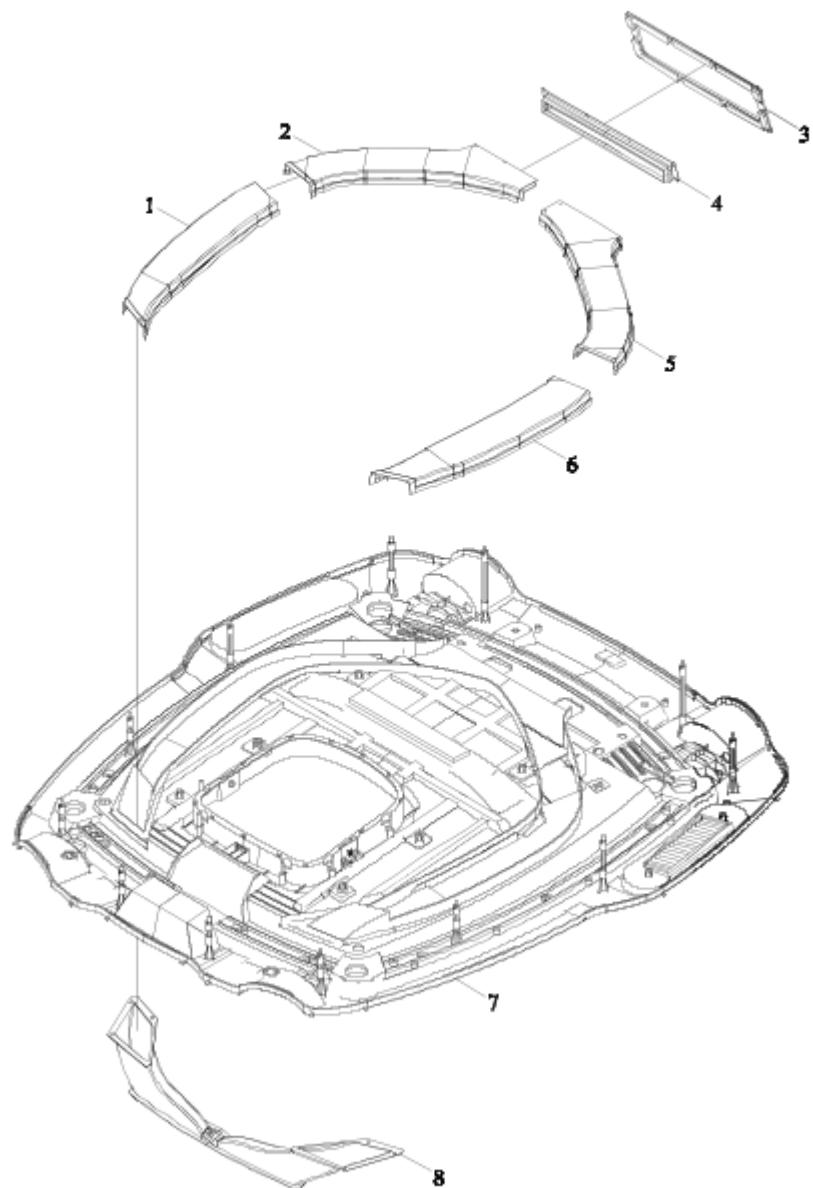

TS04451050000K DRIVER' S CAB ASSEMBLY-7

No.	Part No.	Description	Ver-sion	QTY.	Remark
	TS04451050000K	DRIVER'S CAB ASSEMBLY		1	
	TS04453015000K	TOP COVER ASSEMBLY		1	
	TS04453015200K	INNER TOP AIR CONDITION		1	
1	TS04453015314	DEFROST WIND PIPE RIGHT FRONT		1	
2	TS04453015315	DEFROST WIND PIPE RIGHT BACK		1	
3	TS06453015330	WIND WAY CONNECTING PLATE WELDMENT		1	
4	TS04453015316	DEFROST WIND WAY IN MOUTH		1	
5	TS04453015313	DEFROST WIND PIPE LEFT BACK		1	
6	TS04453015312	DEFROST WIND PIPE LEFT FRONT		1	
7	TS04453015201K	INNER TOP AIR CONDITION		1	
8	TS04453015311	DEFROST WIND WAY LOW		1	


TS04453010000 UPHOLSTERY ASSEMBLY-1

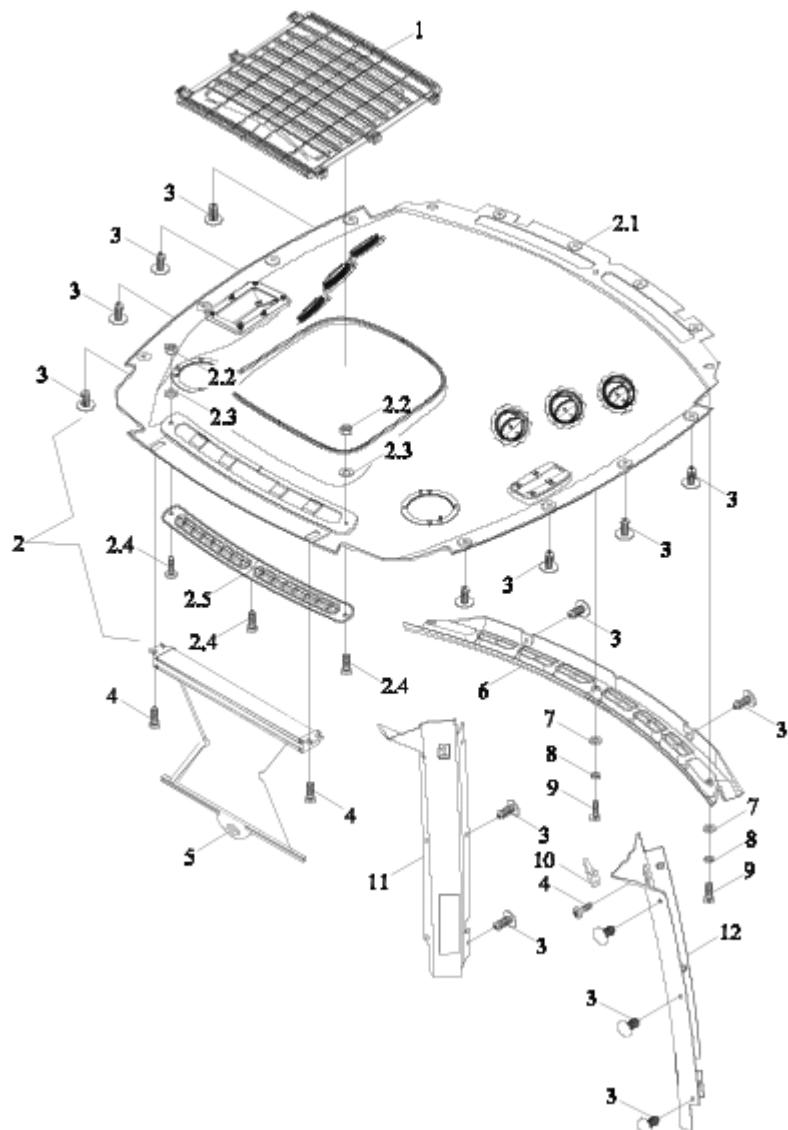

TS04453010000 UPHOLSTERY ASSEMBLY-1

No.	Part No.	Description	Ver-sion	QTY.	Remark
	TS04453010000	UPHOLSTERY ASSEMBLY		1	
1	TS04453017000	SUNSHADE BOARD ASSEMBLY		1	
2	TS04453011000	TOP UPHOLSTERY		1	
2.1	TS04453011001	TOP UPHOLSTERY		1	
2.2	GBT6170-M6-8-O	HEXAGON NUT, TYPE-1		2	
2.3	GBT97.1-6-O	FLAT WASHER		2	
2.4	GBT818-M6X16-4.8-O	CROSS SCREW		2	
2.5	TS04453011002	DEFROST WIND MOUTH		1	
3	Q69208	PLASTIC SPLIT PIN		30	
4	GBT818-M5X25-4.8	CROSS SCREW		8	
5	TF1004.451.5-01	SHADOW CURTAIN		1	
6	TS04453016000	WIND MOUTH		1	
7	GBT96.1-6-O	BIG WASHER		3	
8	GBT93-6-O	STANDARD SPRING WASHER		3	
9	GBT818-M6X20-4.8-O	CROSS SCREW		3	
10	TS06453010002	CLOTHCAPHOOK		2	
11	TS04453013400	LEFT HOUSING		1	
12	TS04453013500	RIGHT HOUSING		1	


TS04453010000 UPHOLSTERY ASSEMBLY-2

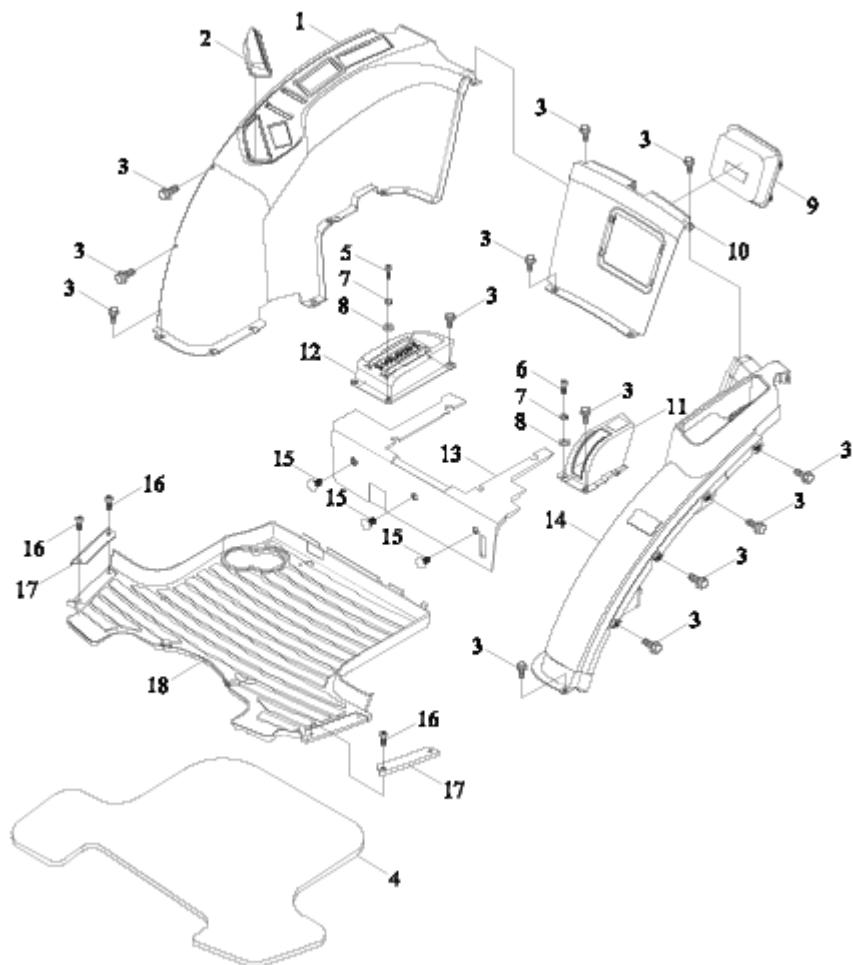

TS04453010000 UPHOLSTERY ASSEMBLY-2

No.	Part No.	Description	Ver-sion	QTY.	Remark
1	TS04453013100	LEFT REAR MUD GUARD DECORATION PART		1	
2	TS04453013600	WATCH BONNET		1	
3	GBT16674.1-M6X20-8.8-O	HEXAGON FLANGE NUT		28	
4	TS04453012200	FLOOR MAT PEDAL		1	
5	GBT818-M6X25-4.8-O	CROSS SCREW		1	
6	GBT818-M6X35-4.8-O	CROSS SCREW		1	
7	GBT93-6-O	STANDARD SPRING WASHER		2	
8	GBT96.1-6-O	BIG WASHER		2	
9	TS04453013900	COVER		1	
10	TS04453013300	INTO UPHOLSTERY		1	
11	TS04453013700	PARKING BRAKE BONNET		1	
12	TS04453013800	AUXILIARY CLUTCH BONNET		1	
13	TS04453012100	MIDDLE FLOOR MAT		1	
14	TS04453013200	RIGHT REAR MUD GUARD DECORATION PART		1	
15	Q69208	PLASTIC SPLIT PIN		2	
16	GBT819.2-M6X25-A2-70	CROSS SCREW		4	
17	TS06453014000	FLOOR MAT PRESSURE PLATE		2	
18	TS04453012000	FLOOR CUSHION		1	


TS04455010000 BACK REAR MUD GUARD DECORATION PART

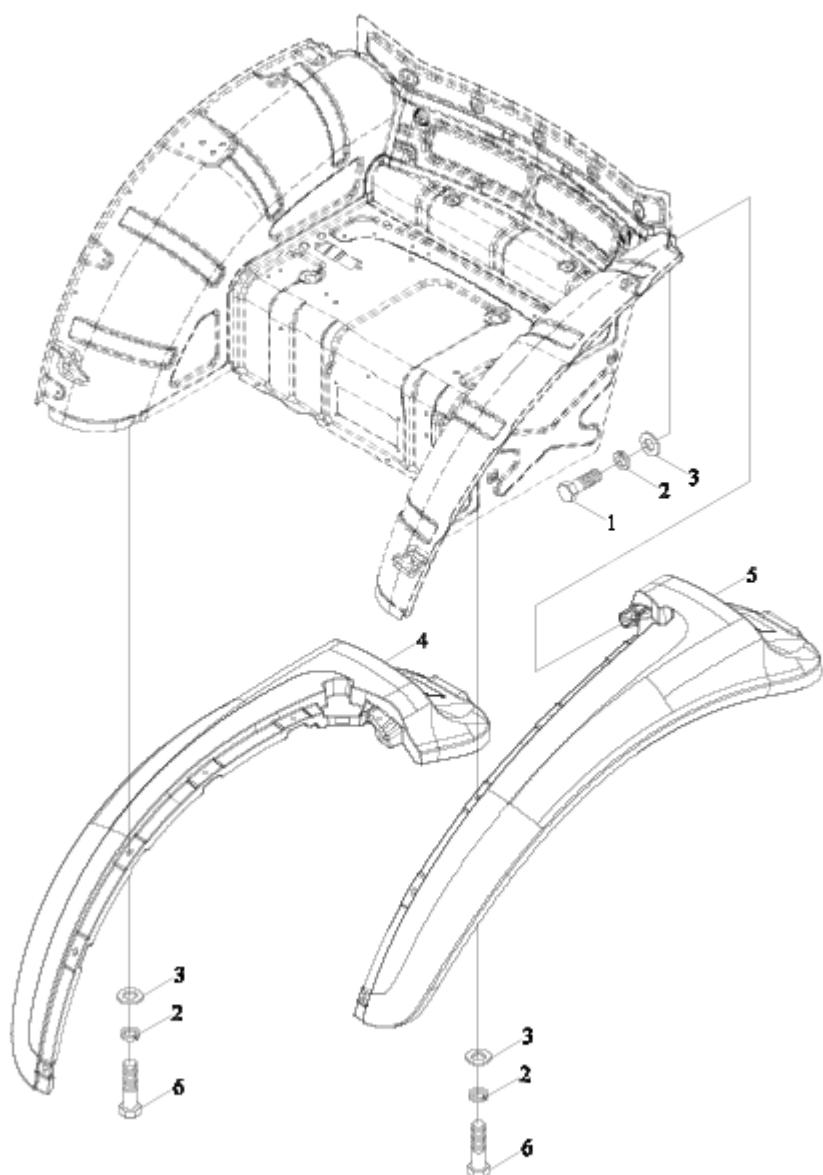

TS04455010000 BACK REAR MUD GUARD DECORATION PART

No.	Part No.	Description	Ver-sion	QTY.	Remark
	TS04455010000	BACK REAR MUD GUARD DECORATION PART		1	
1	GBT5783-M6X16-8.8-A2L	HEXAGON BOLT		2	
2	GBT93-6-O	STANDARD SPRING WASHER		14	
3	GBT96.1-6	BIG WASHER		14	
4	TS04455012000	RIGHT REAR MUD GUARD DECORATION PART		1	
5	TS04455011000	LEFT REAR MUD GUARD DECORATION PART		1	
6	GBT5783-M6X35-8.8-A2L	HEXAGON BOLT		12	


TS04456010000 DASHBOARD ASSEMBLY

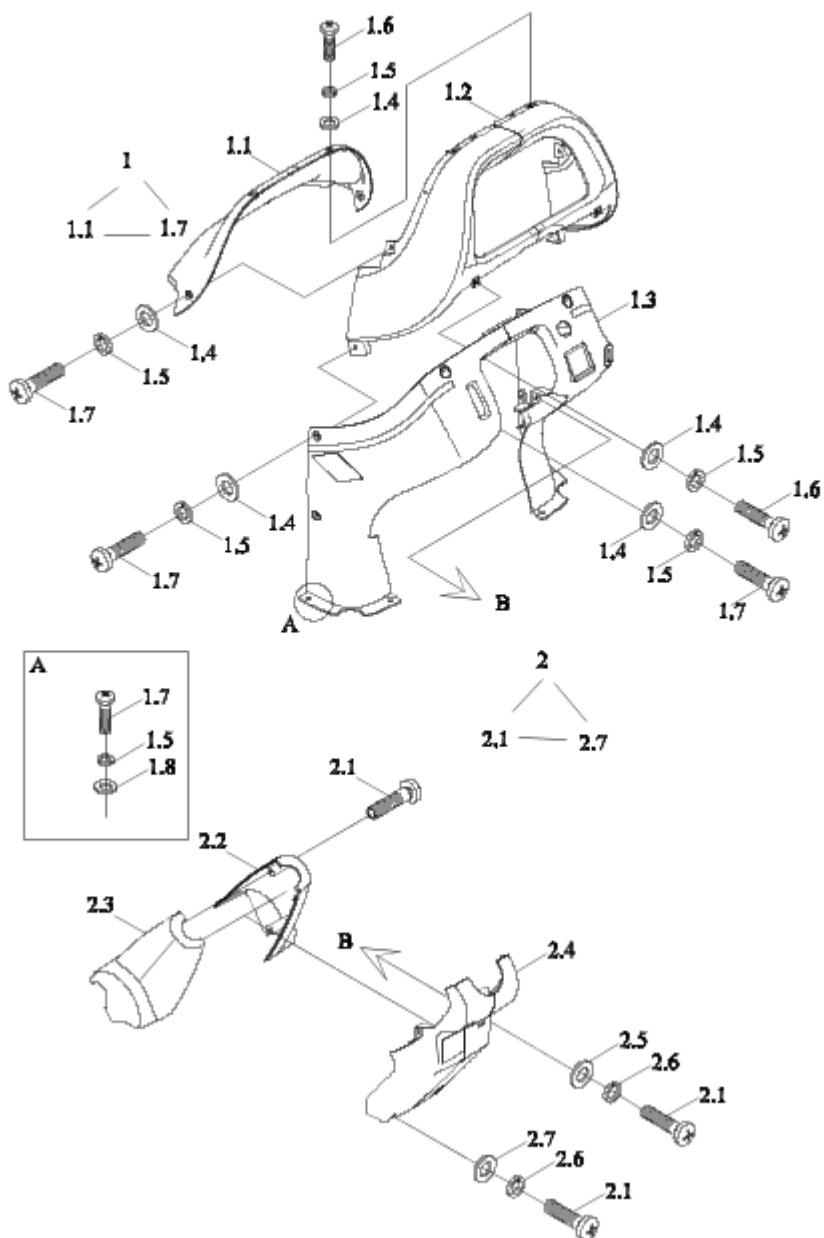

TS04456010000 DASHBOARD ASSEMBLY

No.	Part No.	Description	Ver-sion	QTY.	Remark
	TS04456010000	DASHBOARD ASSEMBLY		1	
1	TS04456010001	DASHBOARD BOX		1	
1.1	TS04456010002	UPPER COVER		1	
1.2	TS04456010003	DASHBOARD MIDDLE COVER		1	
1.3	TS04456010004	LOWER COVER		1	
1.4	GBT97.1-6-O	FLAT WASHER		9	
1.5	GBT93-6-O	STANDARD SPRING WASHER		13	
1.6	GBT845-ST4.8X16-O	SCREW		4	
1.7	GBT818-M6X20-4.8-O	CROSS SCREW		13	
1.8	GBT96.1-6-O	BIG WASHER		4	
2	TS04456010005	STEERING GEAR HOUSING		1	
2.1	GBT818-M6X16-4.8-O	CROSS SCREW		6	
2.2	TS06456010008	STEERING GEAR RIGHT COVER PLATE		1	
2.3	TS06456010007	STEERING GEAR LEFT COVER PLATE		1	
2.4	TS04456010006	STEERING GEAR LOW COVER PLATE		1	
2.5	GBT97.1-6-O	FLAT WASHER		2	
2.6	GBT93-6-O	STANDARD SPRING WASHER		4	
2.7	GBT96.1-6-O	BIG WASHER		2	


TS04457010000 FRONT CONNECTING ASSEMBLY

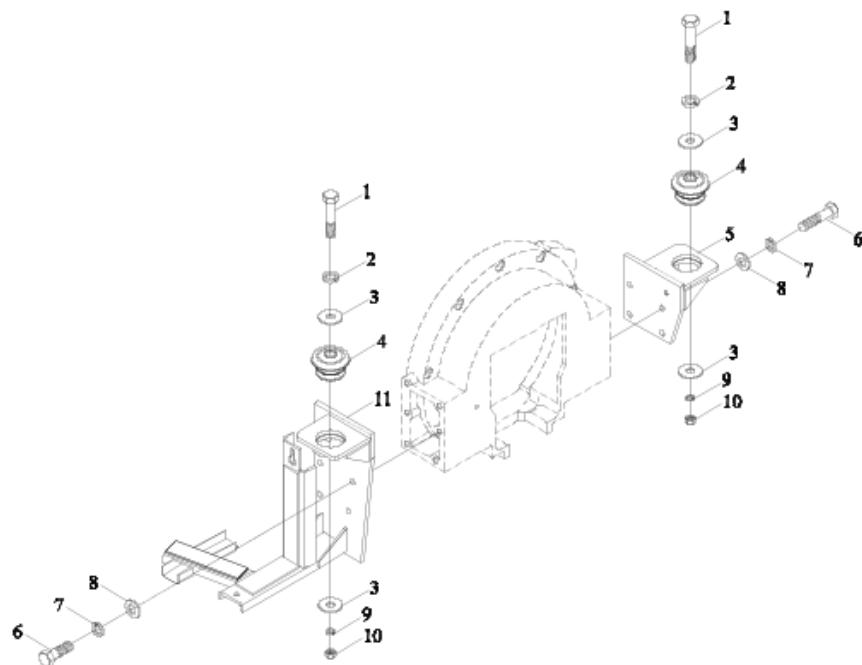

TS04457010000 FRONT CONNECTING ASSEMBLY

No.	Part No.	Description	Ver-sion	QTY.	Remark
	TS04457010000	FRONTCONNECTINGAS-SEMBLY		1	
1	GBT5783-M16X80-10.9-A3L	HEXAGON BOLT		2	
2	GBT96.1-16-A0P	BIG WASHER		2	
3	TB400.457B-02	RETAINER RING		4	
4	TB400.457B-01	SHOCK ABSORBER		2	
5	TS04457010004	RIGHT FRONT CONNECTION WELDMENT		1	
6	GBT5783-M12X35-10.9-A3L	HEXAGON BOLT		10	
7	GBT93-12-A0P	STANDARD SPRING WASHER		10	
8	GBT97.1-12-A0P	FLAT WASHER		10	
9	GBT93-16-A0P	STANDARD SPRING WASHER		2	
10	GBT6170-M16-10-A3L	HEXAGON NUT, TYPE-1		2	
11	TS04457010001	LEFT FRONT CONNECTION WELDMENT		1	


TS04458010000 REAR CONNECTING ASSEMBLY

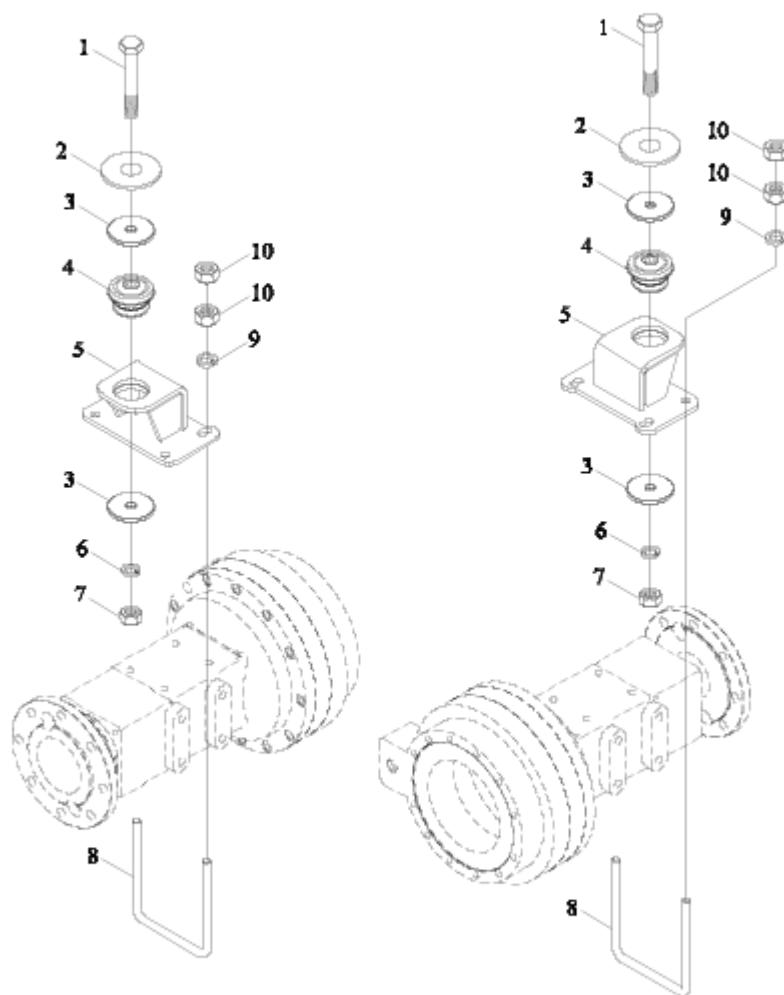

TS04458010000 REAR CONNECTING ASSEMBLY

No.	Part No.	Description	Ver-sion	QTY.	Remark
	TS04458010000	REARCONNECTINGAS-SEMBLY		1	
1	GBT5783-M16X90-10.9-A2L	HEXAGON BOLT		2	
2	GBT96.1-16-A0P	BIG WASHER		2	
3	TB400.457B-02	RETAINER RING		4	
4	TB400.457B-01	SHOCK ABSORBER		2	
5	TS04458010001	REAR CONNECTING WELDMENT		2	
6	GBT93-16-A0P	STANDARD SPRING WASHER		2	
7	GBT6170-M16-10-A3L	HEXAGON NUT, TYPE-1		2	
8	FT400.46.350	U-BOLT		4	
9	GBT97.1-14-A0P	FLAT WASHER		8	
10	GBT6170-M14-8-A3L	HEXAGON NUT, TYPE-1		16	


TS04459010000 INSULATION LAYER

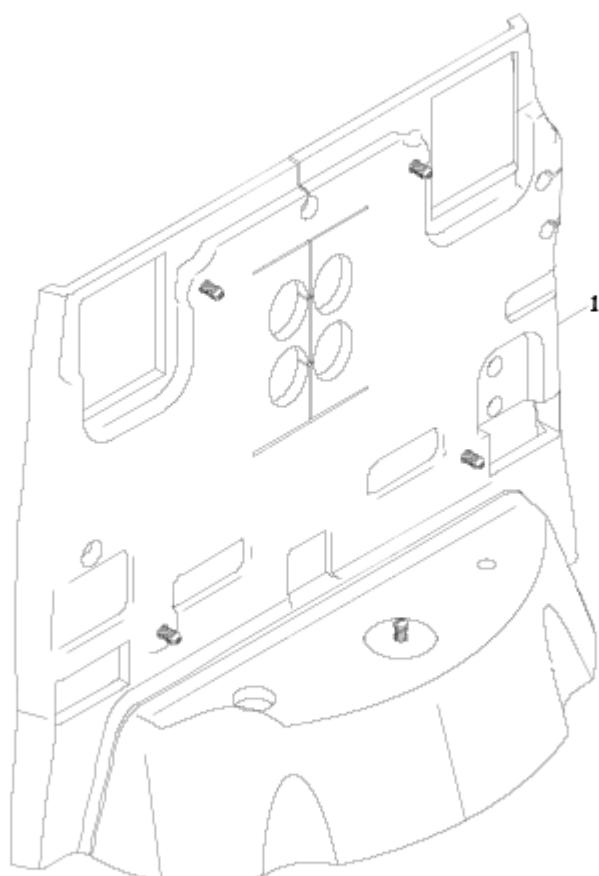

TS04459010000 INSULATION LAYER

No.	Part No.	Description	Ver-sion	QTY.	Remark
1	TS04459010000	INSULATION LAYER		1	
	TS04459010001	INSULATIONLAYER		1	


TS0447101000K BONNET ASSEMBLY-1

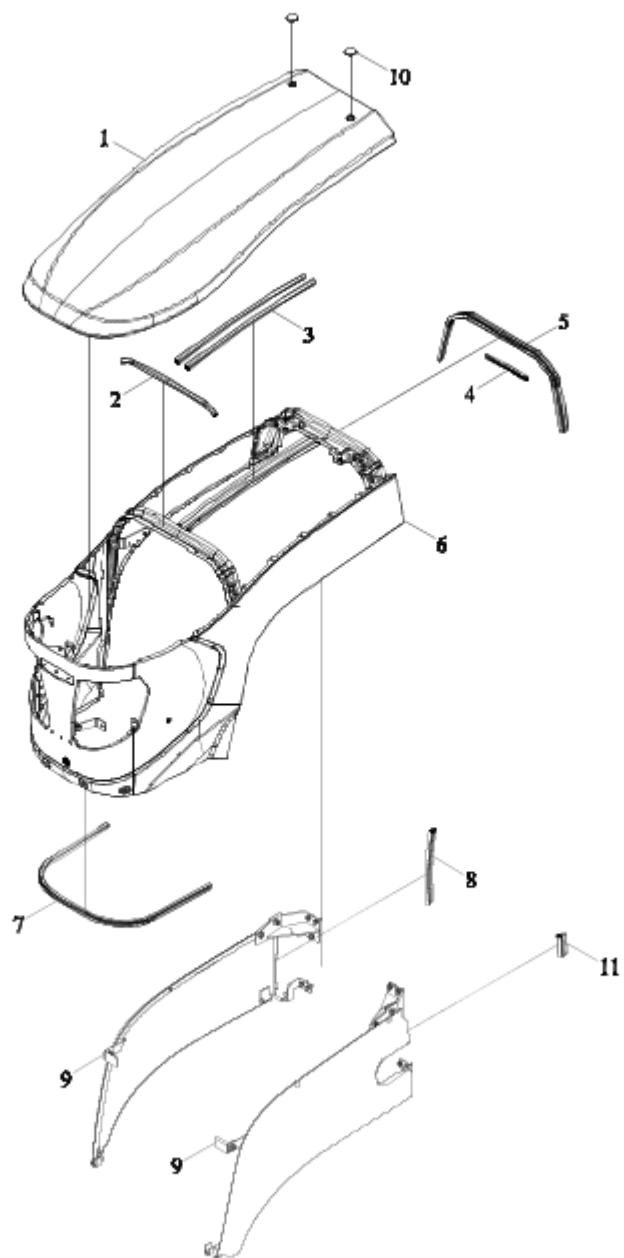

TS0447101000K BONNET ASSEMBLY-1

No.	Part No.	Description	Ver-sion	QTY.	Remark
	TS0447101000K	BONNET ASSEMBLY		1	
1	TS04471012001	BONNET UP COVER PLATE		1	
2	TS04471010007	FRONT SHOCK WASHER		1	
3	TS04471010004	MIDDLE SHOCK WASHER		2	
4	TS04471010008	BACK SHOCK RUBBER STRIP		1	
5	TS04471010001	BONNET REAR SEAL STRIP		1	
6	TS04471021000	BONNET WELDMENT ASSEMBLY		1	
7	TS04471010002	FRONT LOWER CUSHION RUBBER PIECE		1	
8	TS04471010009	SEAL STRIP		1	
9	TS04471014000K	LOWER SIDE PLATE		1	
10	TS06471010005	RUBBERPLUG		2	
11	TS04471010006K	LEFT BACK SEAL STRIP		1	


TS0447101000K BONNET ASSEMBLY-2

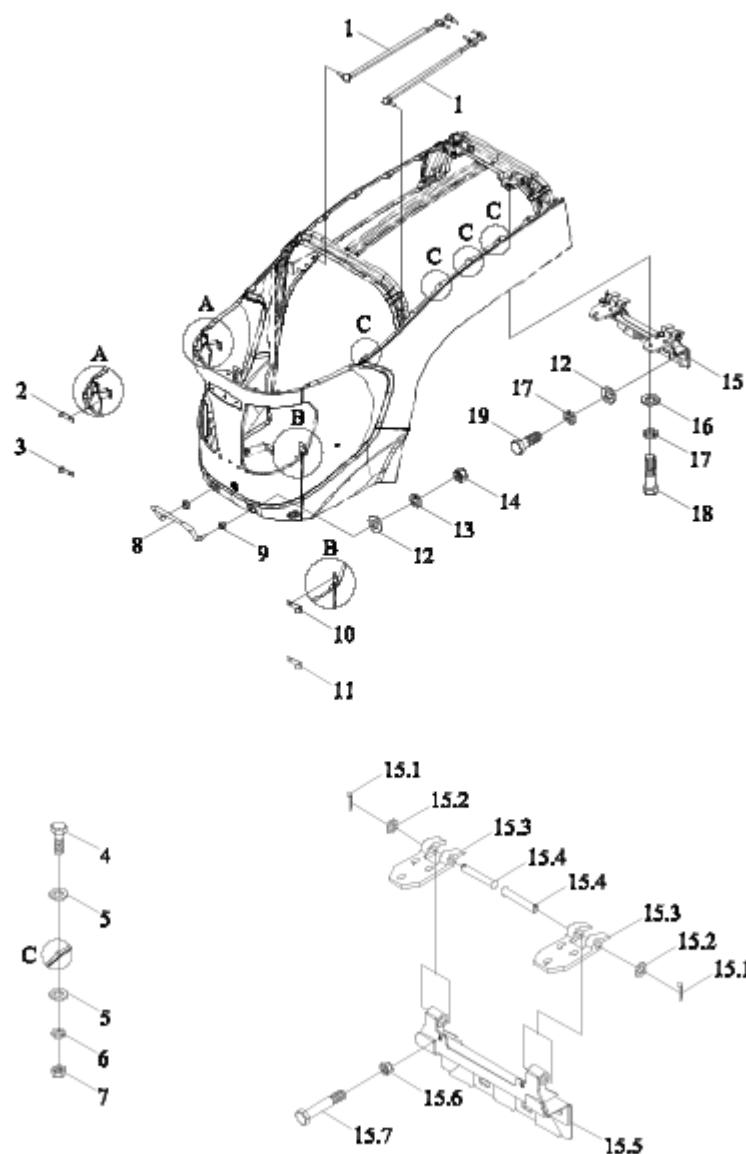

TS0447101000K BONNET ASSEMBLY-2

No.	Part No.	Description	Ver-sion	QTY.	Remark
	TS0447101000K	BONNET ASSEMBLY		1	
1	TS04471019000	BONNET PNEUMATIC SPRING ASSEMBLY		2	
2	TS04471012004	SUPPORT PLATE		1	
3	TS04471012005	SUPPORT PLATE		1	
4	GBT5783-M6X16-8.8-A2L	HEXAGON BOLT		18	
5	GBT97.1-6-A0P	FLAT WASHER		36	
6	GBT93-6-A0P	STANDARD SPRING WASHER		18	
7	GBT6170-M6-8-A2L	HEXAGON NUT, TYPE-1		18	
8	TS04471010003	HANDLE		1	
9	TD800.471A-05	WASHER		2	
10	TS04471012002	SUPPORT PLATE		1	
11	TS04471012003	SUPPORT PLATE		1	
12	GBT97.1-12-A0P	FLAT WASHER		5	
13	GBT93-12-A0P	STANDARD SPRING WASHER		5	
14	GBT6170-M12-8-A3L	HEXAGON NUT, TYPE-1		2	
15	TS04471013000	BONNET HINGE ASSEMBLY		1	
15.1	GBT91-5X32-A0P	SPLIT PIN		2	
15.2	GBT97.1-16-A0P	FLAT WASHER		2	
15.3	FT800B.47B.161	HINGE UPPER SEAT		2	
15.4	GBT882-B16X90-A0P	PIN SHAFT		2	
15.5	TS04471013001	BONNET LOW BRACKET WELDMENT		1	
15.6	GBT6170-M8-8-A2L	HEXAGON NUT, TYPE-1		2	
15.7	GBT5783-M8X50-8.8-A2L	HEXAGON BOLT		2	
16	GBT97.1-10-A0P	FLAT WASHER		6	
17	GBT93-10-A0P	STANDARD SPRING WASHER		6	
18	GBT5783-M10X35-8.8-A3L	HEXAGON BOLT		6	
19	GBT5783-M12X35-8.8-A3L	HEXAGON BOLT		3	


TS0447101000K BONNET ASSEMBLY-3

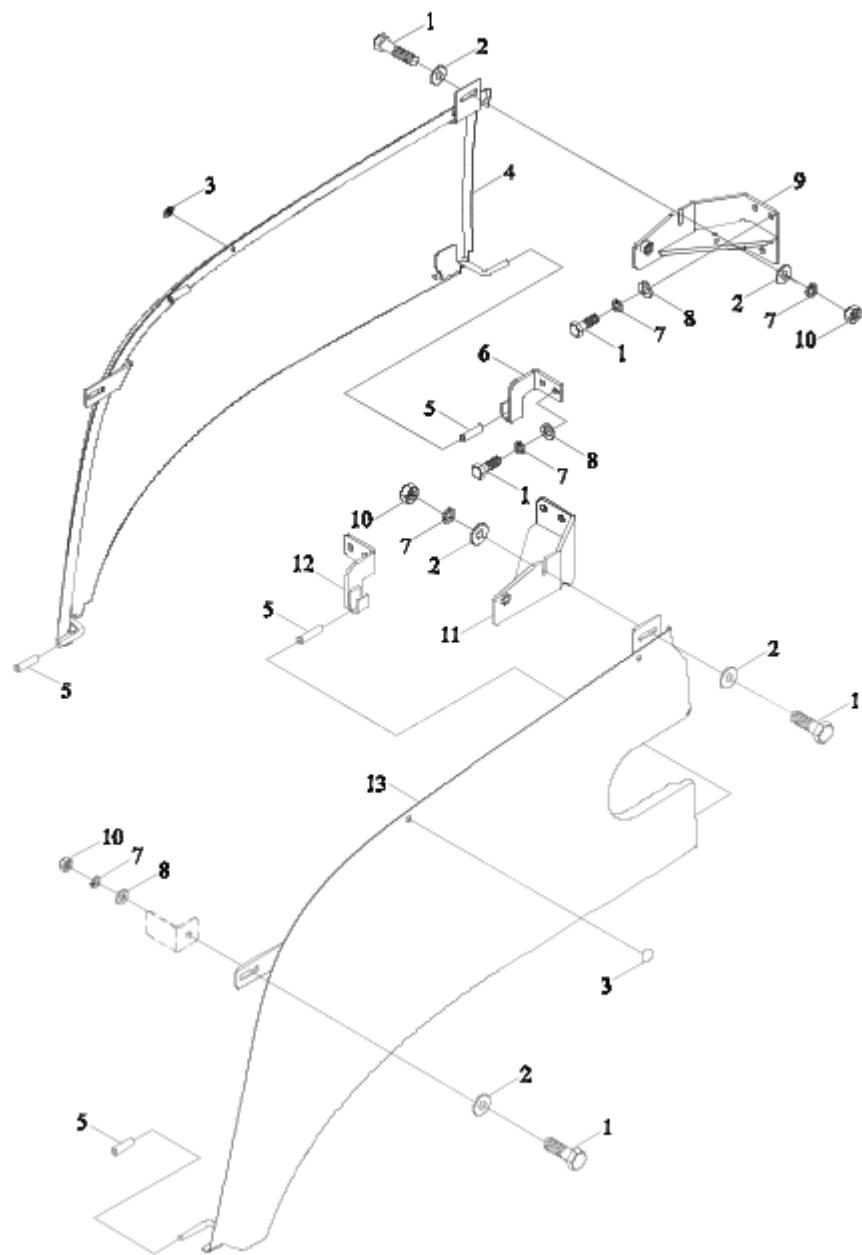

TS0447101000K BONNET ASSEMBLY-3

No.	Part No.	Description	Ver-sion	QTY.	Remark
	TS0447101000k	BONNET ASSEMBLY		1	
1	GBT5783-M8X25-8.8-A2L	HEXAGON BOLT		14	
2	GBT96.1-8-A0P	BIG WASHER		6	
3	TS06471014003	PROCESS PLUG COVER		4	
4	TS04471024200	SIDE PLATE RIGHT LOWER		1	
5	TS06471014002	GUM COVER		4	
6	TS04471014004	FIXING SEAT WELDMENT RIGHT BACK LOWER		1	
7	GBT97.1-8-A0P	FLAT WASHER		12	
8	GBT93-8-A0P	STANDARD SPRING WASHER		14	
9	TS04471014003	FIXING SEAT WELDMENT RIGHT BACK UP		1	
10	GBT6170-M8-8-A2L	HEXAGON NUT, TYPE-1		4	
11	TS04471014001	FIXING SEAT WELDMENT LEFT BACK UP		1	
12	TS04471014002	FIXING SEAT WELDMENT LEFT BACK LOWER		1	
13	TS04471014100K	SIDE PLATE LEFT LOWER		1	


TS04473010000 BONNET LOCKING DEVICE ASSEMBLY

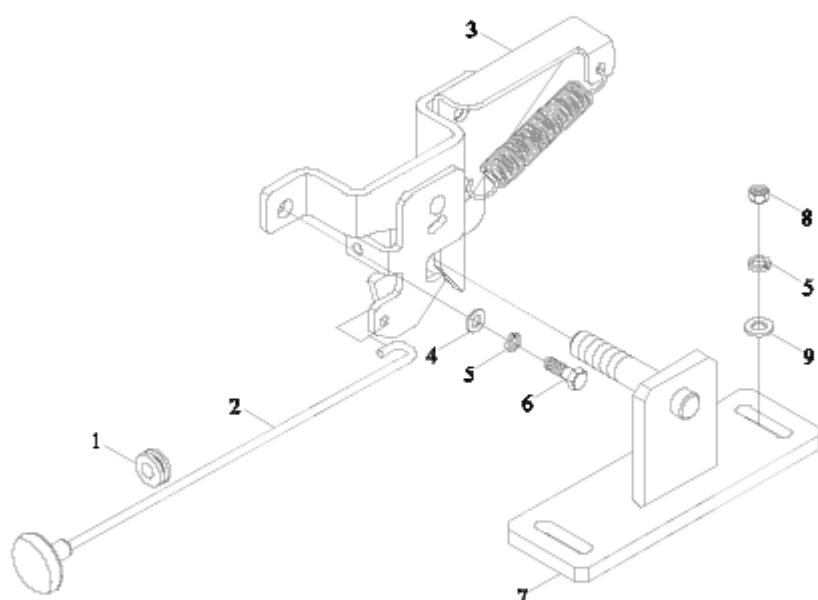

TS04473010000 BONNET LOCKING DEVICE ASSEMBLY

No.	Part No.	Description	Ver-sion	QTY.	Remark
	TS04473010000	BONNET LOCKING DEVICE ASSEMBLY		1	
1	TB450.473-02	RUBBER RING		1	
2	TS04473010006	PULL ROD		1	
3	TS06473010002	BONNET LOCK		1	
4	GBT97.1-8-A0P	FLAT WASHER		3	
5	GBT93-8-A0P	STANDARD SPRING WASHER		5	
6	GBT5783-M8X25-8.8-A2L	HEXAGON BOLT		3	
7	TS04473010001	BONNET LOCK COLUMN WELDMENT		1	
8	GBT6170-M8-8-A2L	HEXAGON NUT, TYPE-1		2	
9	GBT96.1-8-A0P	BIG WASHER		2	


TS0447501000K BONNET SEAL INSTALLATION ASSEMBLY

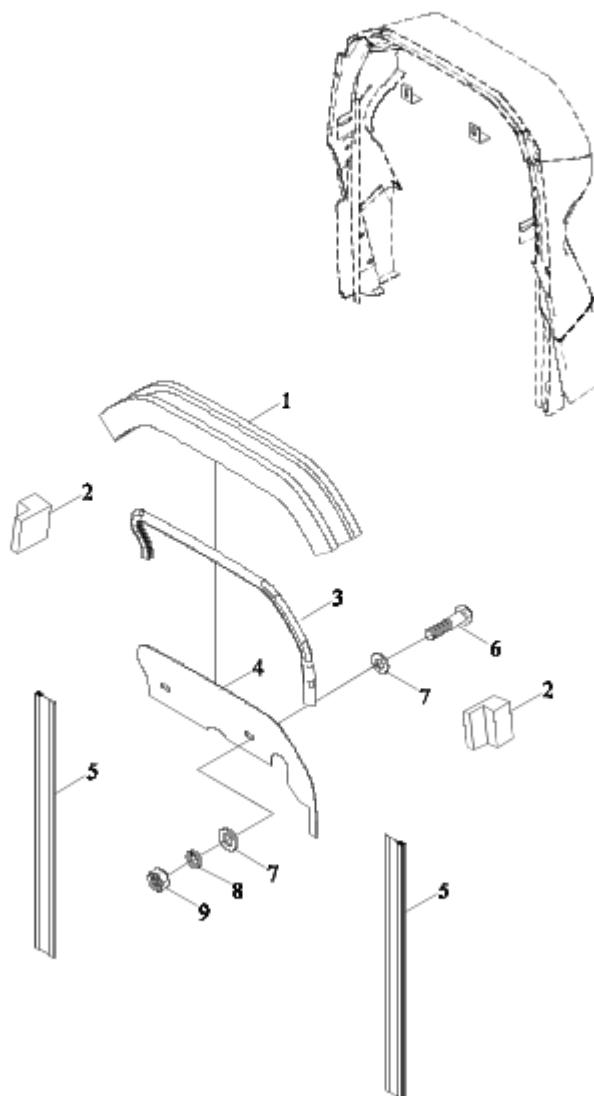

TS0447501000K BONNET SEAL INSTALLATION ASSEMBLY

No.	Part No.	Description	Ver-sion	QTY.	Remark
	TS0447501000K	BONNET SEAL INSTALLATION ASSEMBLY		1	
1	TS04475030002	UP SEAL COTTON		1	
2	TS04475030001	SEAL COTTON		2	
3	TS04475010004K	SEAL STRIP		1	
4	TS04475010003K	SEAL SPACER PLATE		1	
5	TS04475010005K	SEAL STRIP		2	
6	GBT5783-M8X25-8.8-A2L	HEXAGON BOLT		2	
7	GBT97.1-8-A0P	FLAT WASHER		4	
8	GBT93-8-A0P	STANDARD SPRING WASHER		2	
9	GBT6170-M8-8-A2L	HEXAGON NUT, TYPE-1		2	


TB400. 475A LEFT FRONT MUD GUARD ASSEMBLY

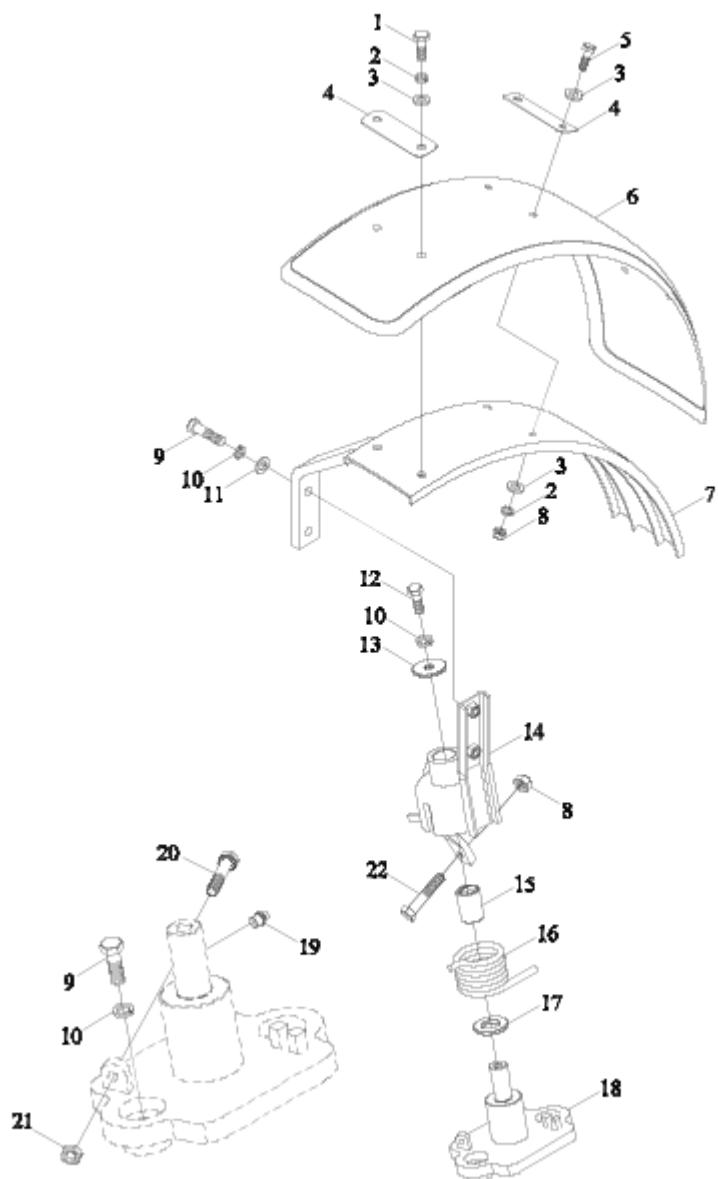

TB400. 475A LEFT FRONT MUD GUARD ASSEMBLY

No.	Part No.	Description	Ver-sion	QTY.	Remark
	TB400.475A	LEFT FRONT MUD GUARD ASSEMBLY		1	
1	GBT5783-M10X35-8.8-A3L	HEXAGON BOLT		2	
2	GBT93-10-A0P	STANDARD SPRING WASHER		6	
3	GBT97.1-10-A0P	FLAT WASHER		10	
4	TB400.475A-04	STRENGTHENPLATE		3	
5	GBT5783-M10X30-8.8-A3L	HEXAGON BOLT		4	
6	TB400.475A-03	LEFT FRONT MUD GUARD		1	
7	TB400.475A.2	UPPER BRACKET WELDMENT		1	
8	GBT6170-M10-8-A3L	HEXAGON NUT, TYPE-1		5	
9	GBT5783-M12X40-8.8-A3L	HEXAGON BOLT		4	
10	GBT93-12-A0P	STANDARD SPRING WASHER		5	
11	GBT97.1-12-A0P	FLAT WASHER		2	
12	GBT5783-M12X30-10.9-A3L	HEXAGON BOLT		1	
13	TB400.475-07	WASHER 2		1	
14	TB400.475A.3	LOWER BRACKET WELDMENT		1	
15	TB400.475A-01	BUSH		1	
16	TB400.475A-02	LEFT TORQUE SPRING		1	
17	TB400.475-06	WASHER		1	
18	TB400.475A.1	LEFT INSTALLATION PLATE WELDMENT		1	
19	JBT7940.1-M10X1	STRAIGHT FORCED FILL-ING OIL CUP		1	
20	GBT5783-M8X45-8.8-A2L	HEXAGON BOLT		1	
21	GBT6170-M8-8-A2L	HEXAGON NUT, TYPE-1		1	
22	GBT5783-M10X55-8.8-A2L	HEXAGON BOLT		1	


TB400. 476A RIGHT FRONT MUD GUARD ASSEMBLY

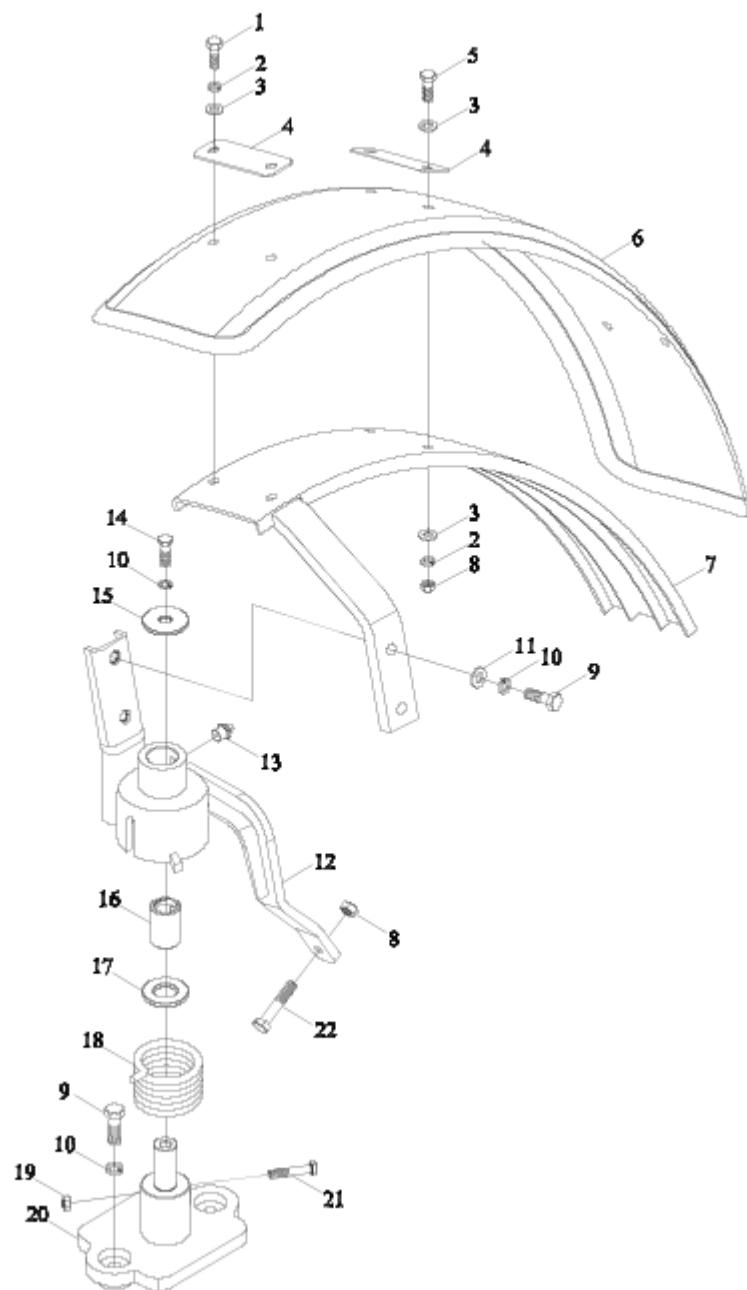

TB400. 476A RIGHT FRONT MUD GUARD ASSEMBLY

No.	Part No.	Description	Ver-sion	QTY.	Remark
	TB400.476A	RIGHT FRONT MUD GUARD ASSEMBLY		1	
1	GBT5783-M10X35-8.8-A3L	HEXAGON BOLT		2	
2	GBT93-10-A0P	STANDARD SPRING WASHER		6	
3	GBT97.1-10-A0P	FLAT WASHER		10	
4	TB400.475A-04	STRENGTHENPLATE		3	
5	GBT5783-M10X30-8.8-A3L	HEXAGON BOLT		4	
6	TB400.475A-03	LEFT FRONT MUD GUARD		1	
7	TB400.476A.2	UPPER BRACKET WELDMENT		1	
8	GBT6170-M10-8-A3L	HEXAGON NUT, TYPE-1		5	
9	GBT5783-M12X40-8.8-A3L	HEXAGON BOLT		4	
10	GBT93-12-A0P	STANDARD SPRING WASHER		5	
11	GBT97.1-12-A0P	FLAT WASHER		2	
12	TB400.476A.3	LOWER BRACKET WELDMENT		1	
13	JBT7940.1-M10X1	STRAIGHT-THROUGH TYPE PRESSURE LIVE OIL CUP		1	
14	GBT5783-M12X30-10.9-A3L	HEXAGON BOLT		1	
15	TB400.475-07	WASHER 2		1	
16	TB400.475A-01	BUSH		1	
17	TB400.475-06	WASHER		1	
18	TB400.476A-01	RIGHT TORSION SPRING		1	
19	GBT6170-M8-8-A2L	HEXAGON NUT, TYPE-1		1	
20	TB400.476A.1	RIGHT INSTALLATION PLATE WELDMENT		1	
21	GBT5783-M8X45-8.8-A2L	HEXAGON BOLT		1	
22	GBT5783-M10X55-8.8-A2L	HEXAGON BOLT		1	


TS04481040000K ENGINE HARNESS INSTALLATION ASSEMBLY

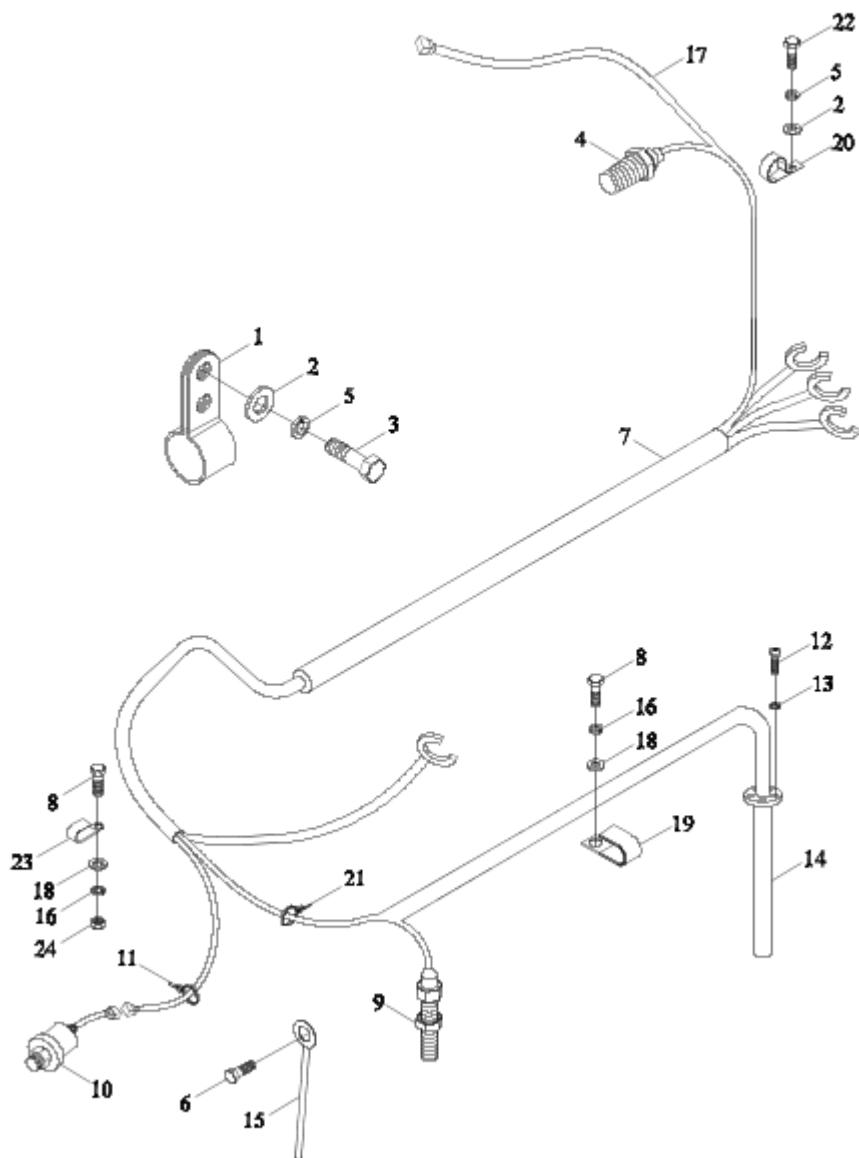

TS0448104000K ENGINE HARNESS INSTALLATION ASSEMBLY

No.	Part No.	Description	Ver-sion	QTY.	Remark
	TS0448104000K	ENGINE HARNESS INSTALLATION ASSEMBLY		1	
1	TF1204.481B-01	HARNESS TIGHTEN CLIP		2	
2	GBT97.1-10-A3L	FLAT WASHER		3	
3	GBT5783-M10X20-8.8-A3L	HEXAGON BOLT		2	
4	FT65.48.072	WATER TEMPERATURE SENSOR		1	
5	GBT93-10-A3L	STANDARD SPRING WASHER		3	
6	GBT5783-M8X16-8.8-A2L	HEXAGON BOLT		1	
7	TS04481040001K	ENGINE HARNESS ASSEMBLY		1	
8	GBT5783-M8X25-8.8-A2L	HEXAGON BOLT		2	
9	TS10481010002	RPM SENSOR		1	
10	FT65.48.073a	OIL PRESSURE ALARM		1	
11	Q67405100	PLASTIC FASTENING STRIP		1	
12	GBT818-M4X10-4.8-A2L	CROSS SCREW		5	
13	GBT93-4-A3L	STANDARD SPRING WASHER		5	
14	TS04481010002	OIL QUANTITY SENSOR ASSEMBLY		1	
15	TS04481010003	GROUNDING WIRE		1	
16	GBT93-8-A3L	STANDARD SPRING WASHER		4	
17	TS04481070002K	AIR CONDITION DESICCATOR HARNESS		1	
18	GBT97.1-8-A3L	FLAT WASHER		4	
19	TS06482010005	HARNESS TIGHTEN CLIP		2	
20	FT800A.48L.106	HARNESS CLAMP		1	
21	Q67405400	PLASTIC FASTENING STRIP		1	
22	GBT5783-M10X16-8.8-A3L	HEXAGON BOLT		1	
23	FT65.48.095	HARNESS TIGHTEN CLIP 01		2	
24	GBT6170-M8-8-A2L	HEXAGON NUT, TYPE-1		2	


TS04482090000K BODY HARNESS INSTALLATION ASSEMBLY

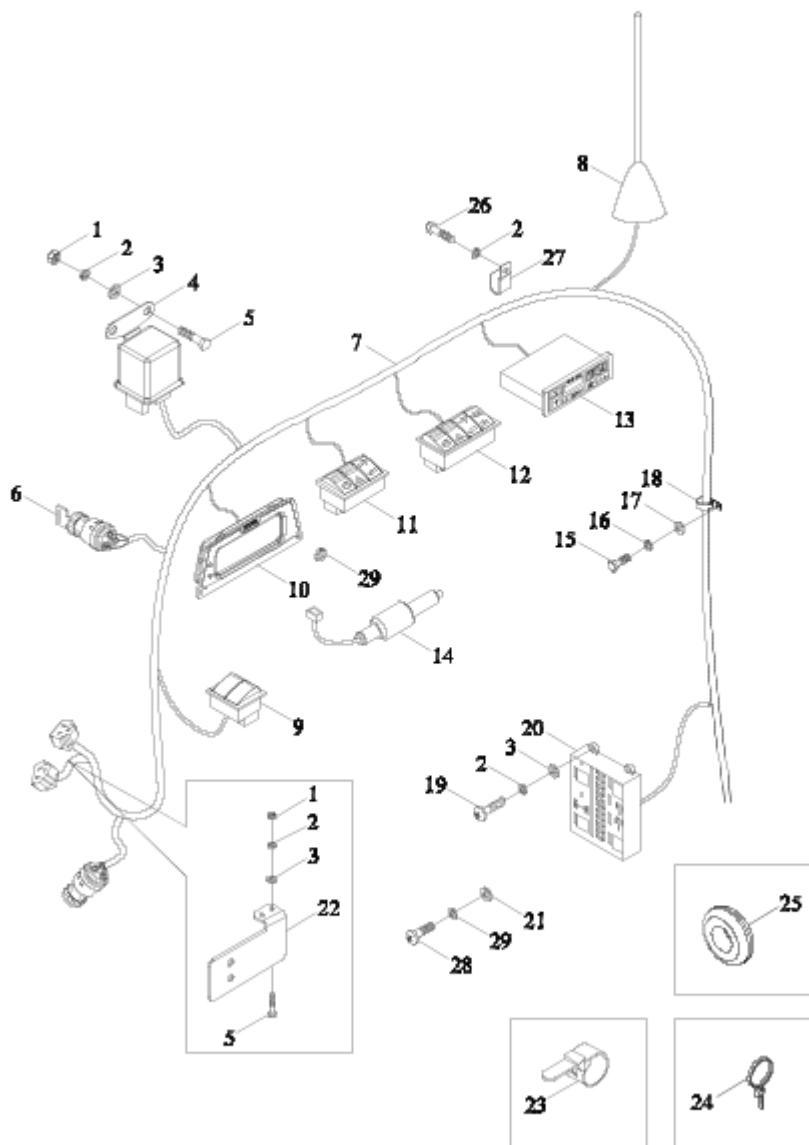

TS04482090000K BODY HARNESS INSTALLATION ASSEMBLY

No.	Part No.	Description	Ver-sion	QTY.	Remark
	TS04482090000K	BODY HARNESS INSTAL-LATION ASSEMBLY		1	
1	GBT6170-M6-8-A2L	HEXAGON NUT, TYPE-1		4	
2	GBT93-6-A3L	STANDARD SPRING WASHER		10	
3	GBT97.1-6-A3L	FLAT WASHER		8	
4	FT300.48.055	STARTING RELAY		1	
5	GBT5783-M6X20-8.8-A2L	HEXAGON BOLT		4	
6	TB550.482.3	IGNITION LOCK		1	
7	TS04482090001K	BODY HARNESS ASSEMBLY		1	
8	TS04482010002	ANTENNAWIRE		1	
9	TS04482010006	TWO GANG PADDLE SWITCH		1	
10	TS04482010004	WATCH		1	
11	TS04482010003	3-GANG PADDLE SWITCH		1	
12	TS04482090002K	FIVE ROCKER SWITCH		1	
13	TS04482010010	MP3 PLAYER		1	
14	TB550.484.2	BRAKE LIGHT SWITCH		2	
15	GBT5783-M8X25-8.8-A2L	HEXAGON BOLT		4	
16	GBT93-8-A3L	STANDARD SPRING WASHER		4	
17	GBT97.1-8-A3L	FLAT WASHER		4	
18	TS06482010005	HARNESS TIGHTEN CLIP		3	
19	GBT818-M6X20-4.8-A2L	CROSS SCREW		4	
20	TS04482050002K	CENTRAL ELECTRICAL BOX ASSEMBLY		1	
21	GBT97.1-3-A3L	FLAT WASHER		4	
22	TS04482010011	FIXING PLATE WELDMENT		1	
23	3203505D9-L	TIE		17	
24	Q67405200	PLASTIC FASTENING STRIP		4	
25	TS04482010008	RUBBER RING		1	
26	GBT5783-M6X12-8.8-A2L	HEXAGON BOLT		2	
27	FT65.48.095	HARNESS FIXING CLAMP		2	
28	GBT818-M3X10-4.8-A2L	CROSS SCREW		4	
29	GBT93-3-A3L	STANDARD SPRING WASHER		4	


TS04483020000K FRONT LAMP HARNESS INSTALLATION ASSEMBLY

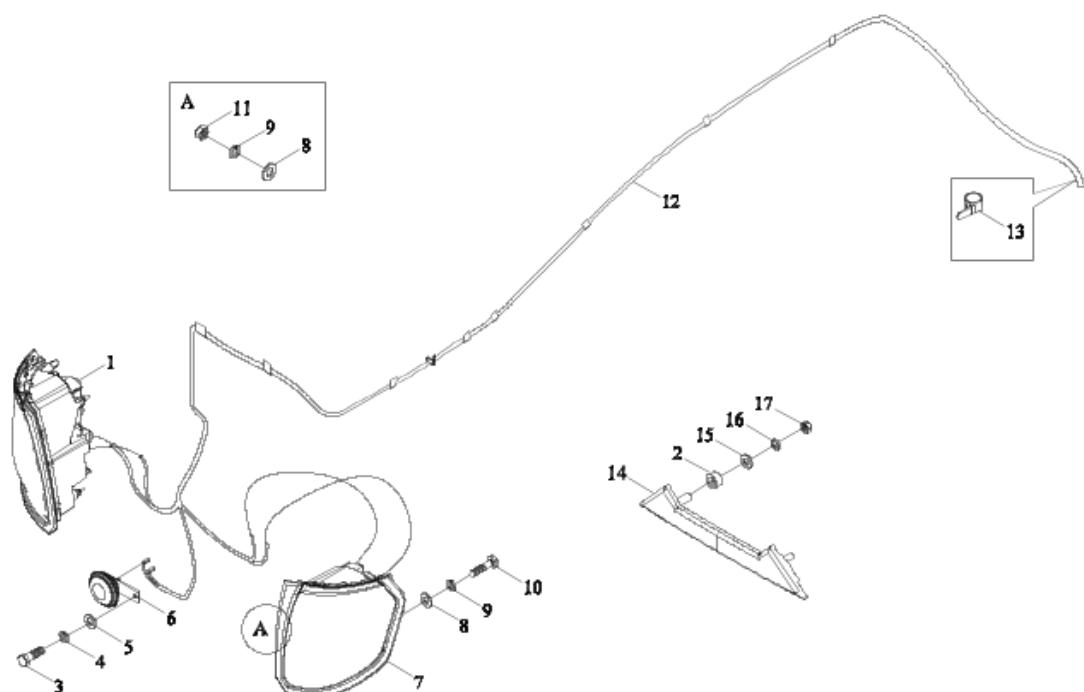

TS0448302000K FRONT LAMP HARNESS INSTALLATION ASSEMBLY

No.	Part No.	Description	Ver-sion	QTY.	Remark
	TS0448302000K	FRONT LAMP HARNESS INSTALLATION ASSEMBLY		1	
1	TS04483010004	RIGHT FRONT BIG LAMP ASSEMBLY		1	
2	TS04483010007	WASHER		2	
3	GBT5783-M8X25-8.8-A2L	HEXAGON BOLT		1	
4	GBT93-8-A0P	STANDARD SPRING WASHER		1	
5	GBT97.1-8-A0P	FLAT WASHER		1	
6	TD800.483B.3	ELECTRIC HORN		1	
7	TS04483010003	LEFT FRONT BIG LAMP ASSEMBLY		1	
8	GBT97.1-6-A0P	FLAT WASHER		8	
9	GBT93-6-A0P	STANDARD SPRING WASHER		8	
10	GBT818-M6X20-4.8-A2L	CROSS SCREW		4	
11	GBT6170-M6-8-A2L	HEXAGON NUT, TYPE-1		4	
12	TS04483010001	FRONT LAMP HARNESS ASSEMBLY		1	
13	FT65.48.095	HARNESS FIXING CLAMP		7	
14	TS04483010005	ADORNING STRIP		1	
15	GBT97.1-5-A0P	FLAT WASHER		2	
16	GBT93-5-A0P	STANDARD SPRING WASHER		2	
17	GBT6170-M5-8-A2L	HEXAGON NUT, TYPE-1		2	

TS04484080000K REAR LAMP HARNESS INSTALLATION ASSEMBLY

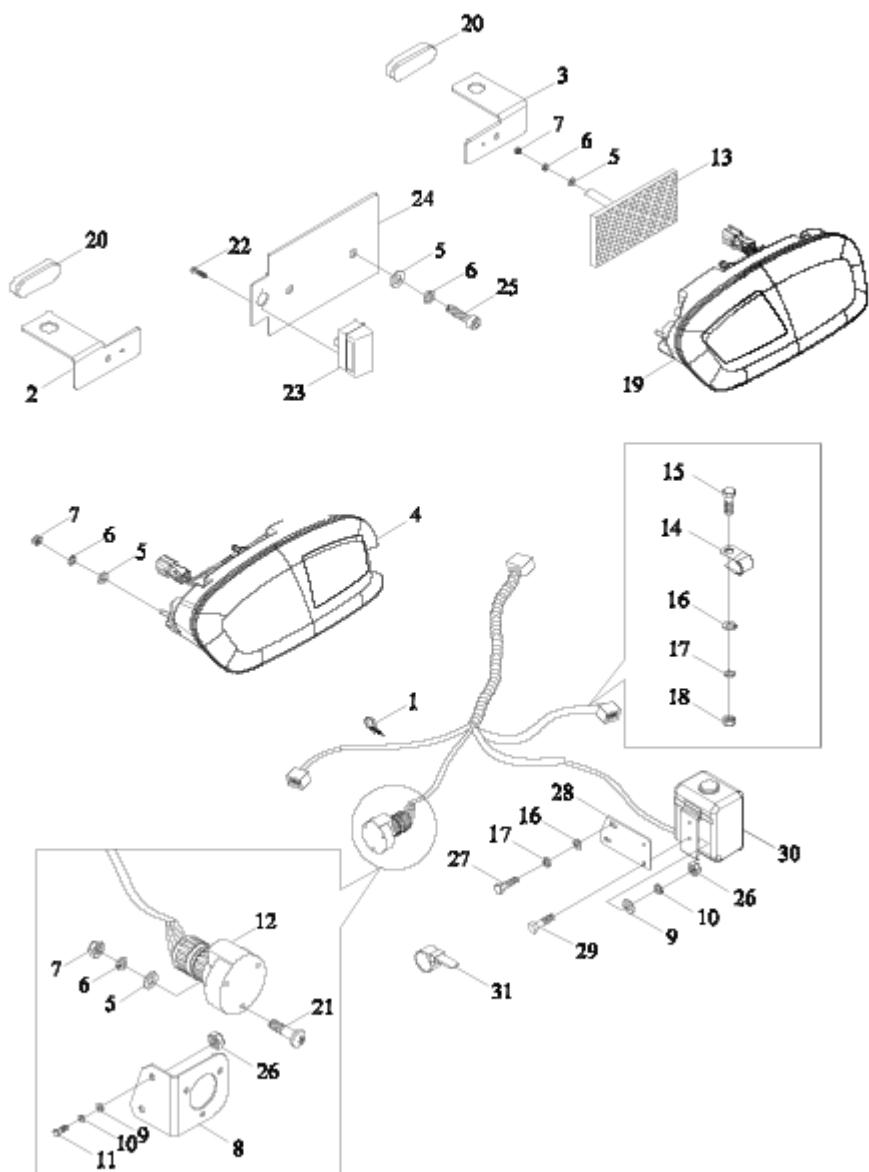


TS04484080000K REAR LAMP HARNESS INSTALLATION ASSEMBLY

No.	Part No.	Description	Ver-sion	QTY.	Remark
	TS04484080000K	REAR LAMP HARNESS INSTALLATION ASSEMBLY		1	
1	Q67405100	PLASTIC FASTENING STRIP		1	
2	TD800.484B-01	REFLECTOR INSTALLATION PLATE		1	
3	TD800.484B-02	REFLECTOR INSTALLATION PLATE		1	
4	TS06484020001K	LEFT TAIL LAMP ASSEMBLY		1	
5	GBT97.1-5-A3L	FLAT WASHER		7	
6	GBT93-5-A3L	STANDARD SPRING WASHER		7	
7	GBT6170-M5-8-A2L	HEXAGON NUT, TYPE-1		7	
8	TS04484010004	TRAILER SOCKET INSTALLATION PLATE		1	
9	GBT97.1-6-A3L	FLAT WASHER		6	
10	GBT93-6-A3L	STANDARD SPRING WASHER		6	
11	GBT5783-M6X45-8.8-A2L	HEXAGON BOLT		2	
12	TD900.484.2	REAR TRAILER SOCKET		1	
13	TD800.484B.5	REFLECTOR ASSEMBLY		2	
14	FT65.48.095	HARNESS FIXING CLAMP		3	
15	GBT5783-M8X20-8.8-A2L	HEXAGON BOLT		2	
16	GBT97.1-8-A3L	FLAT WASHER		4	
17	GBT93-8-A3L	STANDARD SPRING WASHER		4	
18	GBT6170-M8-8-A2L	HEXAGON NUT, TYPE-1		4	
19	TS06484020002K	RIGHT TAIL LAMP		1	
20	TS06484020003K	REFLECTOR		2	
21	GBT819.1-M5X35-4.8-A1L	CROSS SCREW		3	
22	GBT845-ST3.5X16	SCREW		2	
23	TA700.484A.2.1	LICENSELAMP		1	
24	TB500.484A.1	INSTALLATION PLATE		1	
25	GBT70.1-M6X12-8.8-A2L	INNER HEXAGON SCREW		2	
26	GBT6170-M6-8-A2L	HEXAGON NUT, TYPE-1		4	
27	GBT5783-M8X45-8.8-A2L	HEXAGON BOLT		2	
28	TS04484080001K	INSTALLATION PLATE		1	

TS04484080000K REAR LAMP HARNESS INSTALLATION ASSEMBLY (cont'd.)

No.	Part No.	Description	Ver-sion	QTY.	Remark
29	GBT5783-M6X20-8.8-A2L	HEXAGON BOLT		2	
30	TS04484080002K	SYRINGE ASSEMBLY		1	
31	3203505D9-L	TIE		1	


TS04485010000 BATTERY INSTALLATION ASSEMBLY

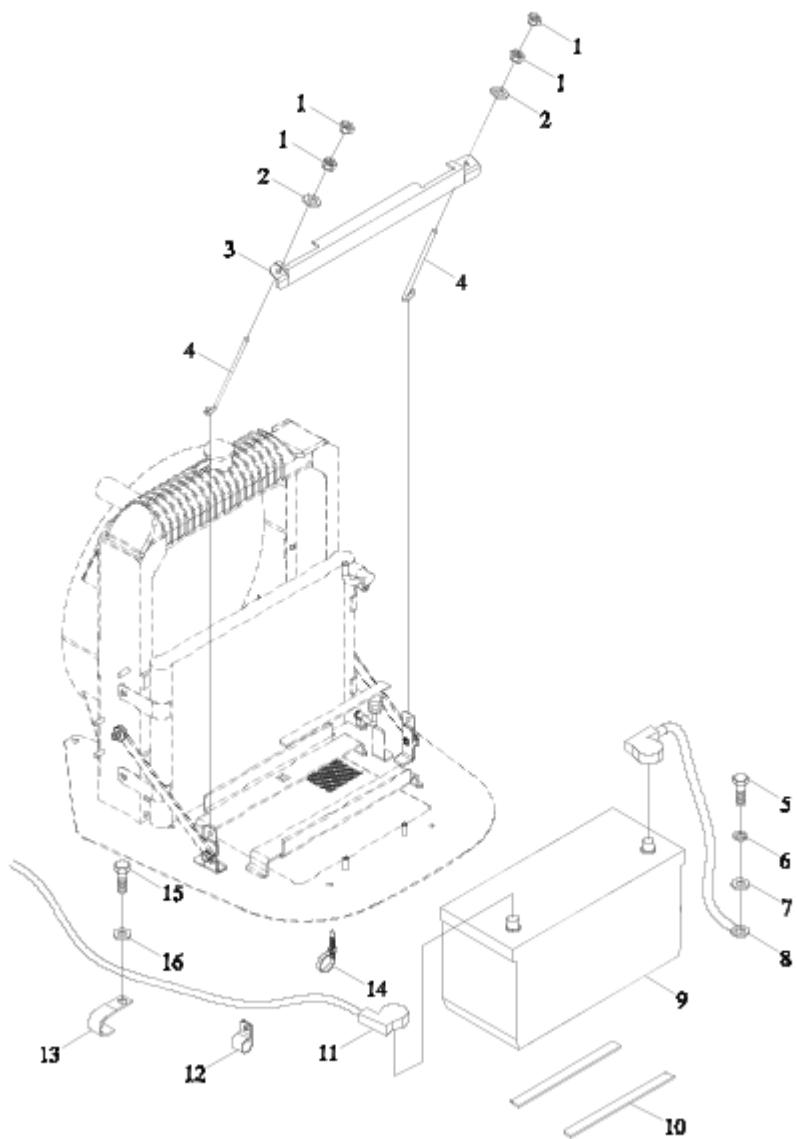

TS04485010000 BATTERY INSTALLATION ASSEMBLY

No.	Part No.	Description	Ver-sion	QTY.	Remark
	TS04485010000	BATTERY INSTALLATION ASSEMBLY		1	
1	GBT6170-M6-8-A2L	HEXAGON NUT, TYPE-1		4	
2	GBT97.1-6-A0P	FLAT WASHER		2	
3	TS04485010004	PRESSURE PLATE WELDMENT		1	
4	TS04485010002	PULL ROD		2	
5	GBT5783-M8X25-8.8-A2L	HEXAGON BOLT		1	
6	GBT93-8-A0P	STANDARD SPRING WASHER		1	
7	GBT97.1-8-A0P	FLAT WASHER		1	
8	TB400.485A.2	BATTERY GROUNDING WIRE		1	
9	FT450.48.010	MAINTENANCE-FREE LEAD ACID BATTERY		1	
10	TB450.485.1	BATTERY SHOCK ABSORPTION MAT		2	
11	TB400.485A.1	POWER WIRE ASSEMBLY		1	
12	TS04481010006	HARNESS TIGHTEN CLIP		1	
13	FT65.48.097	HARNESS FIXING CLAMP-2		1	
14	Q67405100	PLASTIC FASTENING STRIP		1	
15	GBT5783-M8X16-8.8-A2L	HEXAGON BOLT		1	
16	TS04485010007	WASHER		1	

TS0448601000K TOP LIGHT HARNESS INSTALLATION ASSEMBLY

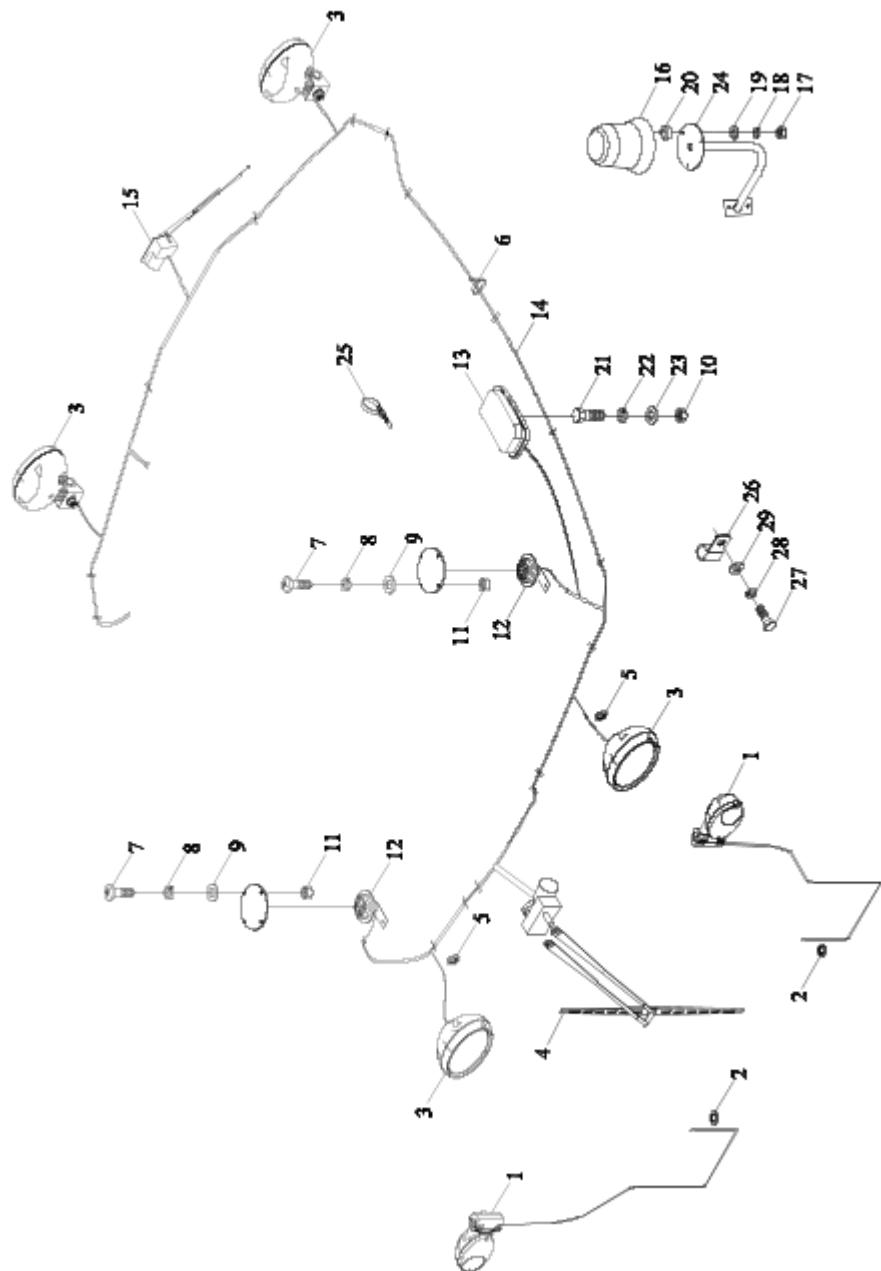


TS0448601000K TOP LIGHT HARNESS INSTALLATION ASSEMBLY

No.	Part No.	Description	Ver-sion	QTY.	Remark
	TS0448601000K	TOP LIGHT HARNESS IN-STALLATION ASSEMBLY		1	
1	TS06486010004	RIGHT ARMREST LIGHT ASSEMBLY		2	
2	TS04486010002	RUBBER RING		2	
3	TS06486010003	TOP LIGHT ASSEMBLY		4	
4	TS06486010005	FRONT SCRAPER ASSEMBLY		1	
5	FT65.48.093	THROUGH HARNESS WASHER-1		4	
6	3203505D9-L	TIE		10	
7	GBT818-M4X16-4.8-A2L	CROSS SCREW		8	
8	GBT93-4-A0P	STANDARD SPRING WASHER		8	
9	GBT97.1-4-A0P	FLAT WASHER		8	
10	GBT6170-M6-8-A2L	HEXAGON NUT, TYPE-1		12	
11	GBT6170-M4-8-A2L	HEXAGON NUT, TYPE-1		8	
12	TS04486010003	LOUDHAILER ASSEMBLY		2	
13	TS06486010006	INNER TOP LIGHT ASSEMBLY		1	
14	TS04486010001K	TOP LIGHT HARNESS ASSEMBLY		1	
15	TS06486010008	REAR SCRAPER ASSEMBLY		1	
16	TS04486010002K	ROTATING ALARM LIGHT ASSEMBLY		1	
17	GBT6170-M5-8-A2L	HEXAGON NUT, TYPE-1		3	
18	GBT93-5-A0P	STANDARD SPRING WASHER		3	
19	GBT96.1-5-A0P	BIG WASHER		3	
20	TG1204.486-01	RUBBER WASHER		3	
21	GBT5783-M6X16-8.8-A2L	HEXAGON BOLT		4	
22	GBT93-6-A0P	STANDARD SPRING WASHER		12	
23	GBT97.1-6-A0P	FLAT WASHER		4	
24	TS04486010003K	ALARM LIGHT BRACKET WELDMENT		1	
25	Q67405100	PLASTIC FASTENING STRIP		2	

TS04486010000K TOP LIGHT HARNESS INSTALLATION ASSEMBLY (cont'd.)

No.	Part No.	Description	Ver-sion	QTY.	Remark
26	TS04481010006	HARNESS TIGHTEN CLIP		4	
27	GBT5783-M8X25-8.8-A2L	HEXAGON BOLT		4	
28	GBT93-8-A0P	STANDARD SPRING WASHER		4	
29	GBT97.1-8-A0P	FLAT WASHER		4	


TS04487010000 COMBINED INSTRUMENT ASSEMBLY

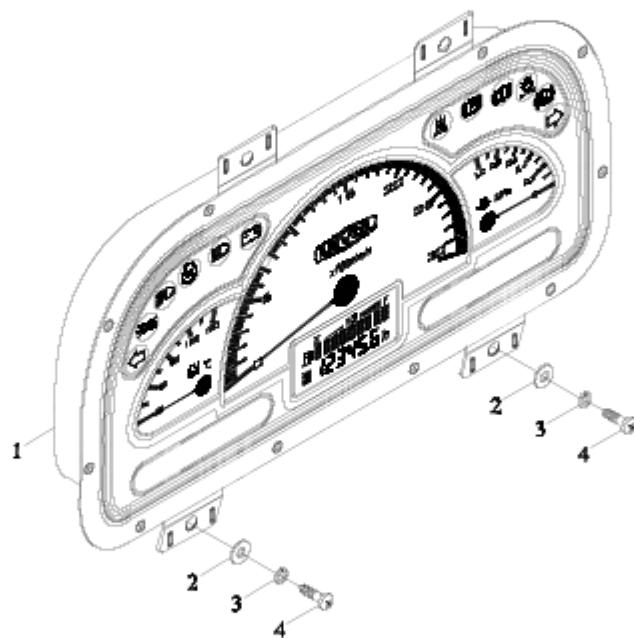

TS04487010000 COMBINED INSTRUMENT ASSEMBLY

No.	Part No.	Description	Ver-sion	QTY.	Remark
	TS04487010000	COMBINED INSTRUMENT ASSEMBLY		1	
1	TS04487010001	COMBINED INSTRUMENT ASSEMBLY		1	
2	GBT96.1-6-A0P	BIG WASHER		4	
3	GBT93-6-A0P	STANDARD SPRING WASHER		4	
4	GBT818-M6X16-4.8-A2L	CROSS SCREW		4	


TB550. 489 PREHEATING EQUIPMENT ASSEMBLY

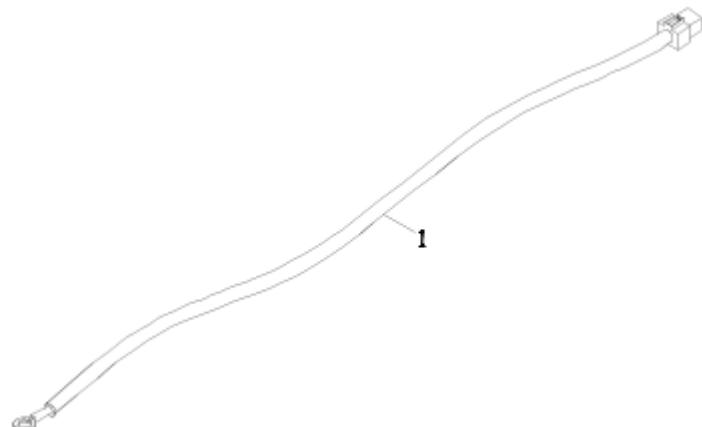

TB550.489 PREHEATING EQUIPMENT ASSEMBLY

No.	Part No.	Description	Ver-sion	QTY.	Remark
	TB550.489	PREHEATING EQUIPMENT ASSEMBLY		1	
1	TB550.489.1	PREHEATING LINE		1	


TS04490010000 TOOL BOX ASSEMBLY

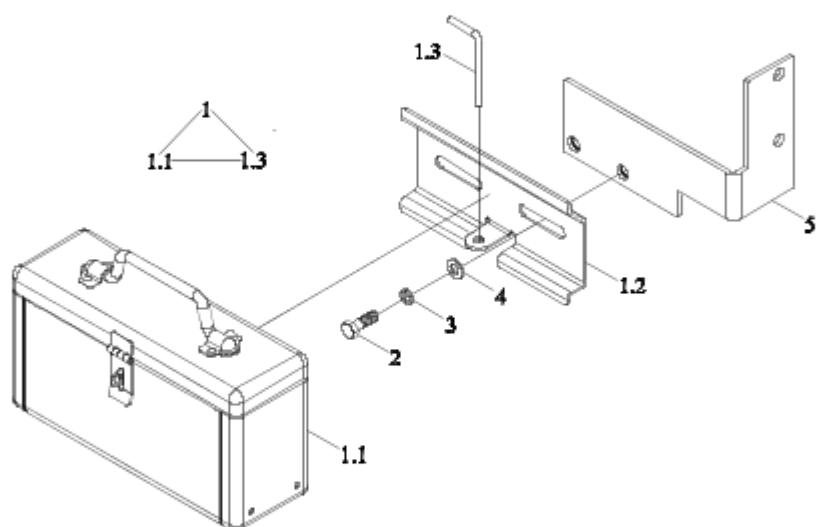

TS04490010000 TOOL BOX ASSEMBLY

No.	Part No.	Description	Ver-sion	QTY.	Remark
	TS04490010000	TOOL BOX ASSEMBLY		1	
1	TB400.49.1	TOOL ASSEMBLY		1	
1.1	TB400.49.1.1	TOOL ASSEMBLY		1	
1.2	FT65.49.103	FIXED PLATE		1	
1.3	FT65.49.102	CROSS PIN		1	
2	GBT5783-M12X25-8.8-A3L	HEXAGON BOLT		2	
3	GBT93-12-A0P	STANDARD SPRING WASHER		2	
4	GBT97.1-12-A0P	FLAT WASHER		2	
5	TS04490010003	BRACKET		1	


TS04501010000 OIL TANK INSTALLATION ASSEMBLY-1

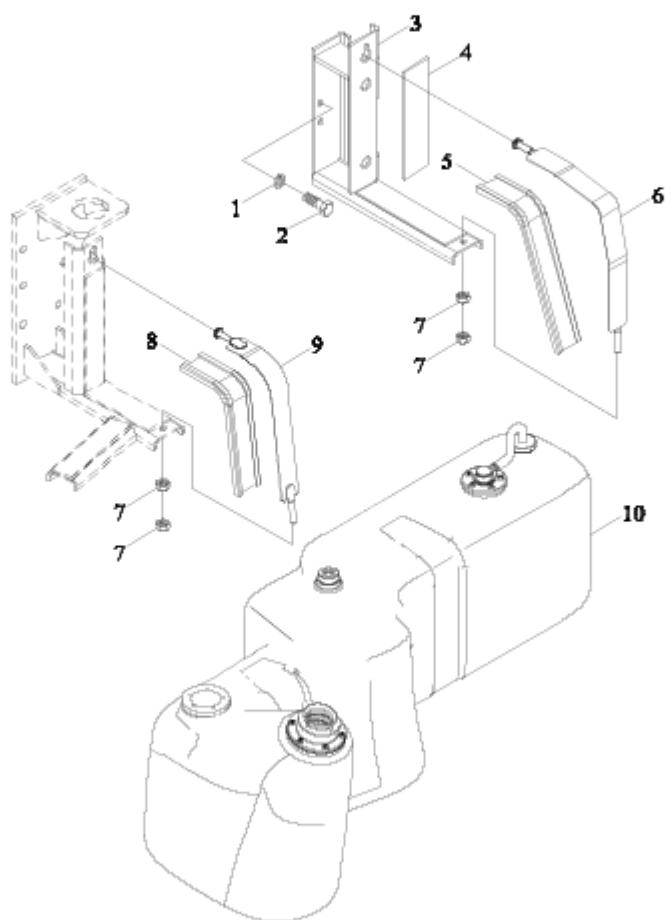

TS04501010000 OIL TANK INSTALLATION ASSEMBLY-1

No.	Part No.	Description	Ver-sion	QTY.	Remark
	TS04501010000	OIL TANK INSTALLATION ASSEMBLY		1	
1	GBT93-10-A3L	STANDARD SPRING WASHER		2	
2	GBT5783-M10X20-8.8-A3L	HEXAGON BOLT		2	
3	TB604.501.2	REAR BRACKET WELDMENT		1	
4	TB604.501-01	RUBBER WASHER		1	
5	TB604.501-02	TIE RUBBER STRIP		1	
6	TS04501010008	REAR FASTENING TIE WELDMENT		1	
7	GBT6170-M10-8-A3L	HEXAGON NUT, TYPE-1		4	
8	TS04501010009	TIE RUBBER STRIP		1	
9	TS04501010003	FRONT BAND WELDMENT		1	
10	TS04501010001	OIL TANK ASSEMBLY		1	


TS04501010000 OIL TANK INSTALLATION ASSEMBLY-2

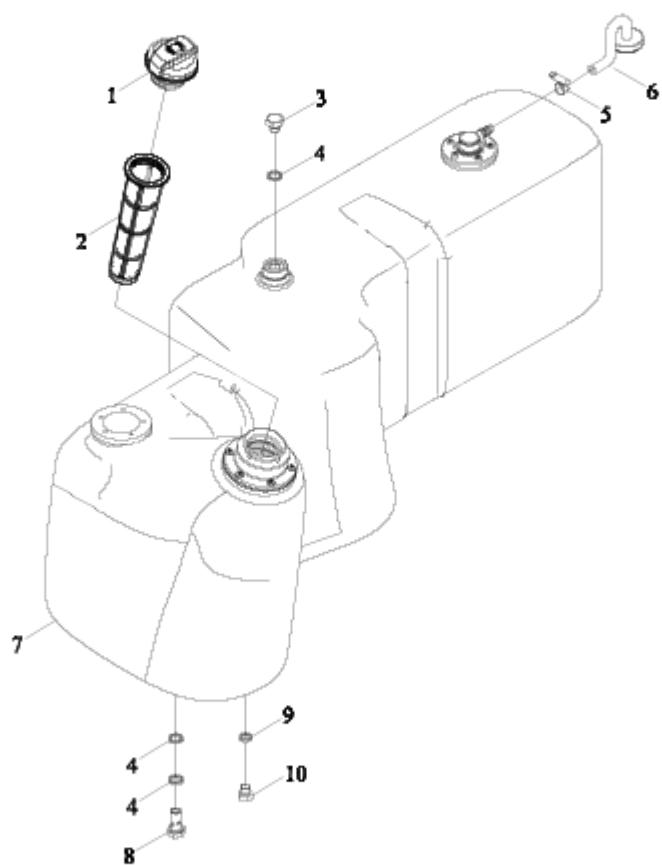

TS04501010000 OIL TANK INSTALLATION ASSEMBLY-2

No.	Part No.	Description	Ver-sion	QTY.	Remark
	TS04501010000	OIL TANK INSTALLATION ASSEMBLY		1	
1	TS04501010001	OIL TANK ASSEMBLY		1	
2	TS04501010005	OIL TANK COVER		1	
2	TF1004.501.1-02	FILTER MESH		1	
3	Q617B14	HEXAGON PLUG		1	
4	JBT982-14	COMBINED SEAL GASKET		3	
5	Q67516	A-TYPE WORM TRANSMISSION HOSE CLAMP		2	
6	TS04501010006	BREATH ASSEMBLY		1	
7	TS04501010002	OIL TANK HOUSING		1	
8	FT65.50.106	HOLLOW BOLT		1	
9	JBT982-12	COMBINED SEAL GASKET		1	
10	Q617B12	HEXAGON PLUG		1	


TS04503010000 OIL CONVEYING PIPE ASSEMBLY

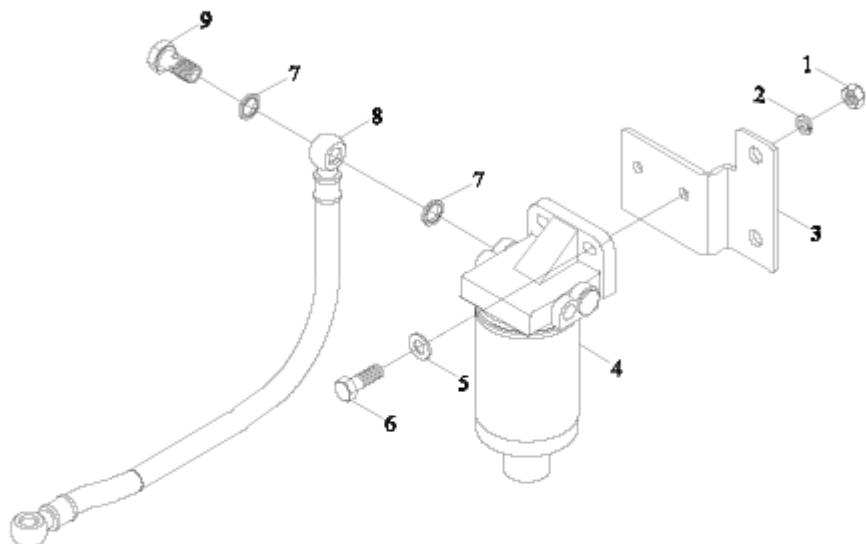

TS04503010000 OIL CONVEYING PIPE ASSEMBLY

No.	Part No.	Description	Ver-sion	QTY.	Remark
	TS04503010000	OIL CONVEYING PIPE ASSEMBLY		1	
1	GBT6170-M8-8-A2L	HEXAGON NUT, TYPE-1		2	
2	GBT93-8-A0P	STANDARD SPRING WASHER		2	
3	TS04503010002	BRACKET		1	
4	TB604.504-03	FUEL FILTER ASSEMBLY		1	
5	GBT95-8-A0P	FLAT WASHER		2	
6	GBT5783-M8X30-8.8-A2L	HEXAGON BOLT		2	
7	JBT982-14	COMBINED SEAL GASKET		2	
8	TA700.503A.2	OIL OUTLET PIPE ASSEMBLY		1	
9	FT65.50.106	HOLLOW BOLT		1	


TC02530010000K TOW

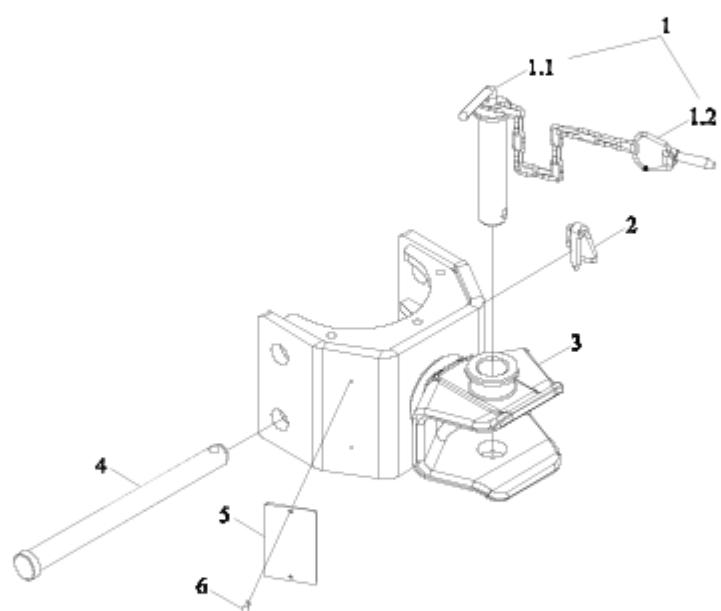

TC02530010000K TOW

No.	Part No.	Description	Ver-sion	QTY.	Remark
	TC02530010000K	TOW		1	
1	TA700.53C.1.3	TOWINGPINANDLOCKING-PINASSEMBLY		2	
2	FT300.56.029	LOCKPINASSEMBLY		1	
3	TB400.53B.1	TOW MECHANISM ASSEMBLY WELDMENT		1	
4	FT300.53.101a	CONNECTING PIN		2	
5	TC02530010001K	DRAG HANG THE AUTHENTICATION THE SIGN		2	
6	GBT827-3X8-A0P	LABEL RIVET		1	


TC02551230000K LIFTER INSTALLATION ASSEMBLY-1

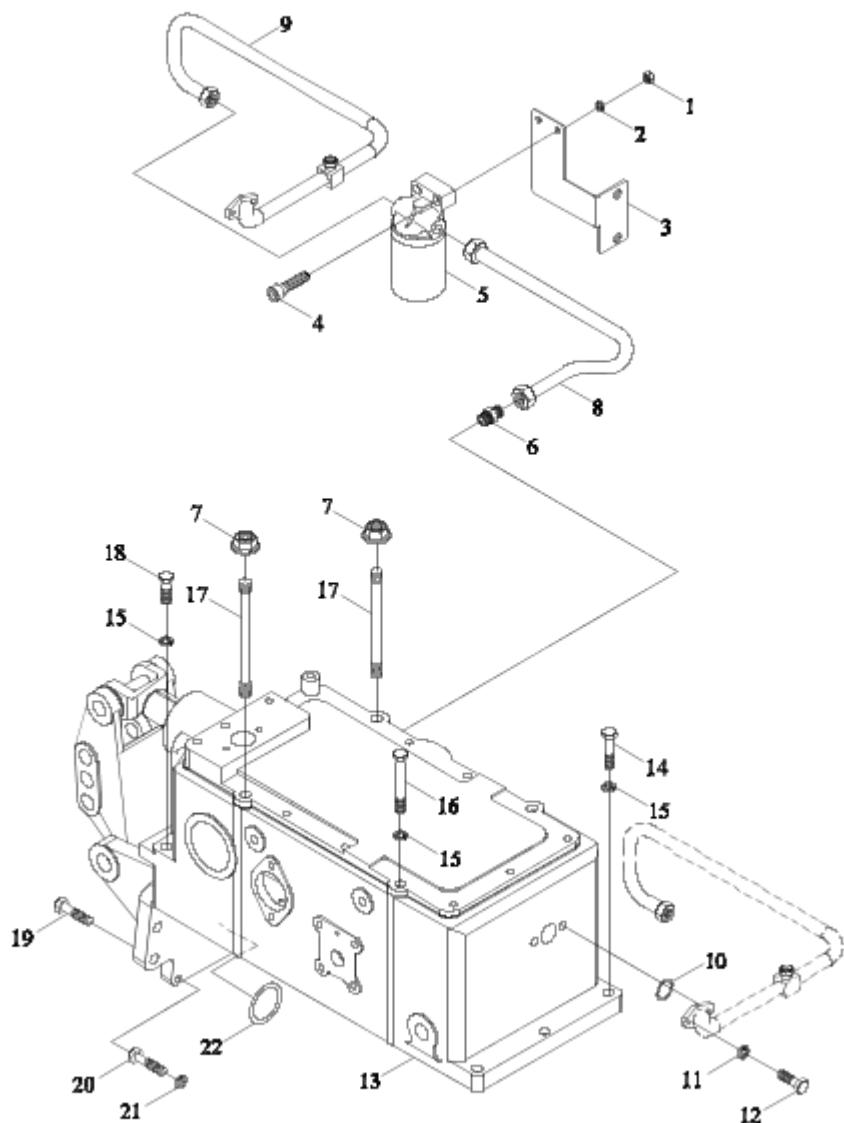

TC02551230000K LIFTER INSTALLATION ASSEMBLY-1

No.	Part No.	Description	Ver-sion	QTY.	Remark
	TC02551230000K	LIFTER INSTALLATION ASSEMBLY		1	
1	GBT6170-M10-8-A3L	HEXAGON NUT, TYPE-1		2	
2	GBT93-10-A3L	STANDARD SPRING WASHER		2	
3	TC02582070015	BRACKET WELDMENT		1	
4	GBT70.1-M10X40-8.8-A3L	INNER HEXAGON SCREW		2	
5	TC02582070001	OIL RETURN FILTER ASSEMBLY		1	
6	TC02582070006	END STRAIGHT THREAD CONNECTOR BODY M22-18		1	
7	SPL-CO-M12-10-F3	HEXAGON NUT		2	
8	TC02582070003	OIL RETURN PIPE ASSEMBLY		1	
9	TC02582080001	OIL FILTER INTO PIPE ASSEMBLY		1	
10	GBT3452.1-25.8X2.65G	RUBBER O-SEAL RING		1	
11	GBT93-8-A3L	STANDARD SPRING WASHER		2	
12	GBT5783-M8X30-8.8-A2L	HEXAGON BOLT		2	
13	TC02551220001K	LIFTER ASSEMBLY		1	
14	GBT5783-M12X40-10.9-A3L	HEXAGON BOLT		3	
15	TB404.312B-01	WASHER		7	
16	FT300.55B.136	BOLT		2	
17	TB300.55-01	DOUBLE END STUDS		2	
18	GBT5783-M12X100-10.9-A3L	HEXAGON BOLT		2	
19	GBT16674.1-M12X35-10.9-A2L	HEXAGON FLANGE NUT		4	
20	GBT5783-M8X30-10.9-A2L	HEXAGON BOLT		2	
21	TB300.55-02	WASHER		2	
22	GBT3452.1-103X2.65G	RUBBER O-SEAL RING		1	


TC02551230000K LIFTER INSTALLATION ASSEMBLY-2

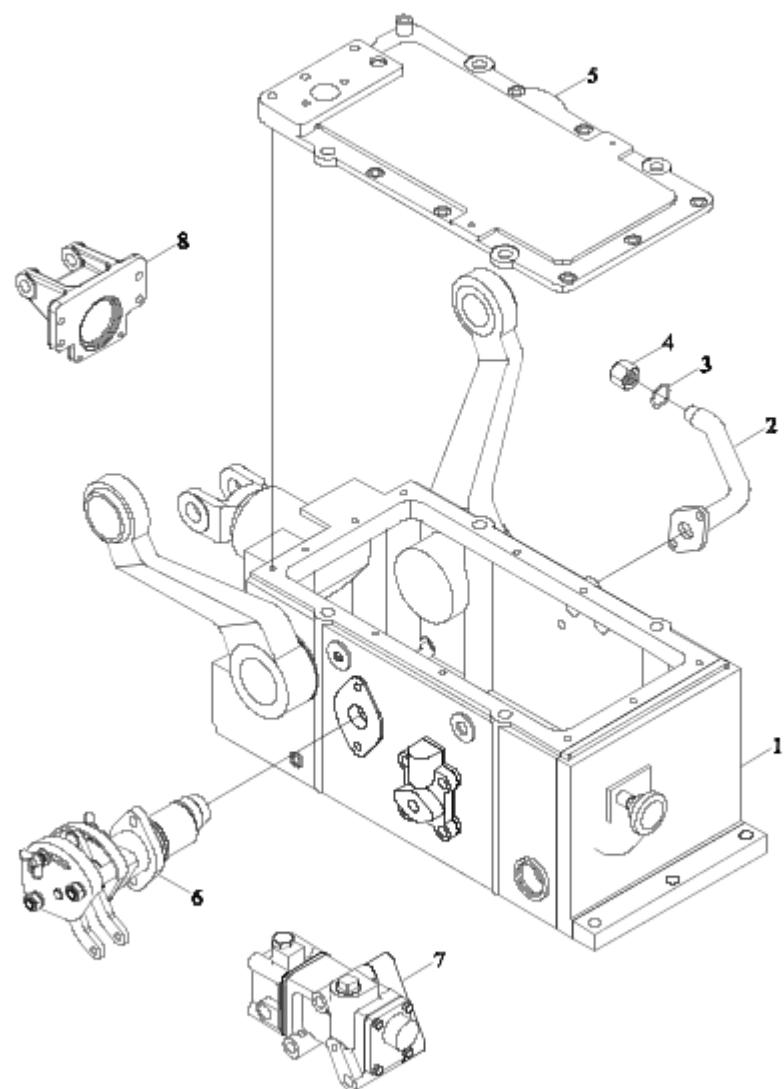

TC02551230000K LIFTER INSTALLATION ASSEMBLY-2

No.	Part No.	Description	Ver-sion	QTY.	Remark
	TC02551220001K	LIFTER ASSEMBLY		1	
	TC02551230000K	LIFTER INSTALLATION ASSEMBLY		1	
1	TC02551080002	LIFTER HOUSING		1	
2	FT300.55B.120a	HYDRAULIC OUTLET PIPE JOINT		1	
3	GBT3452.1-12.5X2.65G	RUBBER O-SEAL RING		1	
4	FT300.55B.121a	OIL CONVEYING PIPE NUT		1	
5	TC02551080003	LIFTER UPPER COVER		1	
6	TB504.551F.5.1	DISTRIBUTOR CONTROL MECHANISM ASSEMBLY		1	
7	TB504.551E.1.1	DISTRIBUTOR ASSEMBLY		1	
8	TC02551050001K	UPPER SUSPENSION POINT ROCKER BRACKET		1	


TC02551230000K LIFTER INSTALLATION ASSEMBLY-3

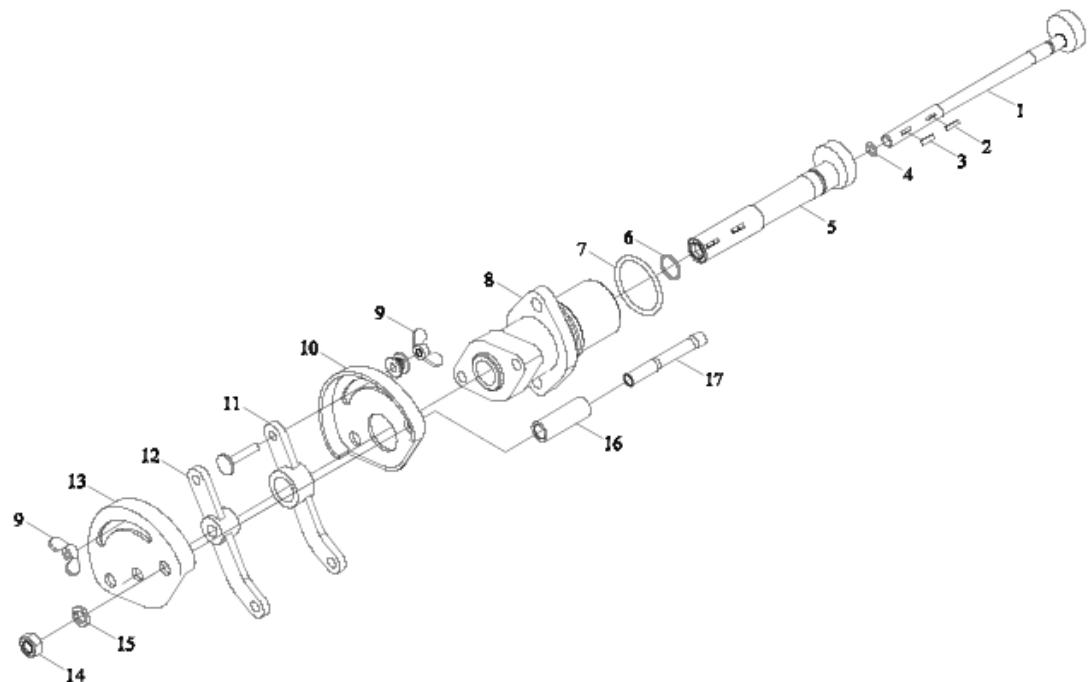

TC02551230000K LIFTER INSTALLATION ASSEMBLY-3

No.	Part No.	Description	Ver-sion	QTY.	Remark
	TB504.551F.5.1	DISTRIBUTOR CONTROL MECHANISM ASSEMBLY		1	
	TC02551230000K	LIFTER INSTALLATION ASSEMBLY		1	
	TC02551220001K	LIFTER ASSEMBLY		1	
1	TB504.551.1.1.4	FORCE ADJUSTING EC-CENTRIC WHEEL WELD-MENT ASSEMBLY		1	
2	GBT1099.1-3X5X13	SEMICIRCLE KEY		1	
3	GBT1099.1-2.5X3.7X10	SEMICIRCLE KEY		1	
4	GBT3452.1-6.90X1.80G	RUBBER O-SEAL RING		1	
5	TB504.551.1.1.3	POSITION ADJUSTING EC-CENTRIC WHEEL WELD-MENT ASSEMBLY		1	
6	GBT3452.1-17.0X1.80G	RUBBER O-SEAL RING		1	
7	GBT3452.1-41.2X3.55G	RUBBER O-SEAL RING		1	
8	TB504.551.1.1-01	SUPPORT SEAT		1	
9	GBT62-M6-A2L	BUTTERFLY NUT		2	
10	TB504.551B.1.1-02	POSITION ADJUSTING SEC-TOR PLATE		1	
11	TB504.551F.5.1.2	POSITION ADJUSTING ROCKER WELDMENT		1	
12	TB504.551F.5.1.1	FORCE ADJUSTING ROCK-ER WELDMENT		1	
13	TB504.551B.1.1-01	FORCE ADJUSTING SEC-TOR PLATE		1	
14	GBT6170-M10-8-A3L	HEXAGON NUT, TYPE-1		2	
15	GBT93-10-A0P	STANDARD SPRING WASHER		2	
16	TB504.551.1.1-04	SPACER BUSH		2	
17	GBT898-M10X65-8.8-A2L	DOUBLE END STUDS		2	


TS04552010000 LIFTER OPERATION ASSEMBLY

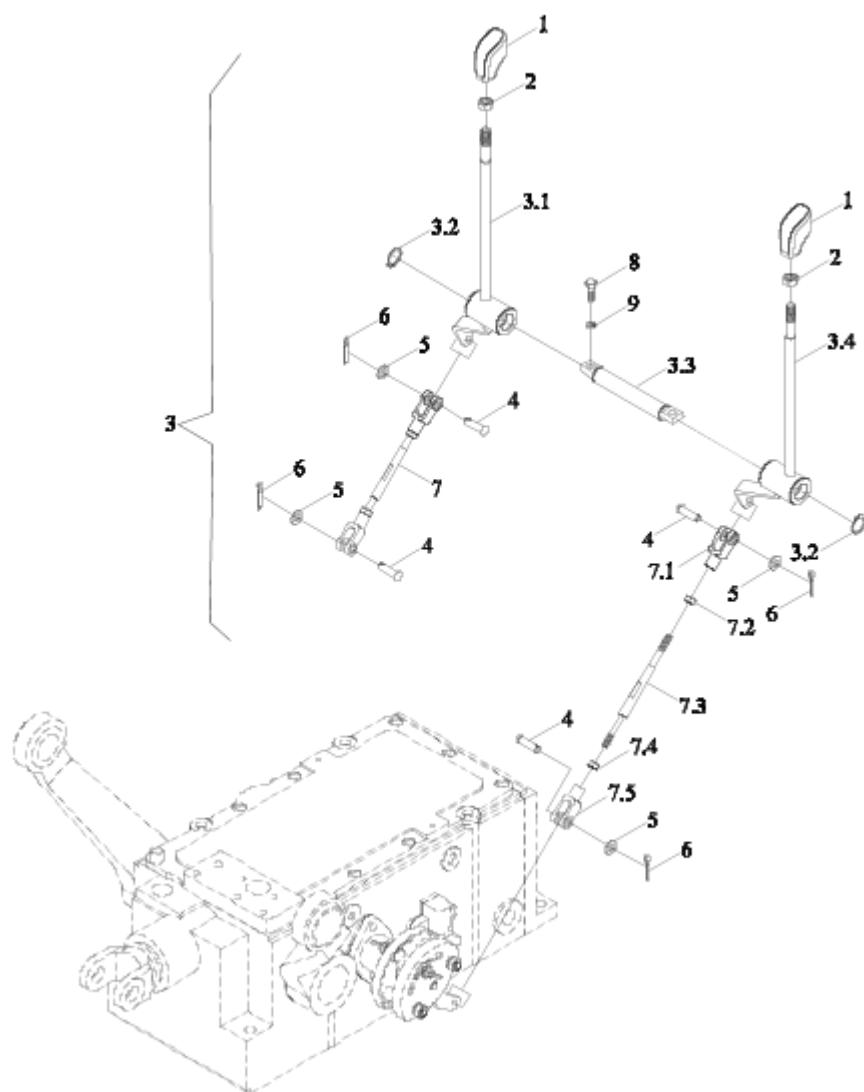

TS04552010000 LIFTER OPERATION ASSEMBLY

No.	Part No.	Description	Ver-sion	QTY.	Remark
	TS04552010000	LIFTER OPERATION ASSEMBLY		1	
1	TS04552010011	CONTROL HANDLE HEAD		2	
2	GBT6170-M10-8-A3L	HEXAGON NUT, TYPE-1		2	
3	TS04552010010	LIFTER CONTROL MECHANISM ASSEMBLY		1	
3.1	TS04552010002	LIFTER CONTROL PRESSURE UNIT 1		1	
3.2	GBT894.1-20	CIRCLIP FOR SHAFT		2	
3.3	TS04552010001	FIXING SHAFT		1	
3.4	TS04552010007	LIFTER CONTROL PRESSURE UNIT 2		1	
4	GBT882-B8X30-A0P	PIN SHAFT		4	
5	GBT97.1-8-A0P	FLAT WASHER		4	
6	GBT91-3.2X16-A0P	SPLIT PIN		4	
7	TS04552010012	ADJUSTING ROD		2	
7.1	TB504.552D.3-03	RIGHT REVOLVING CONNECTING FORK		1	
7.2	GBT6170-M8-8-A2L	HEXAGON NUT, TYPE-1		1	
7.3	TS04552010013	CONTROL PULL ROD		1	
7.4	GBT6170-M8-LH-8-A2L	HEXAGON NUT, TYPE-1		1	
7.5	TB504.552D.3-02	LEFT REVOLVING PULL ROD FORK		1	
8	GBT5783-M8X25-8.8-A2L	HEXAGON BOLT		2	
9	GBT93-8-A0P	STANDARD SPRING WASHER		2	


TC02553070000K HYDRAULIC AUXILIARY OIL TANK ASSEMBLY

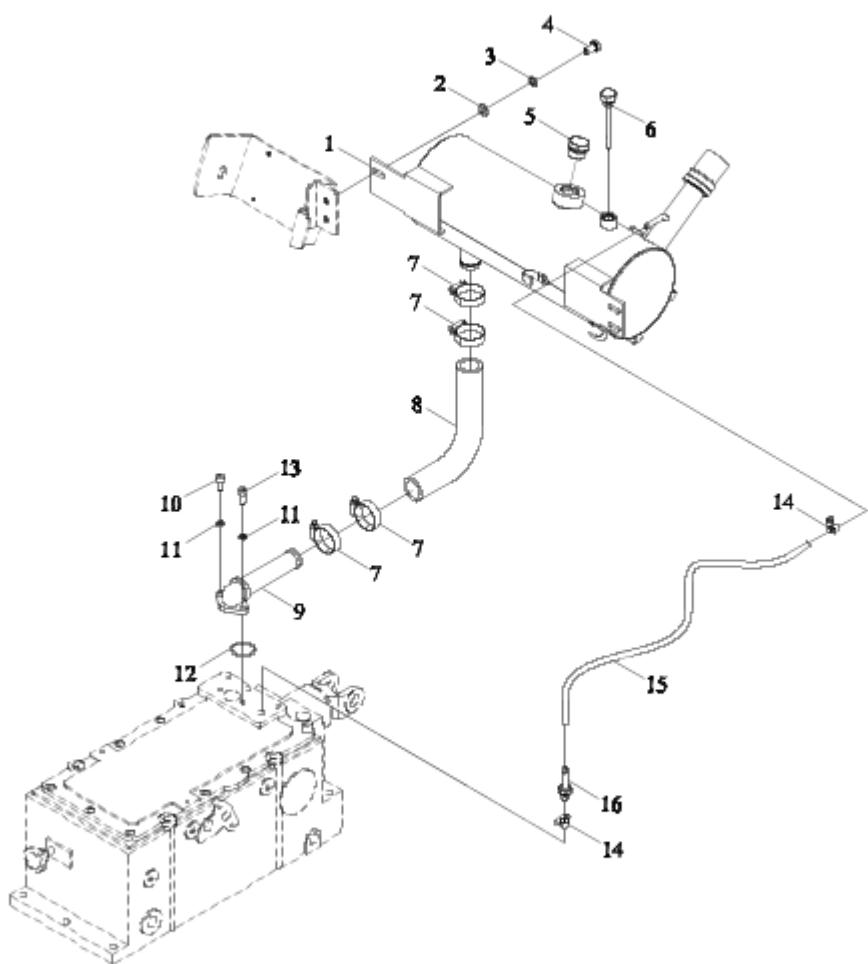

TC02553070000K HYDRAULIC AUXILIARY OIL TANK ASSEMBLY

No.	Part No.	Description	Ver-sion	QTY.	Remark
	TC02553070000K	HYDRAULIC AUXILIARY OIL TANK ASSEMBLY		1	
1	TC02553070001K	AUXILIARY OIL TANK WELDMENT		1	
2	GBT97.1-10-A3L	FLAT WASHER		3	
3	GBT93-10-A3L	STANDARD SPRING WASHER		3	
4	GBT5783-M10X20-8.8-A3L	HEXAGON BOLT		3	
5	TC04553010011K	SCREW PLUG		1	
6	TC02553010003	OIL DIPSTICK ASSY		1	
7	Q67645	B-TYPE WORM TRANSMISSION HOSE CLAMP		4	
8	TC02553070004K	CONNECTING RUBBER PIPE		1	
9	TC02553050005K	CONNECTING OIL PIPE WELDMENT		1	
10	GBT70.1-M8X20-8.8-A2L	INNER HEXAGON SCREW		1	
11	GBT93-8-A3L	STANDARD SPRING WASHER		2	
12	GBT3452.1-34.5X2.65G	RUBBER O-SEAL RING		1	
13	GBT70.1-M8X20-10.9	INNER HEXAGON SCREW		1	
14	Q67512	A-TYPE WORM TRANSMISSION HOSE CLAMP		2	
15	TC02553070003K	BREATH HOSE		1	
16	TC02553010005	BREATHER JOINT WELDMENT		1	


TC02561060000K SUSPENSION ASSEMBLY-1

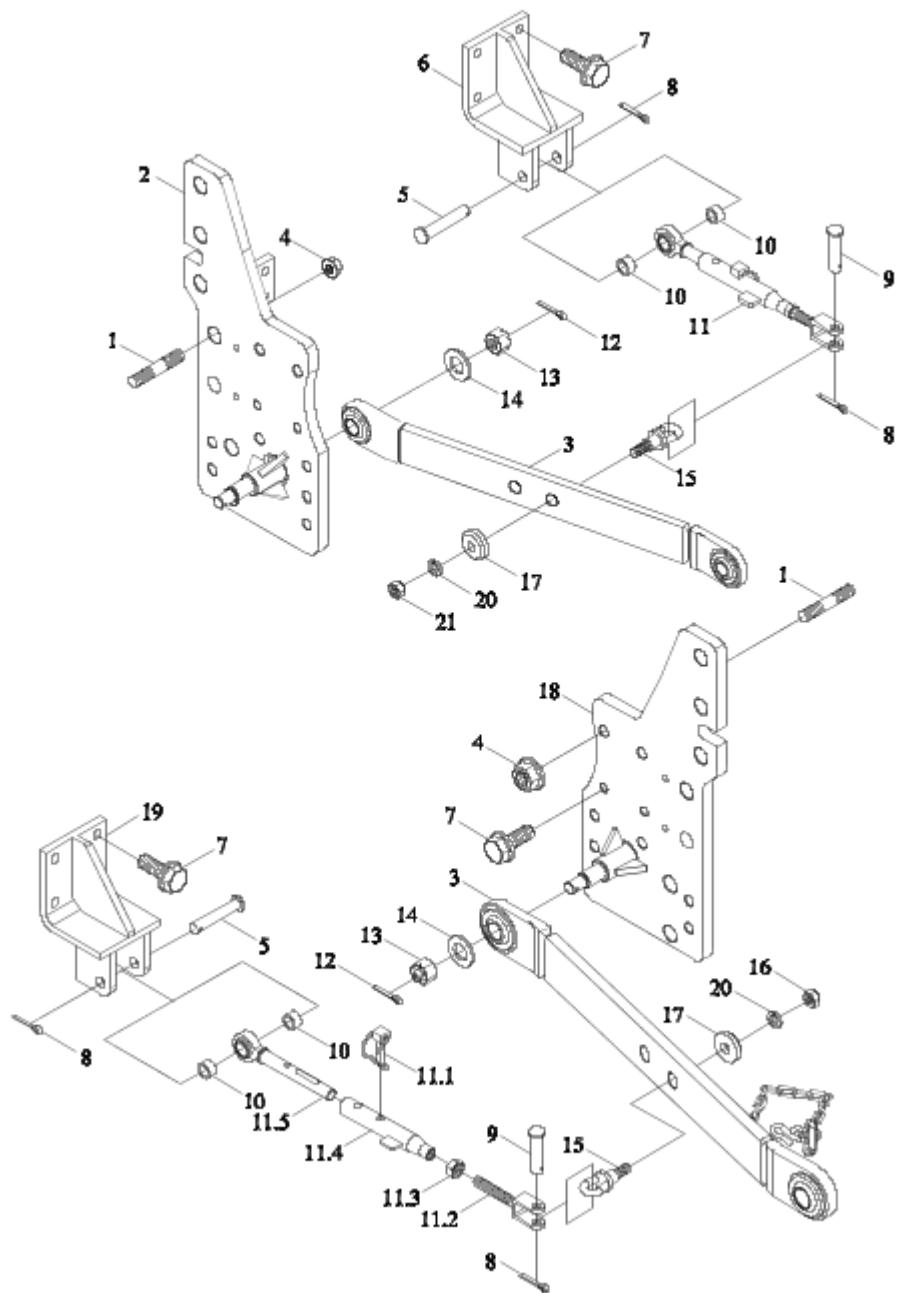

TC02561060000K SUSPENSION ASSEMBLY-1

No.	Part No.	Description	Ver-sion	QTY.	Remark
	TC02561060000K	SUSPENSION ASSEMBLY		1	
1	GBT899-AM16-M16X1.5X45-10.9-A3 L	DOUBLE END STUDS		8	
2	TC02561060004K	RIGHT SUPPORT PLATE		1	
3	FT500A.56.012	LOWER PULL ROD ASSEMBLY		2	
4	SPL-CO-M16X1.5-10-F3	HEXAGON NUT		8	
5	FT300.56A.102	LIMITING ROD CONNECTING PIN		2	
6	FT300.56A.019	RIGHT LIMITING ROD BRACKET WELDMENT		1	
7	GBT16674.1-M16X40-10.9-A3L	HEXAGON FLANGE NUT		8	
8	GBT91-5X32-A0P	SPLIT PIN		4	
9	GBT882-B18X55-A0P	PIN SHAFT		2	
10	FT300.56A.103	SLEEVE		4	
11	FT300.56A.016a	LIMIT ROD ASSEMBLY		2	
11.1	FT300.56A.023	LIMITING ROD LOCK PIN ASSEMBLY		1	
12	GBT91-4X36-A0P	SPLIT PIN		2	
13	GBT6178-M20-8-A9L	HEXAGON SLOTTED NUT, STYLE I		2	
14	GBT97.1-20-A0P	FLAT WASHER		2	
15	FT300.56A.110a	LIMITING ROD REAR CONNECTING PIN		2	
16	GBT6170-M20-8-A3L	HEXAGON NUT, TYPE-1		2	
17	FT300.56A.111a	CIRCULAR PLATE		2	
18	TC02561060001K	LEFT SUPPORT PLATE		1	
19	FT300.56A.017	LEFT LIMITING ROD BRACKET WELDMENT		1	
20	GBT93-20-A0P	STANDARD SPRING WASHER		2	


TC02561060000K SUSPENSION ASSEMBLY-2

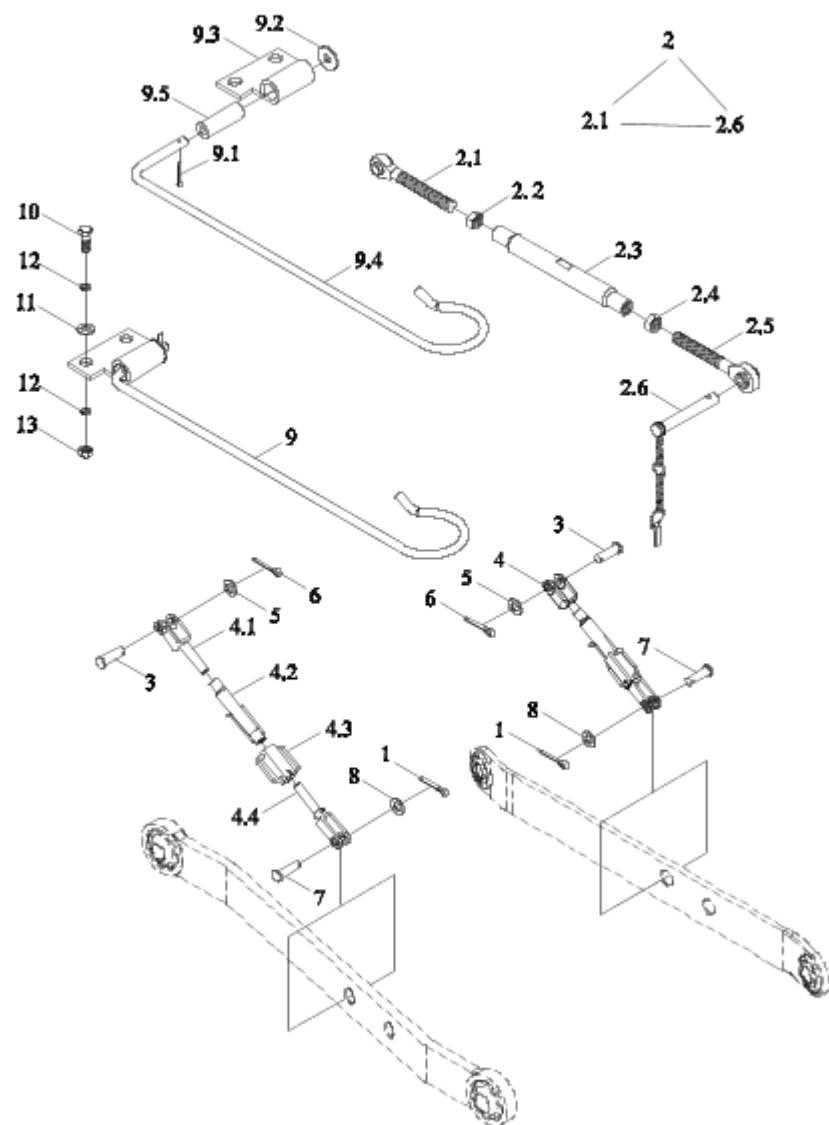

TC02561060000K SUSPENSION ASSEMBLY-2

No.	Part No.	Description	Ver-sion	QTY.	Remark
1	TC02561060000k	SUSPENSION ASSEMBLY		1	
1	GBT91-5X32-A0P	PIN		2	
2	FT500A.56.011a	UPPER PULL ROD ASSEMBLY		1	
2.6	FT65.56.015	UPPER PULL ROD LOCK PIN ASSEMBLY		1	
3	FT500A.56.101	LIFTING ROD UPPER CONNECTING PIN		2	
4	TB400.56E.1	LIFTING ROD ASSEMBLY		2	
5	FT500A.56.118	WASHER		2	
6	GBT91-5X40-A0P	SPLIT PIN		2	
7	FT300.56A.112	LIFTING ROD LOWER CONNECTING PIN		2	
8	GBT97.1-24-A0P	FLAT WASHER		2	
9	TB500.56B.6	UPPER PULL ROD FIXED CLIP COMBINATION		1	
10	GBT5783-M8X20-8.8-A2L	HEXAGON BOLT		2	
11	GBT97.1-8-A0P	FLAT WASHER		2	
12	GBT93-8-A0P	STANDARD SPRING WASHER		2	
13	GBT6170-M8-8-A2L	HEXAGON NUT, TYPE-1		2	


TC0258151000K OIL PUMP/PIPE/FILTER ASSEMBLY

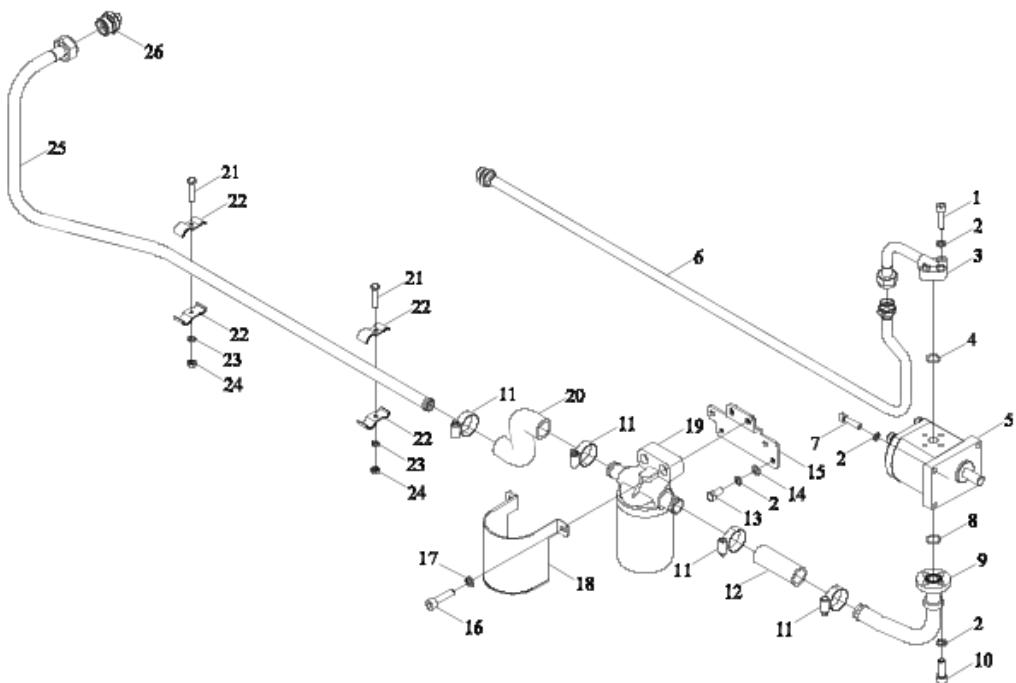

TC02581510000K OIL PUMP/PIPE/FILTER ASSEMBLY

No.	Part No.	Description	Ver-sion	QTY.	Remark
	TC02581510000K	OIL PUMP/PIPE/FILTER ASSEMBLY		1	
1	GBT70.1-M8X30-8.8-A2L	INNER HEXAGON SCREW		3	
2	GBT93-8-A3L	STANDARD SPRING WASHER		15	
3	TC04581160001	PRESSURE OIL PIPE ASSEMBLY-1		1	
4	GBT3452.1-18.0X2.65G	RUBBER O-SEAL RING		1	
5	TC02581060001K	GEAR PUMP		1	
6	TC02581130001K	OIL PUMP OUTLET STEEL PIPE WELDMENT		1	
7	GBT70.1-M8X35-8.8-A2L	INNER HEXAGON SCREW		4	
8	GBT3452.1-20.0X1.80G	RUBBER O-SEAL RING		1	
9	TB504.581E.3	OIL SUCTION PIPE WELDMENT		1	
10	GBT70.1-M8X25-8.8-A2L	INNER HEXAGON SCREW		4	
11	Q67638	B-TYPE WORM TRANSMISSION HOSE CLAMP		4	
12	TB504.581E-02	OIL SUCTION RUBBER HOSE		1	
13	GBT5783-M8X20-8.8-A2L	HEXAGON BOLT		4	
14	GBT95-8-A3L	FLAT WASHER		4	
15	TC02581130006K	BRACKET WELDMENT		1	
16	GBT70.1-M10X40-8.8	INNER HEXAGON SCREW		2	
17	GBT93-10-A3L	STANDARD SPRING WASHER		2	
18	TC02581130008K	GUARD WELDMENT		1	
19	TB504.581E.2	ABSORB OIL FILTER ASSEMBLY		1	
20	TC02581130005K	OIL SUCTION PIPE		1	
21	GBT5783-M6X30-8.8-A2L	HEXAGON BOLT		2	
22	TB504.581E.1	OIL PIPE CLAMP AND RUBBER WASHER		4	
23	GBT93-6-A3L	STANDARD SPRING WASHER		2	
24	GBT6170-M6-8-A2L	HEXAGON NUT, TYPE-1		2	
25	TC02581510001K	OIL SUCTION STEEL PIPE ASSEMBLY		1	
26	TC03581030007	END STRAIGHT THREAD CONNECTOR BODY M33-28		1	

TC02582100000K MULTI-WAY VALVE OIL PIPE ASSEMBLY

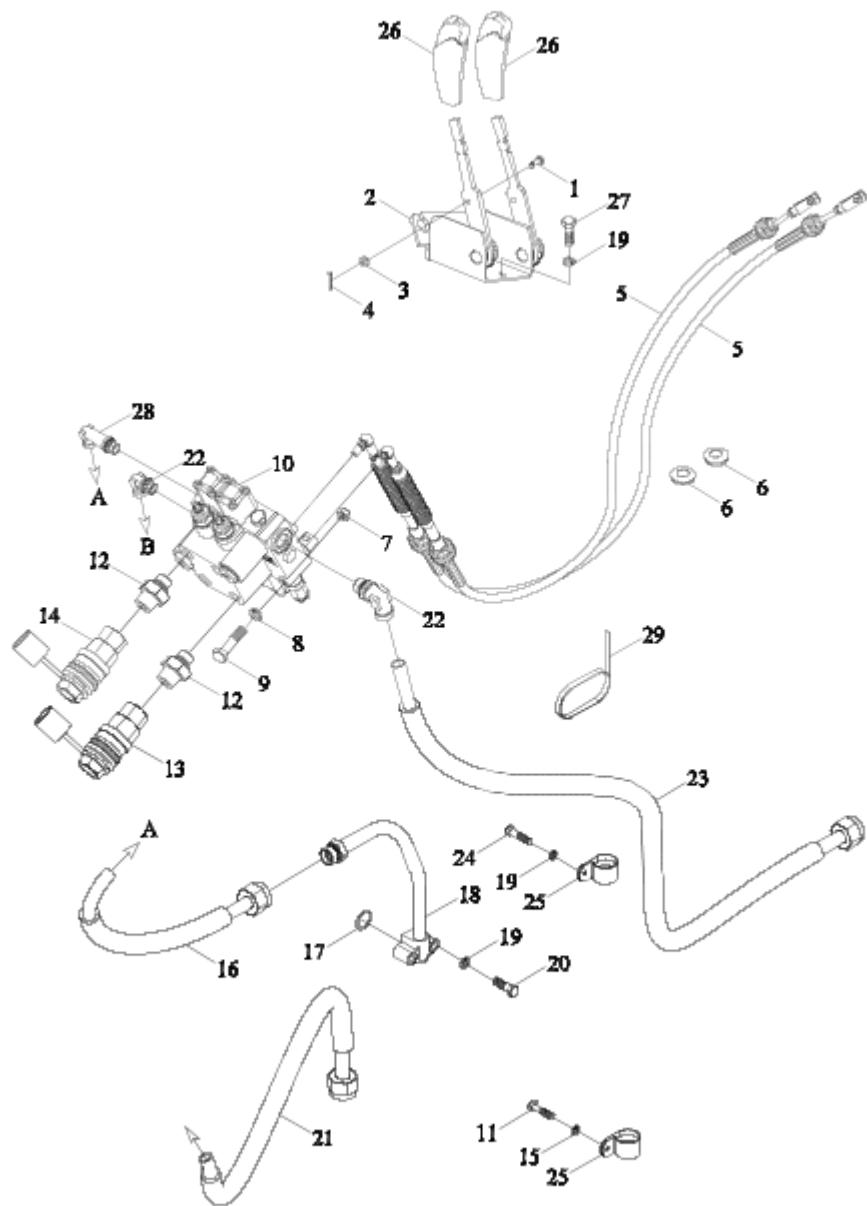


TC02582100000K MULTI-WAY VALVE OIL PIPE ASSEMBLY

No.	Part No.	Description	Ver-sion	QTY.	Remark
	TC02582100000K	MULTI-WAY VALVE OIL PIPE ASSEMBLY		1	
1	TG1654.583C-01	PIN SHAFT		2	
2	TS04582010058	MULTI-WAY VALVE CONTROL MECHANISM INSTALLATION ASSEMBLY		1	
3	GBT97.1-6-A0P	FLAT WASHER		2	
4	GBT91-2X14-A0P	SPLIT PIN		2	
5	TS04582010056	SOFT SHAFT MECHANISM ASSEMBLY		2	
6	TS04582010027	RUBBER RING		2	
7	GBT6170-M6-8-A2L	HEXAGON NUT, TYPE-1		3	
8	GBT93-6-A0P	STANDARD SPRING WASHER		3	
9	GBT5782-M6X60-8.8-A1L	HEXAGON BOLT		3	
10	TC04582140010	MULTI-WAY VALVE ASSEMBLY		1	
11	GBT5783-M10X16-8.8-A3L	HEXAGON BOLT		1	
12	TC04582140009	THROUGH JOINT		4	
13	FT354.58A.030	QUICK CHANGING JOINT		2	
14	TC02580010001K	QUICK CHANGING JOINT		2	
15	GBT93-10-A0P	STANDARD SPRING WASHER		1	
16	TC04582300012	OIL INLET RUBBLE HOSE		1	
17	GBT3452.1-20.0X2.65G	RUBBER O-SEAL RING		1	
18	TC04582300005	OIL INLET STEEL PIPE		1	
19	GBT93-8-A0P	STANDARD SPRING WASHER		6	
20	GBT5783-M8X35-8.8-A2L	HEXAGON BOLT		2	
21	TC04582300013	OIL RETURN RUBBER HOSE ASSEMBLY		1	
22	TC04582140012	CONNECTING JOINT M18-15		2	
23	TC04582300001	OIL INLET RUBBLE HOSE		1	
24	GBT5783-M8X16-8.8-A2L	HEXAGON BOLT		1	
25	TD924.582-01	PIPE CLAMP		2	
26	TS04582010025	HANDLE HEAD		2	
27	GBT5783-M8X20-8.8-A2L	HEXAGON BOLT		3	

TC02582100000K MULTI-WAY VALVE OIL PIPE ASSEMBLY (cont'd.)

No.	Part No.	Description	Ver-sion	QTY.	Remark
28	TC04582300011	CONNECTING JOINT M18-15		1	
29	Q67405200	PLASTIC FASTENING STRIP		1	


TB300. 583A SINGLE-WAY HYDRAULIC OUTPUT ASSEMBLY 2

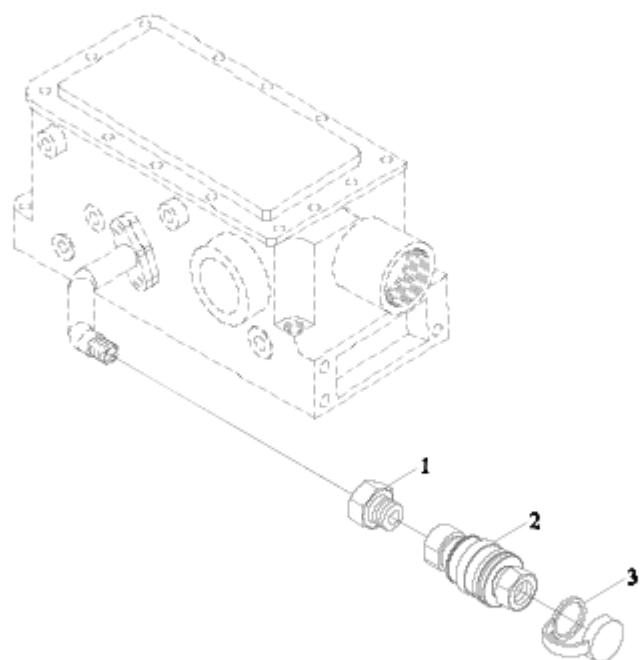

TB300. 583A SINGLE-WAY HYDRAULIC OUTPUT ASSEMBLY 2

No.	Part No.	Description	Ver-sion	QTY.	Remark
	TB300.583A	SINGLE-WAY HYDRAULIC OUTPUT ASSEMBLY 2		1	
1	FT354.58A.104	BRITISH SYSTEM OIL PIPE JOINT		1	
2	FT354.58A.030	QUICK CHANGING JOINT		1	
3	FT354.58A.103	DUSTPROOF COVER		1	


TC03620010000K SAFETY BELT INSTALLATION ASSEMBLY

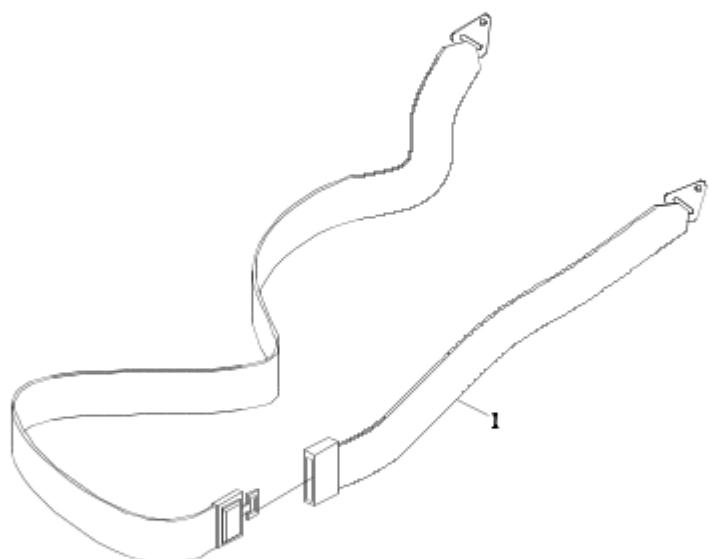

TC0362001000K SAFETY BELT INSTALLATION ASSEMBLY

No.	Part No.	Description	Ver-sion	QTY.	Remark
1	TC0362001000K	SAFETY BELT INSTALLATION ASSEMBLY		1	


TC02740010000K FRONT BALLAST ASSEMBLY

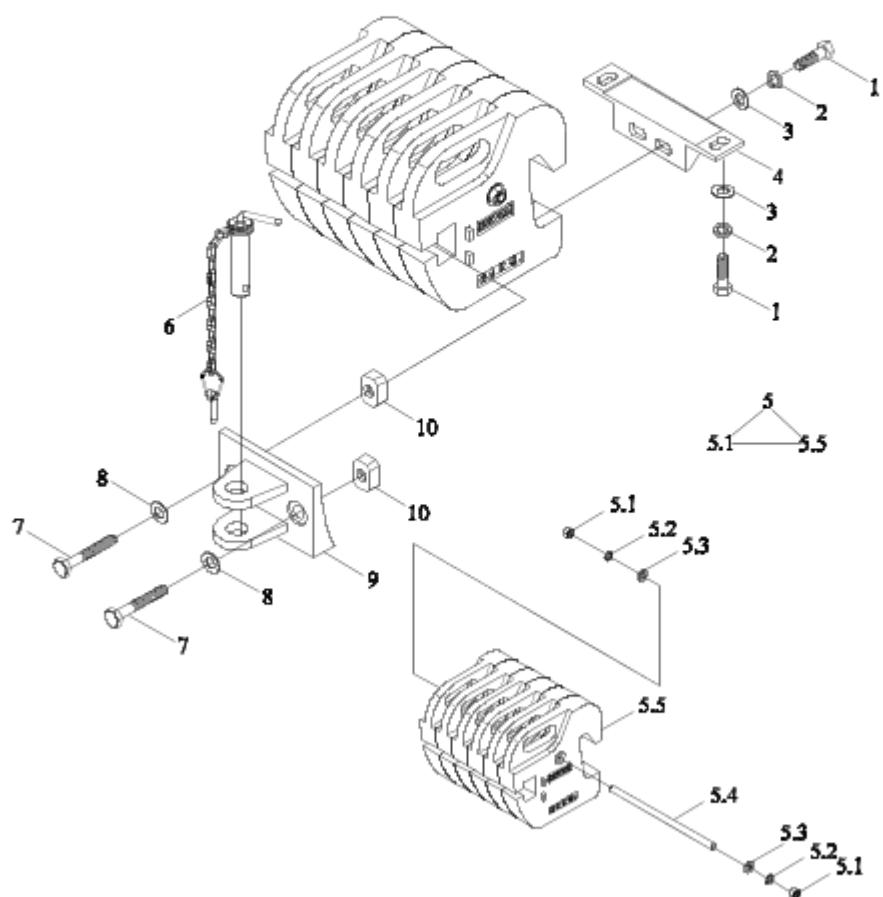

TC0274001000K FRONT BALLAST ASSEMBLY

No.	Part No.	Description	Ver-sion	QTY.	Remark
	TC0274001000K	FRONT BALLAST ASSEMBLY		1	
1	GBT5783-M16X35-8.8-A3L	HEXAGON BOLT		4	
2	GBT93-16-A0P	STANDARD SPRING WASHER		4	
3	GBT97.1-16-A0P	FLAT WASHER		4	
4	TB404.74B-01	FIXING BRACKET		1	
5	TC02740010001K	FRONT BALLAST SMALL ASSEMBLY		1	
5.1	GBT6170-M16-8-A3L	HEXAGON NUT, TYPE-1		2	
5.2	GBT93-16-A0P	STANDARD SPRING WASHER		2	
5.3	GBT97.1-16-A0P	FLAT WASHER		2	
5.4	FT404.74A.108	CONNECTING BOLT		1	
5.5	TC02740010002K	BALLAST BLOCK		6	
6	TB400.74A.2	TOWING PIN AND LOCK PIN ASSEMBLY		1	
7	GBT5785-M20X1.5X80-8.8-A3L	HEXAGON BOLT		2	
8	GBT97.1-20-A0P	FLAT WASHER		2	
9	TB400.74A-04	TOWING LUG		1	
10	FT650.74.108	TOWING NUT		2	


TS0474101000K FRONT BALLAST BRACKET ASSEMBLY

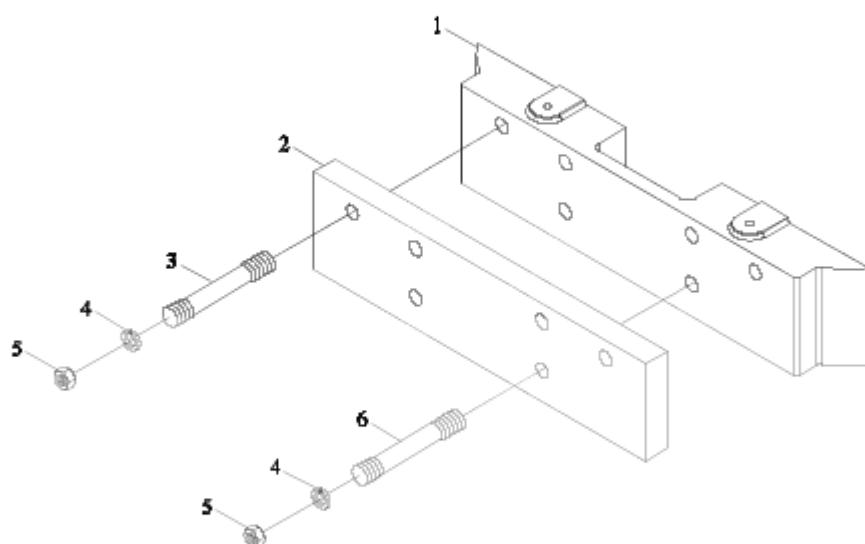

TS0474101000K FRONT BALLAST BRACKET ASSEMBLY

No.	Part No.	Description	Ver-sion	QTY.	Remark
	TS0474101000K	FRONT BALLAST BRACKET ASSEMBLY		1	
1	TB400.74D-01	BALLAST BRACKET		1	
2	TS04741010001K	PAD BLOCK		1	
3	TS04741010002K	DOUBLE END STUDS M16X145		4	
4	GBT93-16-A0P	STANDARD SPRING WASHER		6	
5	GBT6170-M16-8-A3L	HEXAGON NUT, TYPE-1		6	
6	TS04741010003K	DOUBLE END STUDS M16X165		2	


TS0480101000K PNEUMATIC BRAKE VALVE ASSEMBLY

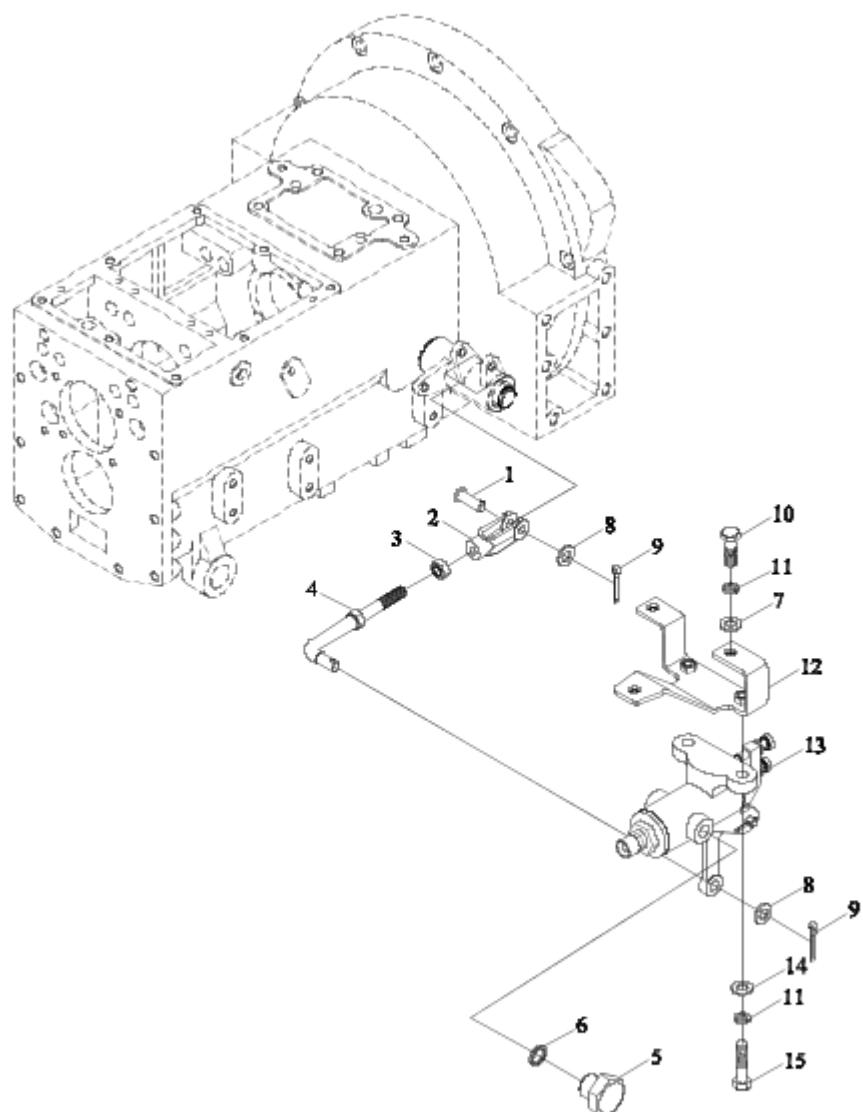

TS0480101000K PNEUMATIC BRAKE VALVE ASSEMBLY

No.	Part No.	Description	Ver-sion	QTY.	Remark
	TS0480101000K	PNEUMATIC BRAKE VALVE ASSEMBLY		1	
1	GBT882-B10X28-A0P	PIN SHAFT		1	
2	FT300.80.105	ADJUSTING FORK		1	
3	GBT6170-M10-8-A3L	HEXAGON NUT, TYPE-1		1	
4	TS04801010002	ADJUSTING PULL ROD UNIT		1	
5	Q617B14	HEXAGON PLUG		1	
6	JBT982-14	COMBINED SEAL GASKET		1	
7	GBT96.1-8-A0P	BIG WASHER		3	
8	GBT848-10-A0P	SMALL WASHER		3	
9	GBT91-3.2X16-A0P	SPLIT PIN		2	
10	GBT5783-M8X20-8.8-A2L	HEXAGON BOLT		3	
11	GBT93-8-A0P	STANDARD SPRING WASHER		5	
12	TS04801010004	BRACKET		1	
13	FT300.80.011	PNEUMATIC BRAKE VALVE ASSEMBLY		1	
14	GBT97.1-8-A0P	FLAT WASHER		2	
15	GBT5783-M8X30-8.8-A2L	HEXAGON BOLT		2	


TS04802010000K AIR CYLINDER INSTALLATION ASSEMBLY

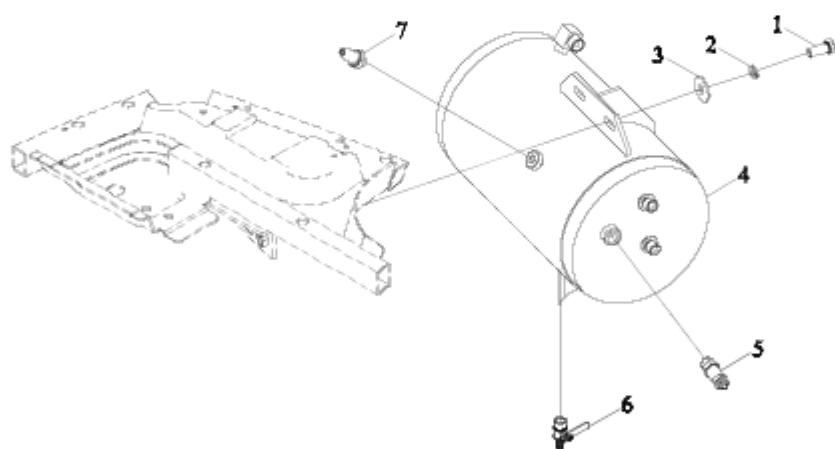

TS04802010000K AIR CYLINDER INSTALLATION ASSEMBLY

No.	Part No.	Description	Ver-sion	QTY.	Remark
	TS04802010000K	AIR CYLINDER INSTALLATION ASSEMBLY		1	
1	GBT5783-M12X30-8.8-A3L	HEXAGON BOLT		2	
2	GBT93-12-A0P	STANDARD SPRING WASHER		2	
3	GBT96.1-12-A0P	BIG WASHER		2	
4	TS04802010001K	AIR CYLINDER WELDMENT		1	
5	FT300.80.034	SAFETY VALVE ASSEMBLY		1	
6	FT300.80.033	DRAIN VALVE ASSEMBLY		1	
7	TC02484060001K	AIR PRESSURE ALARM		1	


TS04803010000K AIR CONVEYING PIPELINE ASSEMBLY-1

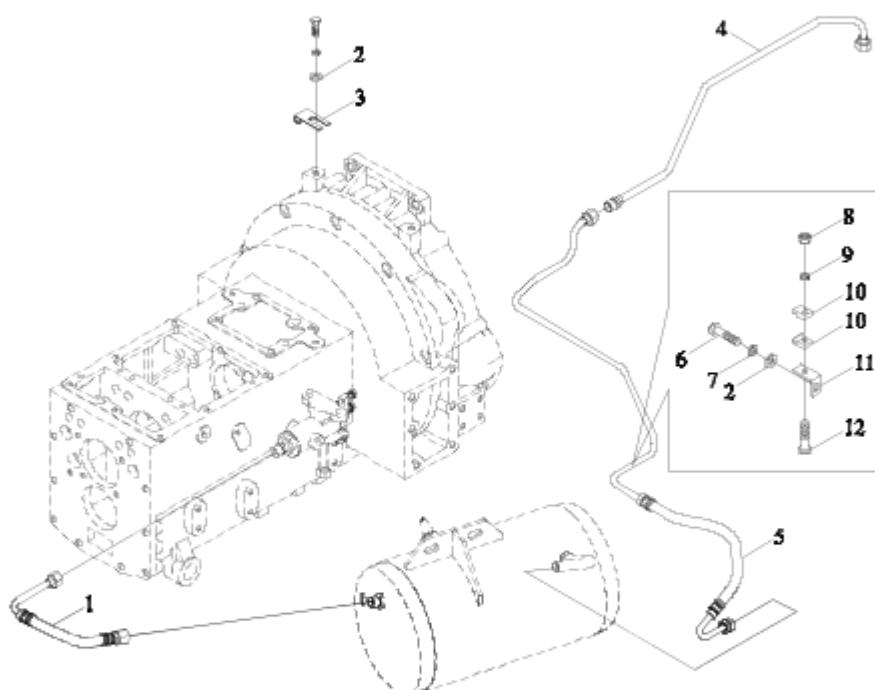

TS0480301000K AIR CONVEYING PIPELINE ASSEMBLY-1

No.	Part No.	Description	Ver-sion	QTY.	Remark
	TS0480301000K	AIR CONVEYING PIPELINE ASSEMBLY		1	
1	TS04803010006	AIR INLET PIPE		1	
2	GBT97.1-10-A0P	FLAT WASHER		2	
3	TE350.80A-01	PIPE CLAMP		1	
4	TS04803010001K	AIR COMPRESSOR OUTLET PIPE ASSEMBLY		1	
5	TS04803010004	AIR INLET PIPE		1	
6	GBT5783-M10X20-8.8-A3L	HEXAGON BOLT		2	
7	GBT93-10-A0P	STANDARD SPRING WASHER		2	
8	GBT6170-M8-8-A2L	HEXAGON NUT, TYPE-1		1	
9	GBT93-8-A0P	STANDARD SPRING WASHER		1	
10	TB454.40X-01	SINGLE HOLE PIPE CLAMP		2	
11	TS04803010007	PIPE CLAMP BRACKET		1	
12	GBT5783-M8X35-8.8-A2L	HEXAGON BOLT		1	


TS04803010000K AIR CONVEYING PIPELINE ASSEMBLY-2

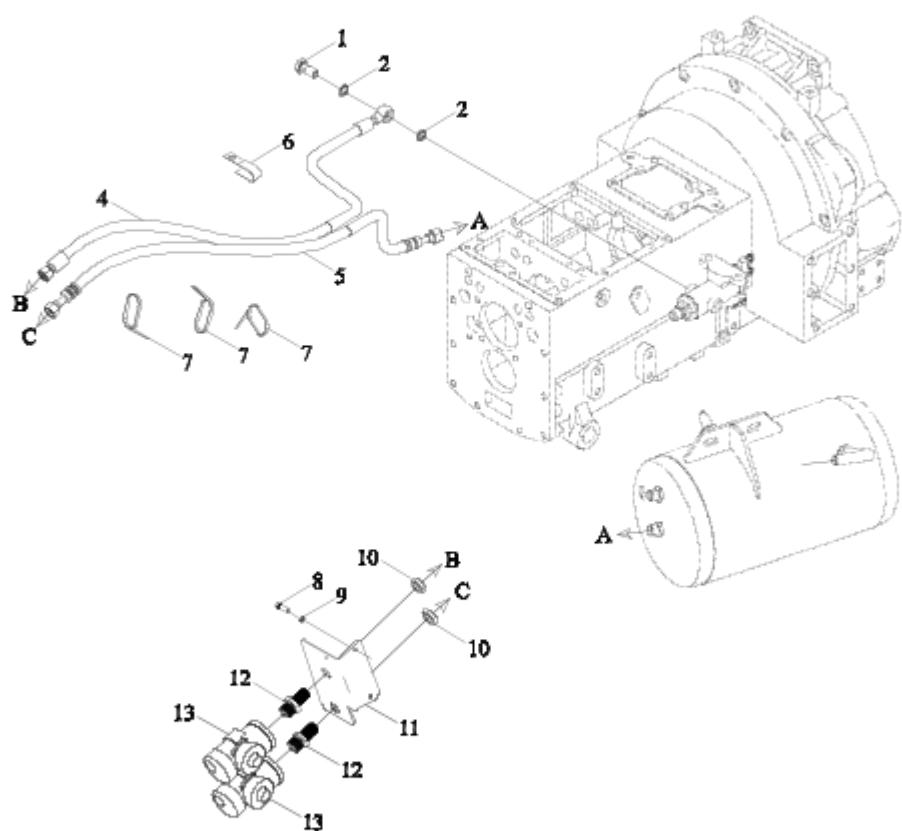

TS0480301000K AIR CONVEYING PIPELINE ASSEMBLY-2

No.	Part No.	Description	Ver-sion	QTY.	Remark
	TS0480301000K	AIR CONVEYING PIPELINE ASSEMBLY		1	
1	FT65.50.106	HOLLOW BOLT		1	
2	JBT982-14	COMBINED SEAL GASKET		2	
4	TS04803010003K	AIR CONVEYING PIPE ASSEMBLY		1	
5	TS04803010005K	AIR CONVEYING PIPE ASSEMBLY		1	
6	TD800.803-07	TIGHTEN CLIP		1	
7	Q67405200	PLASTIC FASTENING STRIP		4	
8	GBT5783-M6X20-8.8-A2L	HEXAGON BOLT		2	
9	GBT93-6-A0P	STANDARD SPRING WASHER		2	
10	GBT6173-M18X1.5-05-A3L	HEXAGON THIN NUT		2	
11	TS04803010006K	INSTALLATION PLATE		1	
12	TD800.803D-01	OUTPUT JOINT		2	
13	TD800.803D.1	QUICK JOINT		2	


TS04811040000K AIR CONDITION ASSEMBLY-CAB

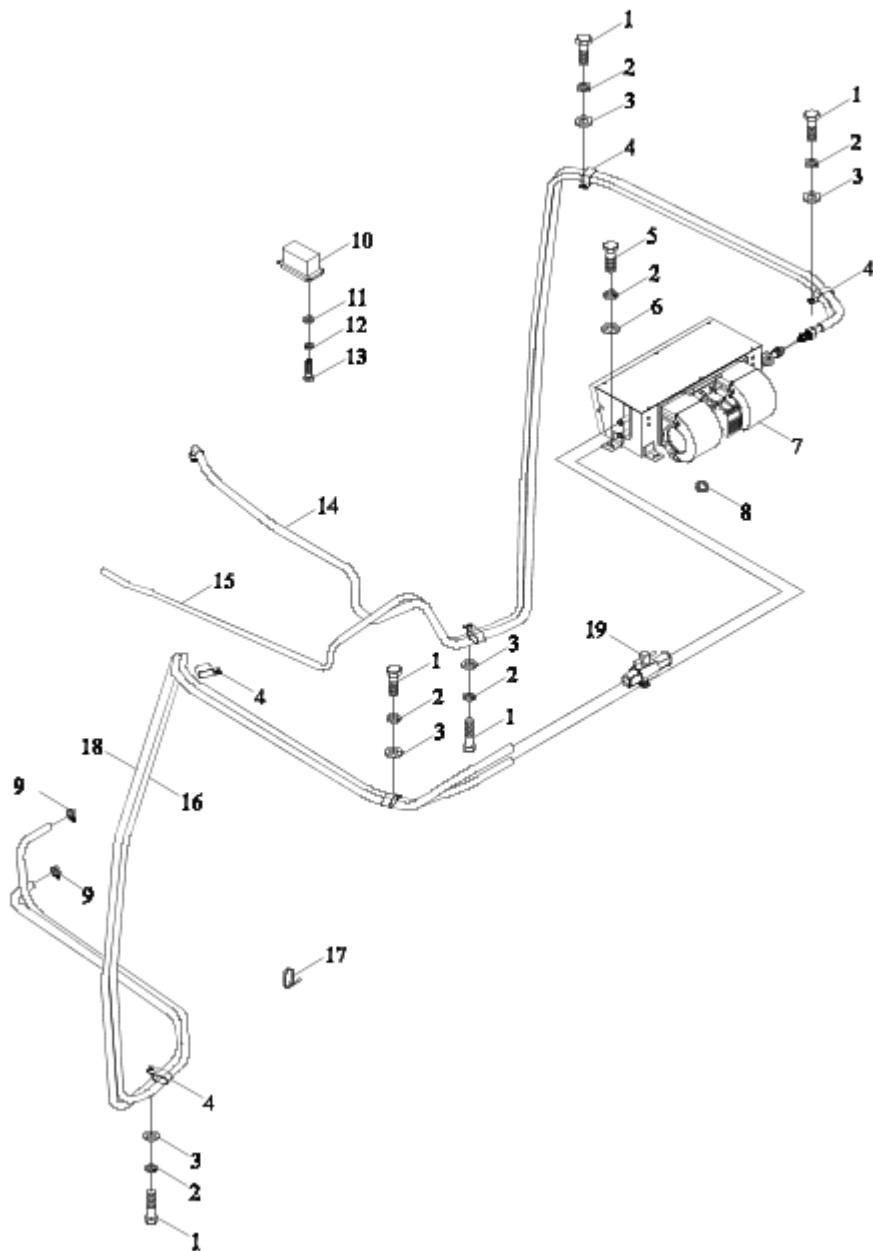

TS04811040000K AIR CONDITION ASSEMBLY-CAB

No.	Part No.	Description	Ver-sion	QTY.	Remark
	TS04811040000K	AIR CONDITION ASSEMBLY-CAB		1	
1	GBT5783-M8X16-8.8-A2L	HEXAGON BOLT		4	
2	GBT93-8-A0P	STANDARD SPRING WASHER		10	
3	GBT97.1-8-A0P	FLAT WASHER		6	
4	TS06811010007	LOCKING CLAMP		6	
5	GBT5783-M8X25-8.8-A2L	HEXAGON BOLT		6	
6	GBT96.1-8-A2	BIG WASHER		4	
7	TS06811010002	EVAPORATOR		1	
8	TS06811010013	PROTECTINGRING		4	
9	Q676B25	C-TYPE WORM TRANSMISSION HOSE CLAMP		4	
10	TS06811010001	CONTROL PANEL		1	
11	GBT97.1-5-A0P	FLAT WASHER		4	
12	GBT93-5-A0P	STANDARD SPRING WASHER		4	
13	GBT818-M5X16-4.8-A2L	CROSS SCREW		4	
14	TS04811030001K	PIPE		1	
15	TS04811010003	PIPE		1	
16	TC02811020002	WATER INLET HOSE OF WARM AIR		1	
17	Q67407200	PLASTIC FASTENING STRIP		16	
18	TS04810010002K	WATER OUT HOSE OF WARM AIR		1	
19	TS04812010010	HEATER WATER INLET VALVE		1	


TS04812040000K AIR CONDITION ASSEMBLY-ENGINE

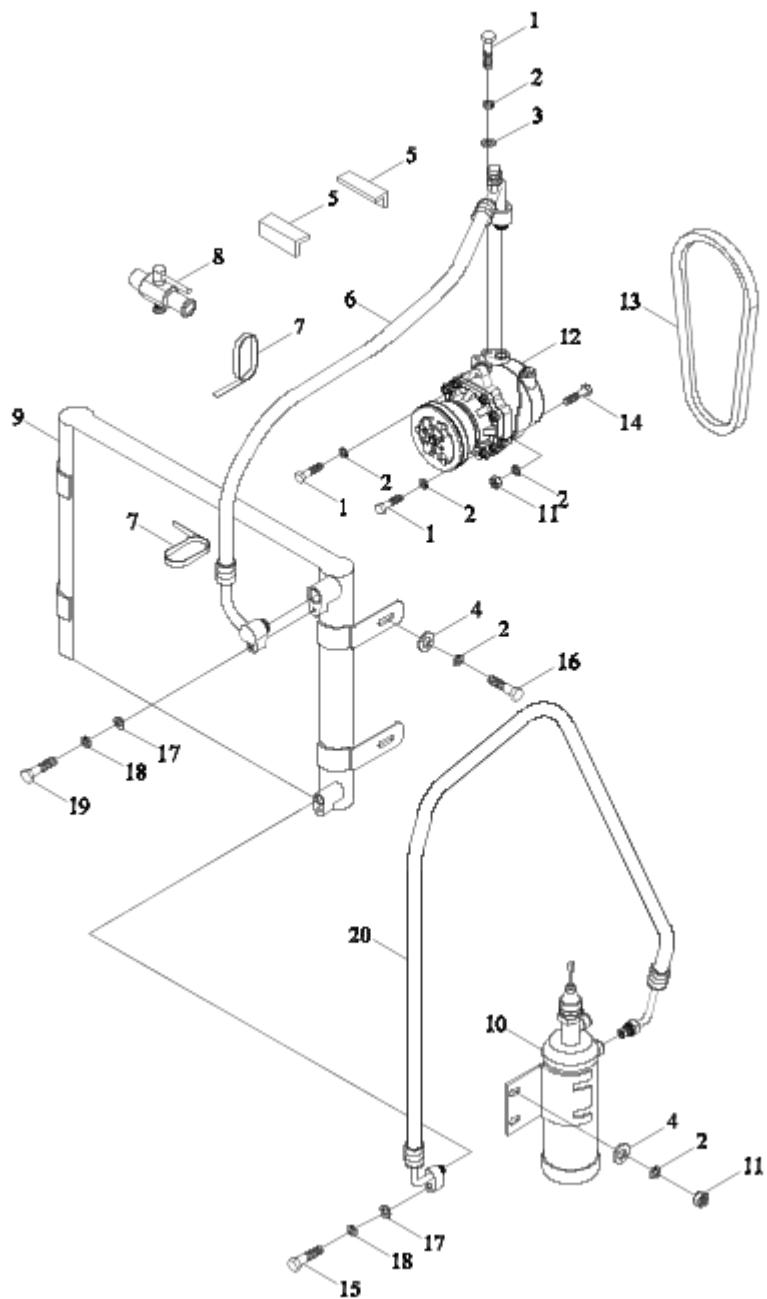

TS04812040000K AIR CONDITION ASSEMBLY-ENGINE

No.	Part No.	Description	Ver-sion	QTY.	Remark
	TS04812040000K	AIR CONDITION ASSEMBLY-ENGINE		1	
1	GBT5783-M8X30-8.8-A2L	HEXAGON BOLT		4	
2	GBT93-8-A0P	STANDARD SPRING WASHER		11	
3	GBT97.1-8-A0P	FLAT WASHER		4	
4	GBT96.1-8-A0P	BIG WASHER		6	
5	TS06812010005	GLUEPIECE		2	
6	TS04812040001K	CONDENSER-COMPRESSOR HIGH PRESSURE HOSE		1	
7	Q67407200	PLASTIC FASTENING STRIP		6	
8	TS04812010010	HEATER WATER INLET VALVE		1	
9	TS04812010001	CONDENSER ASSEMBLY		1	
10	TS04812010003	LIQUID TANK		1	
11	GBT6170-M8-8-A2L	HEXAGON NUT, TYPE-1		3	
12	TS04812010007	COMPRESSOR		1	
13	GBT1171-Z800	V-BELT		1	
14	GBT5783-M8X40-8.8-A2L	HEXAGON BOLT		1	
15	GBT5783-M6X25-8.8-A2L	HEXAGON BOLT		1	
16	GBT5783-M8X16-8.8-A2L	HEXAGON BOLT		4	
17	GBT97.1-6-A0P	FLAT WASHER		2	
18	GBT93-6-A0P	STANDARD SPRING WASHER		2	
19	GBT5783-M6X30-8.8-A2L	HEXAGON BOLT		1	
20	TS04812010004	CONDENSER-DRYING BOTTLE HIGH PRESSURE HOSE		1	

FT300. 91. 001 REAR BALLAST ASSEMBLY

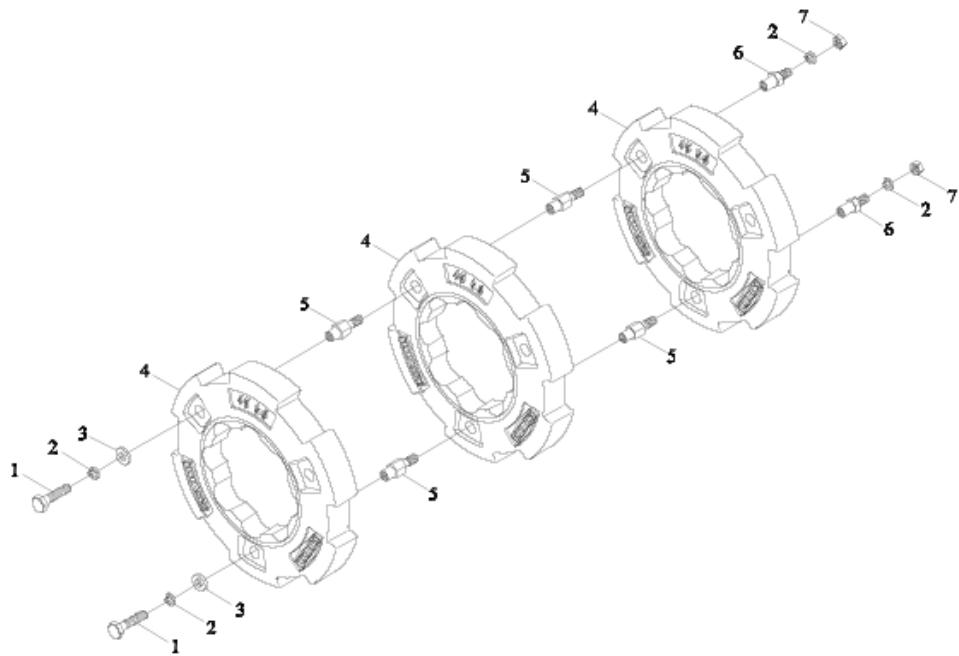

FT300. 91. 001 REAR BALLAST ASSEMBLY

No.	Part No.	Description	Ver-sion	QTY.	Remark
1	GBT5783-M16X45-8.8-A3L	BOLT		3	
2	GBT93-16-A0P	WASHER		6	
3	FT650.34.104	WASHER		3	
4	FT300.91.101	REAR BALLAST		3	
5	FT650.34.103	REAR BALLAST SCREW 2		6	
6	FT400.91.102	REAR BALLAST SCREW I		3	
7	GBT6170-M16-8-A3L	NUT		3	