

(TE2SA354-009C)


CONTENTS

◆ 4L22BT-1M9 ENGINE ASSY.....	1
◆ TE2S110010000K AIR FILTER SYSTEM ASSEMBLY.....	36
◆ TE2S131010000K COOLING SYSTEM ASSEMBLY.....	38
◆ TE2S133010000K GUARD NET ASSEMBLY.....	40
◆ TL02201060000 HAND THROTTLE CONTROL ASSEMBLY.....	42
◆ TL02202070000a FOOT THROTTLE CONTROL ASSEMBLY.....	44
◆ TE2S203010000K PULL WIRE ASSEMBLY.....	46
◆ TE2S211010000K CLUTCH ASSEMBLY.....	48
◆ TE2S212010000K CLUTCH CONTROL ASSEMBLY.....	50
◆ TE2S220010000K EXHAUST SYSTEM ASSEMBLY.....	53
◆ TL02311010000 FRONT DRIVING AXLE ASSEMBLY.....	55
◆ TE2S312010000K BRACKET ASSEMBLY.....	70
◆ TE254. 313G FRONT SUPPORT SEAT ASSEMBLY.....	72
◆ TE254. 314 REAR SUPPORTING SEAT ASSEMBLY.....	74
◆ TL01320010000K FRONT DRIVING WHEEL ASSEMBLY.....	76
◆ TL02340020000K REAR DRIVING WHEEL ASSEMBLY 12. 4-24.....	78
◆ TL01350010000K TOWING MECHANISM INSTALLATION ASSEMBLY.....	80
◆ TE2S361010000K SHUTTLE SHIFT ASSEMBLY.....	82
◆ TE2S362010000K SHUTTLE SHIFT CONTROL MECHANISM ASSEMBLY.....	88
◆ TE2S371010000K MAIN/AUXILIARY GEARSHIFT ASSEMBLY.....	90
◆ TE2S372010000K REAR CENTRAL ASSEMBLY OF TRANSMISSION CASE.....	95
◆ TE2S373010000K TRANSMISSION CASE CONTROL MECHANISM ASSEMBLY.....	101
◆ TE2S374010000K TRANSMISSION CASE SHELL ASSEMBLY.....	110

◆ TL02375080000 BREATH ASSEMBLY.....	112
◆ TE2S391010000K LEFT HALF SHAFT ASSEMBLY.....	114
◆ TE2S392010000K RIGHT HALF SHAFT ASSEMBLY.....	116
◆ TE2S401010000K STEERING PLATE AND STEERING PIPE COLUMN ASSEMBLY.....	118
◆ TE2S402010000K STEERING PIPE ASSEMBLY.....	120
◆ TE2S403010000K LOW PRESSURE CONTROL PIPE ASSEMBLY.....	126
◆ TE2S411010000K PTO SHAFT ASSEMBLY.....	128
◆ TE2S412010000K PTO GEAR ASSEMBLY.....	130
◆ TE2S413010000K PTO CONTROL ASSEMBLY.....	134
◆ TE254. 421B TRANSFER CASE ASSEMBLY.....	137
◆ TE354. 422 TRANSFER CASE TRANSMISSION SHAFT ASSEMBLY.....	140
◆ TL02423020000 TRANSFER CASE CONTROL ASSEMBLY.....	142
◆ TE2S431010000K LEFT BRAKE ASSEMBLY.....	145
◆ TE2S432010000K RIGHT BRAKE ASSEMBLY.....	147
◆ TE2S433010000K BRAKE CONTROL ASSEMBLY.....	150
◆ TE2S440010000K SEAT INSTALLATION ASSEMBLY.....	158
◆ TE2S451010000K DRIVER’ S CAB ASSEMBLY.....	160
◆ TE2S453010000K UPHOLSTERY ASSEMBLY.....	173
◆ TE2S453020000K UPHOLSTERY ASSEMBLY.....	175
◆ TL02455010000 BACK REAR MUD GUARD DECORATION PART.....	177
◆ TE2S456010000K DASHBOARD ASSEMBLY.....	179
◆ TL02457020000 FRONT CONNECTING ASSEMBLY.....	181
◆ TL02458030000 REAR CONNECTING ASSEMBLY.....	183
◆ TE2S471010000K BONNET INSTALLATION ASSEMBLY.....	185

◆ TE2S473010000K BONNET LOCKING DEVICE ASSEMBLY.....	188
◆ TE2S475010000K BONNET SEAL INSTALLATION ASSEMBLY.....	190
◆ TE2S481010000K ENGINE HARNESS INSTALLATION ASSEMBLY.....	192
◆ TE2S482010000K BODY HARNESS INSTALLATION ASSEMBLY.....	194
◆ TE2S483010000K FRONT LAMP HARNESS INSTALLATION ASSEMBLY.....	197
◆ TE2S484010000K REAR LAMP HARNESS INSTALLATION ASSEMBLY.....	199
◆ TE2S485010000K BATTERY INSTALLATION ASSEMBLY.....	202
◆ TE2S486010000K TOP LIGHT HARNESS INSTALLATION ASSEMBLY.....	204
◆ TE2S487020000K COMBINED INSTRUMENT ASSEMBLY.....	206
◆ FT250. 49. 001 TOOL BOX INSTALLATION ASSEMBLY.....	208
◆ TE2S501010000K OIL TANK INSTALLATION ASSEMBLY.....	210
◆ TE2S503010000K OIL CONVEYING PIPE ASSEMBLY.....	212
◆ TL02551050000 LIFTER INSTALLATION ASSEMBLY.....	214
◆ TL02561050000 SUSPENSION ASSEMBLY.....	220
◆ TL02570050000 DISTRIBUTOR ASSEMBLY.....	226
◆ TE2S581010000K OIL PUMP/PIPE/FILTER ASSEMBLY.....	230
◆ TE2S582010000K MULTI-WAY VALVE OIL PIPE ASSEMBLY.....	233
◆ TC03620010000K SAFETY BELT INSTALLATION ASSEMBLY.....	238
◆ TE254. 742 FRONT BALLAST ASSEMBLY.....	240
◆ TE2S810010000K HEATER INSTALLATION.....	242
◆ FT250. 91B. 001 REAR BALLAST ASSEMBLY.....	244

4L22BT-1M9 ENGINE ASSY-1

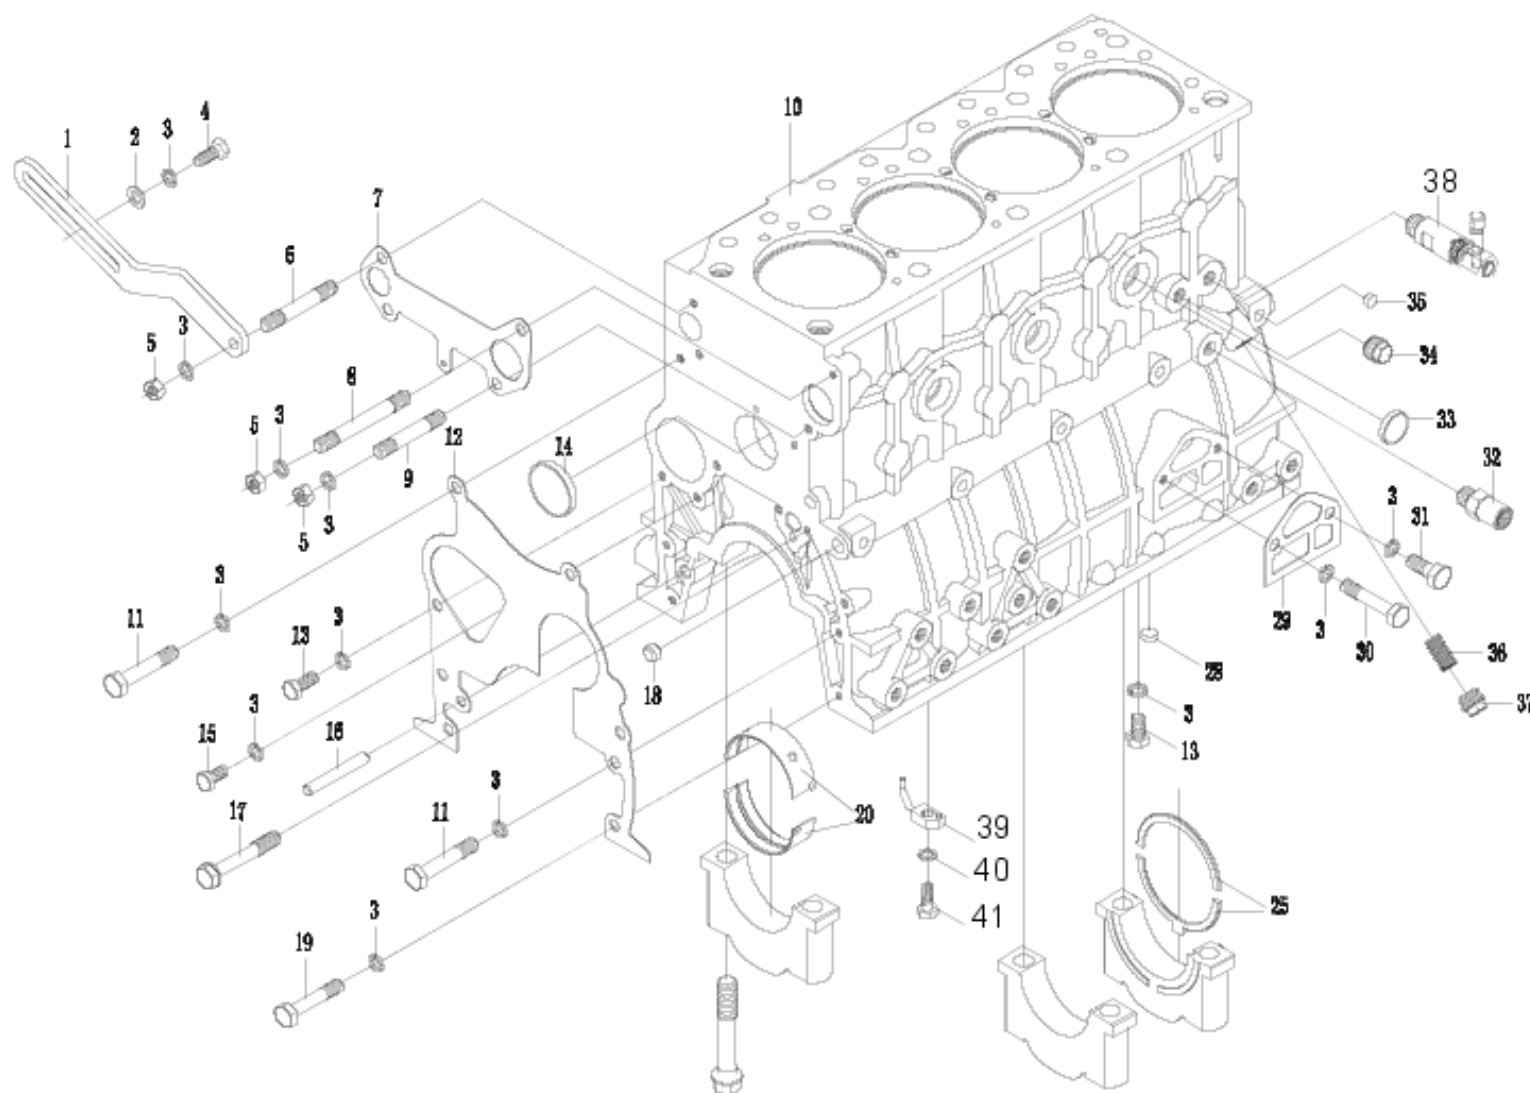


4L22BT-1M9 ENGINE ASSY-1

No.	Part No.	Description	Version	QTY.	Remark
0	4L22BT-1M9	ENGINE ASSY		1	
1	4L22-01029	GENERATOR ADJUSTABLE SPPORT		1	
2	GBT97. 1-8	WASHER		1	
3	GBT93-8	WASHER		35	
4	GBT5783-M8X35	BOLT		1	
5	GBT6170-M8	NUT		4	
6	GBT898-AM8X65	STUD		1	
7	4L22BT-01006	WATER PUMP REAR COVER GASKET		1	
8	GBT898-AM8X90-8. 8	STUD		1	
9	GBT898-AM8X60	STUD		2	
10	4L22BT-01110	CYLINDER BLOCK		1	
11	GBT5782-M8X55-8. 8	STUD		5	
12	L375-01007	GEAR CHAMBER GASKET		1	
13	GBT5783-M8X20	BOLT		2	
14	D495QB-03105	BLIND PLUG Φ 42		2	
15	GBT5783-M8X16-8. 8	BOLT		2	
16	GBT119-B8X60	PIN		1	
17	4L22BT-01021	BOLT		2	
18	L375-01104	MAIN OIL LINE PLUG		1	
19	GBT5782-M8X55-8. 8	STUD		2	
20	4L22-01015/01016	MAIN BEARING		5	
25	4L22-01007/01008	CRANKSHAFT THRUST PIECE		2	
28	D495QB-03109	BOWL SHIM Φ 12		1	

4L22BT-1M9 ENGINE ASSY-1 (cont'd.)

No.	Part No.	Description	Version	QTY.	Remark
29	L375-01027M	OIL FILTER GASKET		1	
29	KM385T-01027-1	OIL FILTER WASHER BLOCK		1	
30	GBT5782-M8X50-8.8	BOLT		1	
31	GBT5783-M8X25	BOLT		1	
32	L375-01035	OIL PRESSURE GAUGE JOINT		1	
33	D495QB-01024	BOWL SHIM $\Phi 32$		3	
34	D495QB-06111-1	SCREW PLUG		1	
35	L375-01105-1	TAPER PLUG		5	
36	4L22-01800	OIL PRESSURE ADJUSTING VALVE		1	
37	4L22-01026	SCREW PLUG		1	
38	4L22BT-01600SL	DRAIN VALVE BLOCK		1	
38.1	KM385T-01048	WATER DRAIN VALVE PIPE		1	
39	4L22-01700	NOZZLE		4	
40	4L22-01024	WASHER		4	
41	4L22-01025	BOLT FOR NOZZLE		4	

4L22BT-1M9 ENGINE ASSY-2

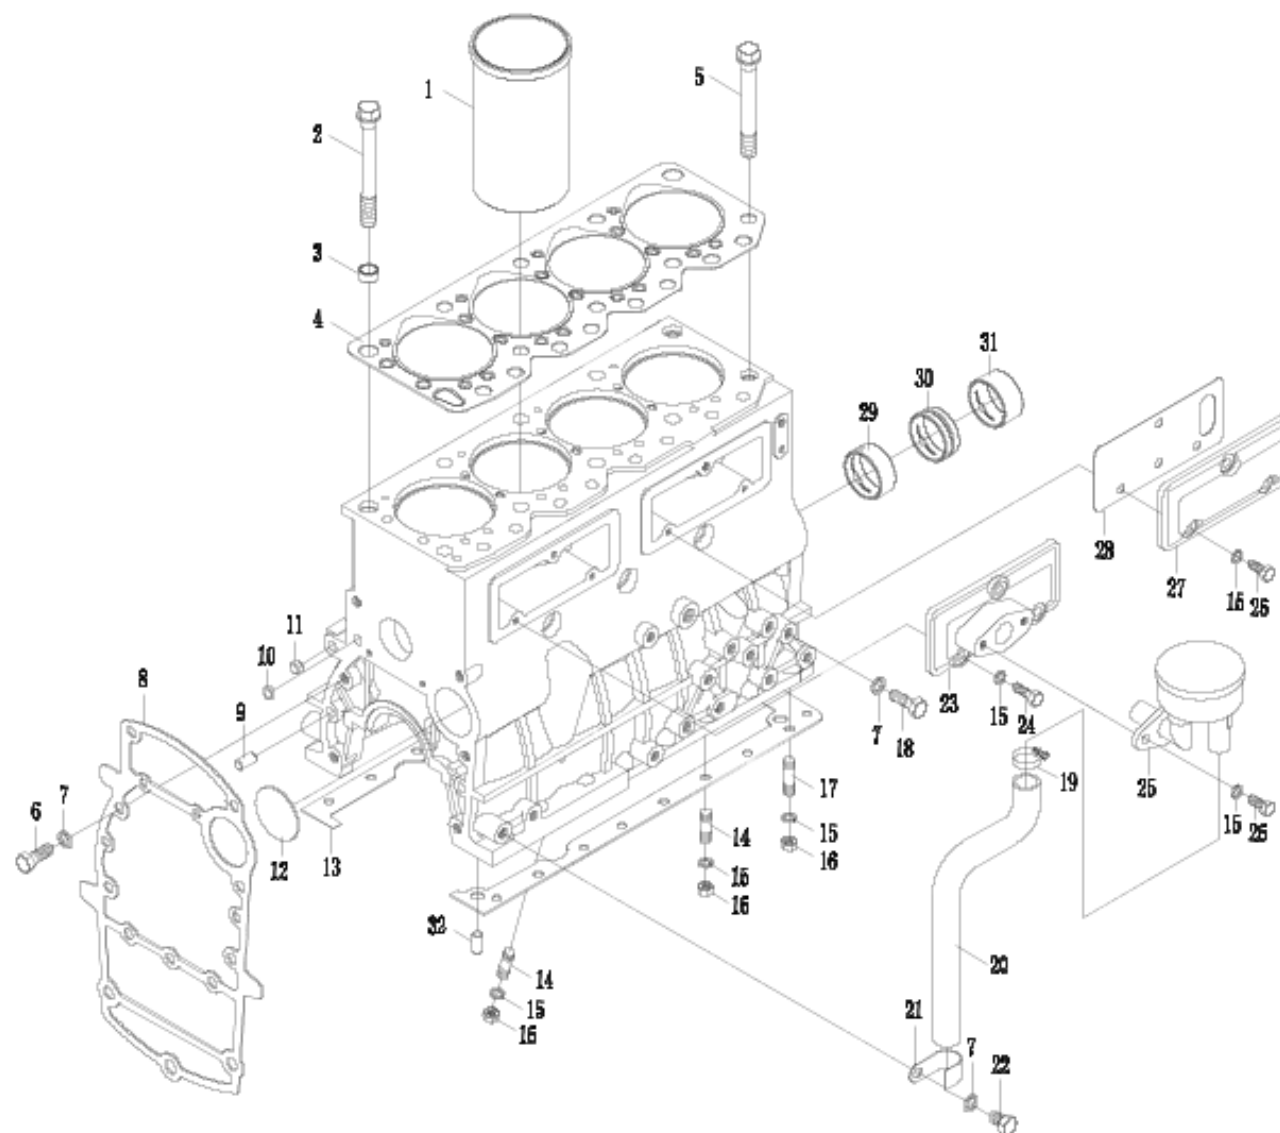


4L22BT-1M9 ENGINE ASSY-2

No.	Part No.	Description	Version	QTY.	Remark
1	4L22-01003	CYLINDER BUSH		4	
2	4L22BT-01005	CYLINDER COVER BOLT		8	
3	L375-01103	LOCATING SLEEVE		2	
4	4L22B-01002M1	CYLINDER COVER GASKET		1	
5	4L22BT-01005	CYLINDER COVER BOLT		2	
6	GBT5783-M10X30-8.8	BOLT		11	
7	GBT93-10	WASHER		18	
8	LL385BT-01018	FLYWHEEL HOUSING GASKET		1	
9	GBT119-B10X20	PIN		2	
10	L375-01115	PLUG PIECE		2	
11	L375-01104	MAIN OIL LINE PLUG		1	
12	L375-01102	PLUG PIECE		1	
13	4L22BT-01017M	OIL SUMP GASKET		1	
14	GBT898-AM8X22	STUD		20	
15	GBT93-8	WASHER		30	
16	GBT6170-M8	NUT		22	
17	GBT898-AM8X25	STUD		2	
18	GBT5783-M10X25	BOLT		6	
19	ZBT32005. 1- ϕ 27.5	CIRCLE CLAMP		1	
20	4L22B-01205	AIR OUTLET ELBOW PIPE OF BREATHER		1	
21	4L22BT-01206	FIXING CLAMP		1	
22	GBT5783-M10X25	BOLT		1	
23	KM485QB-01013	SIDE COVER-2		1	

4L22BT-1M9 ENGINE ASSY-2 (cont'd.)

No.	Part No.	Description	Version	QTY.	Remark
24	GBT5783-M8X20	BOLT		3	
25	KM485QB-01200-2	BREATHER PARTS		1	
26	GBT5783-M8X15	BOLT		3	
27	LL480-01012	SIDE COVER-1		1	
28	LL480-01014M1	SIDE COVER SPACER		2	
29	4L22-01117	REAR BUSH OF CAMSHAFT		1	
30	4L22-01116	MIDDLE BUSH OF CAMSHAFT		1	
31	4L22-01115	FRONT BUSH OR CAMSHAFT		1	
32	GBT119-C12X16	PIN		2	


4L22BT-1M9 ENGINE ASSY-3

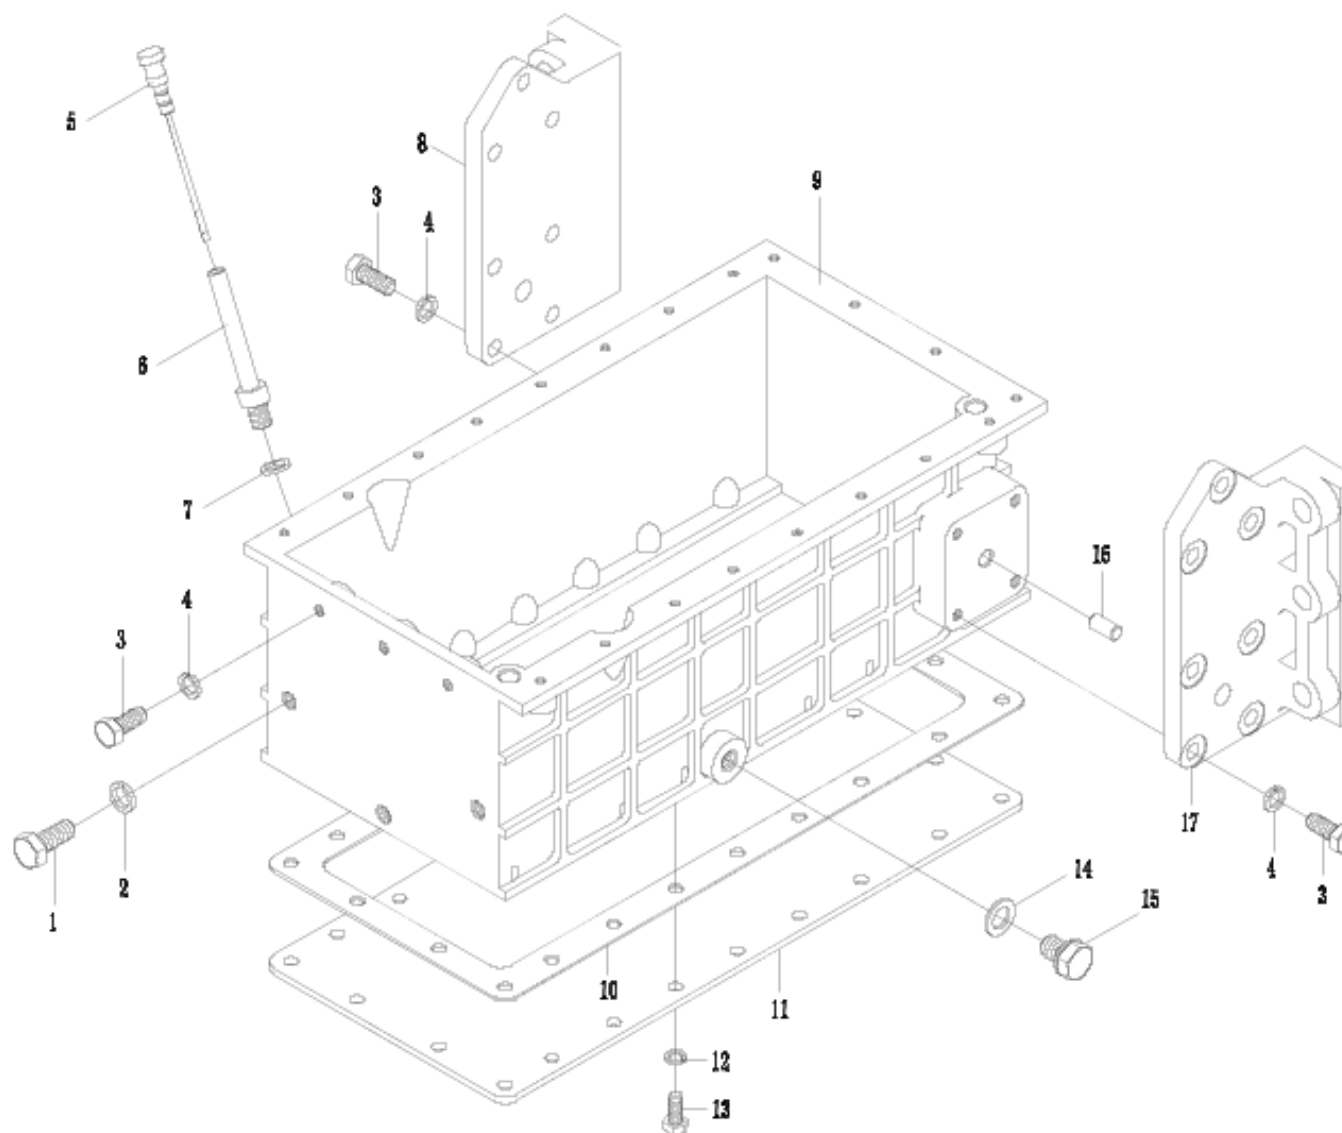

4L22BT-1M9 ENGINE ASSY-3

No.	Part No.	Description	Version	QTY.	Remark
1	GBT5783-M12X25-8.8	STUD		3	
2	GBT93-12	WASHER		3	
3	GBT5783-M10X25	STUD		17	
4	GBT93-10	WASHER		17	
5	4L22BT-01300-2	OIL DIPSTICK PARTS		1	
6	LL385BT-01320	OIL DIPSTICK PIPE WELDMENT		1	
7	195-13007	WASHER		1	
8	4L22BT-01016	LEFT BRACKET		1	
9	4TE35A-015101	OIL SUMP		1	
10	4L22BT-015111	OIL SUMP COVER GASKET		1	
11	4L22BT-015104-4	OIL SUMP COVER		1	
12	GBT93-8	WASHER		22	
13	GBT5783-M8X18	STUD		22	
14	LL380-01503	A TYPE COMBINED WASHER		1	
15	LL380-01501	OIL DISCHARGING SCREW PLUG		1	
16	GBT119-B10X20	PIN		2	
17	4L22BT-01019	LEFT BRACKET		1	


4L22BT-1M9 ENGINE ASSY-4

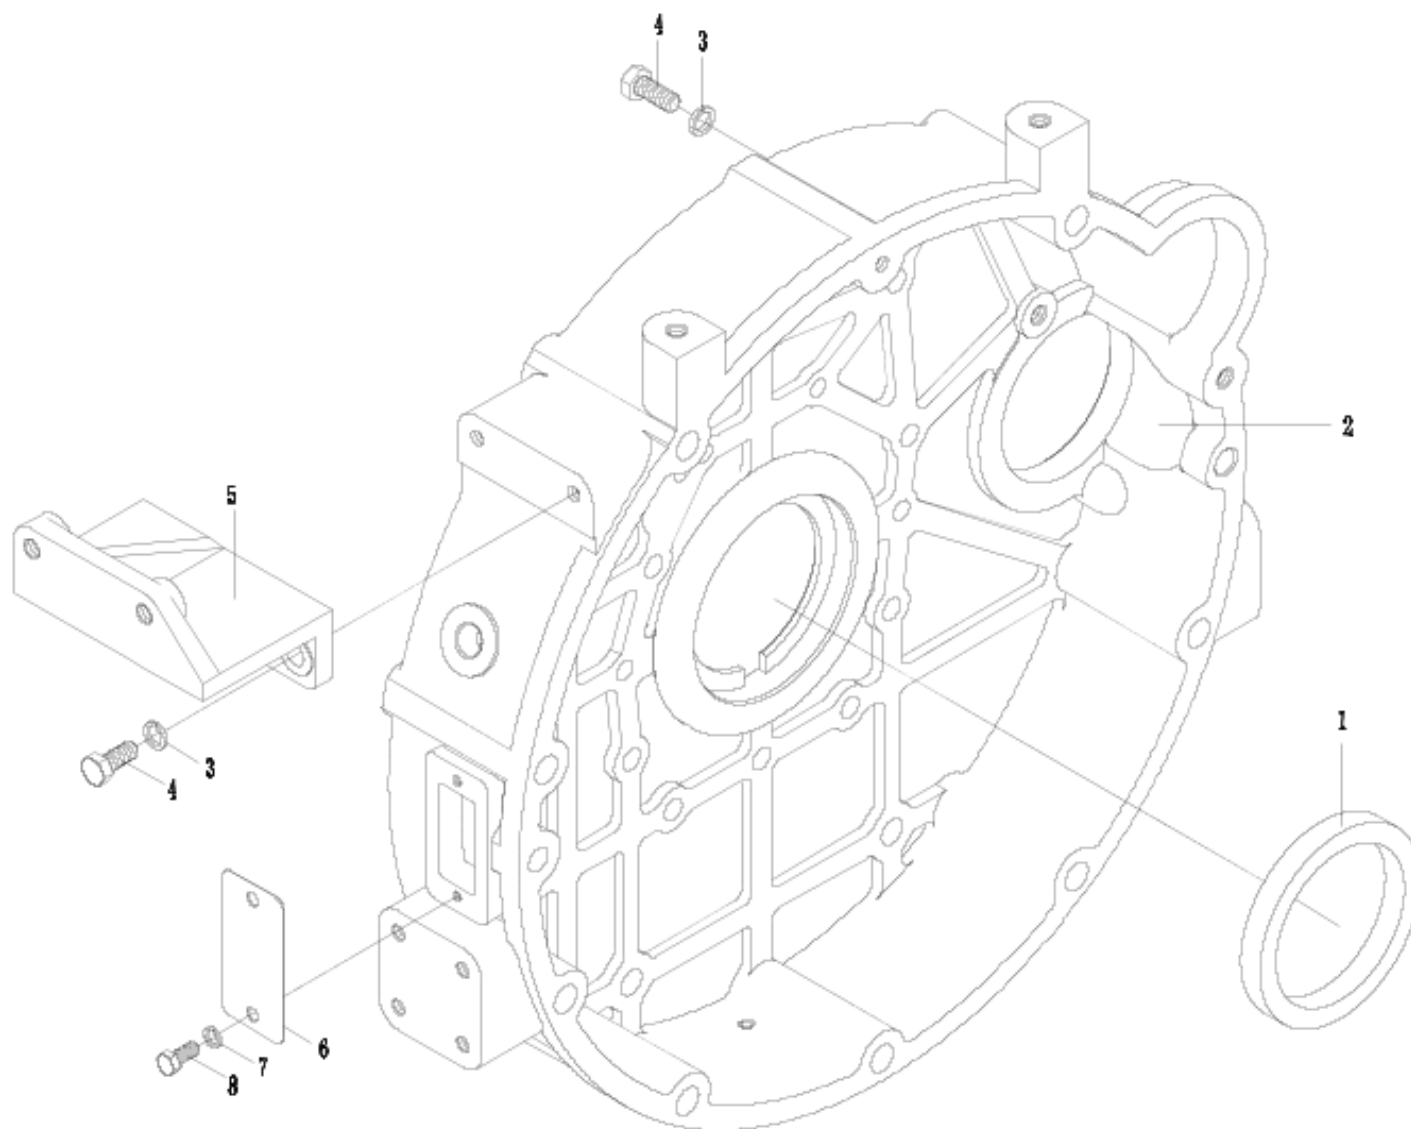

4L22BT-1M9 ENGINE ASSY-4

No.	Part No.	Description	Version	QTY.	Remark
1	GBT9877-DL80X100X12FJ	OIL SEAL		1	
2	LL385BT-01010	FLYWHEEL HOUSING		1	
3	GBT93-10	WASHER		2	
4	GBT5783-M10X30-8.8	BOLT		2	
5	4L22BT-01014	OIL FILTER BRACKET		1	
6	LL480-01025	COVER PLATE		1	
7	GBT93-8	WASHER		2	
8	GBT5783-M8X18	BOLT		2	

4L22BT-1M9 ENGINE ASSY-5

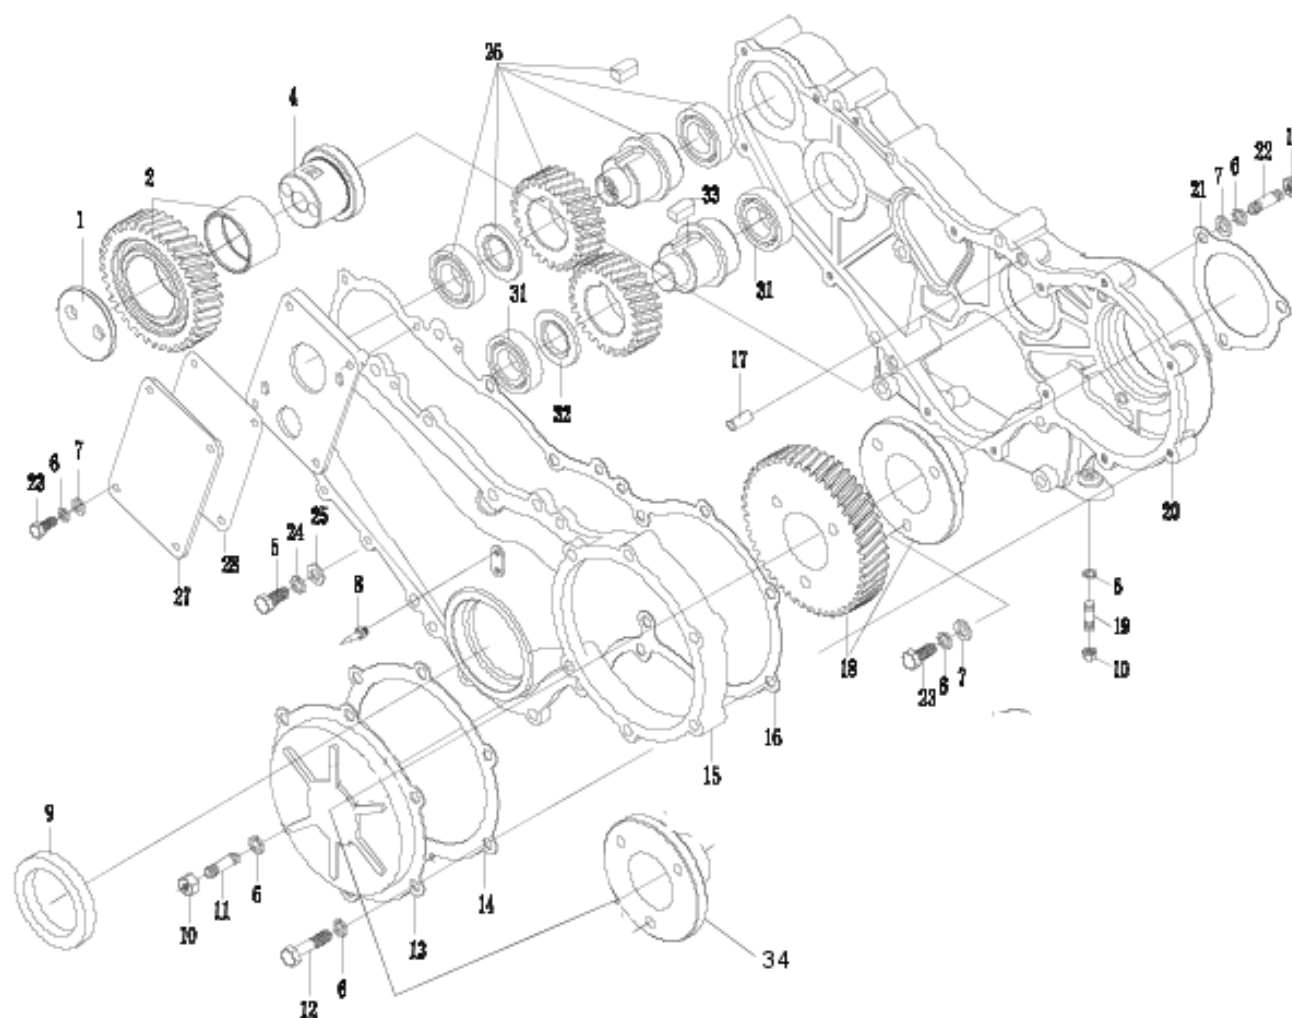


4L22BT-1M9 ENGINE ASSY-5

No.	Part No.	Description	Version	QTY.	Remark
1	4L22BT-01020	IDLE GEAR PRESSURE PLATE		1	
2	4L22BT-01200	IDLE GEAR BUSH WELDMENT		1	
4	4L22BT-01015	TIMING IDLE GEAR SHAFT		1	
5	GBT5783-M10X20-8.8	BOLT		10	
6	GBT93-8	WASHER		20	
7	GBT97. 1-8	WASHER		17	
8	KM385T-01034	UPPER DEATH POINT FINGER		1	
9	GBT9877-DR55X75X12FJ	OIL SEAL		1	
10	GBT6170-M8	NUT		5	
11	GBT898-AM8X40	STUD		1	
12	GBT5782-M8X40	BOLT		5	
13	4L22BT-01025	GEAR CASE FRONT COVER		1	
14	4L22BT-01030	GEAR CASE FRONT COVER GASKET		1	
15	4L22BT-01008	TIMING GEAR CASE COVER		1	
16	4L22BT-01009	TIMING GEAR COVER GASKET		1	
17	GBT119-B8X18	PIN		1	
18	4L22BT-01011	OIL INJECTION PUMP TIMING GEAR		1	
19	GBT898-AM8X16	STUD		4	
20	4L22BT-01007L	TIMING CASE		1	
21	4L22BZ-01010	OIL INJECTION PUMP GASKET		1	
22	GBT898-AM8X30-8.8	STUD		3	
23	GBT5783-M8X20	BOLT		7	
24	GBT93-10	WASHER		10	

4L22BT-1M9 ENGINE ASSY-5 (cont'd.)

No.	Part No.	Description	Version	QTY.	Remark
25	GBT97.1-10	WASHER		10	
26	4TE35A-01700	HYDRAULIC TRANSMISSION PARTS		1	
27	TL4110-06027	HYDRAULIC PUMP COVER		1	
28	KM385T-01039-1	HYDRAULIC PUMP WASHER		1	
31	GBT297-6205	DEEP GROOVE BALL BEARING		3	
32	KM385T-01045	BEARING RETAINER RING		2	
33	GBT1096-C8X20	FLAT KEY		2	
34	4L22BT-01012-1	AIR COMPRESSOR ADAPTER		1	


4L22BT-1M9 ENGINE ASSY-6

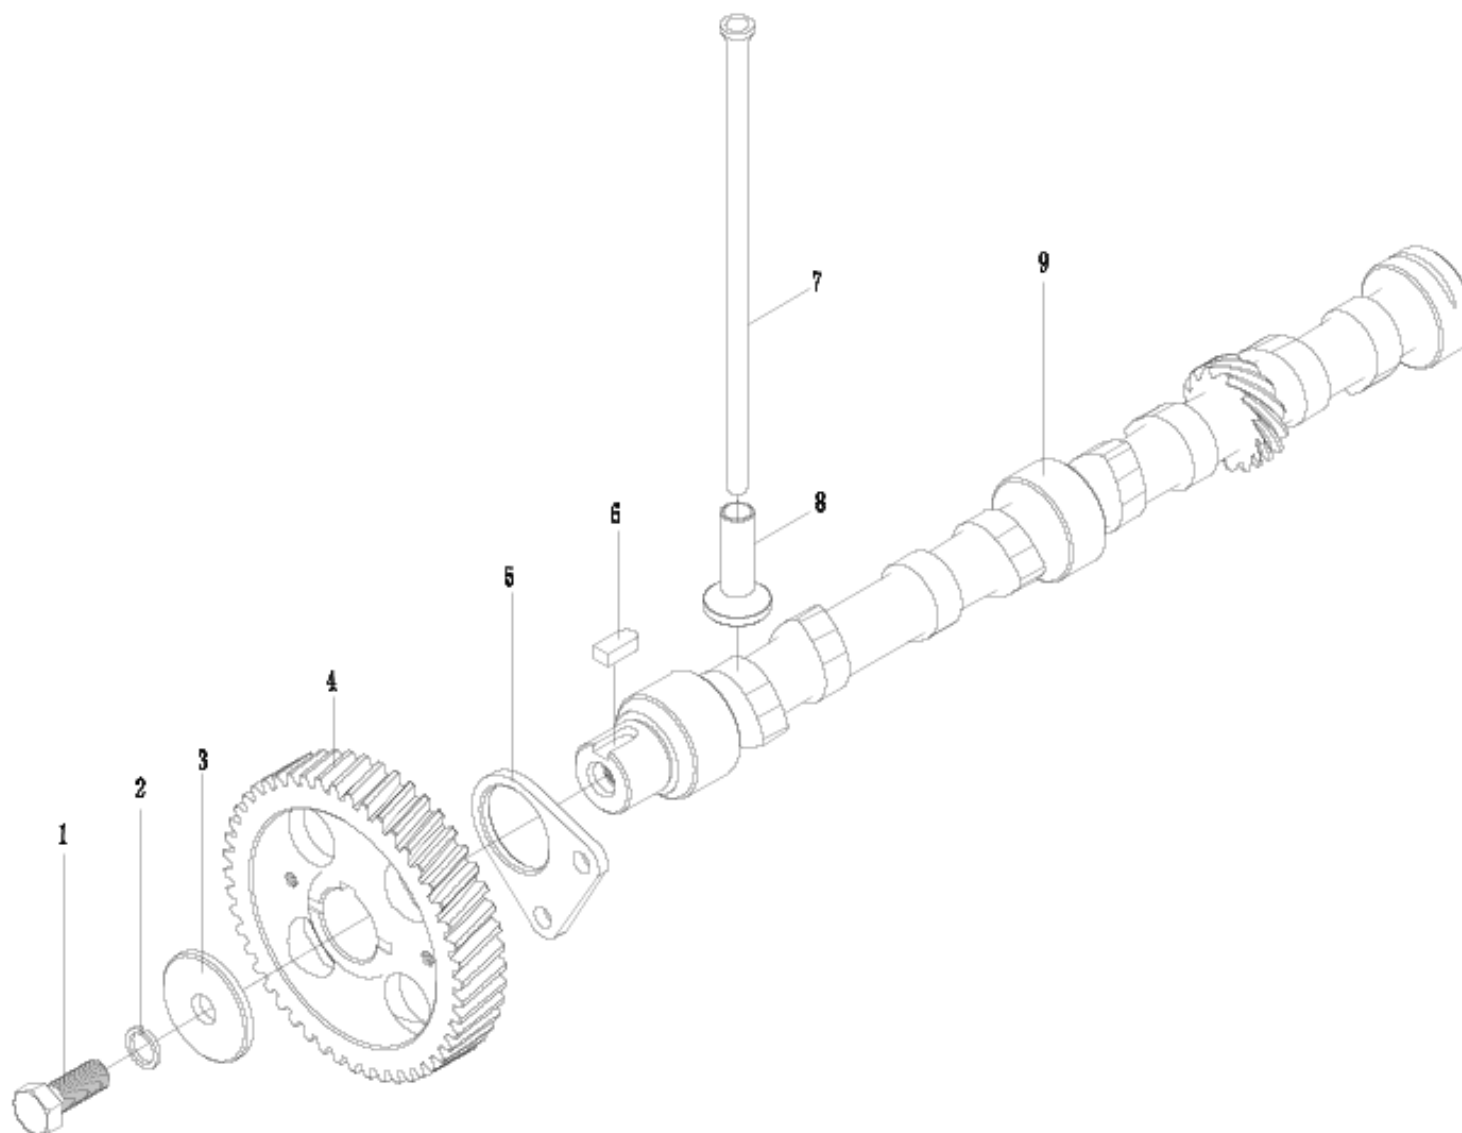

4L22BT-1M9 ENGINE ASSY-6

No.	Part No.	Description	Version	QTY.	Remark
1	GBT5783-M12X35	BOLT		1	
2	GBT93-12	WASHER		1	
3	L375-02004	CAMSHAFT GEAR CIRCLIP		1	
4	4L22BT-02011	CAMSHAFT TIMING GEAR		1	
5	L375-02002	CAMSHAFT THRUST PLATE		1	
6	GBT1096-C8X18	KEY		1	
7	4L22-02003	PUSH ROD		8	
8	L375-02005	TAPPET		8	
9	4L22-02001L	CAMSHAFT		1	

4L22BT-1M9 ENGINE ASSY-7

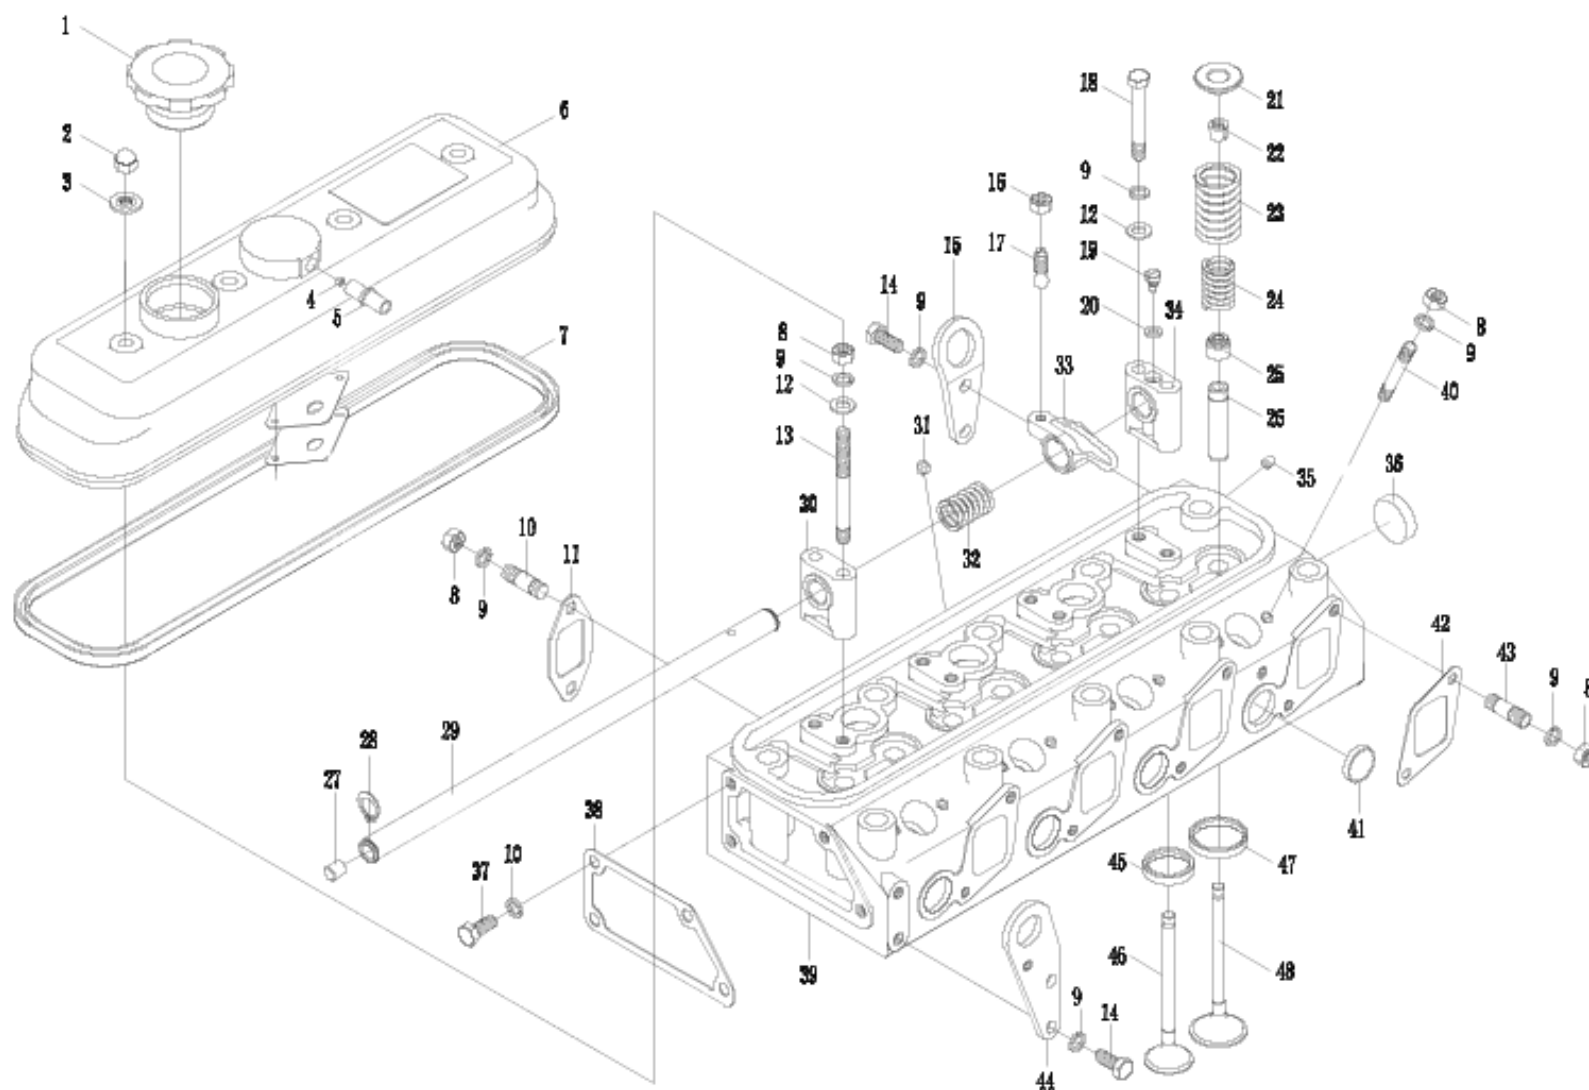

4L22BT-1M9 ENGINE ASSY-7

No.	Part No.	Description	Version	QTY.	Remark
1	4TE35A-033100	FILLING CAP		1	
2	GBT923-M8	CAP NUT		4	
3	L375-03017	ANTILEAK WASHER		4	
4	KM385T-03305	AIR OUTLET PIPE PLUG		1	
5	D495QB-012106	AIR OUTLET PIPE		1	
6	4L22BZ-03301L	CYLINDER COVER		1	
7	4L22B-03002	CYLINDER COVER GASKET		1	
8	GBT6170-M8	NUT		28	
9	GBT93-8	WASHER		44	
10	GBT898-AM8X30-8. 8	STUD		8	
11	4L22-03006	EXHAUST PIPE GASKET		4	
12	GBT97. 1-8	WASHER		8	
13	L375-03001	ROCKER SEAT FASTENING BOLT		4	
14	GBT5783-M8X20	BOLT		4	
15	L375-03012	REAR HANGING RING		1	
16	GBT6171-M8	NUT		8	
17	LL480B-03201	VALVE CLEARANCE ADJUSTING SCREW		8	
18	GBT5782-M8X60-8. 8	BOLT		4	
19	L375-03206	ROCKER SHAFT LOCATING SCREW		1	
20	GBT848-6	WASHER		1	
21	4L22BT-03009	VALVE SPRING UPPER SEAT		8	
22	LL480B-03008	VALVE COLLET		16	
23	4L22-03015	VALVE OUTER SPRING		8	


4L22BT-1M9 ENGINE ASSY-7 (cont'd.)

No.	Part No.	Description	Version	QTY.	Remark
24	4L22-03007	VALVE INNER SPRING		8	
25	LL480B-03019	VALVE OIL SEAL		8	
26	KM485QB-03102	VALVE GUIDE PIPE		8	
27	L375-01115	PLUG PIECE		2	
28	GBT894.1-16	RETAINER RING		2	
29	4L22-03205	ROCKER SHAFT		1	
30	L375-03202	ROCKER SHAFT SUPPORT SEAT		3	
31	L375-03107	PLUG PIECE		4	
32	L375-03204	ROCKER SHAFT SPRING		3	
33	4L22B-03220H	AIR INLET VALVE ROCKER UNIT		4	
33	4L22B-03210H	EXHAUST ROCKER UNIT		4	
34	L375-03207	ROCKER SHAFT REAR SEAT		1	
35	D495QB-03110	OIL WAY PLUG		1	
36	D495QB-01024	PLUG PIECE		1	
37	GBT5783-M8X25	BOLT		4	
38	L375-03010	THERMOSTAT HOUSING GASKET		1	
39	4L22BZ-03100	CYLINDER COVER		1	
40	GBT898-AM8X60	STUD		8	
41	L375-03106	PLUG PIECE		4	
42	4L22BZ-03013	AIR INLET PIPE GASKET		4	
43	GBT898-AM8X25	STUD		8	
44	4TE35A-03010	FRONT HOISTING RING		1	

4L22BT-1M9 ENGINE ASSY-7 (cont'd.)

No.	Part No.	Description	Version	QTY.	Remark
45	4L22-03104	EXHAUST VALVE SEAT		4	
46	4L22-03004	EXHAUST VALVE		4	
47	4L22BZ-03103	AIR INLET VALVE SEAT		4	
48	4L22BZ-03005	AIR INLET VALVE		4	


4L22BT-1M9 ENGINE ASSY-8

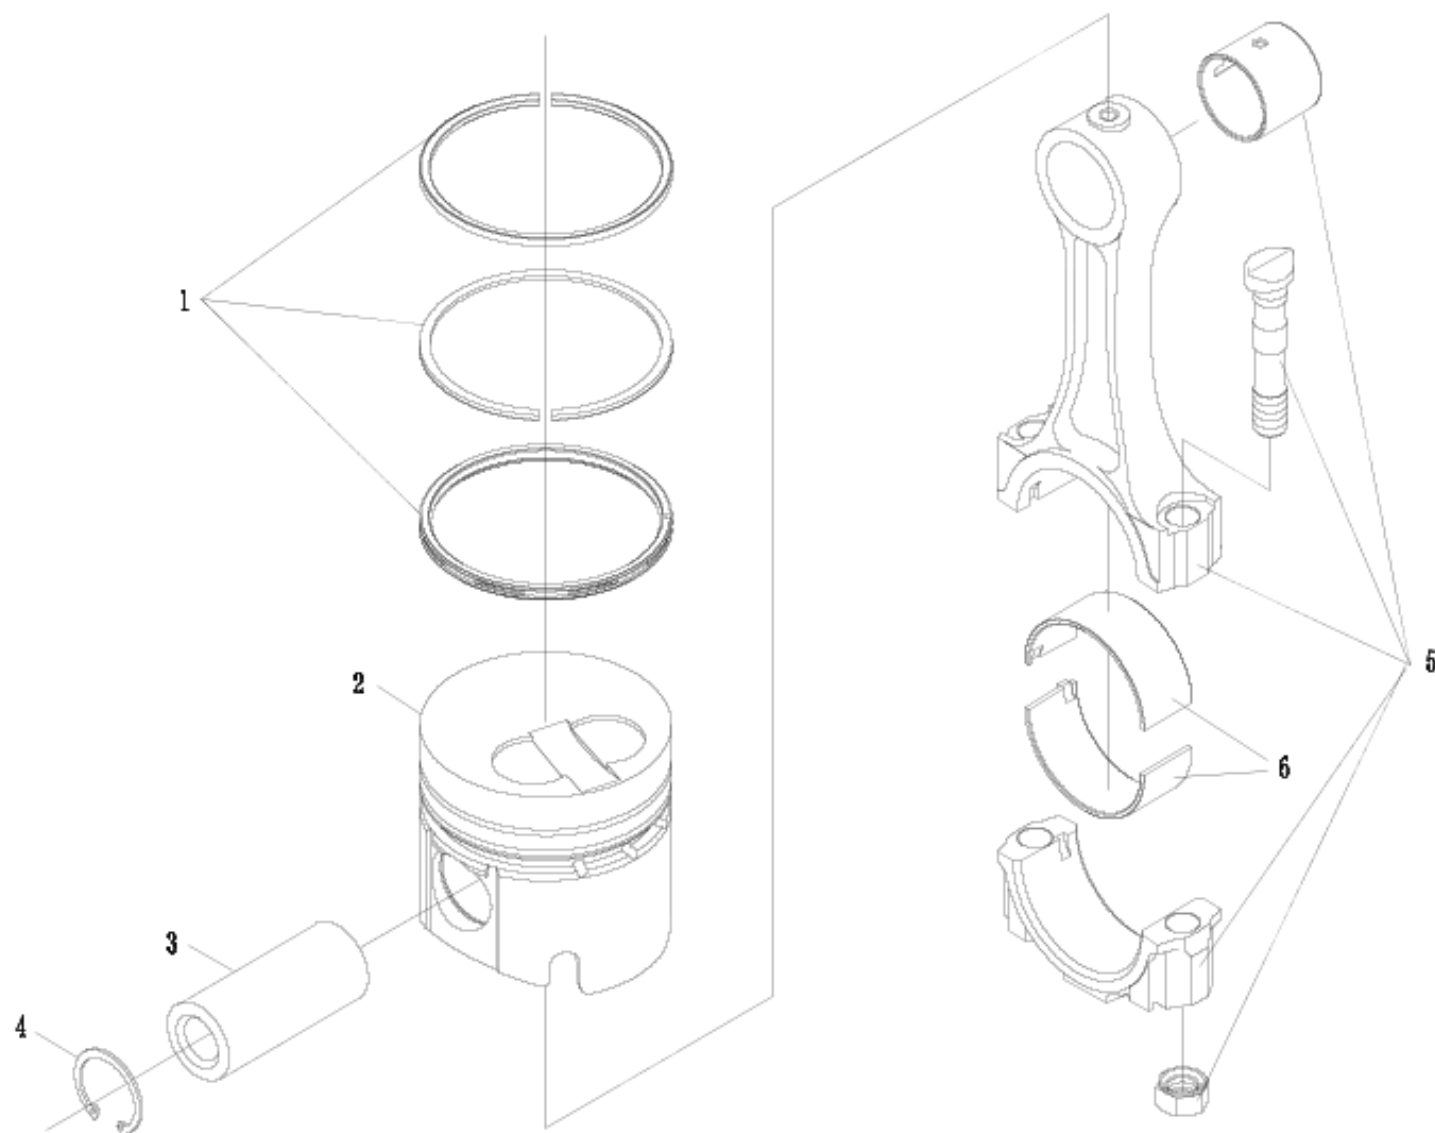

4L22BT-1M9 ENGINE ASSY-8

No.	Part No.	Description	Version	QTY.	Remark
1	KM485QB-04010S	PISTON RING ASSEMBLY		1	
2	4L22B-04005L	PISTON		1	
3	4L22-04004	PISTON PIN		1	
4	4L22-04006	CIRCLIP		2	
5	4L22-04200	CONNECTING ROD ASSEMBLY		1	
6	4L22-04003	CONNECTING ROD BEARING		2	


4L22BT-1M9 ENGINE ASSY-9

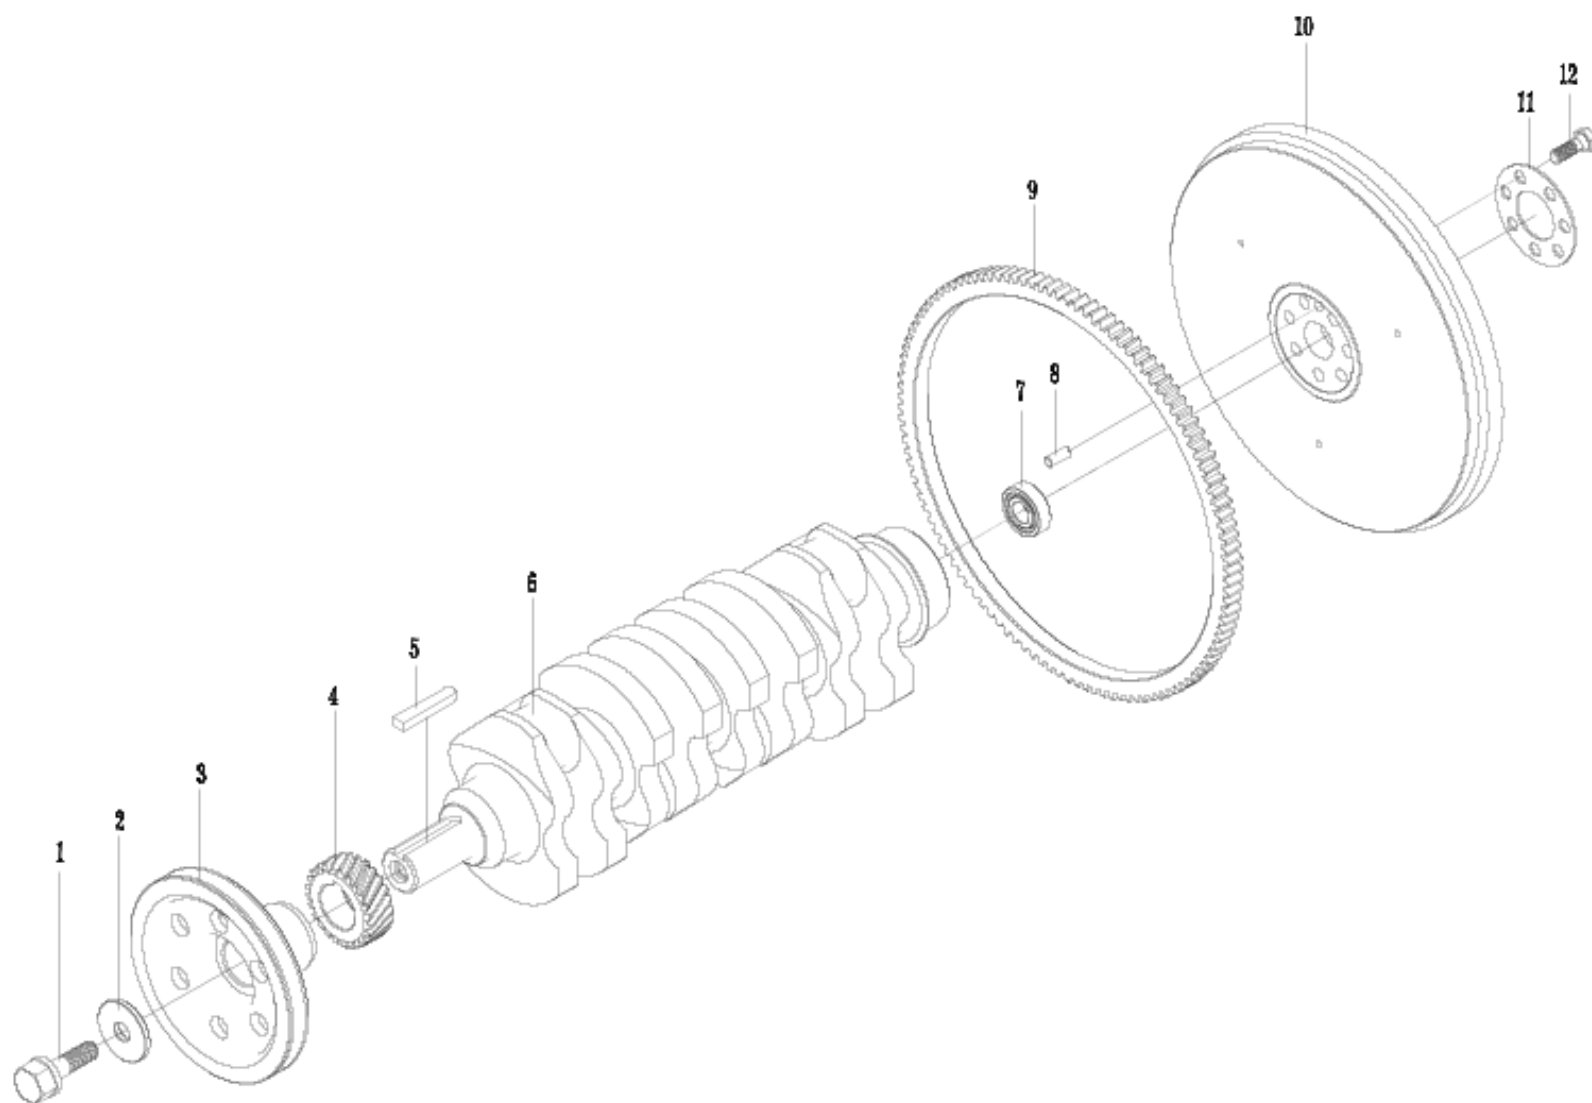

4L22BT-1M9 ENGINE ASSY-9

No.	Part No.	Description	Version	QTY.	Remark
1	L375-05006	STARTING CLAW		1	
2	L375-05005	STARTING CLAW MAT PLATE		1	
3	4TE35A-05005	CRANKSHAFT BELT PULLEY		1	
4	KM385T-05007	CRANKSHAFT TIMING GEAR		1	
5	GBT1096-C10X63	KEY		1	
6	4L22BT-05003	CRANKSHAFT		1	
7	GBT276-6203-2RS	single-row radial thrust ball bearing		1	
8	GBT119-B8X20	PIN		1	
9	LL480-05102	GEAR RING		1	
10	4L22BT-05101-31	FLYWHEEL		1	
11	KM390BT-05002	FLYWHEEL BOLT BACKING PLATE		1	
12	KM390BT-05001-2	FLYWHEEL BOLT		7	


4L22BT-1M9 ENGINE ASSY-10

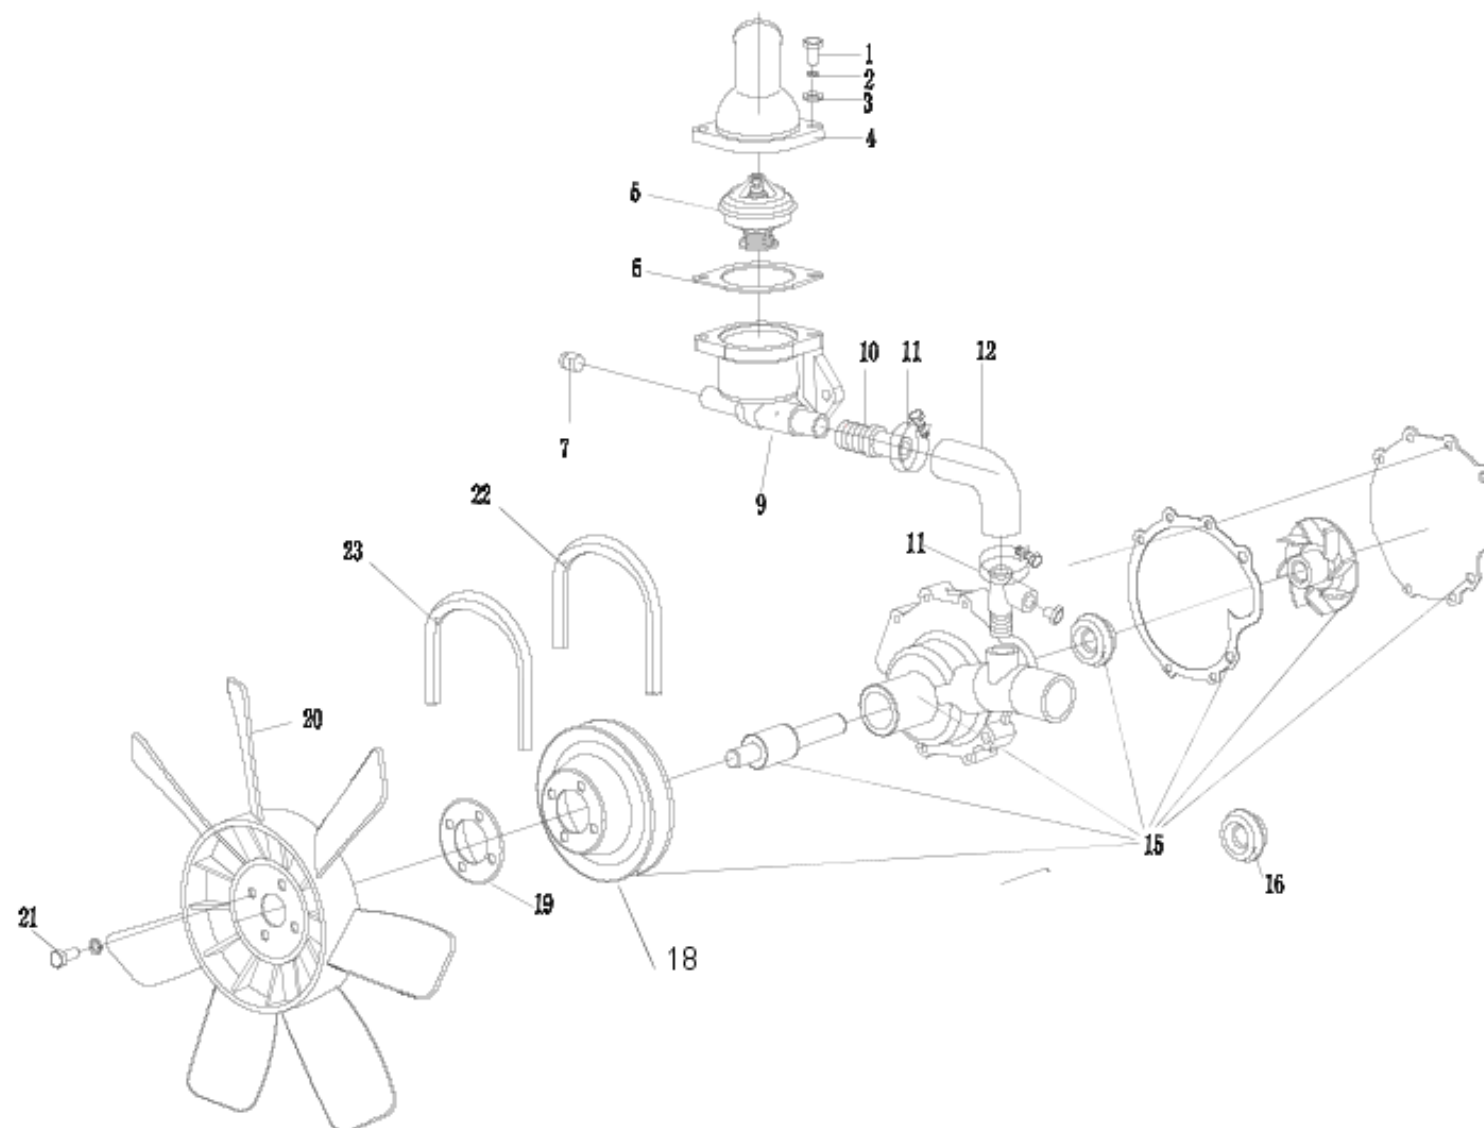

4L22BT-1M9 ENGINE ASSY-10

No.	Part No.	Description	Version	QTY.	Remark
1	GBT5783-M6X22	BOLT		4	
2	GBT93-6	WASHER		4	
3	GBT848-6	WASHER		4	
4	4L22BT-06201-2	THERMOSTAT COVER		1	
5	L375-06203	THERMOSTAT		1	
6	L375-06202	THERMOSTAT COVER GASKET		1	
7	D495QB-06111-1	SCREW PLUG		1	
9	L375-06204	THERMOSTAT HOUSING		1	
9.1	L375-03010	THERMOSTAT HOUSING GASKET		1	
10	LL380-06001	SMALL CIRCULATING PIPE		1	
11	ZBT32005. 1- ϕ 27. 5	CLAMP		2	
12	LL380-06001-3	WATER PUMP HOSE		1	
15	4L22BT-06100-2C	WATER PUMP ASSEMBLY		1	
16	4L22-06112	WATER SEAL		1	
18	4L22BT-06102	WATER PUMP BELT PULLEY		1	
19	4L22-06113S	FAN GASKET		1	
19	4L22-06112S	FAN GASKET		1	
20	4TE40-06400H	FAN PARTS		1	
21	GBT5782-M8X75-8. 8	BOLT		4	
22	GBT12732-AV13X720-c	GEAR BELT		1	
23	GBT12732-AV13X935-c	GEAR BELT		1	


4L22BT-1M9 ENGINE ASSY-11

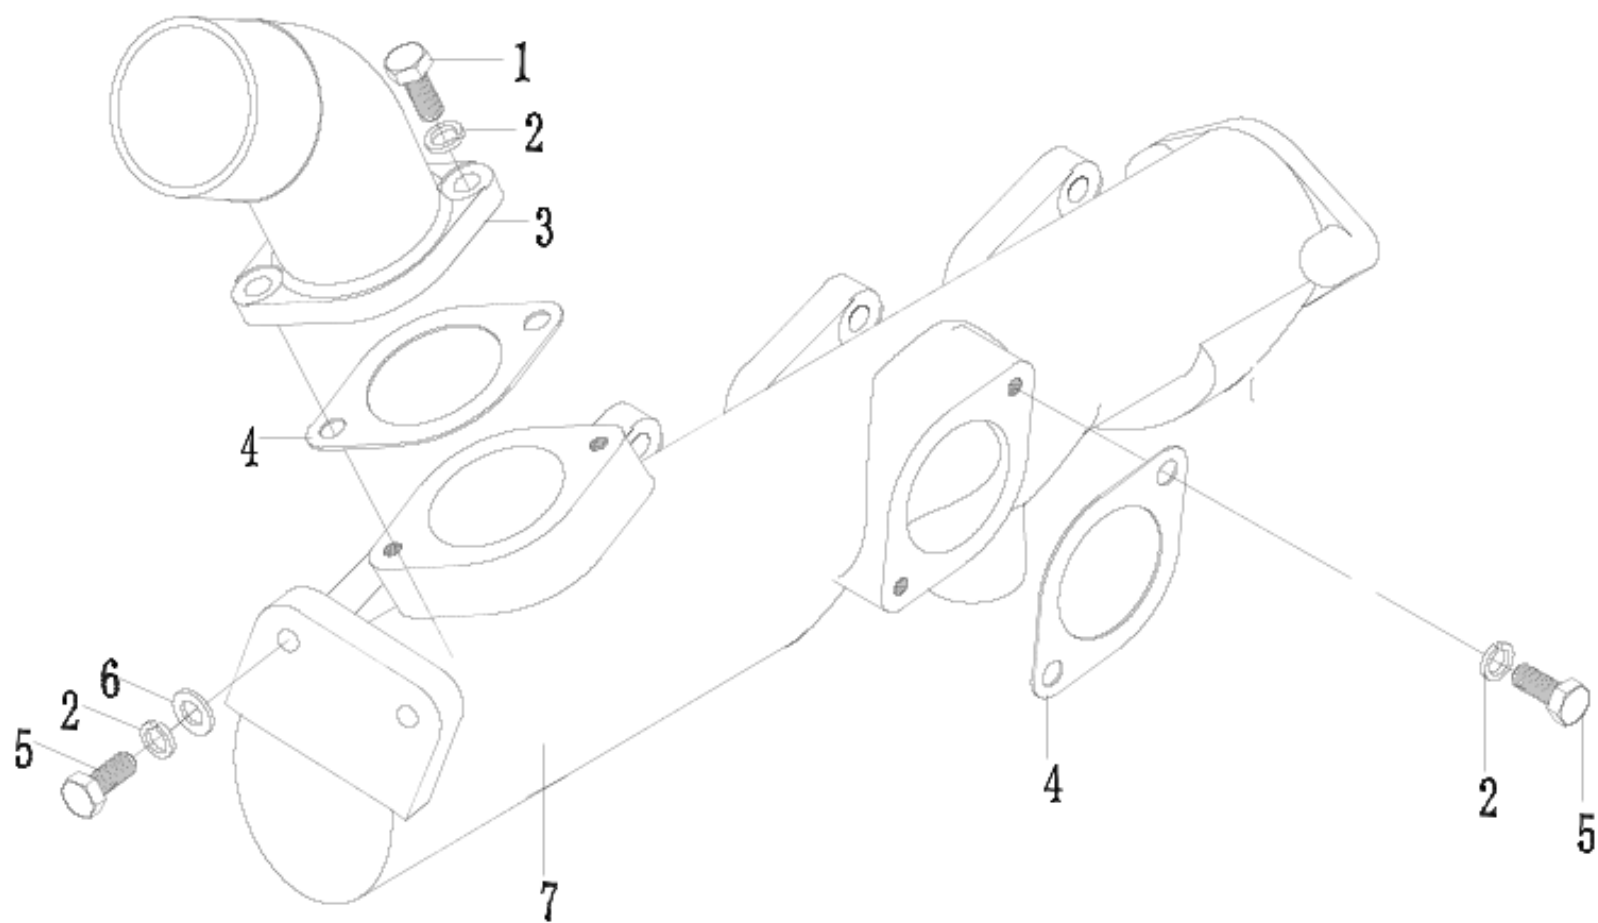

4L22BT-1M9 ENGINE ASSY-11

No.	Part No.	Description	Version	QTY.	Remark
1	GBT5783-M8X25	BOLT		2	
2	GBT93-8	WASHER		6	
3	KM385T-07004-11	AIR INLET PIPE JOINT		1	
4	L375Y3-07003	AIR INLET PIPE END COVER GASKET		2	
5	GBT5783-M8X16-8.8	BOLT		4	
6	GBT97. 1-8	WASHER		2	
7	4L22BT-07001-22H	AIR INLET PIPE		1	
7.1	L375-07005	AIR INLET PIPE BONNET		1	


4L22BT-1M9 ENGINE ASSY-12

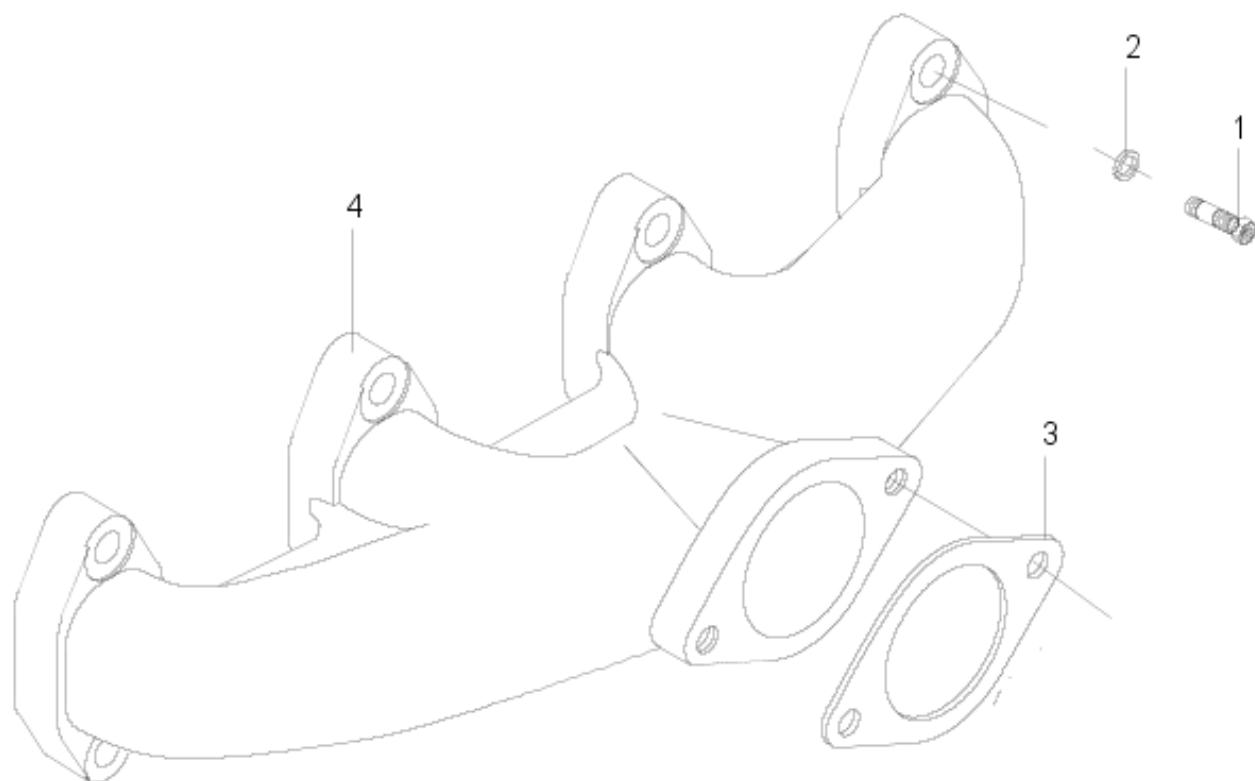

4L22BT-1M9 ENGINE ASSY-12

No.	Part No.	Description	Version	QTY.	Remark
1	GBT5783-M10X25	BOLT		4	
2	GBT93-10	WASHER		4	
3	KM385T-08002	EXHAUST PIPE GASKET		1	
4	4L22BT-08001-1	EXHAUST PIPE		1	


4L22BT-1M9 ENGINE ASSY-13

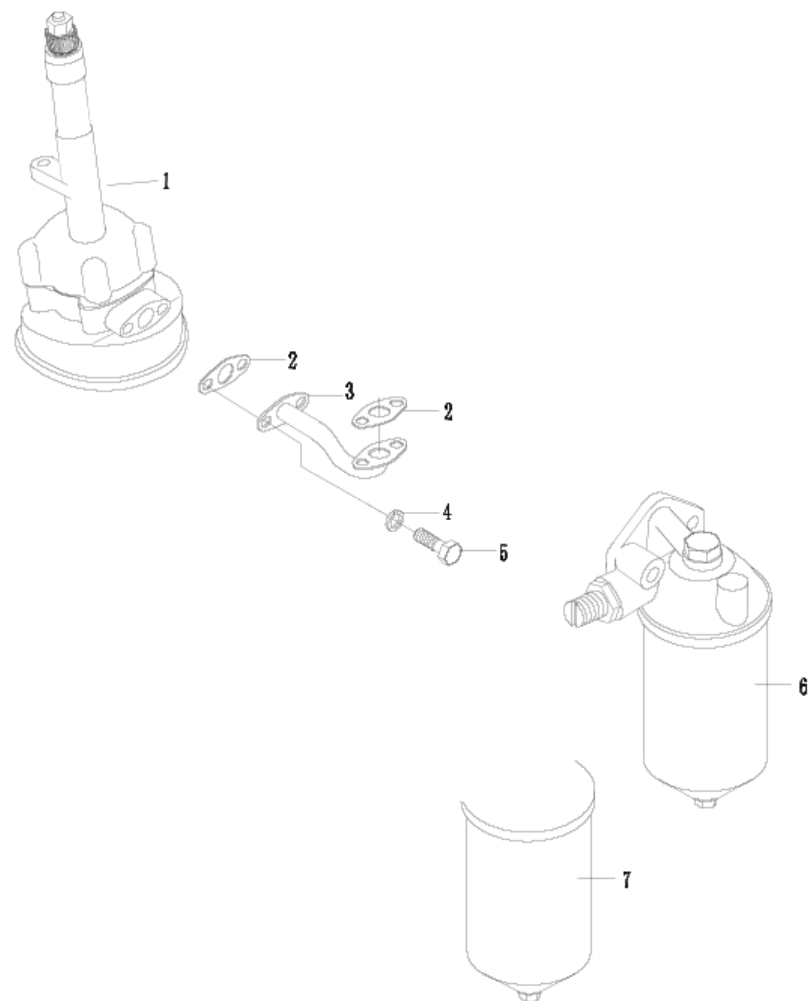

4L22BT-1M9 ENGINE ASSY-13

No.	Part No.	Description	Version	QTY.	Remark
1	4L22BZ-09100-4	LUBRICATING OIL PUMP ASSEMBLY		1	
2	4L22-09001	OIL OUTLET PIPE FLANGE GASKET		2	
3	4L22-09200	OIL PIPELINE UNIT		1	
4	GBT93-8	WASHER		4	
5	GBT5783-M8X20	BOLT		4	
6	KM385T-09300C	OIL FILTER PARTS		1	
7	KM385T-09305C	OIL FILTER ELEMENT		1	


4L22BT-1M9 ENGINE ASSY-14

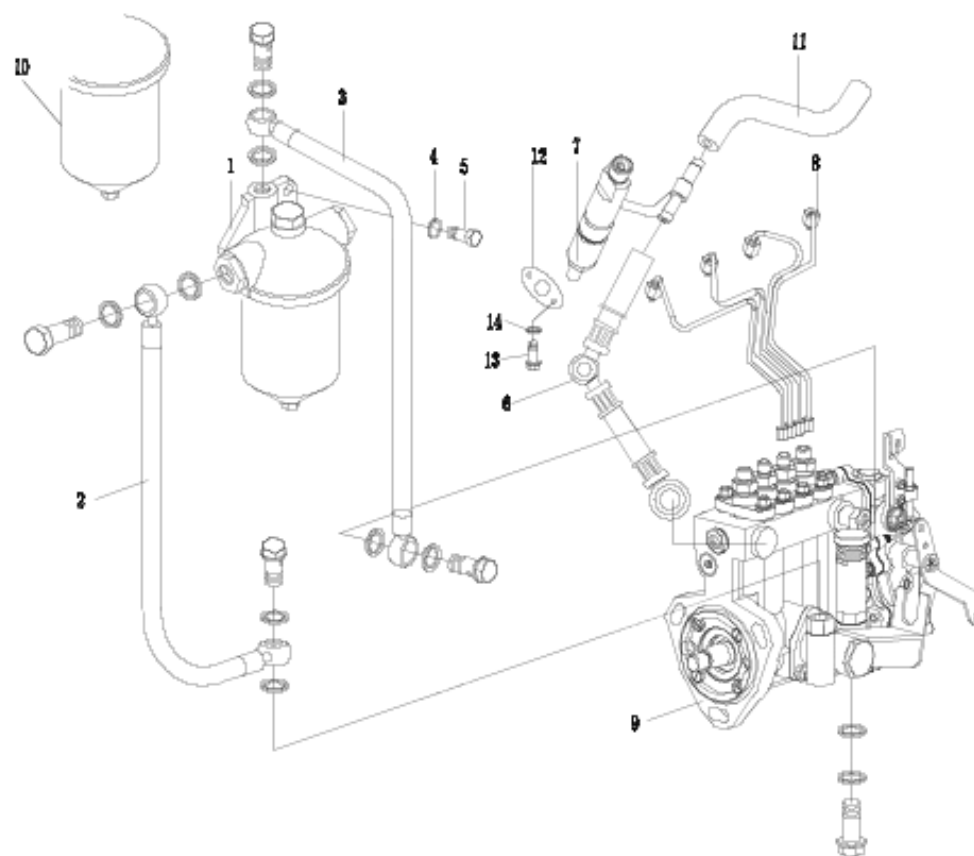

4L22BT-1M9 ENGINE ASSY-14

No.	Part No.	Description	Version	QTY.	Remark
	LL480-09500	LUBRICATING OIL PIPE OF OIL INJECTION PIPE		1	
1	L375-10500-1F	FUEL FILTER PARTS		1	
2	L375-10700-1	PIPE FROM OIL CONVEYING PUMP TO FUEL OIL FILTER		1	
3	L375-10600	OIL PIPE FROM FILTER TO INJECTION PUMP PIPE		1	
4	GBT93. 1-10	WASHER		1	
5	GBT5783-M10X30-8. 8	BOLT		1	
6	4TE35A-10803-4	OIL RETURN PIPE-RETURN FUEL FILTER UPPER		1	
7	KM490BT-10300P	OIL INJECTOR ASSEMBLY		4	
8	4TE35A-10200-1	HIGH PRESSURE OIL PIPE PARTS		1	
9	4L22B-10100-4Q215W-1	OIL INJECTION PUMP ASSEMBLY		1	
10	KM385T-10501	FUEL FILTER ELEMENT		1	
11	4L22BZ-10302	OIL RETURN PIPE-OIL INJECTOR TO OIL INJECTOR		3	
12	4L22BZ-03308	OIL INJECTOR PRESSURE PLATE		4	
13	GBT5782-M10X50	BOLT		8	
14	GBT849-10	WASHER		8	


4L22BT-1M9 ENGINE ASSY-15

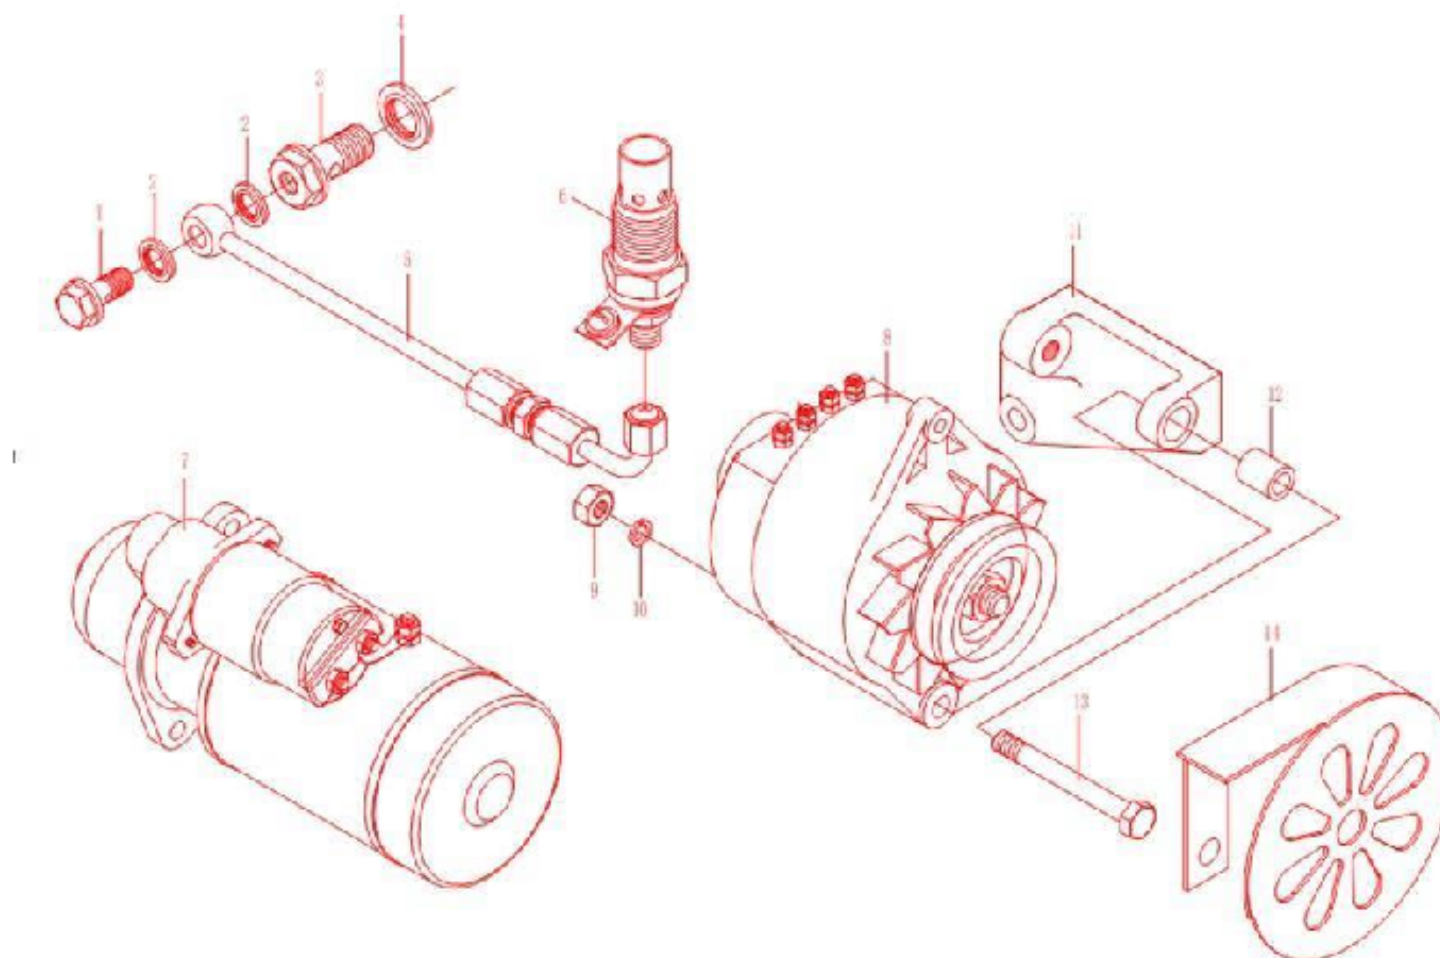

4L22BT-1M9 ENGINE ASSY-15

No.	Part No.	Description	Version	QTY.	Remark
1	KM485QB-12603	HINGE BOLT		1	
2	L375-03017	ANTILEAK WASHER		2	
3	KM485QB-12602	HINGE BOLT		1	
4	KM485QB-12607	COMBINED GASKET		1	
5	KM485QB-12604-1	PREHEATING PLUG OIL PIPE		1	
6	KM485QB-12600	PREHEATING PLUG		1	
7	4L22BT-12300J-1C	STARTING MOTOR		1	
7.1	4L22BT-01038-1	GEASKET		1	
7.2	KM385T-12301	SHIELD		1	
8	4TE35A-12100C	ALTERNATOR ASSY		1	
9	GBT6170-M10	NUT		1	
10	GBT93-10	WASHER		1	
11	4L22BT-01028	GENERATOR FASTEN BRACKET		1	
12	L375-01031	GENERATOR BRACKET BUSH		1	
13	GBT5782-M10X100	BOLT		1	
14	4TE35A-12110A	GENERATOR SAFTY COVER		1	


TE2S110010000K AIR FILTER SYSTEM ASSEMBLY

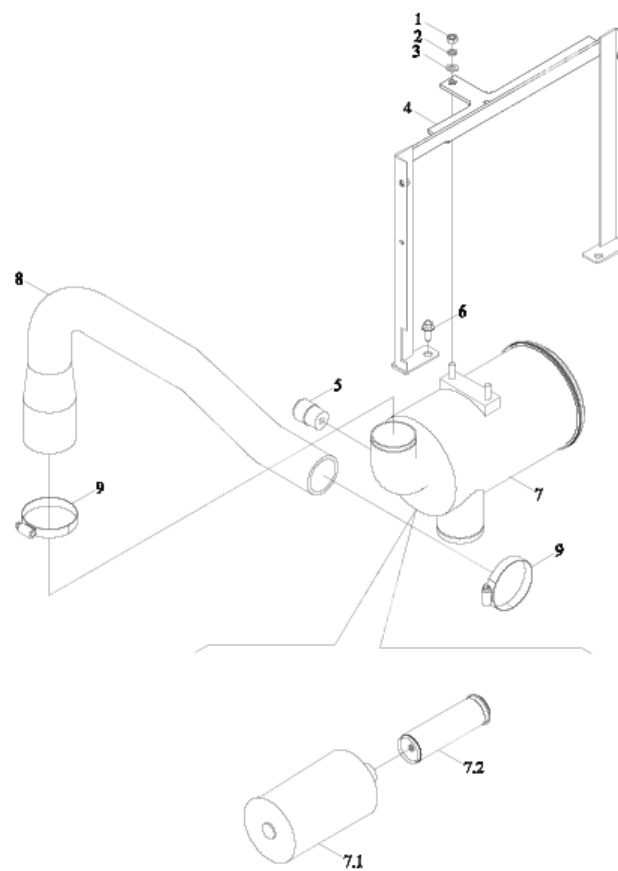

TE2S110010000K AIR FILTER SYSTEM ASSEMBLY

No.	Part No.	Description	Version	QTY.	Remark
	TE2S110010000K	AIR FILTER SYSTEM ASSEMBLY		1	
1	GBT6170-M8-8-A2L	HEXAGON NUT, TYPE-1		2	
2	GBT93-8-A3L	STANDARD SPRING WASHER		2	
3	GBT97.1-8-A3L	FLAT WASHER		2	
4	TE2S110010003K	AIR FILTER ASSEMBLY BRACKET		1	
5	TB400.11C.5	AIR FILTER MAINTENANCE INDICATOR		1	
6	GBT16674.1-M8X20-10.9-A2L	HEXAGON FLANGE NUT		2	
7	TE2S110010001K	AIR FILTER ASSEMBLY		1	
7.1	TL01110010002K	MAIN FILTER ELEMENT		1	
7.2	TL01110010003K	SECURITY FILTER ELEMENT		1	
8	TE2S110010002K	AIR INLET HOSE		1	
9	Q67676	B-TYPE WORM TRANSMISSION HOSE CLAMP		2	


TE2S131010000K COOLING SYSTEM ASSEMBLY

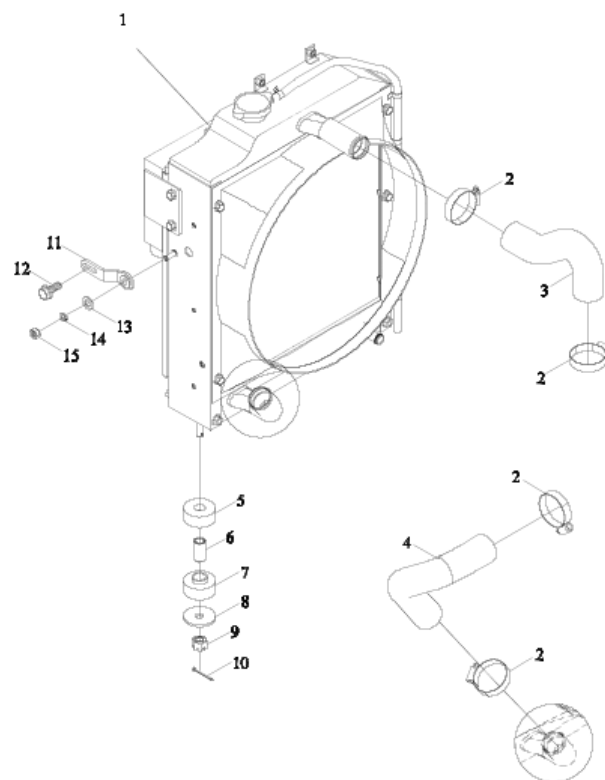

TE2S131010000K COOLING SYSTEM ASSEMBLY

No.	Part No.	Description	Version	QTY.	Remark
	TE2S131010000K	COOLING SYSTEM ASSEMBLY		1	
1	TE2S131010001K	RADIATOR ASSEMBLY		1	
2	Q67657	B-TYPE WORM TRANSMISSION HOSE CLAMP		4	
3	TE2S131010004K	WATER TANK INLET HOSE		1	
4	TE2S131010005K	WATER TANK OUTLET HOSE		1	
5	TA700. 131-01	RUBBER PAD		2	
6	TA700. 131-02	SLEEVE		2	
7	TD800. 131-11	RUBBER WASHER		2	
8	FT650. 13. 116	WASHER		2	
9	GBT6178-M10-8-A3L	HEXAGON SLOTTED NUT, STYLE 1		2	
10	GBT91-2. 5X28-A3L	SPLIT PIN		2	
11	TE2S131010007K	PULL ROD UNIT		2	
12	GBT16674. 1-M10X16-8. 8-A3L	HEXAGON FLANGE NUT		2	
13	GBT96. 1-8-A3L	BIG WASHER		2	
14	GBT93-8-A3L	STANDARD SPRING WASHER		2	
15	GBT6170-M8-8-A2L	HEXAGON NUT, TYPE-1		2	


TE2S133010000K GUARD NET ASSEMBLY

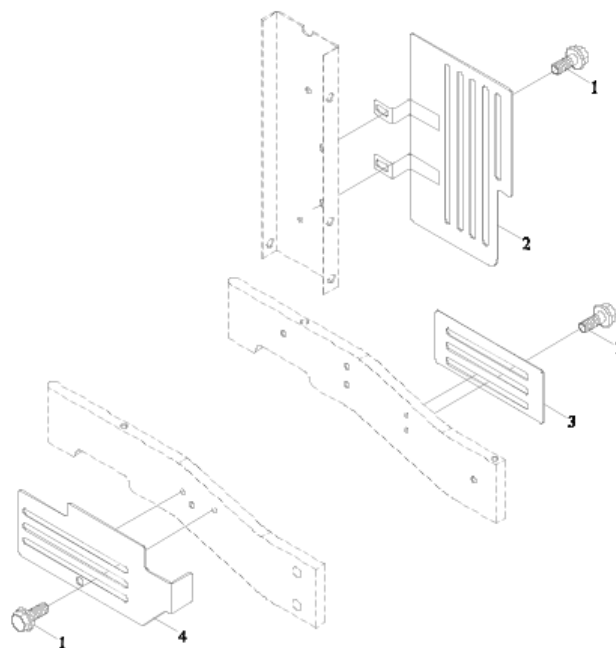

TE2S133010000K GUARD NET ASSEMBLY

No.	Part No.	Description	Version	QTY.	Remark
	TE2S133010000K	GUARD NET ASSEMBLY		1	
1	GBT5789-M8X16-8. 8-A2L	HEXAGON FLANGE NUT		6	
2	TE2S133010002K	GUARD NET		1	
3	TE2S133010003K	GUARD NET		1	
4	TE2S133010001K	GUARD NET		1	


TL02201060000 HAND THROTTLE CONTROL ASSEMBLY

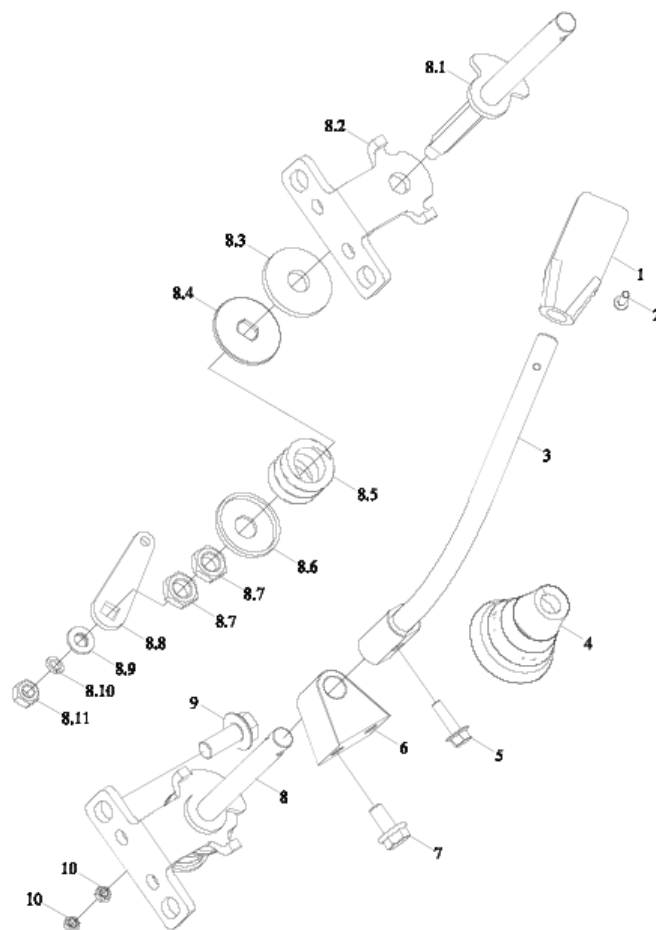

TL02201060000 HAND THROTTLE CONTROL ASSEMBLY

No.	Part No.	Description	Version	QTY.	Remark
	TL02201060000	HAND THROTTLE CONTROL ASSEMBLY		1	
1	TG1204. 20A-01	HAND THROTTLE HANDLE		1	
2	GBT818-M4X14-4. 8-A2L	CROSS SCREW		1	
3	TL02201060009	HAND THROTTLE CONTROL WELDMENT		1	
4	TL02201060007	SEAL SLEEVE		1	
5	GBT5789-M6X20-8. 8-A2L	HEXAGON FLANGE NUT		1	
6	TS06201010002	GUIDE SEAT		1	
7	GBT5789-M8X16-8. 8-A2L	HEXAGON FLANGE NUT		2	
8	TL02201060001	HAND THROTTLE CONTROL MECHANISM		1	
8.1	TL02201060003	HAND THROTTLE CONTROL ROD WELDMENT		1	
8.2	TL02201060002	HAND THROTTLE SUPPORTING PLATE		1	
8.3	FT300. 43. 159	HAND BRAKE FRICTION DISC		1	
8.4	TS06201010008	BIG WASHER		1	
8.5	TS06201010007	SPRING		1	
8.6	TS06201010006	SPRING SEAT		1	
8.7	GBT6173-M12X1. 25-05-A2L	HEXAGON THIN NUT		2	
8.8	TS06201010009	HAND THROTTLE ROCKER		1	
8.9	GBT97. 1-8-A3L	FLAT WASHER		1	
8.10	GBT93-8-A3L	STANDARD SPRING WASHER		1	
8.11	GBT6170-M8-8-A2L	HEXAGON NUT, TYPE-1		1	
9	GBT5789-M10X25-8. 8-A3L	HEXAGON FLANGE NUT		2	
10	GBT6184-M5-8	I -HEXAGON BLOCKNUT		2	


TL02202070000a FOOT THROTTLE CONTROL ASSEMBLY

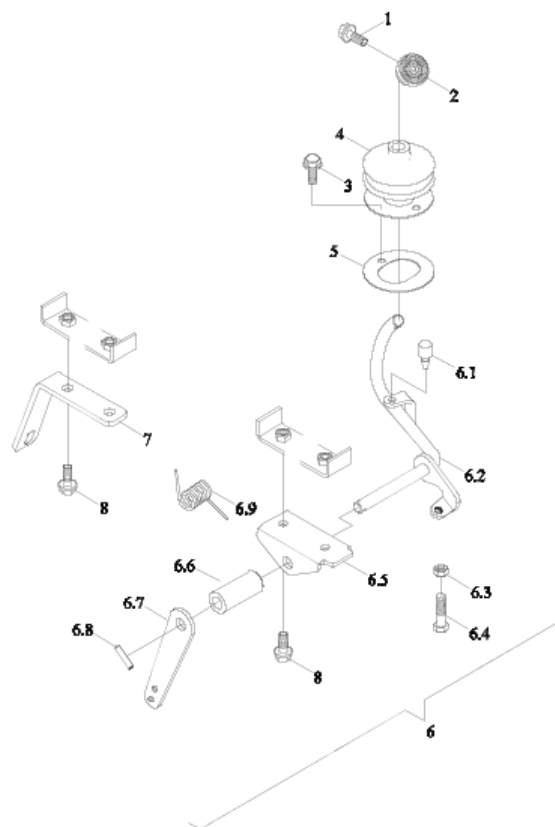

TL02202070000a FOOT THROTTLE CONTROL ASSEMBLY

No.	Part No.	Description	Version	QTY.	Remark
	TL02202070000a	FOOT THROTTLE CONTROL ASSEMBLY		1	
1	GBT5789-M6X20-8. 8-A2L	HEXAGON FLANGE NUT		1	
2	TL02202070011	FOOT THROTTLE PEDAL WELDMENT		1	
3	GBT16674. 1-M6X12-8. 8-A2L	HEXAGON FLANGE NUT		1	
4	TL02202070012	FOOT THROTTLE PEDAL SEAL SLEEVE		1	
5	TL02202070013a	PRESSURE PLATE		1	
6	TL02202070001a	FOOT THROTTLE CORNET ASSEMBLY		1	
6. 1	FT650. 20. 107	RUBBER PLUG		1	
6. 2	TL02202070005a	FOOT PEDAL ROCKER WELDMENT		1	
6. 3	GBT6172. 1-M8-04-A2L	HEXAGON THIN NUT		1	
6. 4	GBT5781-M8X45-4. 8-A2L	HEXAGON BOLT		1	
6. 5	TL02202070008	THROTTLE BRACKET		1	
6. 6	TL02202070004a	WASHER		1	
6. 7	TL02202070002	FOOT THROTTLE ROCKER WELDMENT		1	
6. 8	GBT879. 1-5X24-A3L	SPRING COLUMN PIN		1	
6. 9	FT650. 20. 104	TORSION SPRING		1	
7	TL02202070009	FOOT THROTTLE WIRE BRACKET		1	
8	GBT5789-M8X20-10. 9-A2L	HEXAGON FLANGE NUT		4	


TE2S203010000K PULL WIRE ASSEMBLY

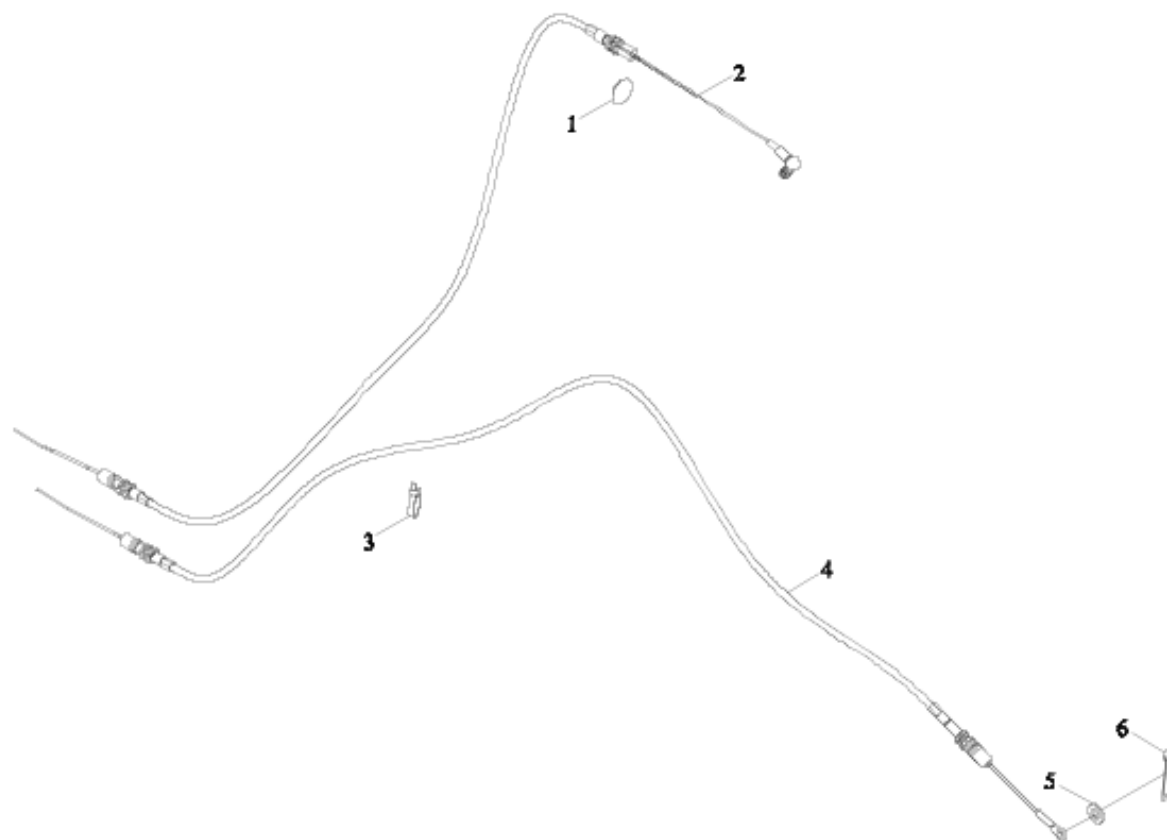

TE2S203010000K PULL WIRE ASSEMBLY

No.	Part No.	Description	Version	QTY.	Remark
	TE2S203010000K	PULL WIRE ASSEMBLY		1	
1	TE2S203010002K	HAND THROTTLE WIRE ASSEMBLY		1	
2	TC03203020003	PROCESS PLUG COVER 16		1	
3	Q67405100	PLASTIC FASTENING STRIP		1	
4	TE2S203010001K	FOOT THROTTLE WIRE ASSEMBLY		1	
5	GBT97. 1-6-A3L	FLAT WASHER		1	
6	GBT91-2X12-A3L	SPLIT PIN		1	


TE2S211010000K CLUTCH ASSEMBLY

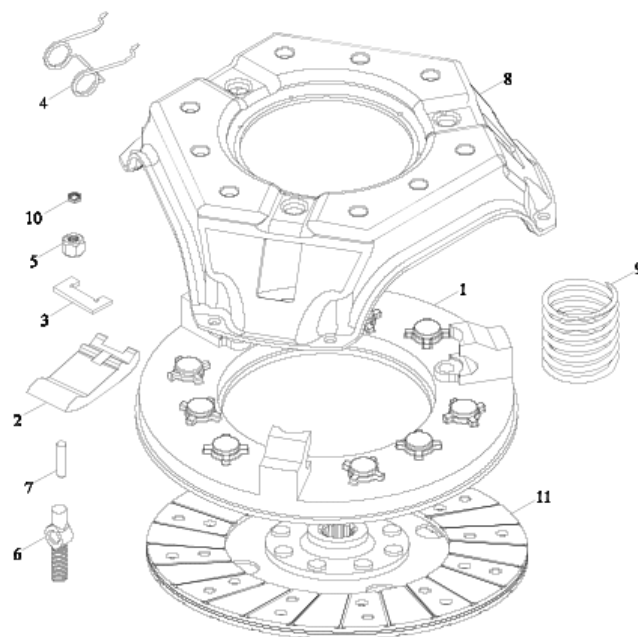

TE2S211010000K CLUTCH ASSEMBLY

No.	Part No.	Description	Version	QTY.	Remark
	TE2S211010000K	CLUTCH ASSEMBLY		1	
1	FT300. 21. 115	CLUTCH PRESSURE PLATE		1	
2	FT300. 21. 121	CLUTCH RELEASE LEVER		3	
3	FT300. 21. 118	RELEASE LEVER BLOCK		3	
4	FT300. 21. 120	RELEASE LEVER SPRING		3	
5	FT300. 21. 119	RELEASE LEVER ADJUSTING NUT		3	
6	FT300. 21. 116	RELEASE LEVER ADJUSTING SCREW		3	
7	FT300. 21. 109	FLOATING PIN		3	
8	FT300. 21. 117	CLUTCH COVER		1	
9	FT350. 21. 123	CLUTCH PRESSURE SPRING		6	
10	GBT6171-M8X1-8-A2L	HEXAGON NUT, TYPE-1		3	
11	TE2S211010001K	CLUTCH FRICTION PLATE ASSEMBLY		1	

TE2S212010000K CLUTCH CONTROL ASSEMBLY

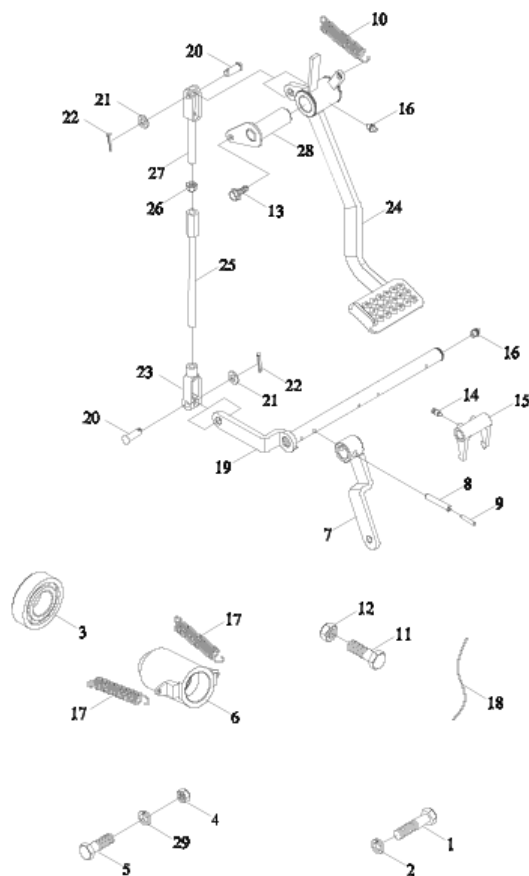


TE2S212010000K CLUTCH CONTROL ASSEMBLY

No.	Part No.	Description	Version	QTY.	Remark
	TE2S212010000K	CLUTCH CONTROL ASSEMBLY		1	
1	GBT5783-M8X16-8. 8-A2L	HEXAGON BOLT		7	
2	GBT93-8-A3L	STANDARD SPRING WASHER		6	
3	TE250. 212-04	BEARING996708		1	
4	GBT6170-M12-8-A3L	HEXAGON NUT, TYPE-1		1	
5	GBT5783-M12X45-8. 8-A3L	HEXAGON BOLT		1	
6	TE2S212010001K	RELEASE BEARING SEAT		1	
7	TL02212040009	ROCKER WELDMENT		1	
8	GBT879. 1-10X32	SPRING COLUMN PIN		1	
9	GBT879. 1-6X32	SPRING COLUMN PIN		1	
10	TD800. 43-01	PEDAL RETURN SPRING		1	
11	GBT5783-M10X60-8. 8-A3L	HEXAGON BOLT		1	
12	GBT6170-M10-8-A3L	HEXAGON NUT, TYPE-1		1	
13	GBT16674. 1-M8X16-8. 8-A2L	HEXAGON FLANGE NUT		1	
14	FT65. 37. 109	THRUST SCREW		2	
15	FT200. 21. 107	CLUTCH FORK		1	
16	JBT7940. 1-M10X1	STRAIGHT FORCED FILLING OIL CUP		1	
17	FT200. 21. 106	RETURN SPRING OF RELEASE BEARING SEAT		2	
18	TE250. 212-05	LOW CARBON STEEL WIRE		1	
19	TL02212040006	CLUTCH RELEASE ROCKER WELDMENT		1	
20	GBT882-B10X30-A3L	PIN SHAFT		2	
21	GBT97. 1-10-A3L	FLAT WASHER		2	
22	GBT91-3. 2X22-A3L	SPLIT PIN		2	

TE2S212010000K CLUTCH CONTROL ASSEMBLY (cont'd.)

No.	Part No.	Description	Version	QTY.	Remark
23	FT300. 43. 110	PULL ROD REAR FORK		1	
24	TL02212040001	CLUTCH PEDAL ROCKER UNIT		1	
25	TL02212040014	RELEASE LOWER TIE ROD WELD		1	
26	GBT6171-M10X1-8-A2L	HEXAGON NUT, TYPE-1		1	
27	TL02212040016	RELEASE UPPER TIE ROD WELD		1	
28	TL02212040012	PEDAL SHAFT WELDMENT		1	
29	GBT93-12-A3L	STANDARD SPRING WASHER		1	


TE2S220010000K EXHAUST SYSTEM ASSEMBLY

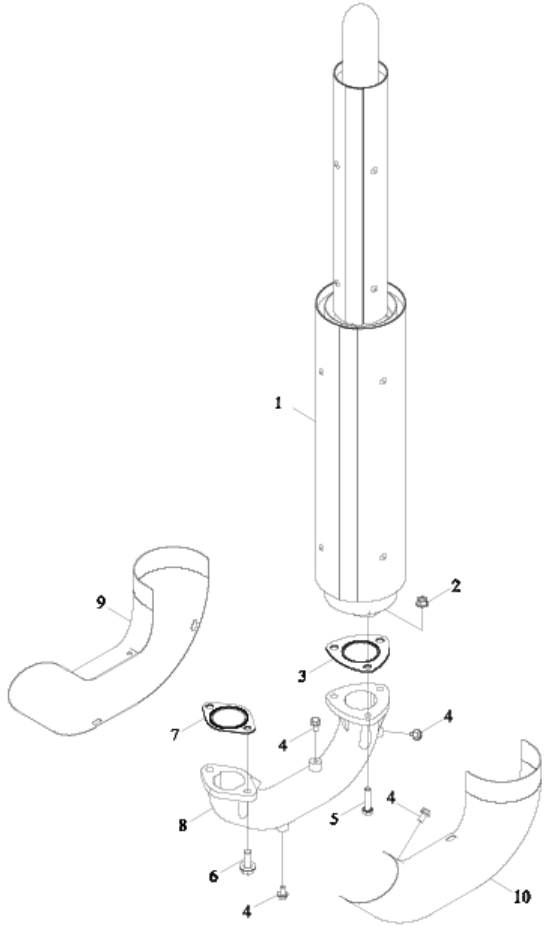

TE2S220010000K EXHAUST SYSTEM ASSEMBLY

No.	Part No.	Description	Version	QTY.	Remark
	TE2S220010000K	EXHAUST SYSTEM ASSEMBLY		1	
1	TE2S220010001K	MUFFLER ASSEMBLY		1	
2	SPL6177. 1-M8-F3	HEXAGON FLANGE NUT		3	
3	FT250. 22. 030	SEAL GASKET UNIT		1	
4	GBT5789-M6X12-8. 8-A2L	HEXAGON FLANGE NUT		4	
5	GBT5783-M8X35-8. 8-A2L	HEXAGON BOLT		3	
6	GBT5789-M10X25-8. 8-A2L	HEXAGON FLANGE NUT		2	
7	FT250. 22C. 030	SEAL GASKET UNIT		1	
8	TL01220030001	EXHAUST BENDING PIPE		1	
9	TL01220030002	GUARD NET RIGHT		1	
10	TL01220030003	GUARD NET LEFT		1	

TL02311010000 FRONT DRIVING AXLE ASSEMBLY-1

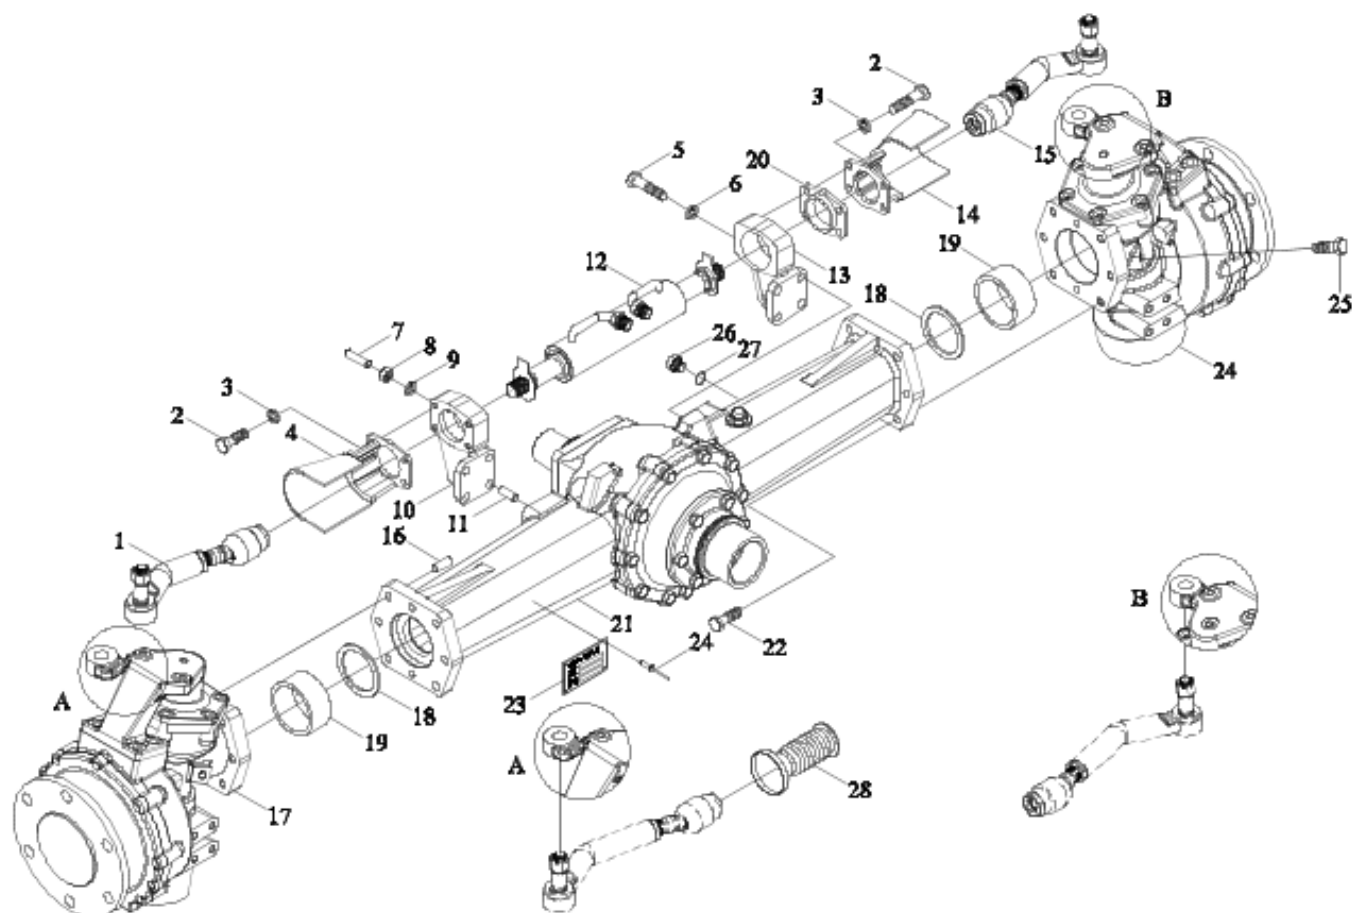


TL02311010000 FRONT DRIVING AXLE ASSEMBLY-1

No.	Part No.	Description	Version	QTY.	Remark
	TL02311010000	FRONT AXLE		1	
1	TL02311010007	LEFT STEERING HORIZONTAL PULL ROD ASSEMBLY		1	
2	GBT70.1-M8X20-8.8-A2L	INNER HEXAGON SCREW		8	
3	GBT93-8-A3L	STANDARD SPRING WASHER		8	
4	TL02311020008	OIL CYLINDER BONNET WELDMENT		1	
5	GBT5783-M10X25-8.8-A3L	HEXAGON BOLT		8	
6	GBT93-10-A3L	STANDARD SPRING WASHER		8	
7	GBT71-M6X20-14H-A2L	SCREW		1	
8	GBT6174-M6-110HV30-A2L	HEXAGON THIN NUT		1	
9	GBT93-6-A3L	STANDARD SPRING WASHER		1	
10	TL02311010013	OIL CYLINDER FIXING SEAT 2		1	
11	GBT119.1-6h8X14-A3L	COLUMN PIN		4	
12	TL02311010006	HYDRAULIC CYLINDER ASSEMBLY		1	
13	TL02311010012	OIL CYLINDER FIXING SEAT		1	
14	TL02311020009	OIL CYLINDER BONNET WELDMENT		1	
15	TL02311010008	RIGHT STEERING CROSS PULL ROD ASSEMBLY		1	
16	GBT119.1-10h8X20-A3L	COLUMN PIN		4	
17	TL02311010004	LEFT TRANSMISSION ASSEMBLY		1	
18	TL02311010010	ADJUSTING GASKET		1	
19	TL02311010009	LOCATING SLEEVE		2	
20	TL02311010011	SEAT COVER		1	
21	TL02311010003	MAIN REDUCER BOX ASSEMBLY		1	
22	GBT5783-M10X35-10.9-A3L	HEXAGON BOLT		12	

TL02311010000 FRONT DRIVING AXLE ASSEMBLY-1 (cont'd.)

No.	Part No.	Description	Version	QTY.	Remark
23	9F650-26B010004A0	NAMEPLATE		1	
24	GBT827-2. 5X4-A3L	LABEL RIVET		4	
25	TL02311020010	LIMIT BOLT		2	
26	CP4D304010028	SCREW PLUG		2	
27	GBT3452. 1-10. 6X1. 80G	RUBBER O-SEAL RING		2	
28	TL02311010080	BONNET		2	
29	TL02311010005	RIGHT TRANSMISSION ASSEMBLY		1	

TL02311010000 FRONT DRIVING AXLE ASSEMBLY-2

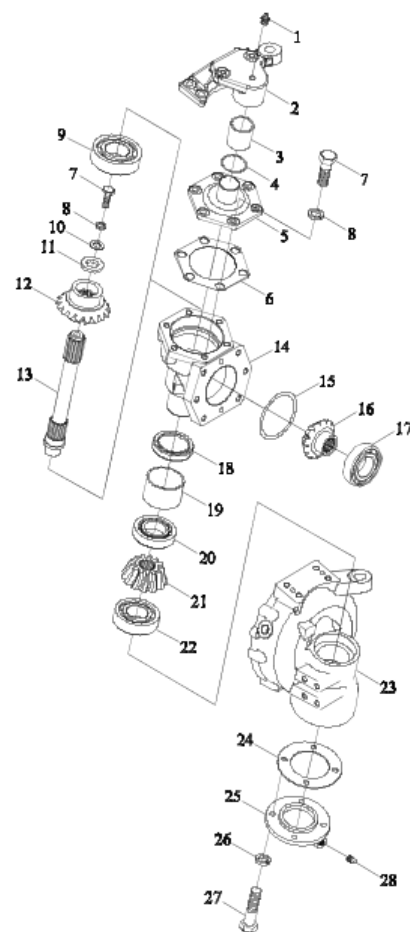


TL02311010000 FRONT DRIVING AXLE ASSEMBLY-2

No.	Part No.	Description	Version	QTY.	Remark
	TL02311010002	FRONT AXLE		1	
	TL02311010004	LEFT TRANSMISSION ASSEMBLY		1	
	TL02311010005	RIGHT TRANSMISSION ASSEMBLY		1	
1	JBT7940. 1-M10X1	STRAIGHT FORCED FILLING OIL CUP		1	
2	TL02311010055	LEFT STEERING SUPPORT		1	
2	TL02311010065	RIGHT STEERING SUPPORT		1	
3	TL02311010040	SLIDING SHAFT SLEEVE 35X39X30		1	
4	GBT3452. 1-33. 5X3. 55G	RUBBER O-SEAL RING		1	
5	TL02311010041	STEERING SHAFT SEAT		1	
6	TL02311010039	SEAL GASKET		1	
7	GBT5783-M10X25-8. 8-A3L	HEXAGON BOLT		7	
8	GBT93-10-A0P	STANDARD SPRING WASHER		19	
9	GBT276-6210	DEEP GROOVE BALL BEARING		1	
10	GBT96. 1-10-A0P	BIG WASHER		1	
11	TL02311010042	MAT		1	
12	TL02311010044	HALF SHAFT BIG GEAR		1	
13	TL02311010050	END PIN SHAFT		1	
14	TL02311010056	STEERING BURL HOUSING		1	
15	GBT3452. 1-80. 0X2. 65G	RUBBER O-SEAL RING		1	
16	TL02311010038	HALF SHAFT PINION		1	
17	GBT276-6207	DEEP GROOVE BALL BEARING		1	
18	TL02311010045	DUSTPROOF RING		2	
19	TL02311010051	SLIDING SHAFT SLEEVE 50X55X35		1	

TL02311010000 FRONT DRIVING AXLE ASSEMBLY-2 (cont'd.)

No.	Part No.	Description	Version	QTY.	Remark
20	GBT301-51106	THRUST BEARING		1	
21	TL02311010057	END PINION		1	
22	GBT276-6305	DEEP GROOVE BALL BEARING		1	
23	TL02311010058	LEFT END HOUSING		1	
23	TL02311010066	RIGHT END HOUSING		1	
24	TL02311010049	ADJUSTING GASKET		1	
25	TL02311010048	BOTTOM END COVER		1	
26	GBT93-6-A0P	STANDARD SPRING WASHER		4	
27	GBT5783-M6X20-8. 8-A2L	HEXAGON BOLT		4	
28	Q614B01	SQUARE HEAD TAPERED SCREW PLUG		1	


TL02311010000 FRONT DRIVING AXLE ASSEMBLY-3

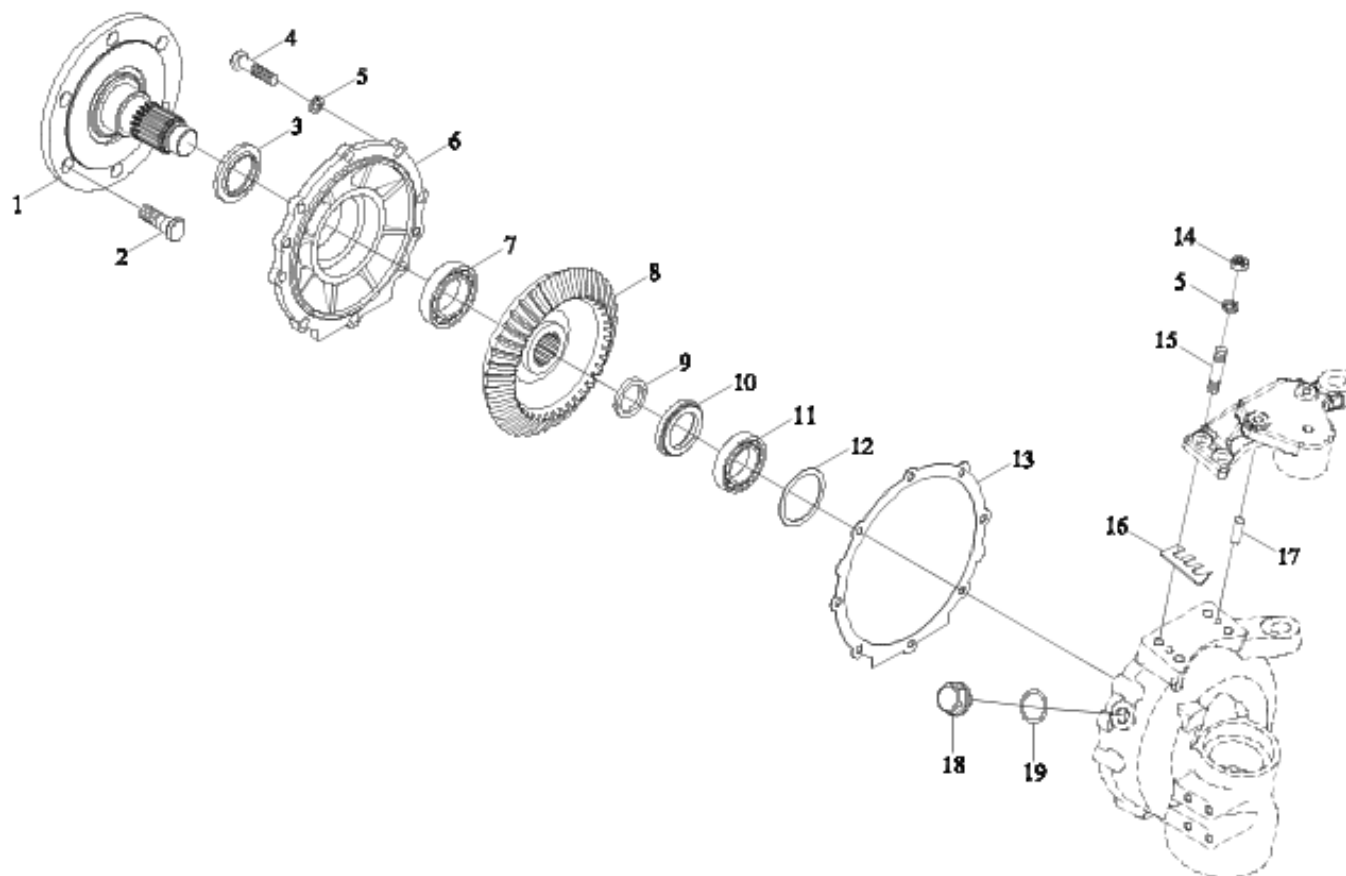

TL02311010000 FRONT DRIVING AXLE ASSEMBLY-3

No.	Part No.	Description	Version	QTY.	Remark
	TL02311010002	FRONT AXLE		1	
	TL02311010004	LEFT TRANSMISSION ASSEMBLY		1	
	TL02311010005	RIGHT TRANSMISSION ASSEMBLY		1	
1	TL02311010061	FRONT DRIVING SHAFT		1	
2	TL02311010054	BOLT		1	
3	TL02311010064	OIL SEAL		1	
4	GBT5783-M10X30-8. 8-A3L	HEXAGON BOLT		8	
5	GBT93-10-A0P	STANDARD SPRING WASHER		19	
6	TL02311010059	END BIG COVER		1	
7	GBT276-6308	DEEP GROOVE BALL BEARING		1	
8	TL02311010060	END BIG GEAR		1	
9	TL02311010062	STEEL WIRE RETAINER RING		1	
10	TL02311010063	LOCATING RING		1	
11	GBT276-6206	DEEP GROOVE BALL BEARING		1	
12	TL02311010047	ADJUSTING GASKET		1	
13	TL02311010046	ADJUSTING GASKET		1	
14	GBT6171-M10X1. 25-8-A2L	HEXAGON NUT, TYPE-1		1	
15	GBT899-AM10-M10X1. 25X30-8. 8-A2 L	DOUBLE END STUDS		4	
16	TL02311010043	ADJUSTING GASKET		2	
17	GBT119. 2-8X20-A0P	COLUMN PIN		2	
18	CP4D304010028	SCREW PLUG		1	
19	GBT3452. 1-10. 6X1. 80G	RUBBER O-SEAL RING		1	

TL02311010000 FRONT DRIVING AXLE ASSEMBLY-4

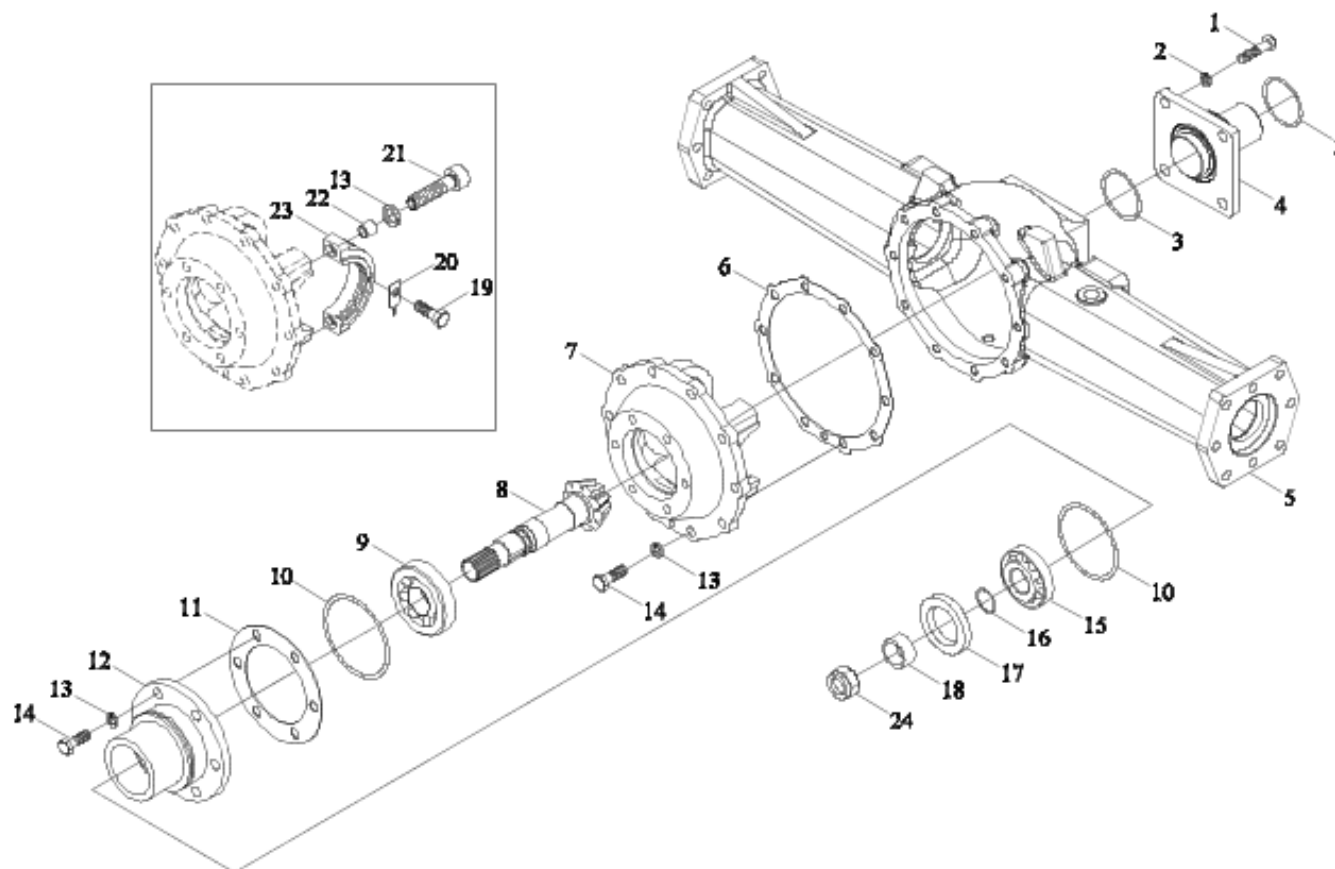


TL02311010000 FRONT DRIVING AXLE ASSEMBLY-4

No.	Part No.	Description	Version	QTY.	Remark
	TL02311010002	FRONT AXLE		1	
	TL02311010003	MAIN REDUCER BOX ASSEMBLY		1	
1	GBT5783-M12X30-8. 8-A3L	HEXAGON BOLT		4	
2	GBT93-12-A3L	STANDARD SPRING WASHER		4	
3	GBT3452. 1-63. 0X3. 55G	RUBBER O-SEAL RING		2	
4	TL02311010036	FRONT SUPPORT SHAFT		1	
5	TL02311010037	MAIN REDUCER BOX HOUSING		1	
6	TL02311010023	ADJUSTING GASKET		1	
7	TL02311010035	DIFFERENTIAL SEAT		1	
8	TL02311010078	INPUT SPIRAL BEVEL GEAR SHAFT		1	
9	GBT297-31306	TAPERED ROLLER BEARING		1	
10	GBT3452. 1-73. 0X3. 55G	RUBBER O-SEAL RING		2	
11	TL02311010018	ADJUSTING GASKET		1	
12	TL02311010034	REAR SUPPORTING SHAFT		1	
13	GBT93-10-A3L	STANDARD SPRING WASHER		18	
14	GBT5783-M10X30-8. 8-A3L	HEXAGON BOLT		16	
15	GBT297-32006	TAPERED ROLLER BEARING		1	
16	GBT3452. 1-23. 6X2. 65G	RUBBER O-SEAL RING		1	
17	GBT9877. 1-FB35X55X8B	SEAL RING		1	
18	TL02311010021	OIL SEAL BUSH		1	
19	GBT5783-M8X16-8. 8-A2L	HEXAGON BOLT		1	
20	TL02311010024	THRUST WASHER		1	
21	GBT70. 1-M10X40-8. 8	INNER HEXAGON SCREW		2	

TL02311010000 FRONT DRIVING AXLE ASSEMBLY-4 (cont'd.)

No.	Part No.	Description	Version	QTY.	Remark
22	TL02311010016	LOCATING SLEEVE		2	
23	TL02311010022	BEARING FIXING SLEEVE		1	
24	TL02311010077	LOCKING NUT		1	


TL02311010000 FRONT DRIVING AXLE ASSEMBLY-5

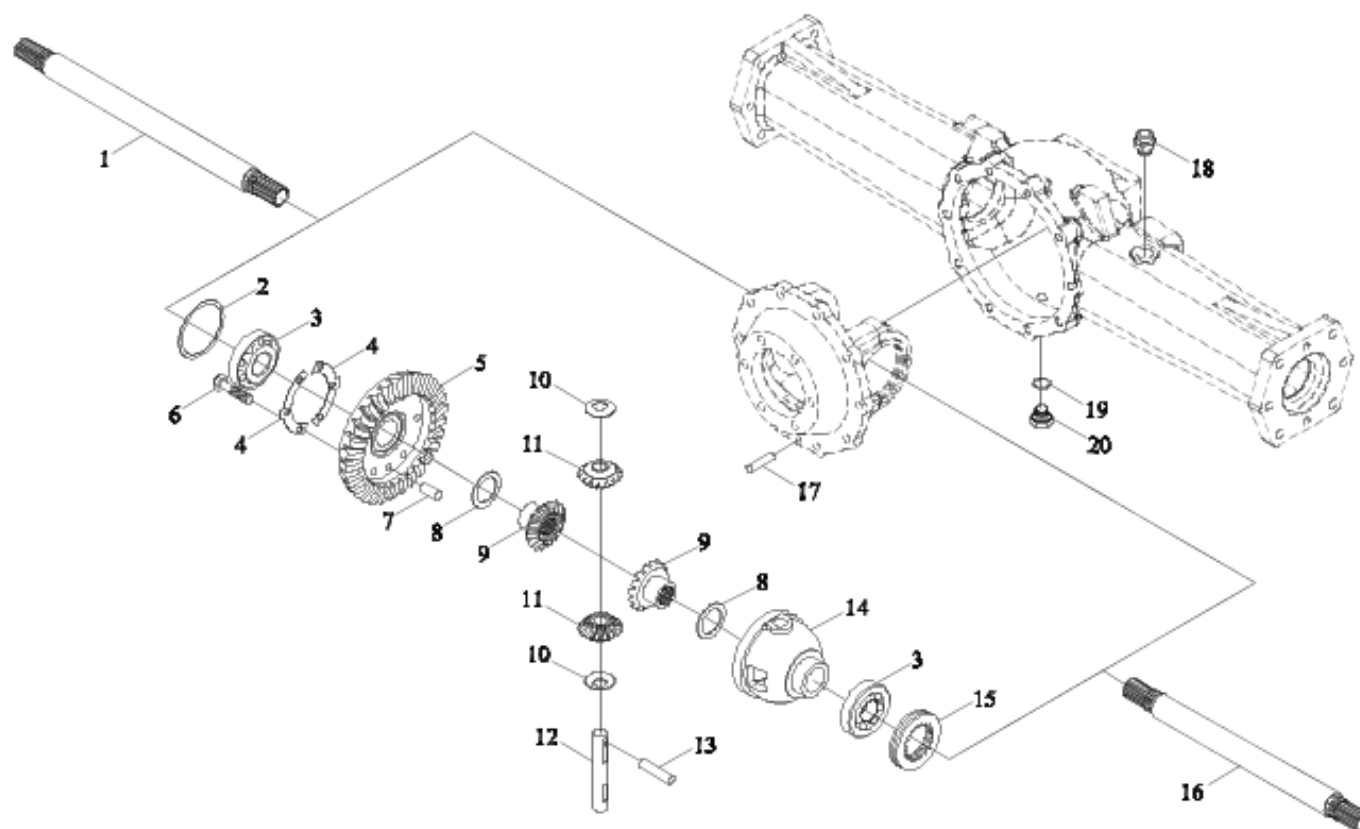

TL02311010000 FRONT DRIVING AXLE ASSEMBLY-5

No.	Part No.	Description	Version	QTY.	Remark
	TL02311010002	FRONT AXLE		1	
	TL02311010003	MAIN REDUCER BOX ASSEMBLY		1	
1	TL02311010028	LEFT HALF SHAFT		1	
2	TL02311010014	ADJUSTING GASKET		1	
3	GBT297-32009	TAPERED ROLLER BEARING		2	
4	TL02311010015	THRUST WASHER		2	
5	TL02311010076	BIG BEVEL GEAR		1	
6	GBT5783-M8X25-8. 8-A2L	HEXAGON BOLT		6	
7	GBT119. 2-8X18-A3L	COLUMN PIN		1	
8	TL02311010026	FLAT WASHER		2	
9	TL02311010032	DIFFERENTIAL BIG GEAR		2	
10	TL02311010031	SPHERICAL WASHER		2	
11	TL02311010027	PLANET GEAR		2	
12	TL02311010019	DIFFERENTIAL PIN SHAFT		1	
13	GBT119. 1-8m6X30-A3L	COLUMN PIN		1	
14	TL02311010075	DIFFERENTIAL HOUSING		1	
15	TL02311010020	ADJUSTING NUT		1	
16	TL02311010033	RIGHT HALF SHAFT		1	
17	GBT119. 2-8X18-A3L	COLUMN PIN		1	
18	TL02311010025	STEEL BALL VENTILATION PLUG		1	
19	GBT3452. 1-10. 6X1. 80G	RUBBER O-SEAL RING		1	
20	CP4D304010028	SCREW PLUG		1	


TL02311010000 FRONT DRIVING AXLE ASSEMBLY-6

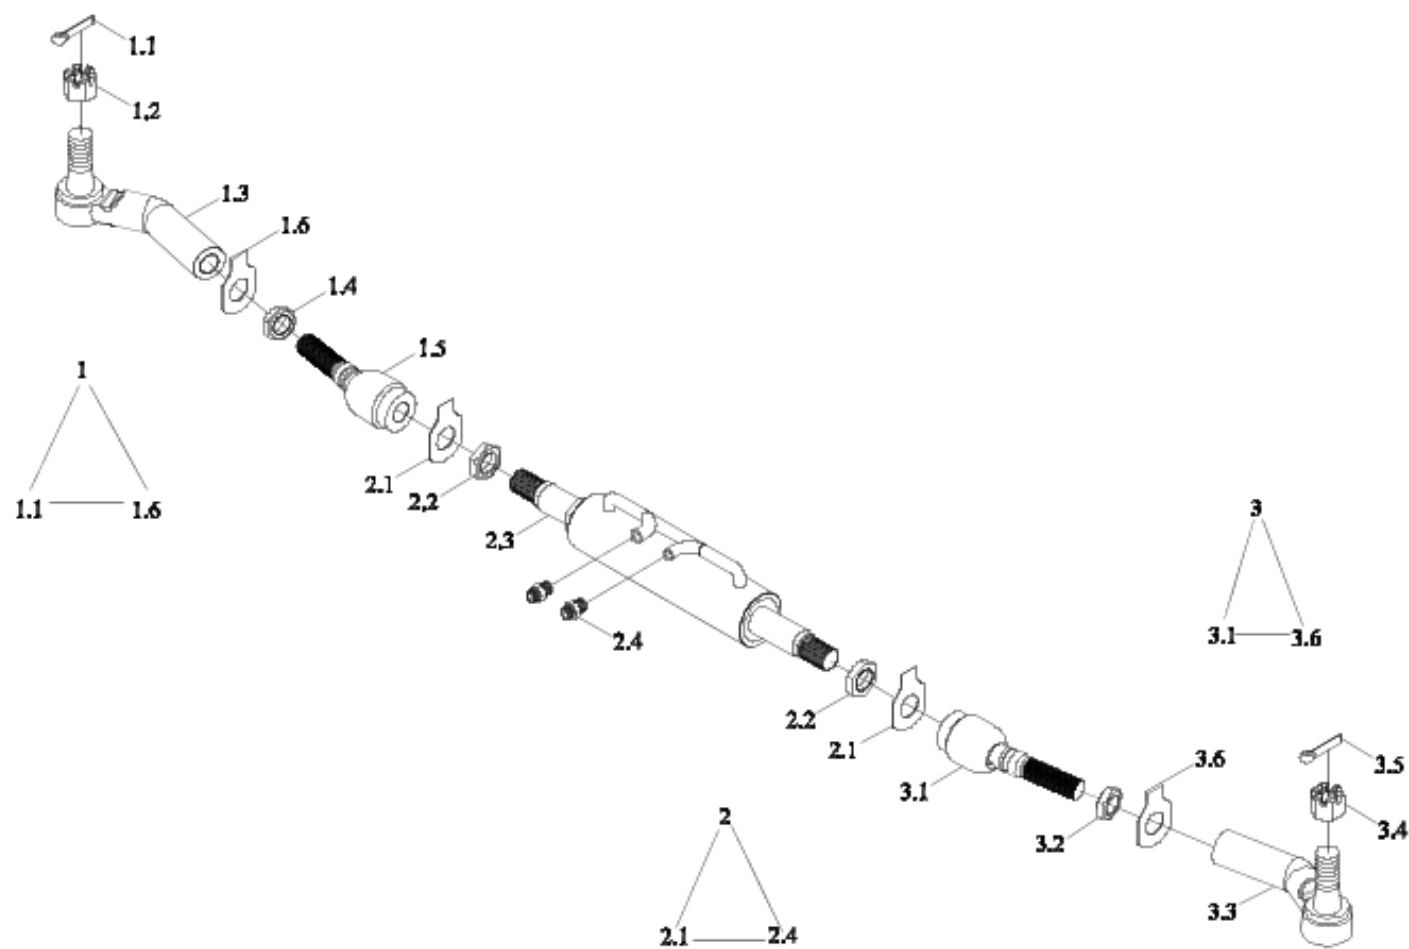

TL02311010000 FRONT DRIVING AXLE ASSEMBLY-6

No.	Part No.	Description	Version	QTY.	Remark
	TL02311010002	FRONT AXLE		1	
1	TL02311010007	LEFT STEERING HORIZONTAL PULL ROD ASSEMBLY		1	
1.1	GBT91-3.2X28-A3L	SPLIT PIN		1	
1.2	GBT9458-M14X1.5-8	NUT		1	
1.3	TL02311010070	LEFT ROCKER JOINT ASSEMBLY		1	
1.4	GBT6173-M18X1.5-05-A3L	HEXAGON THIN NUT		1	
1.5	TL02311010069	OIL CYLINDER JOINT ASSEMBLY		1	
1.6	GBT854-18	STOPPING WASHER		1	
2	TL02311010006	HYDRAULIC CYLINDER ASSEMBLY		1	
2.1	TL02311010085	STOPPING WASHER		2	
2.2	TL02311010068	LOCKING NUT		2	
2.3	TL02311010067	HYDRAULIC CYLINDER		1	
2.4	TL02311010073	JOINT		2	
3	TL02311010008	RIGHT STEERING CROSS PULL ROD ASSEMBLY		1	
3.1	TL02311010069	OIL CYLINDER JOINT ASSEMBLY		1	
3.2	GBT6173-M18X1.5-05-A3L	HEXAGON THIN NUT		1	
3.3	TL02311010071	RIGHT ROCKER JOINT ASSEMBLY		1	
3.4	GBT9458-M14X1.5-8	NUT		1	
3.5	GBT91-3.2X28-A3L	SPLIT PIN		1	
3.6	GBT854-18	STOPPING WASHER		1	


TE2S312010000K BRACKET ASSEMBLY

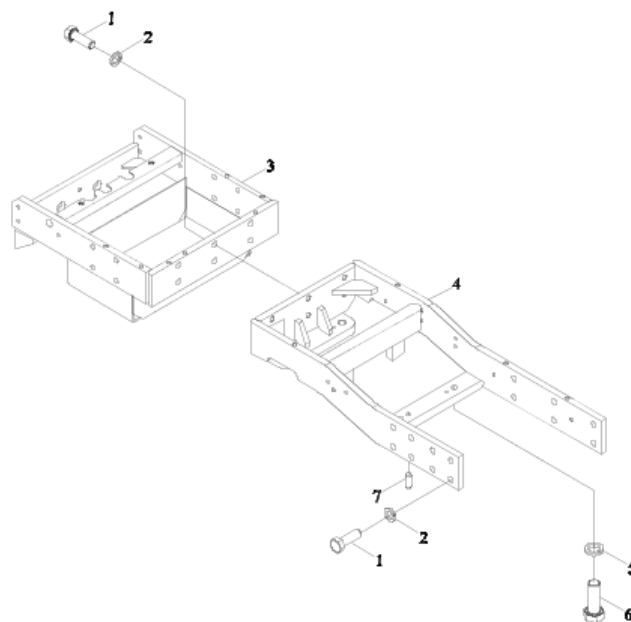

TE2S312010000K BRACKET ASSEMBLY

No.	Part No.	Description	Version	QTY.	Remark
	TE2S312010000K	BRACKET ASSEMBLY		1	
1	GBT5783-M12X35-10.9-A3L	HEXAGON BOLT		20	
2	GBT93-12-A3L	STANDARD SPRING WASHER		20	
3	TE2S312010002K	BRACKET WELDMENT		1	
4	TE2S312010004K	HALF-BRACKET WELDMENT		1	
5	GBT93-16-A3L	STANDARD SPRING WASHER		4	
6	GBT5783-M16X45-10.9-A3L	HEXAGON BOLT		4	
7	GBT119.2-8X20-A3L	COLUMN PIN		4	


TE254. 313G FRONT SUPPORT SEAT ASSEMBLY

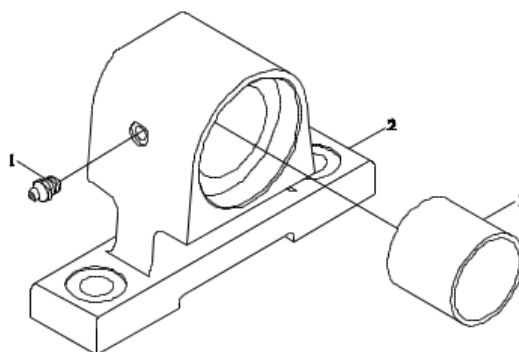

TE254. 313G FRONT SUPPORT SEAT ASSEMBLY

No.	Part No.	Description	Version	QTY.	Remark
1	JBT7940. 1-M10X1	STRAIGHT FORCED FILLING OIL CUP		1	
2	TE254. 313G-01	FRONT SUPPORT SEAT		1	
3	FT254. 31F. 136	SLIDING SHAFT SLEEVE 45X50X45		1	


TE254. 314 REAR SUPPORTING SEAT ASSEMBLY

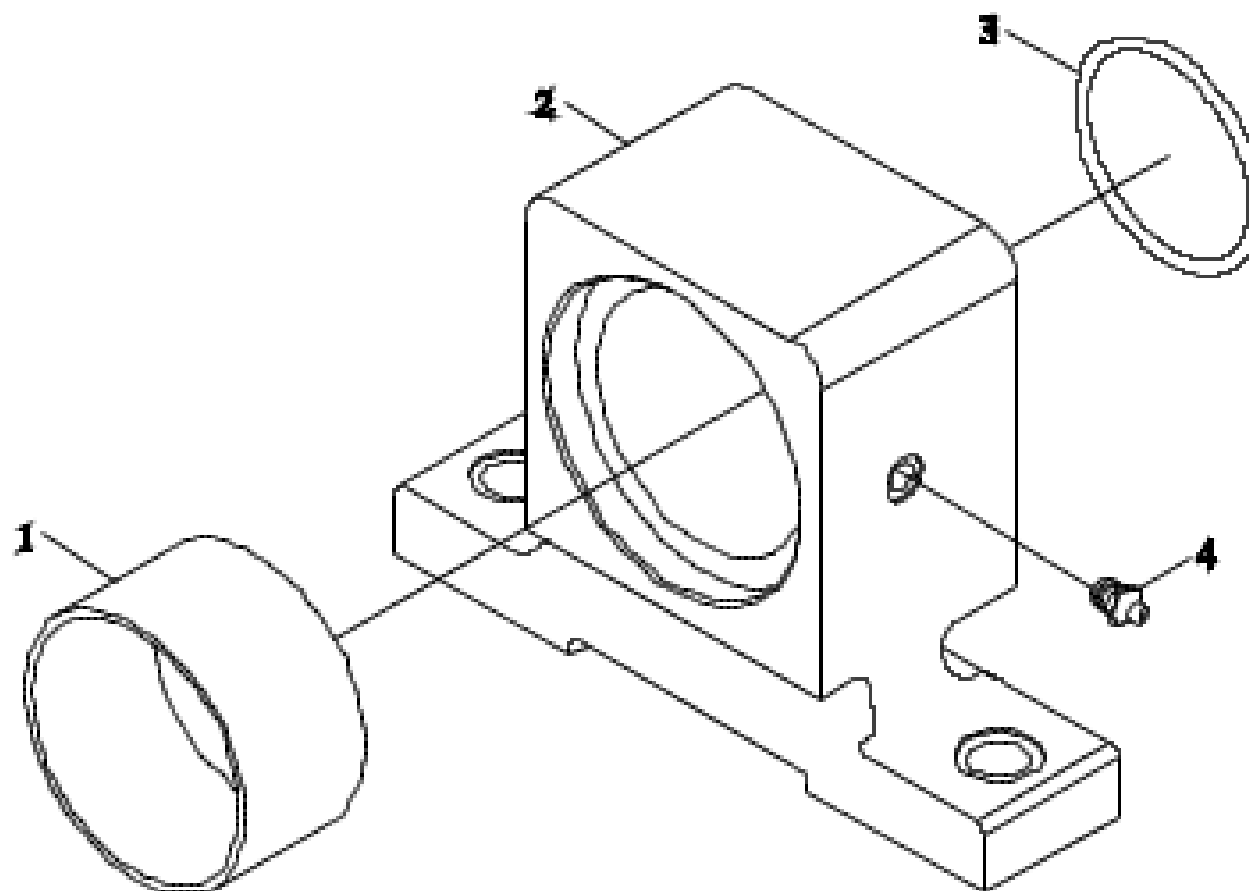

TE254. 314 REAR SUPPORTING SEAT ASSEMBLY

No.	Part No.	Description	Version	QTY.	Remark
1	FT254. 31F. 129	SLIDING SHAFT SLEEVE 70X75X40		1	
2	TE324. 311. 1-02	REAR SUPPORTING SEAT		1	
3	GBT3452. 1-54. 5X3. 55G	RUBBER O-SEAL RING		1	
4	JBT7940. 1-M10X1	STRAIGHT FORCED FILLING OIL CUP		1	


TL01320010000K FRONT DRIVING WHEEL ASSEMBLY

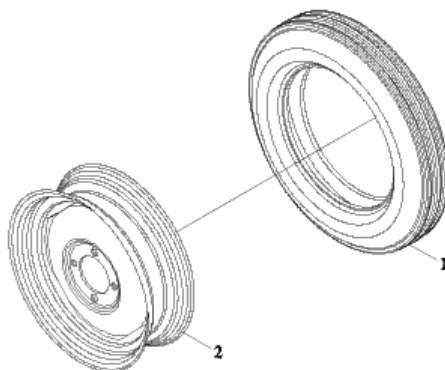

TL01320010000K FRONT DRIVING WHEEL ASSEMBLY

No.	Part No.	Description	Version	QTY.	Remark
	TL01320010000K	FRONT DRIVING WHEEL ASSEMBLY		1	
1	TL01320010001K	AGRICULTURAL RADIAL TIRE 260/70R16		1	
2	TL01320010002K	RIM WELDMENT		1	


TL02340020000K REAR DRIVING WHEEL ASSEMBLY 12. 4-24

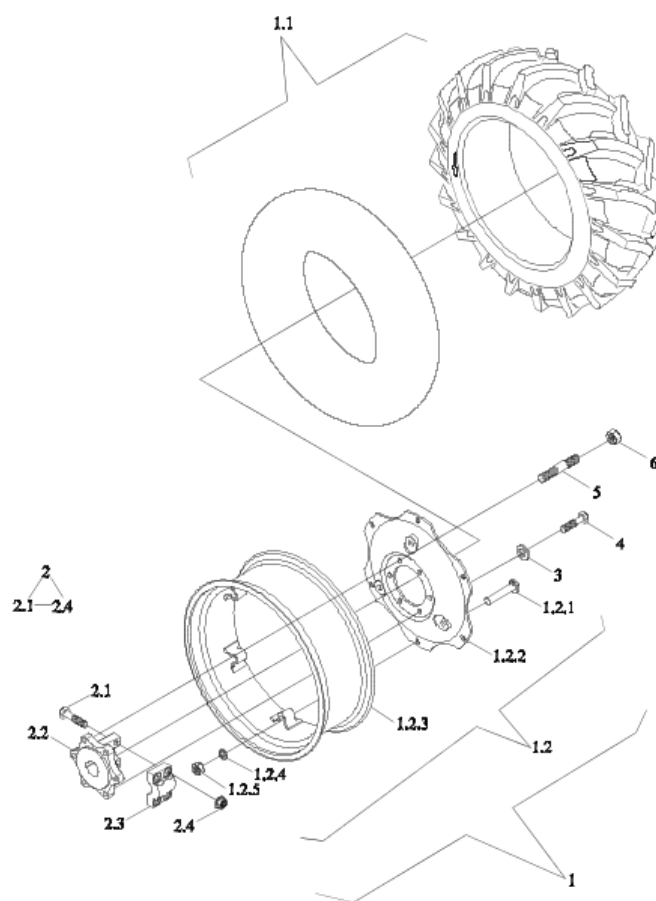

TL02340020000K REAR DRIVING WHEEL ASSEMBLY 12. 4-24

No.	Part No.	Description	Version	QTY.	Remark
	TL02340020000K	REAR DRIVING WHEEL ASSEMBLY		1	
1	TL02340020002K	REAR WHEEL ASSEMBLY		1	
1. 1	TL02340020001K	AGRICULTURAL RADIAL TIRE 320/85R24		1	
1. 2	TL02340020004K	RIM SPOKE ASSEMBLY		1	
2	TE254. 34B. 2	HUB INSTALLATION ASSEMBLY		1	
3	FT250. 34. 108	HUB WASHER		6	
4	GBT5786-M14X1. 5X35-10. 9-A3L	HEXAGON BOLT		4	
5	TL01340010003	DOUBLE END STUDS		2	
6	GBT6171-M14X1. 5-10-A3L	HEXAGON NUT, TYPE-1		2	


TL01350010000K TOWING MECHANISM INSTALLATION ASSEMBLY

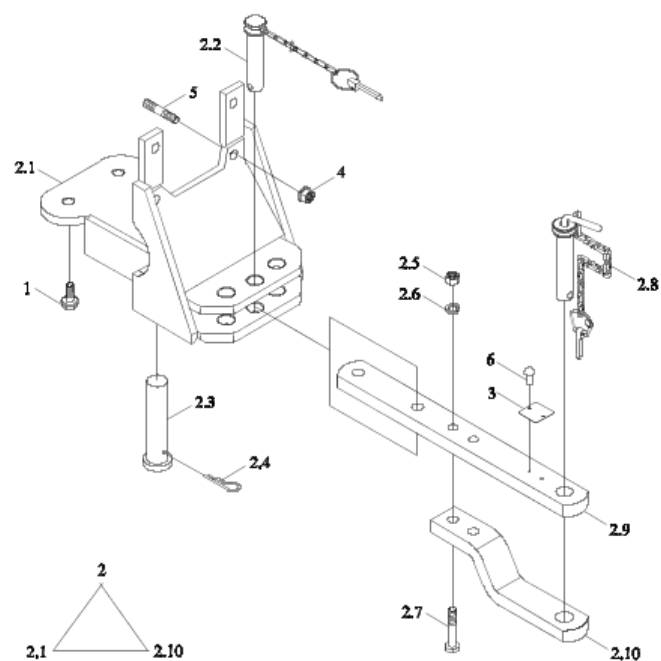

TL01350010000K TOWING MECHANISM INSTALLATION ASSEMBLY

No.	Part No.	Description	Version	QTY.	Remark
	TL01350010000K	TOWING MECHANISM INSTALLATION ASSEMBLY		1	
1	GBT16674. 1-M12X30-10. 9-A3L	HEXAGON FLANGE NUT		2	
2	TL01350010001K	TRACTION DEVICE ASSEMBLY		1	
2. 1	TE300. 35. 2. 1	TOWING BRACKET WELDMENT		1	
2. 2	TE250. 35A. 1. 1	LIMITING PIN AND LOCK PIN ASSEMBLY		1	
2. 3	FT250. 35. 101	CONNECTING PIN		1	
2. 4	FT65. 35. 103	SPRING LOCK PIN		1	
2. 5	GBT6170-M16-8-A3L	HEXAGON NUT, TYPE-1		2	
2. 6	GBT93-16	STANDARD SPRING WASHER		2	
2. 7	GBT5782-M16X80-8. 8-A3L	HEXAGON BOLT		2	
2. 8	TB400. 35. 1. 2	TOWING PIN AND LOCK PIN ASSEMBLY		1	
2. 9	TE250. 35C. 1-01	SWING ROD		1	
2. 10	TB400. 35. 1-02	CONNECTING SWING ROD		1	
3	TE250. 35C-01	TOWING SIGN PLATE		1	
4	SPL-C0-M12-10-F3	HEXAGON NUT		4	
5	GBT899-GM12-M12X32-10. 9-A3L	DOUBLE END STUDS		4	
6	GBT827-3X8-A0P	LABEL RIVET		2	

TE2S361010000K SHUTTLE SHIFT ASSEMBLY-1

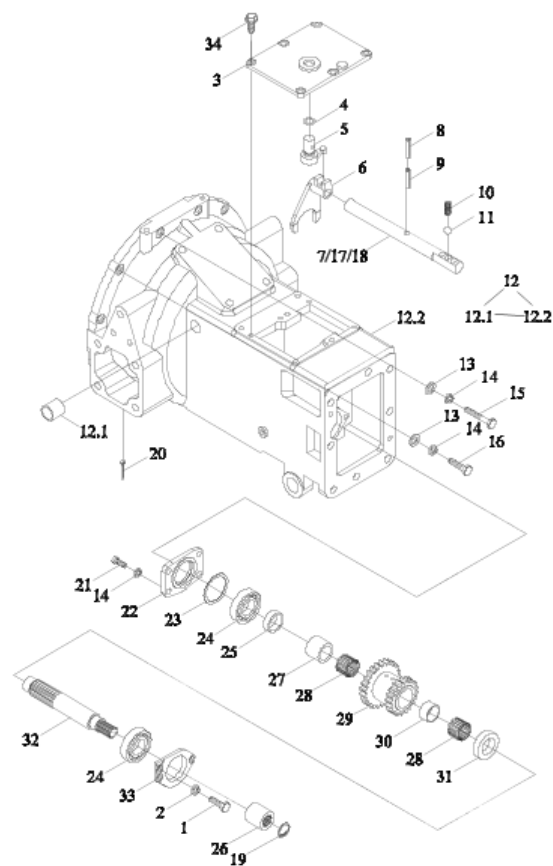


TE2S361010000K SHUTTLE SHIFT ASSEMBLY-1

No.	Part No.	Description	Version	QTY.	Remark
	TE2S361010000K	SHUTTLE SHIFT ASSEMBLY		1	
1	GBT5783-M8X20-8. 8-A2L	HEXAGON BOLT		5	
2	GBT93-8-A3L	STANDARD SPRING WASHER		11	
3	TE2S361010001K	SHUTTLE SHIFT UPPER COVER		1	
4	GBT3452. 1-13. 2X2. 65G	RUBBER O-SEAL RING		1	
5	TE250. 361F-23	SHUTTLE SHIFT ROCKER ARM		1	
6	TE254. 361T-01	SHUTTLE SHIFT FORK		1	
7	TE2S361010002K	SHUTTLE SHIFT FORK SHAFT		1	
8	GBT879. 1-3X24	SPRING COLUMN PIN		1	
9	GBT879. 1-5X24	SPRING COLUMN PIN		1	
10	FT250. 37. 148	LOCKING SPRING OF FORK SHAFT		1	
11	GBT308-8. 731-G200-b	STEEL BALL		1	
12	TE2S361010009K	CLUTCH HOUSING UNIT		1	
12. 1	FT250. 36. 103	ROCKER SHAFT LONG BUSH		2	
12. 2	TE2S361010008K	CLUTCH HOUSING		1	
13	GBT97. 1-10-A3L	FLAT WASHER		12	
14	GBT93-10-A3L	STANDARD SPRING WASHER		20	
15	GBT5782-M10X55-8. 8-A3L	HEXAGON BOLT		4	
16	GBT5783-M10X35-8. 8-A3L	HEXAGON BOLT		8	
17	TE2S361010006K	SHUTTLE SHIFT FORK SHAFT		1	
18	TE2S361010007K	SHUTTLE SHIFT FORK SHAFT		1	
19	GBT893. 1-18	CIRCLIPS FOR HOLE		1	
20	GBT91-4X20-A3L	SPLIT PIN		1	

TE2S361010000K SHUTTLE SHIFT ASSEMBLY-1 (cont'd.)

No.	Part No.	Description	Version	QTY.	Remark
21	GBT5783-M10X25-8.8-A3L	HEXAGON BOLT		8	
22	TE250.361F-04	BEARING PRESSURE COVER		1	
23	TE250.361F-21	ADJUSTING WASHER		1	
24	GBT276-6305	DEEP GROOVE BALL BEARING		2	
25	TE250.361F-05	SPACER BUSH		1	
26	TE250.361F-13	SPLINE BUSH		1	
27	TE354.361T-17	MIDDLE SHAFT SPACER BUSH		1	
28	GBT20056-K30X35X27	NEEDLE AND CARRIER COMBINATION		2	
29	TE354.361T-01	SHUTTLE SHIFT DRIVEN DUAL GEAR		1	
30	TE354.361T-02	SHORT BUSH		1	
31	TE354.361T-04	MIDDLE SHAFT RETAINER RING		1	
32	TE250.361F-12	SHUTTLE SHIFT MIDDLE SHAFT		1	
33	TE250.361F-22	BEARING PRESSURE COVER		1	
34	GBT16674.1-M8X25-8.8-A2L	HEXAGON FLANGE NUT		2	

TE2S361010000K SHUTTLE SHIFT ASSEMBLY-2

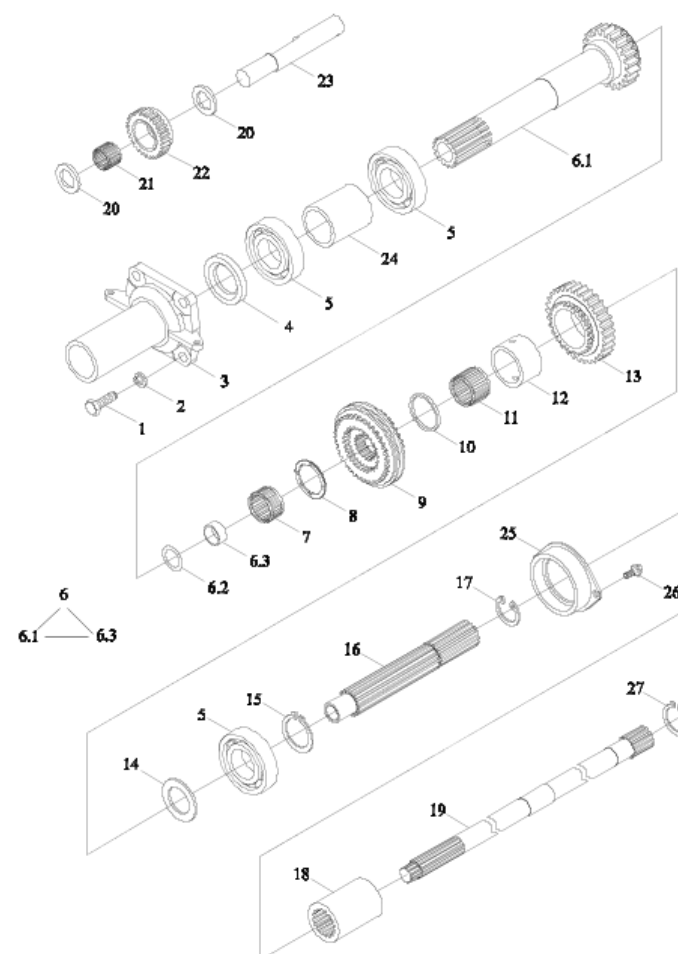


TE2S361010000K SHUTTLE SHIFT ASSEMBLY-2

No.	Part No.	Description	Version	QTY.	Remark
	TE2S361010000K	SHUTTLE SHIFT ASSEMBLY		1	
1	GBT5783-M10X25-8. 8-A3L	HEXAGON BOLT		8	
2	GBT93-10-A3L	STANDARD SPRING WASHER		20	
3	TE250. 361F-01	RELEASE BEARING SEAT SUPPORT		1	
4	GBT9877. 1-FB35X55X8F	SEAL RING		1	
5	GBT276-6207	DEEP GROOVE BALL BEARING		3	
6	TE2S361010004K	DRIVING GEAR SHAFT		1	
6. 1	TE2S361010005K	SHUTTLE SHIFT DRIVING GEAR SHAFT		1	
6. 2	TE250. 361F. 2-03	O-RING		1	
6. 3	TE250. 361F. 2-02	SLEEVE		1	
7	GBT20056-K28X36X20	NEEDLE AND CARRIER COMBINATION		1	
8	TE354. 361T-16	RETAINER RING		1	
9	TE354. 361T. 3	SYNCHRONIZER ASSEMBLY		1	
10	TE250. 361D-13	NEEDLE SPACER BUSH		1	
11	QLWZB120-K42X48X21	ROLLER NEEDLE BEARING		1	
12	TE354. 361T-13	DRIVEN GEAR BUSH		1	
13	TE354. 361T-03	DRIVEN GEAR		1	
14	TE354. 361T-08	OUTPUT SHAFT RETAINER RING		1	
14	TE354. 361T-21	OUTPUT SHAFT RETAINER RING		1	
14	TE354. 361T-22	OUTPUT SHAFT RETAINER RING		1	
14	TE354. 361T-23	OUTPUT SHAFT RETAINER RING		1	
14	TE354. 361T-24	OUTPUT SHAFT RETAINER RING		1	
15	GBT894. 1-35	CIRCLIP FOR SHAFT		1	

TE2S361010000K SHUTTLE SHIFT ASSEMBLY-2 (cont'd.)

No.	Part No.	Description	Version	QTY.	Remark
16	TE354.361T-14	OUTPUT SHAFT		1	
17	GBT893.1-32	CIRCLIPS FOR HOLE		1	
18	TE354.361T-15	SPLINE BUSH		1	
19	TE2S361010003K	PTO CLUTCH SHAFT		1	
20	TE354.361T-10	IDLER SHAFT RETAINER RING		2	
21	GBT20056-K20X24X17	NEEDLE AND CARRIER COMBINATION		1	
22	TE354.361T-11	SHUTTLE SHIFT IDLER		1	
23	TE354.361T-12	SHUTTLE SHIFT IDLER SHAFT		1	
24	TE354.361T-09	SPACER BUSH		1	
25	TE354.361T-05	REAR BEARING SEAT		1	
26	GBT16674.1-M8X20-8.8-A2L	HEXAGON FLANGE NUT		6	
27	GBT894.1-24	CIRCLIP FOR SHAFT		1	


TE2S362010000K SHUTTLE SHIFT CONTROL MECHANISM ASSEMBLY

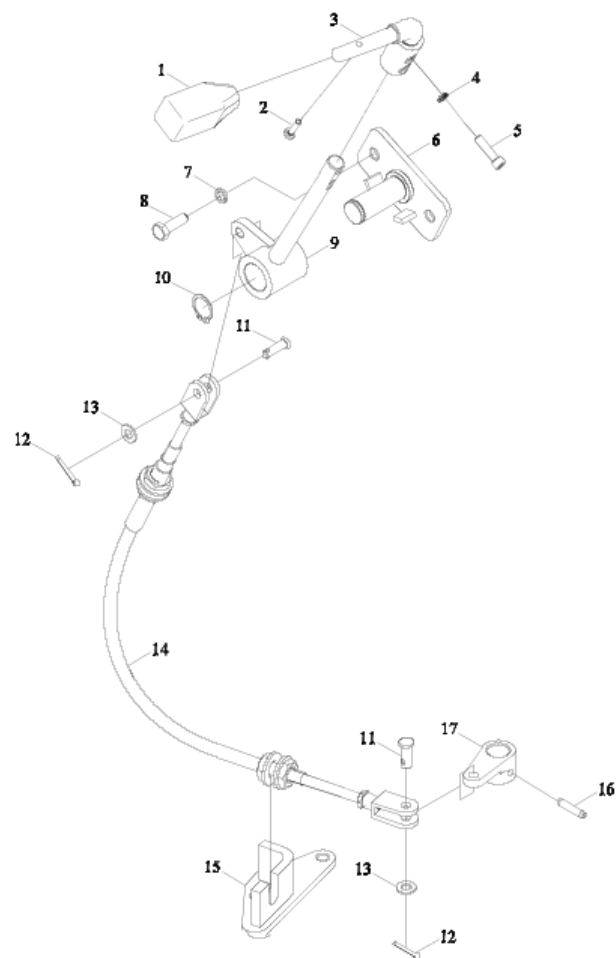

TE2S362010000K SHUTTLE SHIFT CONTROL MECHANISM ASSEMBLY

No.	Part No.	Description	Version	QTY.	Remark
	TE2S362010000K	SHUTTLESHIFTCONTROLMECHANISMASSEMBLY		1	
1	TE2S362010006K	SHUTTLE SHIFT HANDLE		1	
2	GBT818-M5X16-4. 8-A2L	CROSS SCREW		1	
3	TE2S362010008K	SHUTTLE SHIFT LEVER TYPE UP SECTION		1	
4	GBT93-6-A3L	STANDARD SPRING WASHER		2	
5	GBT70. 1-M6X25-10. 9-A2L	INNER HEXAGON SCREW		2	
6	TL02362010014	SHUTTLE SHIFT HANDLE SEAT		1	
7	GBT93-8-A3L	STANDARD SPRING WASHER		2	
8	GBT5783-M8X25-8. 8-A2L	HEXAGON BOLT		2	
9	TE2S362010011K	SHUTTLE SHIFT LEVER TYPE LOWER SECTION		1	
10	GBT894. 1-20	CIRCLIP FOR SHAFT		1	
11	TG1654. 373B. 1-01	PIN SHAFT		2	
12	GBT91-3. 2X20-A3L	SPLIT PIN		2	
13	GBT97. 1-8-A3L	FLAT WASHER		2	
14	TE2S362010004K	SOFT SHAFT WELD		1	
15	TE2S362010001K	INSTALLATION PLATE WELDMENT		1	
16	QLWZB140-6X28	PIN		1	
17	TL02362010006	ROCKER		1	

TE2S371010000K MAIN/AUXILIARY GEARSHIFT ASSEMBLY-1

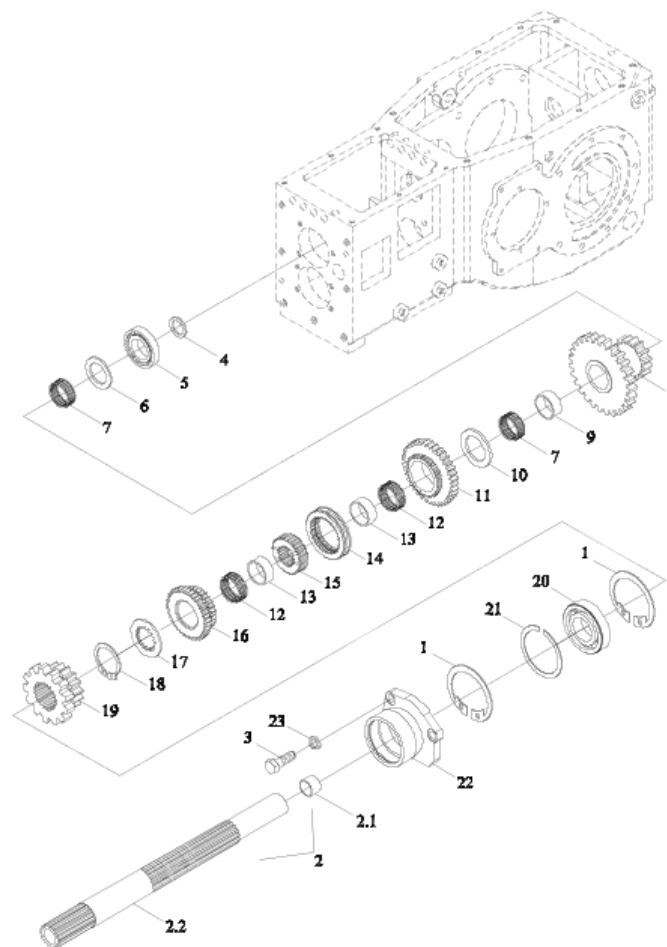


TE2S371010000K MAIN/AUXILIARY GEARSHIFT ASSEMBLY-1

No.	Part No.	Description	Version	QTY.	Remark
	TE2S371010000K	MAIN/AUXILIARY GEARSHIFT ASSEMBLY		1	
1	GBT894. 1-35	CIRCLIP FOR SHAFT		2	
2	TE354. 371T. 1	1ST SHAFT ASSEMBLY		1	
2. 1	FT250. 37A. 137	SHAFT SLEEVE		1	
2. 2	TE354. 371T. 1-01	1ST SHAFT		1	
3	GBT5783-M10X25-8. 8-A3L	HEXAGON BOLT		7	
4	FT250. 37A. 272	THRUST RING		1	
5	GBT283-NJ206E	COLUMN ROLLER BEARING		1	
6	FT250. 37A. 150	1ST SHAFT ASSISTANT GEARSHIFT SPACER RING		1	
6	FT250. 37A. 151	1ST SHAFT ASSISTANT GEARSHIFT SPACER RING		1	
6	FT250. 37A. 152	1ST SHAFT ASSISTANT GEARSHIFT SPACER RING		1	
6	FT250. 37A. 153	1ST SHAFT ASSISTANT GEARSHIFT SPACER RING		1	
6	FT250. 37A. 154	1ST SHAFT ASSISTANT GEARSHIFT SPACER RING		1	
7	GBT20056-K30X35X27	NEEDLE AND CARRIER COMBINATION		2	
8	FT250. 37. 146	HIGH AND LOW GEAR FIXING GEAR		1	
9	FT250. 37. 139	SHORT SPACER		1	
10	FT250. 37. 138	IV DRIVING GEAR RETAINING RING		1	
11	TE300. 371-08	IV DRIVING GEAR		1	
12	QLWZB120-K42X48X22	ROLLER NEEDLE BEARING		2	
13	FT250. 37. 134	GEAR SLIDING SLEEVE		2	
14	TE300. 371-09	SHIFT COLLAR		1	
15	FT250. 37. 135	MESHING SEAT		1	
16	TE300. 371-07	III DRIVING GEAR		1	

TE2S371010000K MAIN/AUXILIARY GEARSHIFT ASSEMBLY-1 (cont'd.)

No.	Part No.	Description	Version	QTY.	Remark
17	FT250.37.133	RETAINING RING OF 3RD DRIVING GEAR		1	
18	GBT894.1-34	CIRCLIP FOR SHAFT		1	
19	TE300.371-05	I-II SLIDING GEAR		1	
20	GBT276-6207N	DEEP GROOVE BALL BEARING		1	
21	GBT305-72-78.6	THRUST RING		1	
22	FT250.37.128	1ST SHAFT FRONT BEARING COVER		1	
23	GBT93-10-A3L	STANDARD SPRING WASHER		7	


TE2S371010000K MAIN/AUXILIARY GEARSHIFT ASSEMBLY-2

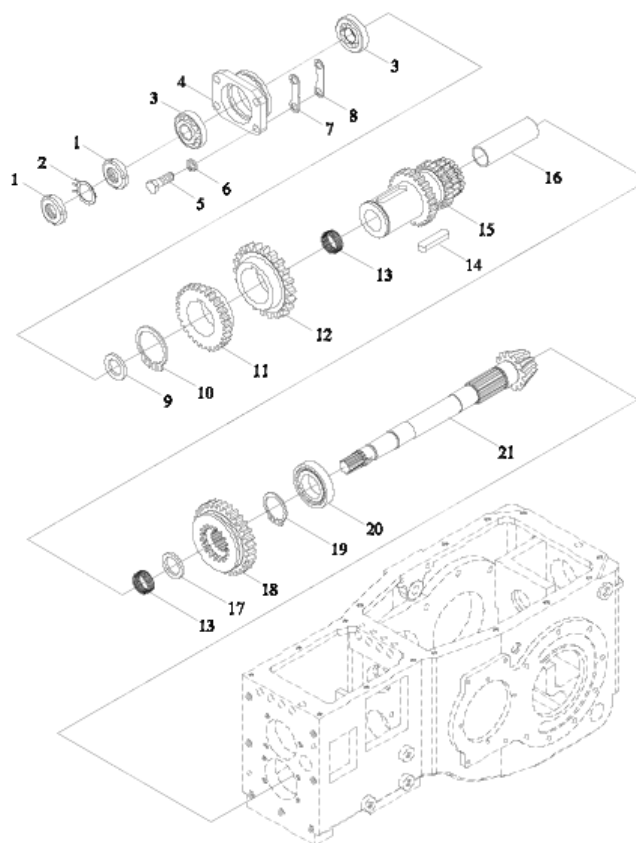

TE2S371010000K MAIN/AUXILIARY GEARSHIFT ASSEMBLY-2

No.	Part No.	Description	Version	QTY.	Remark
	TE2S371010000K	MAIN/AUXILIARY GEARSHIFT ASSEMBLY		1	
1	GBT812-M27X1.5	ROUND NUT		2	
2	GBT858-27	THRUST WASHER FOR ROUND NUT		1	
3	GBT297-30206	TAPERED ROLLER BEARING		2	
4	FT250.37.121	SHAFT-2 FRONT BEARING SEAT		1	
5	GBT5783-M10X25-8.8-A3L	HEXAGON BOLT		7	
6	GBT93-10-A3L	STANDARD SPRING WASHER		7	
7	FT250.37.122	SHAFT-2 ADJUSTING WASHER		1	
8	FT250.37.123	SHAFT-2 ADJUSTING WASHER		1	
9	FT250.37.110a	SHAFT-2 FRONT THRUST RING		1	
10	GBT894.1-55	CIRCLIP FOR SHAFT		1	
11	TE300.371-03	II DRIVEN GEAR		1	
12	TE300.371-04	I DRIVEN GEAR		1	
13	GBT20056-K32X37X27	NEEDLE AND CARRIER COMBINATION		2	
14	GBT1096-14X9X56	FLAT KEY		1	
15	TE300.371-06a	III-IV DRIVEN GEAR		1	
16	FT250.37.105a	LONG SPACER BUSH		1	
17	FT250.37.104a	SHAFT-2 REAR THRUST RING		1	
18	FT250.37.103a	HIGH AND LOW GEAR FIXING GEAR		1	
19	GBT894.1-38	CIRCLIP FOR SHAFT		1	
20	TE250.371C-02	BEARING		1	
21	TE300.371-01a	SECOND SHAFT		1	

TE2S372010000K REAR CENTRAL ASSEMBLY OF TRANSMISSION CASE-1

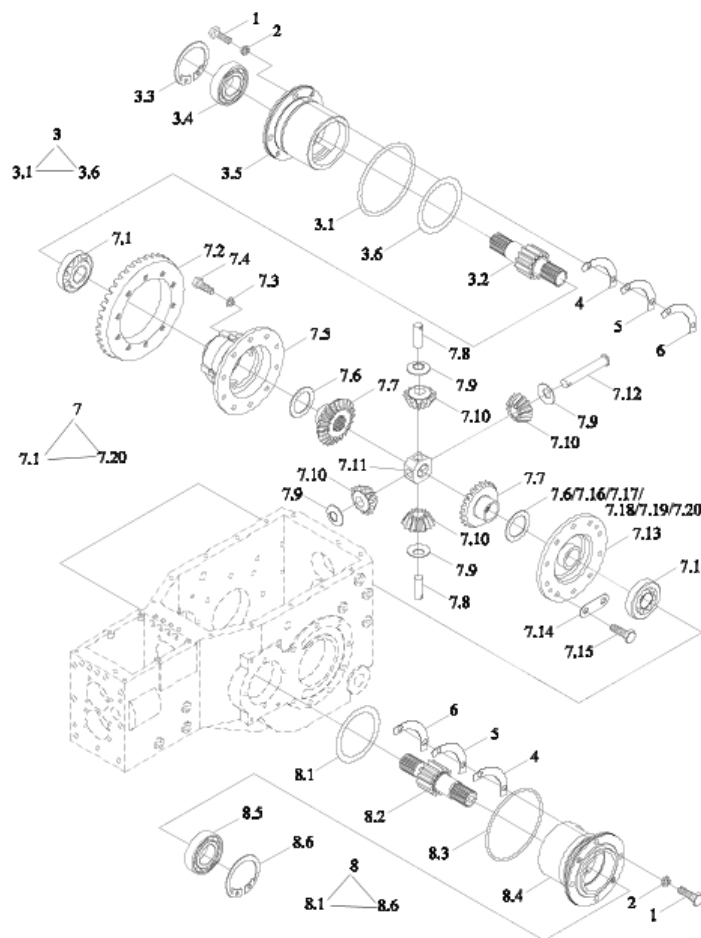


TE2S372010000K REAR CENTRAL ASSEMBLY OF TRANSMISSION CASE-1

No.	Part No.	Description	Version	QTY.	Remark
	TE2S372010000K	REAR CENTRAL ASSEMBLY OF TRANSMISSION CASE		1	
1	GBT5783-M10X30-8.8-A3L	HEXAGON BOLT		8	
2	GBT93-10-A3L	STANDARD SPRING WASHER		8	
3	TE354.372B.2	RIGHT SHORT HALF SHAFT ASSEMBLY		1	
3.1	GBT3452.1-142.5X3.55G	RUBBER O-SEAL RING		1	
3.2	TE354.372B.1-02	FINAL TRANSMISSION DRIVING GEAR		1	
3.3	GBT893.1-80	CIRCLIPS FOR HOLE		1	
3.4	GBT276-6307	DEEP GROOVE BALL BEARING		1	
3.5	TE354.372B.2-01	RIGHT BEARING SEAT		1	
3.6	GBT3452.1-103X3.55G	RUBBER O-SEAL RING		1	
4	FT250.37.204	ADJUSTING WASHER		1	
5	FT250.37.205	ADJUSTING WASHER		1	
6	FT250.37.206	ADJUSTING WASHER		1	
7	TE300.372.2	DIFFERENTIAL ASSEMBLY		1	
7.1	GBT297-32011	TAPERED ROLLER BEARING		2	
7.2	TE300.372.2-07	DRIVEN SPIRAL BEVEL GEAR		1	
7.3	GBT93-8-A3L	STANDARD SPRING WASHER		3	
7.4	FT250.37.201	FIXING SCREW		3	
7.5	TE300.372.2-05	DIFFERENTIAL HOUSING		1	
7.6	FT250.37.203	HALF SHAFT GEAR WASHER		1	
7.7	FT250.37.202	HALF SHAFT GEAR		2	
7.8	TE300.372.2-09	SHORT PLANETARY GEAR SHAFT		2	
7.9	FT250.37.199	PLANET GEAR WASHER		4	

TE2S372010000K REAR CENTRAL ASSEMBLY OF TRANSMISSION CASE-1 (cont'd.)

No.	Part No.	Description	Version	QTY.	Remark
7. 10	FT250. 37. 200	PLANET GEAR		4	
7. 11	TE300. 372. 2-08	CENTRAL RING		1	
7. 12	FT250. 37. 198	PLANET GEAR SHAFT		1	
7. 13	TE300. 372. 2-06	DIFFERENTIAL PRESS COVER		1	
7. 14	TE300. 372. 2-03	LOCK WASHER		5	
7. 15	GBT5786-M10X1. 25X35-8. 8-A2L	HEXAGON BOLT		10	
7. 16	FT250. 37. 332	HALF SHAFT GEAR WASHER		1	
7. 17	FT250. 37. 333	HALF SHAFT GEAR WASHER		1	
7. 18	FT250. 37. 334	HALF SHAFT GEAR WASHER		1	
7. 19	FT250. 37. 335	HALF SHAFT GEAR WASHER		1	
7. 20	FT250. 37. 336	HALF SHAFT GEAR WASHER		1	
8	TE354. 372B. 1	LEFT SHORT HALF SHAFT ASSEMBLY		1	
8. 1	GBT3452. 1-103X3. 55G	RUBBER O-SEAL RING		1	
8. 2	TE354. 372B. 1-02	FINAL TRANSMISSION DRIVING GEAR		1	
8. 3	GBT3452. 1-142. 5X3. 55G	RUBBER O-SEAL RING		1	
8. 4	TE354. 372B. 1-01	LEFT BEARING SEAT		1	
8. 5	GBT276-6307	DEEP GROOVE BALL BEARING		1	
8. 6	GBT893. 1-80	CIRCLIPS FOR HOLE		1	

TE2S372010000K REAR CENTRAL ASSEMBLY OF TRANSMISSION CASE-2

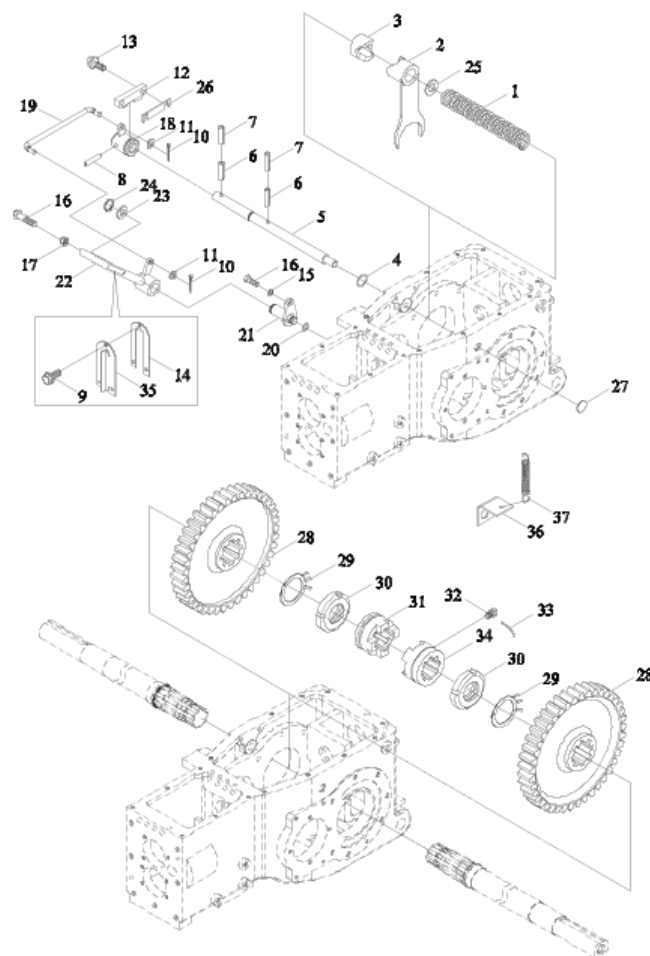


TE2S372010000K REAR CENTRAL ASSEMBLY OF TRANSMISSION CASE-2

No.	Part No.	Description	Version	QTY.	Remark
	TE2S372010000K	REAR CENTRAL ASSEMBLY OF TRANSMISSION CASE		1	
1	FT250. 37. 263	DIFFERENTIAL LOCK SPRING		1	
2	TE2S372010002K	DIFFERENTIAL LOCK FORK		1	
3	TE250. 372F-05	DIFFERENTIAL LOCK DIAL BLOCK		1	
4	GBT3452. 1-15. 5X2. 65G	RUBBER O-SEAL RING		1	
5	TE2S372010003K	DIFFERENTIAL LOCK FORK SHAFT		1	
6	GBT879. 1-8X40-A3L	SPRING COLUMN PIN		1	
7	GBT879. 1-5X40-A3L	SPRING COLUMN PIN		1	
8	QLWZB140-8X35	PIN		1	
9	GBT16674. 1-M6X16-8. 8-A2L	HEXAGON FLANGE NUT		3	
10	GBT91-3. 2X16-A3L	SPLIT PIN		2	
11	GBT97. 1-8-A3L	FLAT WASHER		2	
12	TE250. 372F-02	RETAINER PLATE		1	
13	GBT16674. 1-M10X25-8. 8-A3L	HEXAGON FLANGE NUT		2	
14	TL02372050006	SEAL SLEEVE PRESSURE PLATE		1	
15	GBT93-8-A3L	STANDARD SPRING WASHER		1	
16	GBT5783-M8X20-8. 8-A2L	HEXAGON BOLT		2	
17	GBT6172. 1-M8-04-A2L	HEXAGON THIN NUT		2	
18	TE250. 372F. 3	DIFFERENTIAL LOCK FORK SHAFT STEERING HUB WELDMENT		1	
19	TE354. 372-01	DIFFERENTIAL LOCK CONTROL ROD		1	
20	GBT3452. 1-11. 8X1. 80G	RUBBER O-SEAL RING		1	
21	TE250. 372F. 2	DIFFERENTIAL LOCK STEERING HUB SHAFT WELDMENT		1	

TE2S372010000K REAR CENTRAL ASSEMBLY OF TRANSMISSION CASE-2 (cont'd.)

No.	Part No.	Description	Version	QTY.	Remark
22	TL02372050001	WELDED STEP		1	
23	GBT97. 1-20-A3L	FLAT WASHER		1	
24	GBT894. 1-20	CIRCLIP FOR SHAFT		1	
25	GBT97. 1-16-A3L	FLAT WASHER		1	
26	TE250. 372F-18	ADJUSTING WASHER		1	
27	Q72220	PLUG PIECE		1	
28	TE300. 372-01	FINAL TRANSMISSION DRIVEN GEAR		2	
29	GBT858-52	THRUST WASHER FOR ROUND NUT		2	
30	GBT812-M52X1. 5	ROUND NUT		2	
31	TE300. 372-05	RIGHT JAW		1	
32	FT250. 37. 264	LOCKING NUT		1	
33	TE250. 212-05	LOW CARBON STEEL WIRE		1	
34	TE300. 372-04	LEFT JAW		1	
35	TL02372050005	SEAL SLEEVE		1	
36	TE250. 372B-03	RETURN SPRING		1	
37	TE2S372010001K	SPRING BRACKET		1	

TE2S373010000K TRANSMISSION CASE CONTROL MECHANISM ASSEMBLY-1

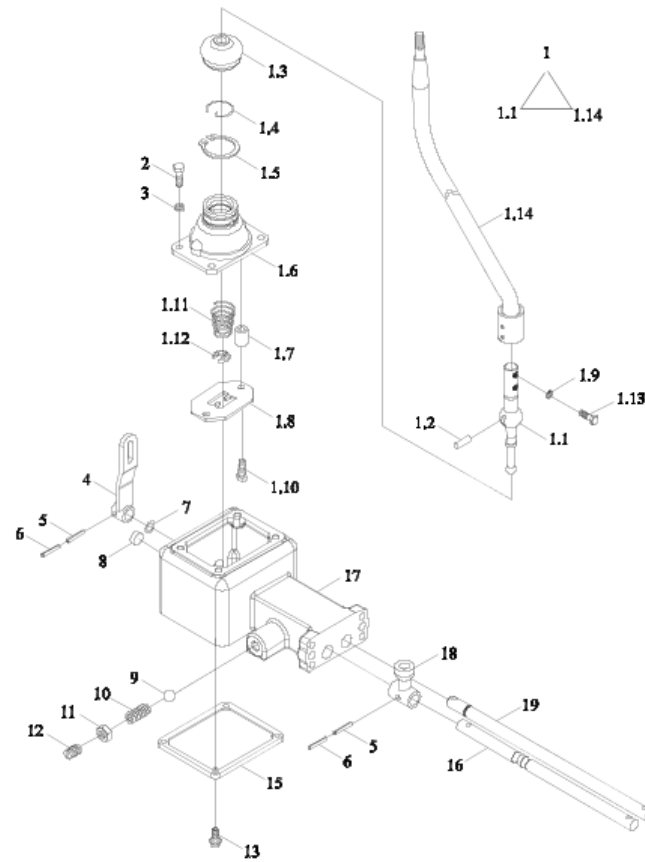


TE2S373010000K TRANSMISSION CASE CONTROL MECHANISM ASSEMBLY-1

No.	Part No.	Description	Version	QTY.	Remark
	TE2S373010000K	TRANSMISSIONCASECONTROLMECHANISMASSEMBLY		1	
	TE2S373010001K	SIDE-MOUNTED CONTROL MECHANISM ASSEMBLY		1	
1	TL02373140002	MAIN GEARSHIFT CONTROL COVER ASSEMBLY		1	
1.1	TE250. 373F. 1. 1-05	LOWER CONTROL ROD		1	
1.2	GBT119. 1-6h8X40-A3L	COLUMN PIN		1	
1.3	FT800. 37. 138	GEARLEVER DUSTPROOF BONNET		1	
1.4	FT250. 37. 248	STEEL WIRE RETAINER RING		1	
1.5	GBT894. 1-45	CIRCLIP FOR SHAFT		1	
1.6	FT250. 37. 211	MAIN GEARLEVER SEAT		1	
1.7	TE250. 373F. 1. 1-03	PAD BLOCK		2	
1.8	TE250. 373F. 1. 1-02	GEARLEVER LOCATING PLATE		1	
1.9	GBT93-8-A3L	STANDARD SPRING WASHER		4	
1.10	GBT5782-M8X40-8. 8-A2L	HEXAGON BOLT		2	
1.11	FT250. 37. 183	GEARLEVER SPRING		1	
1.12	FT300. 37. 164	GEARLEVER SPRING RETAINER RING		1	
1.13	GBT5783-M8X35-8. 8-A2L	HEXAGON BOLT		2	
1.14	TL02373140003	MAIN GEARSHIFT UPPER CONTROL ROD WELDMENT		1	
2	GBT5783-M8X25-8. 8-A2L	HEXAGON BOLT		4	
3	GBT93-8-A3L	STANDARD SPRING WASHER		4	
4	TL02373140005	AUXILIARY GEARSHIFT LOWER CONTROL ROCKER WELDMENT		1	
5	GBT879. 1-6X24	SPRING COLUMN PIN		2	
6	GBT879. 2-3. 5X24	SPRING COLUMN PIN		2	
7	GBT3452. 1-12. 5X1. 80G	RUBBER O-SEAL RING		1	

TE2S373010000K TRANSMISSION CASE CONTROL MECHANISM ASSEMBLY-1 (cont'd.)

No.	Part No.	Description	Version	QTY.	Remark
8	Q72220	PLUG PIECE		1	
9	GBT308-9. 5-G200-b	STEEL BALL		1	
10	FT704. 42B. 163	FORK SHAFT LOCATING SPRING		1	
11	GBT6172. 1-M12-04-A3L	HEXAGON THIN NUT		1	
12	GBT73-M12X25-14H-A3L	SLOTTED LOCKING SCREW		1	
13	GBT16674. 1-M6X20-8. 8-A2L	HEXAGON FLANGE NUT		4	
15	TE250. 373F. 1-03	SIDE-MOUNTED CONTROL LOWER COVER		1	
16	TE250. 373F. 1-05	MAIN GEARSHIFT CONTROL TRANSFER ROD		1	
17	TE2S373010002K	SIDE-MOUNTED CONTROL UPPER COVER		1	
18	TE250. 373F. 1-02	MAIN GEARSHIFT OUTER CONTROL FORK HEAD		1	
19	TE250. 373F. 1-04	AUXILIARY GEARSHIFT CONTROL TRANSMISSION ROD		1	


TE2S373010000K TRANSMISSION CASE CONTROL MECHANISM ASSEMBLY-2

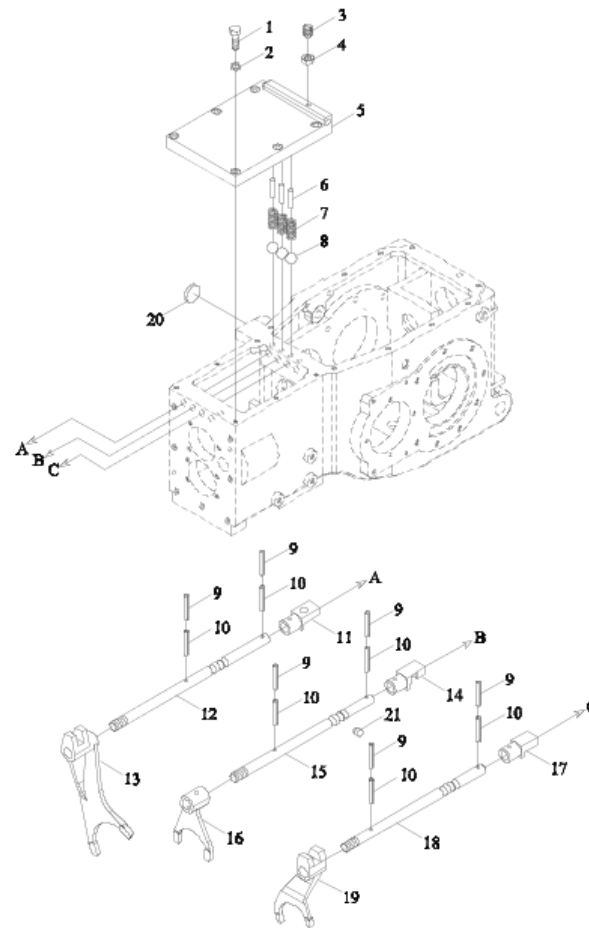

TE2S373010000K TRANSMISSION CASE CONTROL MECHANISM ASSEMBLY-2

No.	Part No.	Description	Version	QTY.	Remark
	TE2S373010000K	TRANSMISSIONCASECONTROLMECHANISMASSEMBLY		1	
1	GBT5783-M8X40-8. 8-A2L	HEXAGON BOLT		6	
2	GBT93-8-A3L	STANDARD SPRING WASHER		10	
3	FT250. 37. 249	FIXING SCREW		1	
4	GBT6173-M8X1-05-A2L	HEXAGON THIN NUT		1	
5	TE250. 373F-01	GEARBOX INTERLOCK PRESSURE COVER		1	
6	FT250. 37. 250	FIXING PIN		3	
7	TE354. 373A-01	SELF LOCKING SPRING		3	
8	GBT308-8. 731-G200-b	STEEL BALL		3	
9	GBT879. 1-3X24	SPRING COLUMN PIN		6	
10	GBT879. 1-5X24	SPRING COLUMN PIN		6	
11	TE250. 373F-11	HIGH AND LOW GEAR DIAL BLOCK		1	
12	TE354. 373-03	HIGH AND LOW GEAR FORK SHAFT		1	
13	FT250. 37. 145	HIGH AND LOW GEAR FORK		1	
14	TE250. 373F-10	III-IV GEAR DIAL BLOCK		1	
15	TE354. 373-02	III-IV FORK SHAFT		1	
16	FT250. 37. 143	III-IV FORK		1	
17	TE250. 373F-09	I-II GEAR DIAL BLOCK		1	
18	TE354. 373-01	I-II GEAR FORK SHAFT		1	
19	TE300. 373-01	I-II GEAR FORK		1	
20	Q72114	PLUG PIECE		1	
21	FT700. 37. 178	GEARSHIFT SHAFT INTERLOCKING PIN		1	

TE2S373010000K TRANSMISSION CASE CONTROL MECHANISM ASSEMBLY-3

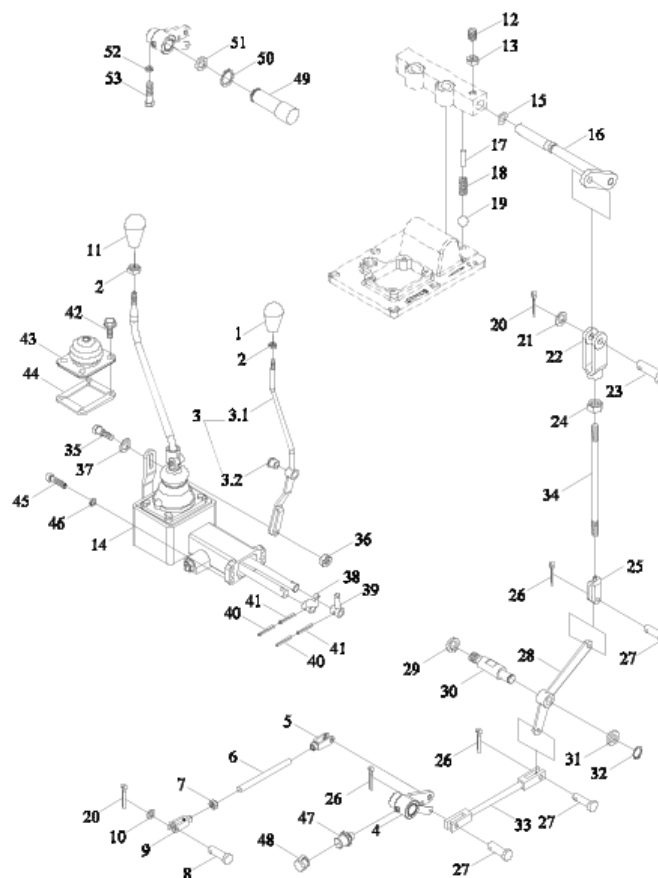

TE2S373010000K TRANSMISSION CASE CONTROL MECHANISM ASSEMBLY-3

No.	Part No.	Description	Version	QTY.	Remark
	TE2S373010000K	TRANSMISSIONCASECONTROLMECHANISMASSEMBLY		1	
1	FT250. 37. 037	AUXILIARY GEARSHIFT CONTROL HANDLE		1	
2	GBT6170-M10-8-A3L	HEXAGON NUT, TYPE-1		2	
3	TL02373140006	AUXILIARY GEARSHIFT UPPER CONTROL ROD PRES-SURE UNIT		1	
3.1	TL02373140007	AUXILIARY GEARSHIFT UPPER CONTROL ROD WELDMENT		1	
3.2	TE254. 582H. 11-01	NYLON SLEEVE		1	
4	TL02373090008	ROCKER UNIT		1	
5	FT800A. 43B. 119	LEFT REVOLVING PULL ROD FORK		1	
6	TE250. 212-01	PULL ROD		1	
7	GBT6171-M10X1-8-A2L	HEXAGON NUT, TYPE-1		1	
8	GBT882-B10X28-A3L	PIN SHAFT		2	
9	FT800A. 43B. 116	RIGHT REVOLVING PULL ROD FORK		1	
10	GBT97. 1-10-A3L	FLAT WASHER		2	
11	TE2S373010003K	MAIN GEARSHIFT CONTROL HANDLE ASSEMBLY		1	
12	FT250. 37. 249	FIXING SCREW		1	
13	GBT6173-M8X1-05-A2L	HEXAGON THIN NUT		1	
14	TE2S373010001K	SIDE-MOUNTED CONTROL MECHANISM ASSEMBLY		1	
15	GBT3452. 1-8. 75X1. 80G	RUBBER O-SEAL RING		1	
16	TE250. 373B. 5	INTERLOCKING SHAFT WELDMENT		1	
17	FT250. 37. 250	FIXING PIN		3	
18	TE354. 373A-01	SELF LOCKING SPRING		3	
19	GBT308-8. 731-G200-b	STEEL BALL		3	


TE2S373010000K TRANSMISSION CASE CONTROL MECHANISM ASSEMBLY-3 (cont'd.)

No.	Part No.	Description	Version	QTY.	Remark
20	GBT91-3. 2X20-A3L	SPLIT PIN		4	
21	GBT97. 1-8-A3L	FLAT WASHER		2	
22	FT250. 43. 103	BRAKE PULL ROD ADJUSTING FORK		1	
23	GBT882-B8X28-A3L	PIN SHAFT		2	
24	GBT6170-M8-8-A2L	HEXAGON NUT, TYPE-1		1	
25	TE250. 373B-05	LEFT REVOLVING PULL ROD FORK		1	
26	GBT91-2X10-A3L	SPLIT PIN		2	
27	GBT882-B6X20-A3L	PIN SHAFT		2	
28	TE250. 373B. 3a	SHAFT SLEEVE WELDMENT		1	
29	GBT93-12-A3L	STANDARD SPRING WASHER		1	
30	TE250. 373B-04	STUD		1	
31	GBT848-12-A3L	SMALL WASHER		1	
32	GBT894. 1-12	CIRCLIP FOR SHAFT		1	
33	TE250. 373B. 4	PULL ROD WELDMENT 2		1	
34	TE250. 373B-06	PULL ROD		1	
35	TE250. 373F-13	STEP BOLT		1	
36	GBT6170-M6-8-A2L	HEXAGON NUT, TYPE-1		1	
37	GBT95-8-A3L	FLAT WASHER		1	
38	TE250. 373F-02	MAIN GEARSHIFT CONTROL INNER FORK HEAD		1	
39	TE250. 373F-03	AUXILIARY GEARSHIFT CONTROL INNER DIAL HEAD		1	
40	GBT879. 2-3. 5X24	SPRING COLUMN PIN		2	
41	GBT879. 1-6X24	SPRING COLUMN PIN		2	

TE2S373010000K TRANSMISSION CASE CONTROL MECHANISM ASSEMBLY-3 (cont'd.)

No.	Part No.	Description	Version	QTY.	Remark
42	GBT16674. 1-M5X20-8. 8-A2L	HEXAGON FLANGE NUT		4	
43	TE250. 373F-15	SHIELD		1	
44	TE250. 373F-12	PRESSURE PLATE		1	
45	GBT70. 1-M8X25-12. 9	INNER HEXAGON SCREW		4	
46	GBT93-8-A3L	STANDARD SPRING WASHER		10	
47	JBT7940. 2-45dM10X1	JOINT FILL OIL CUP		1	
48	TD800. 311C. 1-01	DUSTPROOF CAP OF OIL CUP		1	
49	TL02373090009	ROCKER SHAFT		1	
50	GBT894. 1-25	CIRCLIP FOR SHAFT		1	
51	FT250. 43. 112	RETAINER RING		1	
52	GBT93-10-A3L	STANDARD SPRING WASHER		1	
53	GBT5783-M10X30-8. 8-A3L	HEXAGON BOLT		1	


TE2S374010000K TRANSMISSION CASE SHELL ASSEMBLY

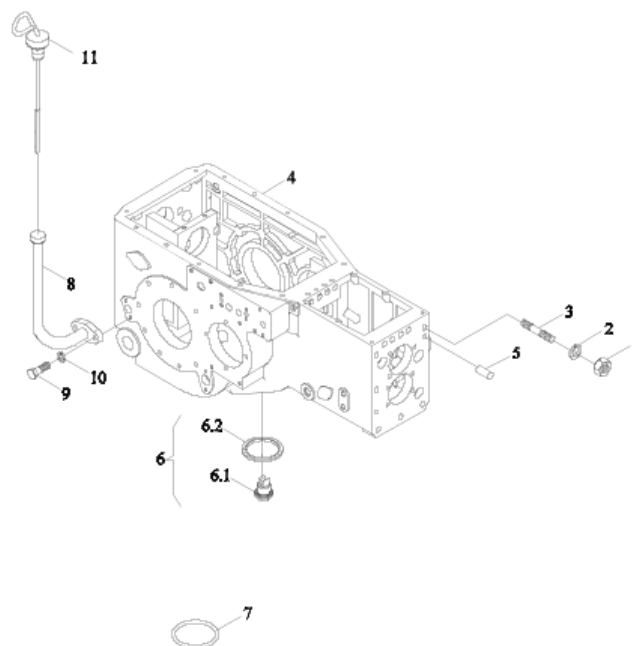

TE2S374010000K TRANSMISSION CASE SHELL ASSEMBLY

No.	Part No.	Description	Version	QTY.	Remark
	TE2S374010000K	TRANSMISSION CASE SHELL ASSEMBLY		1	
1	GBT6171-M14X1.5-8-A3L	HEXAGON NUT, TYPE-1		7	
2	GBT93-14-A3L	STANDARD SPRING WASHER		7	
3	GBT898-AM14-M14X1.5X40-8.8-A3L	DOUBLE END STUDS		7	
4	TE2S374010001K	TRANSMISSION CASE SHELL		1	
5	GBT119.1-10m6X26-A3L	COLUMN PIN		4	
6	TC05372020034	OIL PLUG ASSEMBLY		1	
6.1	TC05372020033	OIL PLUG COMBINATION		1	
6.2	TS09580010011	O-RING		1	
7	GBT3452.1-15.5X2.65G	RUBBER O-SEAL RING		1	
8	TE250.371F.1.2	OIL DIPSTICK PIPE WELDMENT		1	
9	GBT5783-M8X25-8.8-A2L	HEXAGON BOLT		2	
10	GBT93-8-A3L	STANDARD SPRING WASHER		2	
11	TB604.384.4	DIPSTICK ASSEMBLY		1	


TL02375080000 BREATH ASSEMBLY

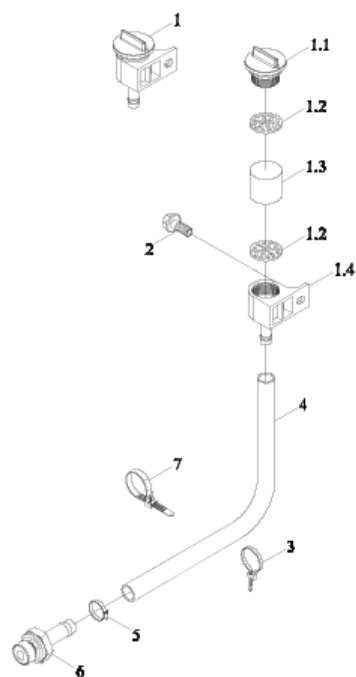

TL02375080000 BREATH ASSEMBLY

No.	Part No.	Description	Version	QTY.	Remark
	TL02375080000	BREATH ASSEMBLY		1	
1	TS17385010002	BREATHER		1	
1.1	TS17385010004	BREATH COVER		1	
1.2	TS17385010005	SEAT PLATE		2	
1.3	TS17385010006	BREATH FILTER ELEMENT		1	
1.4	TS17385010003	BREATHER		1	
2	GBT5789-M8X16-8.8-A2L	HEXAGON FLANGE NUT		1	
3	Q67405100	PLASTIC FASTENING STRIP		1	
4	TL02375020001	BREATH HOSE		1	
5	Q67522	A-TYPE WORM TRANSMISSION HOSE CLAMP		2	
6	TL02375020005	CONNECTING JOINT M12X1.5		1	
7	3203505D9-L	TIE		1	


TE2S391010000K LEFT HALF SHAFT ASSEMBLY

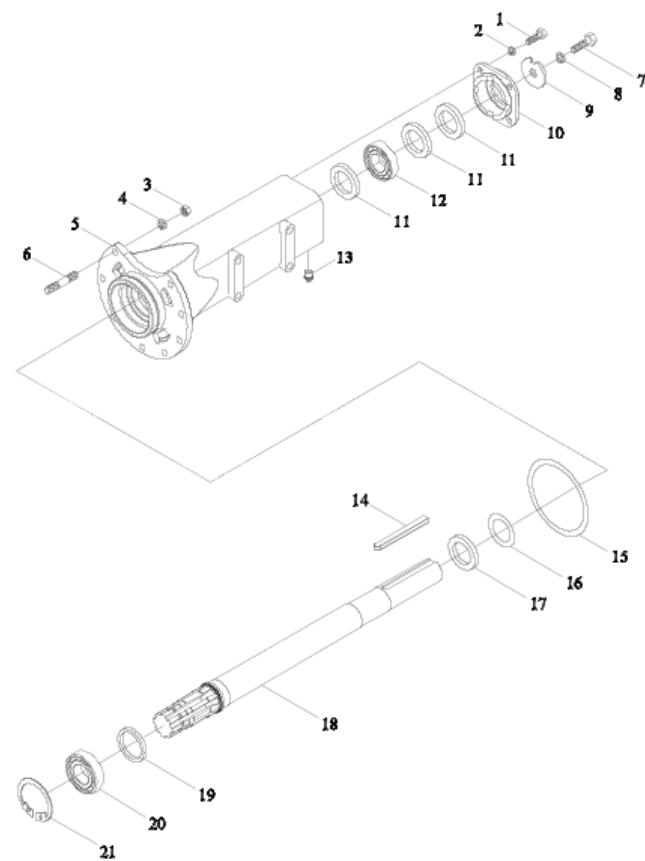

TE2S391010000K LEFT HALF SHAFT ASSEMBLY

No.	Part No.	Description	Version	QTY.	Remark
	TE2S391010000K	LEFT HALF SHAFT ASSEMBLY		1	
1	GBT5783-M10X25-8.8-A3L	HEXAGON BOLT		4	
2	GBT93-10-A3L	STANDARD SPRING WASHER		4	
3	GBT6171-M12X1.25-10-A2L	HEXAGON NUT, TYPE-1		8	
4	GBT93-12-A3L	STANDARD SPRING WASHER		8	
5	TE2S391010001K	LEFT DRIVING SHAFT SLEEVE		1	
6	GBT899-AM12-M12X1.25X35-10.9-A 3L	DOUBLE END STUDS		8	
7	GBT5783-M16X35-8.8-A3L	HEXAGON BOLT		1	
8	GBT93-16-A3L	STANDARD SPRING WASHER		1	
9	FT250.37.216	RETAINER RING		1	
10	FT250.37.214	DRIVING SHAFT BEARING COVER		1	
11	GBT9877.1-FB50X72X8D	SEAL RING		3	
12	GBT276-6210	DEEP GROOVE BALL BEARING		1	
13	JBT7940.1-M10X1	STRAIGHT FORCED FILLING OIL CUP		1	
14	FT250.37.215	FLAT KEY		1	
15	GBT3452.1-112X3.55G	RUBBER O-SEAL RING		1	
16	FT250.37.242	OIL SEAL SPACER RING		1	
17	GBT9877.1-FB55X75X8D	SEAL RING		1	
18	TE300.391-01	DRIVING SHAFT		1	
19	FT250.37.218	BEARING RETAINER RING		1	
20	GBT276-6211	DEEP GROOVE BALL BEARING		1	
21	GBT893.1-100	CIRCLIPS FOR HOLE		1	


TE2S392010000K RIGHT HALF SHAFT ASSEMBLY

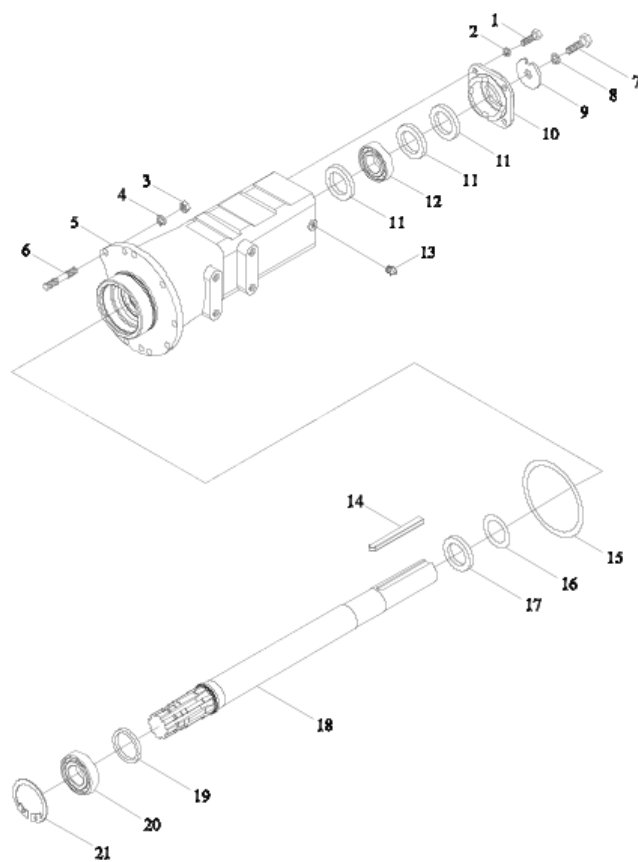

TE2S392010000K RIGHT HALF SHAFT ASSEMBLY

No.	Part No.	Description	Version	QTY.	Remark
	TE2S392010000K	RIGHT HALF SHAFT ASSEMBLY		1	
1	GBT5783-M10X25-8.8-A3L	HEXAGON BOLT		4	
2	GBT93-10-A3L	STANDARD SPRING WASHER		4	
3	GBT6171-M12X1.25-10-A2L	HEXAGON NUT, TYPE-1		8	
4	GBT93-12-A3L	STANDARD SPRING WASHER		8	
5	TE2S392010001K	RIGHT DRIVING SHAFT SLEEVE		1	
6	GBT899-AM12-M12X1.25X35-10.9-A 3L	DOUBLE END STUDS		8	
7	GBT5783-M16X35-8.8-A3L	HEXAGON BOLT		1	
8	GBT93-16-A3L	STANDARD SPRING WASHER		1	
9	FT250.37.216	RETAINER RING		1	
10	FT250.37.214	DRIVING SHAFT BEARING COVER		1	
11	GBT9877.1-FB50X72X8D	SEAL RING		3	
12	GBT276-6210	DEEP GROOVE BALL BEARING		1	
13	JBT7940.1-M10X1	STRAIGHT FORCED FILLING OIL CUP		1	
14	FT250.37.215	FLAT KEY		1	
15	GBT3452.1-112X3.55G	RUBBER O-SEAL RING		1	
16	FT250.37.242	OIL SEAL SPACER RING		1	
17	GBT9877.1-FB55X75X8D	SEAL RING		1	
18	TE300.391-01	DRIVING SHAFT		1	
19	FT250.37.218	BEARING RETAINER RING		1	
20	GBT276-6211	DEEP GROOVE BALL BEARING		1	
21	GBT893.1-100	CIRCLIPS FOR HOLE		1	


TE2S401010000K STEERING PLATE AND STEERING PIPE COLUMN ASSEMBLY

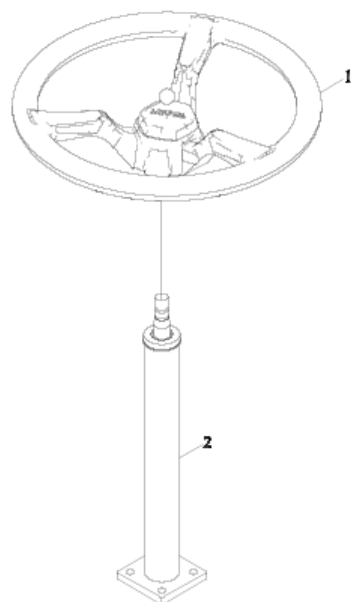

TE2S401010000K STEERING PLATE AND STEERING PIPE COLUMN ASSEMBLY

No.	Part No.	Description	Version	QTY.	Remark
	TE2S401010000K	STEERING PLATE AND STEERING PIPE COLUMN ASSEMBLY		1	
1	TS04401010001	STEERING WHEEL ASSEMBLY		1	
2	TE2S401010005K	STEERING PIPE COLUMN ASSEMBLY		1	

TE2S402010000K STEERING PIPE ASSEMBLY-1

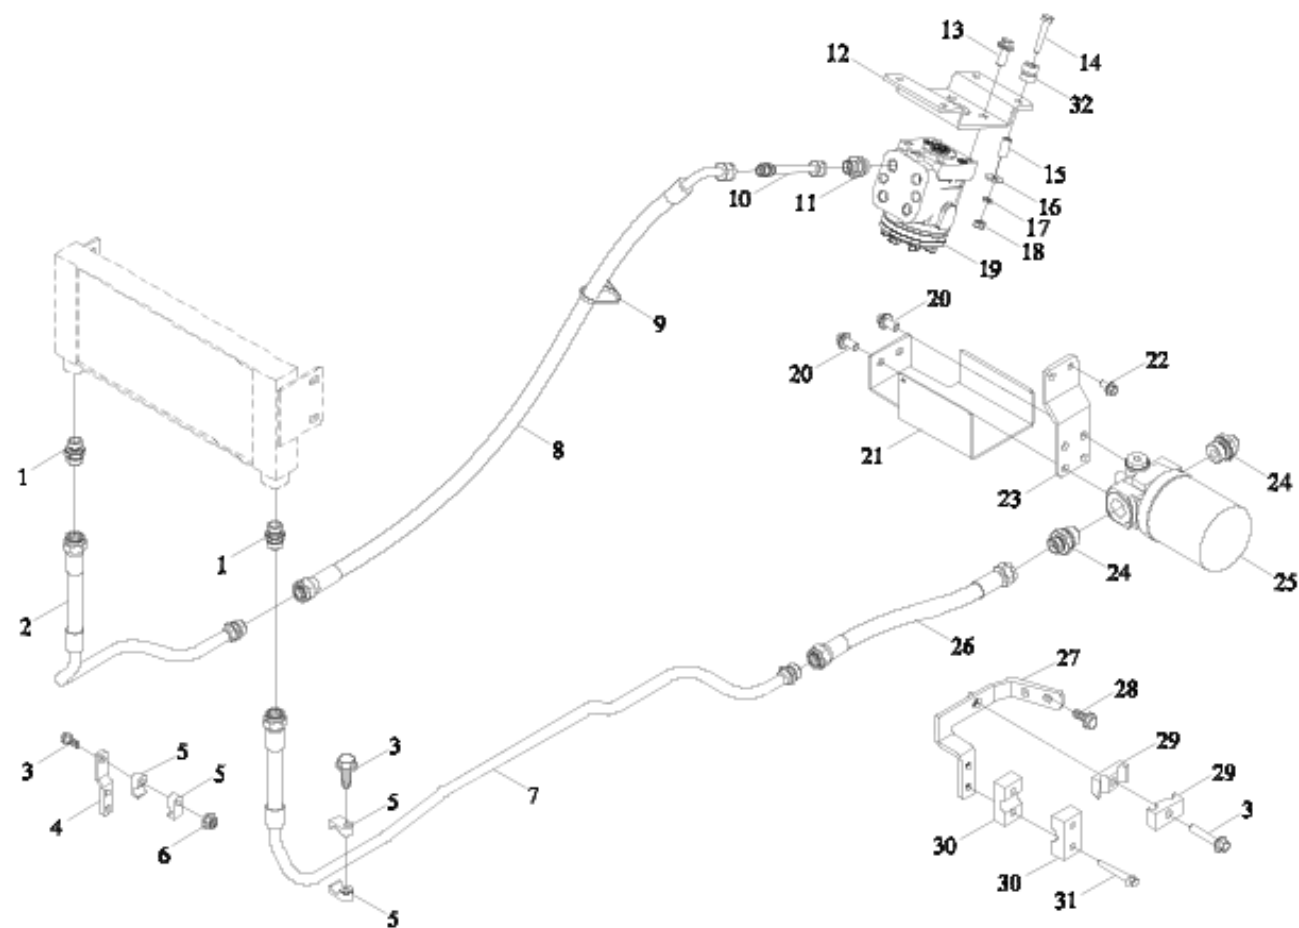


TE2S402010000K STEERING PIPE ASSEMBLY-1

No.	Part No.	Description	Version	QTY.	Remark
	TE2S402010000K	FULL HYDRAULIC STEERING PIPE ASSEMBLY		1	
1	TS06582130048	END STRAIGHT THREAD CONNECTOR BODY		2	
2	TE2S402010007K	RADIATOR OIL INLET RUBBLE HOSE		1	
3	GBT16674. 1-M8X40-8. 8-A2L	HEXAGON FLANGE NUT		4	
4	TE2S402010015k	OIL PIPE BRACKET2		1	
5	TB554. 40C-01	SINGLE HOLE PIPE CLAMP 1		6	
6	GBT6177. 1-M8-8-A2L	HEXAGON FLANGE NUT		2	
7	TE2S402010008K	RADIATOR OIL OUTLET HOSE		1	
8	TE2S402010006K	OIL RETURN RUBBER HOSE ASSEMBLY		1	
9	Q67405200	PLASTIC FASTENING STRIP		2	
10	TL02402340003	OIL RETURN STEEL PIPE ASSEMBLY		1	
11	GE20D18. 24. 93. 5	END STRAIGHT THREAD CONNECTOR BODY		1	
12	TL02402170001	REDIRECTOR BRACKET		1	
13	GBT16674. 1-M10X25-8. 8-A2L	HEXAGON FLANGE NUT		4	
14	GBT5783-M8X45-8. 8-A2L	HEXAGON BOLT		4	
15	TL02402170002	SLEEVE		4	
16	GBT96. 1-8-A3L	BIG WASHER		4	
17	GBT93-8-A3L	STANDARD SPRING WASHER		8	
18	GBT6170-M8-8-A2L	HEXAGON NUT, TYPE-1		4	
19	TE2S402010016K	HYDRAULIC STEERING MECHANISM ASSEMBLY		1	
20	GBT16674. 1-M10X20-8. 8-A2L	HEXAGON FLANGE NUT		6	
21	TB1S402010018K	FILTER BONNET		1	
22	GBT16674. 1-M8X16-8. 8-A2L	HEXAGON FLANGE NUT		4	

TE2S402010000K STEERING PIPE ASSEMBLY-1 (cont'd.)

No.	Part No.	Description	Version	QTY.	Remark
23	TE2S402010010K	FILTER BRACKET		1	
24	TY1S403010024K	STRAIGHT PIPE JOINT BODY M27X2-15		2	
25	TB1S402010021K	FILTER ASSEMBLY		1	
26	TE2S402010009K	FILTER OIL INLET RUBBLE HOSE		1	
27	TE2S402010011K	OIL PIPE BRACKET WELDMENT 1		1	
28	GBT16674. 1-M8X20-8. 8-A2L	HEXAGON FLANGE NUT		2	
29	FT354. 40C. 121	DOUBLE PIPE CLAMP		2	
30	TH04402010061	SINGLE HOLE PIPE CLAMP 15		2	
31	GBT16674. 1-M6X45-8. 8-A2L	HEXAGON FLANGE NUT		2	
32	TL02402170003	SHOCK ABSORBER		4	

TE2S402010000K STEERING PIPE ASSEMBLY-2

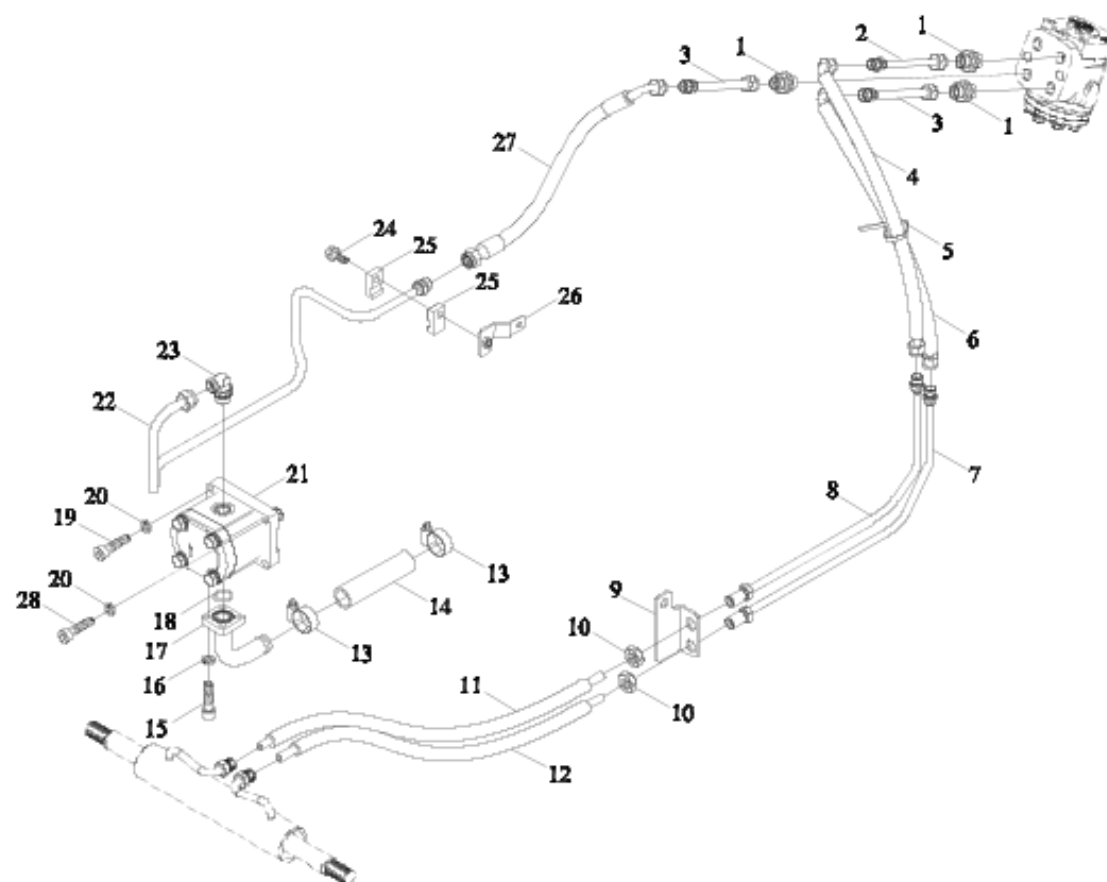


TE2S402010000K STEERING PIPE ASSEMBLY-2

No.	Part No.	Description	Version	QTY.	Remark
	TE2S402010000K	FULL HYDRAULIC STEERING PIPE ASSEMBLY		1	
1	GV04703010028	END STRAIGHT THREAD CONNECTOR BODY M20-16		3	
2	TL02402340002	LEFT OIL OUTLET PIPE ASSEMBLY		1	
3	TL02402340004	RIGHT OIL OUTLET PIPE ASSEMBLY		2	
4	TL02402340005	OIL OUTLET HOSE ASSEMBLY OF REDIRECTOR		1	
5	Q67405200	PLASTIC FASTENING STRIP		2	
6	TL02402340006	OIL OUTLET HOSE ASSEMBLY OF REDIRECTOR 2		1	
7	TL02402170011	OIL OUTLET PIPE ASSEMBLY		1	
8	TL02402170013	OIL OUTLET PIPE ASSEMBLY		1	
9	TL02402170020	OIL PIPE BRACKET1		1	
10	GBT6173-M16X1.5-05-A3L	HEXAGON THIN NUT		2	
11	TE304.402C.4a	HIGH PRESSURE RIGHT OIL HOSE ASSEMBLY		1	
12	TE304.402F.3	HIGH PRESSURE LEFT OIL HOSE ASSEMBLY		1	
13	Q67632	B-TYPE WORM TRANSMISSION HOSE CLAMP		2	
14	FT450.58.103	OIL SUCTION HOSE		1	
15	GBT70.1-M6X20-8.8-A2L	INNER HEXAGON SCREW		4	
16	GBT93-6-A3L	STANDARD SPRING WASHER		4	
17	TE2S402010001K	OIL SUCTION STEEL PIPE WELDMENT		1	
18	GBT3452.1-20.0X2.65G	RUBBER O-SEAL RING		1	
19	GBT16674.1-M8X35-8.8-A2L	HEXAGON FLANGE NUT		1	
20	GBT93-8-A3L	STANDARD SPRING WASHER		8	
21	TB1S402010020K	GEAR PUMP		1	
22	TE2S402010003K	OIL OUTLET PIPE ASSEMBLY OF GEAR PUMP		1	

TE2S402010000K STEERING PIPE ASSEMBLY-2 (cont'd.)

No.	Part No.	Description	Version	QTY.	Remark
23	TC04400020003	ADJUSTABLE JOINT		1	
24	GBT70. 1-M8X35-8. 8-A2L	INNER HEXAGON SCREW		2	
25	TG1654. 402-07	SINGLE HOLE PIPE CLAMP		2	
26	TE2S402010013K	OIL PIPE BRACKET WELDMENT 2		1	
27	TE2S402010005K	REDIRECTOR OIL INLET RUBBER PIPE ASSEMBLY		1	
28	GBT70. 1-M8X30-8. 8-A2L	INNER HEXAGON SCREW		2	


TE2S403010000K LOW PRESSURE CONTROL PIPE ASSEMBLY

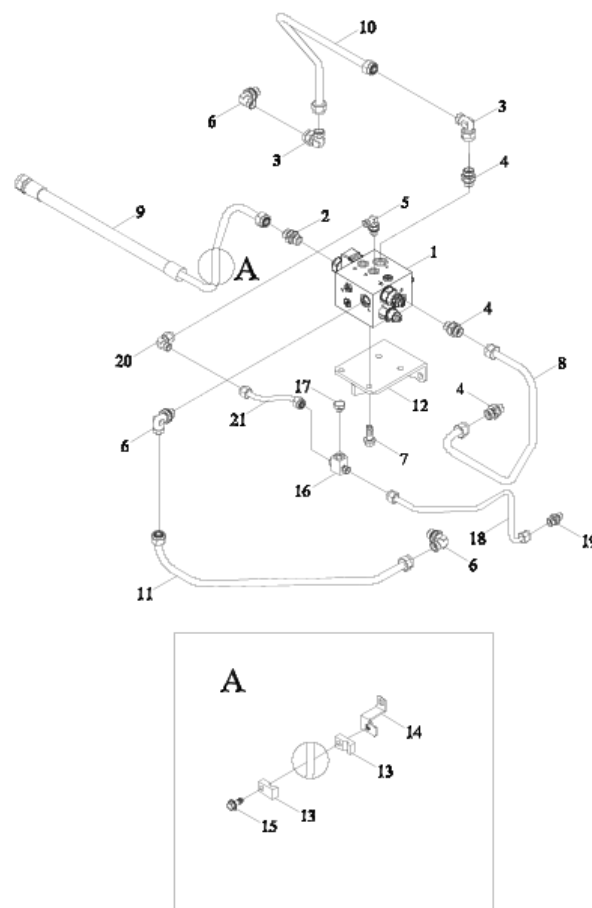

TE2S403010000K LOW PRESSURE CONTROL PIPE ASSEMBLY

No.	Part No.	Description	Version	QTY.	Remark
	TE2S403010000K	LOW PRESSURE CONTROL PIPE ASSEMBLY		1	
1	TB1S403010005K	CONTROL VALVE		1	
2	TS17402030059	STRAIGHT JOINT BODY		1	
3	GBT3754-L12	JOINT		2	
4	GV04701010039	END STRAIGHT THREAD CONNECTOR BODY 16-18		3	
5	TB1S403010015K	ADJUSTABLE JOINT M12-8		1	
6	GL06701050023	CONNECTING JOINT L12		3	
7	GBT16674. 1-M8X16-8. 8-A2L	HEXAGON FLANGE NUT		4	
8	TE2S403010007K	ELEC. VALVE OIL RETURN STEEL PIPE ASSEMBLY 2		1	
9	TE2S403010001K	ELEC. VALVE OIL INLET HOSE ASSEMBLY		1	
10	TE2S403010005K	ELEC. VALVE OIL RETURN STEEL PIPE ASSEMBLY 1		1	
11	TE2S403010011K	LUBE OIL LINE		1	
12	TE2S403010002K	ELEC. VALVE BRACKET WELDMENT		1	
13	TG1654. 402-07	SINGLE HOLE PIPE CLAMP		2	
14	TE2S403010013K	OIL PIPE BRACKET WELDMENT		1	
15	GBT16674. 1-M8X40-8. 8-A2L	HEXAGON FLANGE NUT		1	
16	TK4030300400	STRAIGHT THREAD JOINT		1	
17	GV04701010035	SCREW PLUG M10X1		1	
18	TE2S403010009K	PTO OIL INLET STEEL PIPE ASSEMBLY		1	
19	TH02372010099	END STRAIGHT THREAD CONNECTOR BODY		1	
20	GBT3754-L8	JOINT		1	
21	TE2S403010015K	PTO OIL INLET STEEL PIPE ASSEMBLY 2		1	


TE2S411010000K PTO SHAFT ASSEMBLY

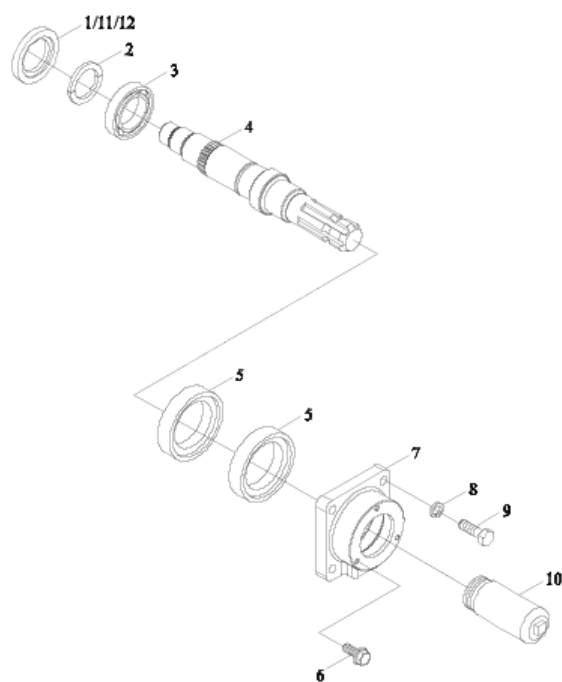

TE2S411010000K PTO SHAFT ASSEMBLY

No.	Part No.	Description	Version	QTY.	Remark
	TE2S411010000K	PTO SHAFT ASSEMBLY		1	
1	TE300. 411-03	THRUST RETAINER RING		1	
2	TE300. 411-02	THRUST RING		1	
3	GBT276-6308	DEEP GROOVE BALL BEARING		1	
4	TE2S411010001K	PTO SHAFT		1	
5	GBT9877. 1-FB40X60X8D	SEAL RING		2	
6	GBT16674. 1-M6X12-8. 8-A2L	HEXAGON FLANGE NUT		3	
7	TE2S411010002K	REAR END COVER 1		1	
8	GBT93-10-A3L	STANDARD SPRING WASHER		4	
9	GBT5783-M10X30-8. 8-A3L	HEXAGON BOLT		4	
10	TE2S411010003K	PTO SHAFT HOOD SHIELD		1	
11	TE300. 411-04	THRUST RETAINER RING		1	
12	TE300. 411-05	THRUST RETAINER RING		1	

TE2S412010000K PTO GEAR ASSEMBLY

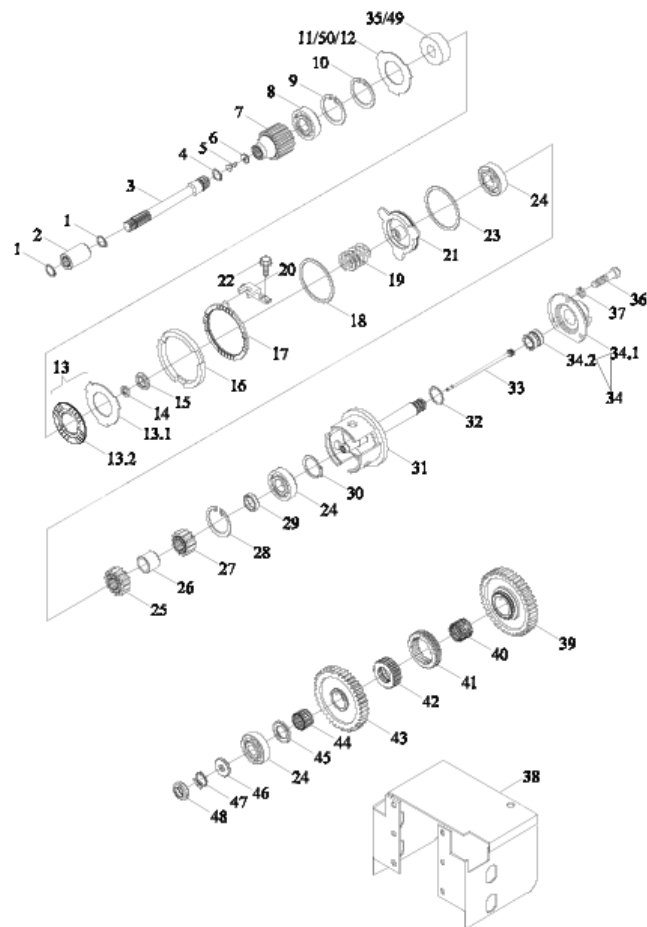

TE2S412010000K PTO GEAR ASSEMBLY

No.	Part No.	Description	Version	QTY.	Remark
	TE2S412010000K	PTO GEAR ASSEMBLY		1	
1	GBT894. 1-24	CIRCLIP FOR SHAFT		2	
2	TE2S412010036K	CONNECTING SLEEVE		1	
3	TE2S412010004K	PTO TRANSMISSION SHAFT		1	
4	GBT894. 1-28	CIRCLIP FOR SHAFT		1	
5	TE2S412010024K	BOLT M8X18		1	
6	TE2S412010017K	WASHER 9. 5X22X3		1	
7	TE2S412010009K	HUB		1	
8	GBT276-6203	DEEP GROOVE BALL BEARING		1	
9	GBT893. 1-40	CIRCLIPS FOR HOLE		1	
10	GBT893. 1-102	CIRCLIPS FOR HOLE		1	
11	TE2S412010014K	CLUTCH DRIVEN RETAINER PLATE		1	
12	TE2S412010040K	CLUTCH DRIVEN RETAINER PLATE		1	
13	TE2S412010039K	SPACER PLATE		1	
13. 1	TE2S412010023K	MIDDLE PLATE		6	
13. 2	TE2S412010020K	FRICTION PIECE ASSEMBLY		6	
14	TE2S412010015K	RETAINER RING 15X25X4		1	
15	TE2S412010016K	PRESS RING		1	
16	TE2S412010019K	BRAKE PRESSURE PLATE		1	
17	TE2S412010011K	BRAKE FRICTION PLATE UNIT		1	
18	TE2S412010029K	KZK PISTON OIL SEAL 10004		1	
19	TE2S412010018K	SPRING		1	
20	TE2S412010025K	BRAKE SEAT		1	


TE2S412010000K PTO GEAR ASSEMBLY (cont'd.)

No.	Part No.	Description	Version	QTY.	Remark
21	TE2S412010010K	PISTON		1	
22	GBT16674. 1-M8X25-8. 8-A2L	HEXAGON FLANGE NUT		2	
23	TE2S412010030K	KZK PISTON OIL SEAL 02202		1	
24	GBT276-6306	DEEP GROOVE BALL BEARING		3	
25	TE2S412010035K	PTO HIGH GEAR DRIVING GEAR		1	
26	TE300. 412-03	FRONT SPACER BUSH		1	
27	TE300. 412-04	PTO LOW GEAR DRIVING GEAR		1	
28	GBT893. 1-72	CIRCLIPS FOR HOLE		1	
29	TE2S412010008K	REAR SPACER BUSH		1	
30	GBT894. 1-30	CIRCLIP FOR SHAFT		1	
31	TE2S412010028K	PTO DRIVING SHAFT		1	
32	TE2S412010037K	SEAL RING 24. 95X2. 26		2	
33	TE2S412010005K	LUBRICATING OIL PIPE		1	
34	TE2S412010001K	MAIN SHAFT COVER		1	
34. 1	TE2S412010002K	MAIN SHAFT END COVER		1	
34. 2	TE2S412010003K	SLEEVE 25X37X30		1	
35	TK4110100400	RUBBER WASHER		15	
36	GBT5783-M8X20-8. 8-A2L	HEXAGON BOLT		3	
37	GBT93-8-A3L	STANDARD SPRING WASHER		3	
38	TE2S412010034K	PTO BONNET WELDMENT		1	
39	TE300. 412-06	PTO LOW GEAR DRIVEN GEAR		1	
40	TE300. 412-07	NEEDLE BEARING		1	
41	TL02412010005	PTO SHIFT COLLAR		1	

TE2S412010000K PTO GEAR ASSEMBLY (cont'd.)

No.	Part No.	Description	Version	QTY.	Remark
42	FT300. 41C. 117	PTO MESHING SEAT		1	
43	TE300. 412-08	PTO HIGH GEAR DRIVEN GEAR		1	
44	GBT20056-K35X40X27	NEEDLE AND CARRIER COMBINATION		1	
45	FT300. 41C. 118	OUTPUT SHAFT FRONT RETAINER RING		1	
46	FT300. 41. 122	WASHER		1	
47	GBT858-25	THRUST WASHER FOR ROUND NUT		1	
48	GBT812-M25X1. 5	ROUND NUT		1	
49	TE2S412010038K	RUBBER WASHER		3	
50	TE2S412010041K	CLUTCH DRIVEN RETAINER PLATE		1	

TE2S413010000K PTO CONTROL ASSEMBLY

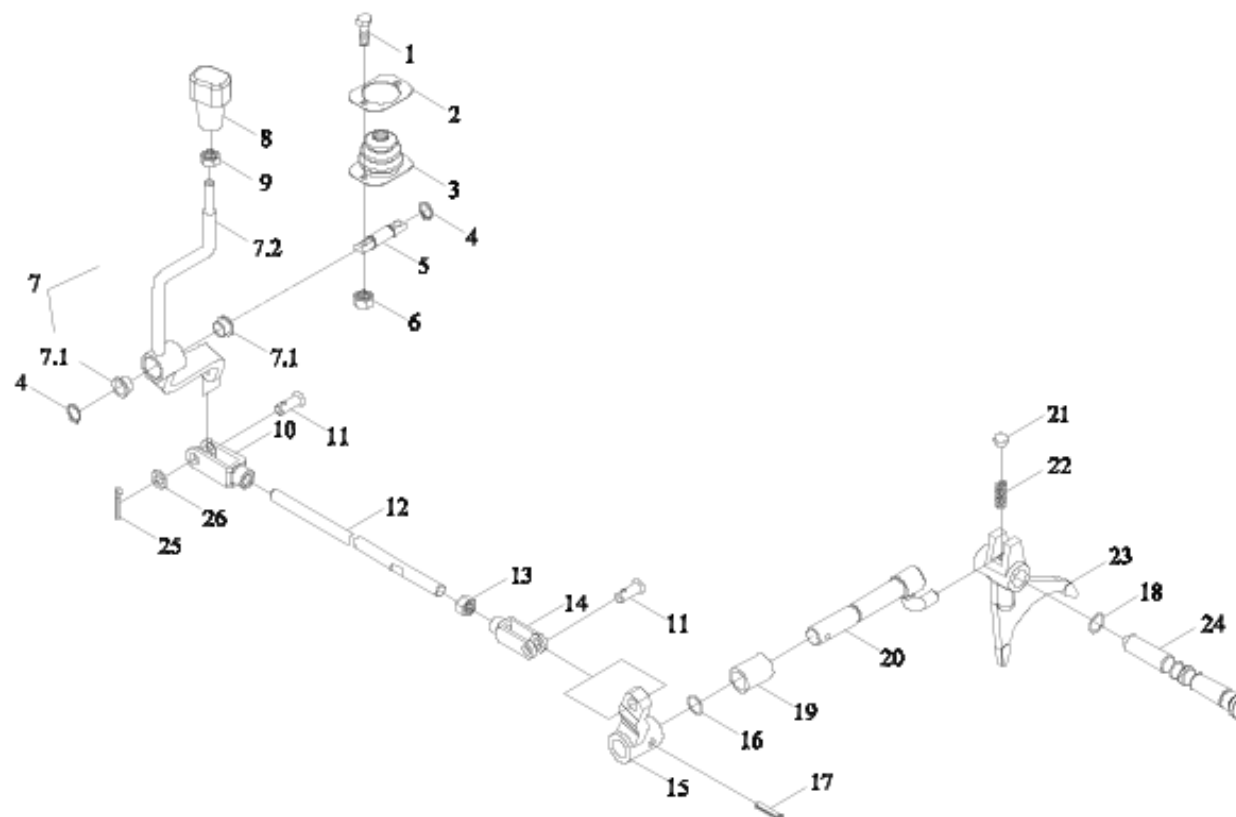


TE2S413010000K PTO CONTROL ASSEMBLY

No.	Part No.	Description	Version	QTY.	Remark
	TE2S413010000K	PTO CONTROL ASSEMBLY		1	
1	GBT5783-M8X30-8. 8-A2L	HEXAGON BOLT		2	
2	TE250. 413D-07	TABLETTING		1	
3	TE250. 413D-03	DUSTPROOF SLEEVE		1	
4	GBT894. 1-18	CIRCLIP FOR SHAFT		2	
5	TE250. 413D-04	FIXING SHAFT		1	
6	GBT6170-M8-8-A2L	HEXAGON NUT, TYPE-1		2	
7	TL02413080001	CONTROL ROD PRESSURE UNIT		1	
7.1	TE250. 413D. 2-01	NYLON SLEEVE		2	
7.2	TL02413080002	CONTROL ROD WELDMENT		1	
8	TE2S413010003K	PTO GEARSHIFT HANDLE		1	
9	GBT6170-M10-8-A3L	HEXAGON NUT, TYPE-1		1	
10	FT800A. 43B. 119	LEFT REVOLVING PULL ROD FORK		1	
11	GBT882-B10X30-A3L	PIN SHAFT		2	
12	TL02413040004	MIDDLE PULL ROD		1	
13	GBT6172. 1-M10-A3L	HEXAGON THIN NUT		1	
14	FT800A. 43B. 116	RIGHT REVOLVING PULL ROD FORK		1	
15	TL02413040005	ROCKER WELDMENT		1	
16	GBT3452. 1-11. 8X1. 80G	RUBBER O-SEAL RING		1	
17	QLWZB140-5X24	PIN		1	
18	GBT3452. 1-13. 2X1. 80G	RUBBER O-SEAL RING		1	
19	TE300. 413-04	SPACER BUSH		1	
20	TE300. 413. 1	PTO GEARSHIFT DIAL ROD ASSEMBLY		1	

TE2S413010000K PTO CONTROL ASSEMBLY (cont'd.)

No.	Part No.	Description	Version	QTY.	Remark
21	GBT308-8. 731-G200-b	STEEL BALL		1	
22	FT250. 37. 148	LOCKING SPRING OF FORK SHAFT		1	
23	TE300. 413-02a	PTO GEARSHIFT FORK		1	
24	TE2S413010001K	PTO GEARSHIFT FORK SHAFT		1	
25	GBT91-3. 2X20-A3L	SPLIT PIN		2	
26	GBT97. 1-10-A3L	FLAT WASHER		2	

TE254. 421B TRANSFER CASE ASSEMBLY

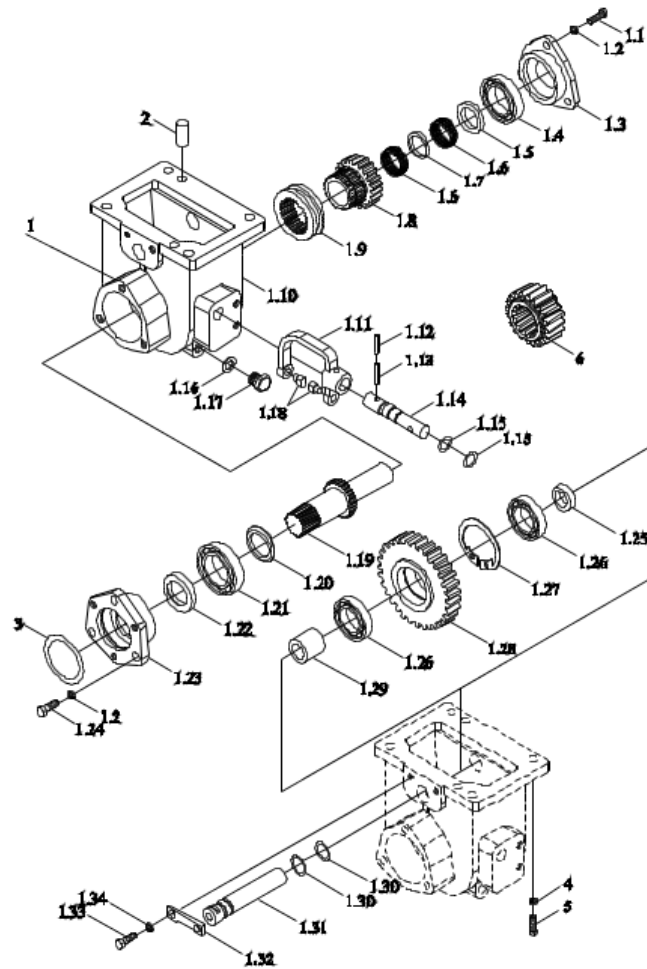


TE254. 421B TRANSFER CASE ASSEMBLY

No.	Part No.	Description	Version	QTY.	Remark
1	TE254. 421B. 1	TRANSFER CASE HOUSING ASSEMBLY		1	
1. 1	GBT5783-M10X20-8. 8-A3L	HEXAGON BOLT		5	
1. 2	GBT93-10-A0P	STANDARD SPRING WASHER		8	
1. 3	TE254. 421A. 1-04	REAR BEARING COVER		1	
1. 4	GBT276-6305	DEEP GROOVE BALL BEARING		1	
1. 5	FT254. 42. 107	OUTPUT SHAFT REAR THRUST RING		1	
1. 6	JBT7918-K25X31X20	NEEDLE AND CARRIER COMBINATION		2	
1. 7	FT254. 42. 108	OUTPUT SHAFT ROLLING BEARING SPACER BUSH		1	
1. 8	TE254. 421B. 1-01a	TRANSFER CASE DRIVEN GEAR		1	
1. 9	FT254. 42F. 103	SHIFT COLLAR		1	
1. 10	TE254. 421A. 1-01	TRANSFER CASE HOUSING		1	
1. 11	TE254. 421A. 1-02	TRANSFER CASE FORK		1	
1. 12	GBT879. 1-6X24	SPRING COLUMN PIN		1	
1. 13	GBT879. 1-4X24	SPRING COLUMN PIN		1	
1. 14	TE254. 421A. 1-03	TRANSFER CASE FORK SHAFT		1	
1. 15	GBT3452. 1-12. 5X1. 80G	RUBBER O-SEAL RING		2	
1. 16	JBT982-12	COMBINED SEAL GASKET		1	
1. 17	Q617B12	HEXAGON PLUG		1	
1. 18	FT254. 42. 121	TRANSFER CASE FORK HEAD		2	
1. 19	FT254. 42. 102	OUTPUT SHAFT		1	
1. 20	FT254. 42. 109	OUTPUT SHAFT FRONT THRUST RING		1	
1. 21	GBT276-6206	DEEP GROOVE BALL BEARING		1	
1. 22	TE254. 421. 1. 1	OIL SEAL		1	

TE254. 421B TRANSFER CASE ASSEMBLY (cont'd.)

No.	Part No.	Description	Version	QTY.	Remark
1. 23	TE254. 421A. 1-09	FRONT BEARING COVER		1	
1. 24	GBT5783-M10X30-8. 8-A3L	HEXAGON BOLT		3	
1. 25	TE254. 421A. 1-10	MIDDLE SHAFT SMALL THRUST RING		1	
1. 26	GBT276-6204	DEEP GROOVE BALL BEARING		2	
1. 27	GBT893. 1-47	CIRCLIPS FOR HOLE		1	
1. 28	TE254. 421B. 1-02	TRANSFER CASE MIDDLE GEAR		1	
1. 29	TE254. 421A. 1-11	MIDDLE SHAFT BIG THRUST RING		1	
1. 30	GBT3452. 1-15. 0X2. 65G	RUBBER O-SEAL RING		2	
1. 31	TE254. 421A. 1-05	MIDDLE SHAFT		1	
1. 32	TE254. 421A. 1-07	MIDDLE SHAFT LOCATING PLATE		1	
1. 33	GBT5783-M8X20-8. 8-A2L	HEXAGON BOLT		2	
1. 34	GBT93-8-A0P	STANDARD SPRING WASHER		2	
2	GBT119. 1-10m6X18-A0P	PIN		2	
3	GBT3452. 1-53. 0X2. 65G	O-RING		1	
4	GBT93-10-A0P	SPRING WASHER		4	
5	GBT5783-M10X30-10. 9-A3L	BOLT		4	
6	TE300. 361-01	FRONT DRIVING GEAR		1	


TE354. 422 TRANSFER CASE TRANSMISSION SHAFT ASSEMBLY

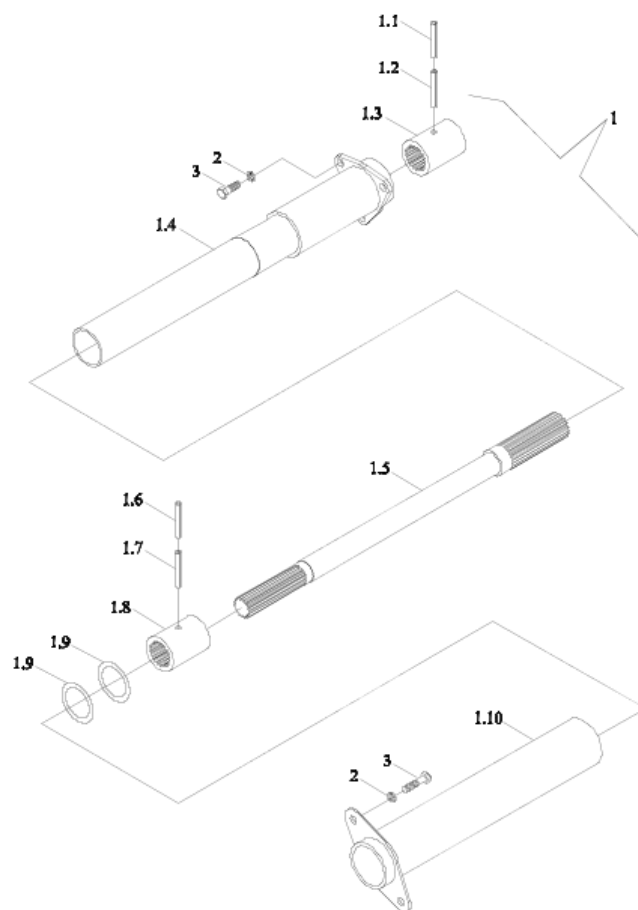

TE354. 422 TRANSFER CASE TRANSMISSION SHAFT ASSEMBLY

No.	Part No.	Description	Version	QTY.	Remark
1	TE354. 422. 1	TRANSFER CASE TRANSMISSION SHAFT INSTALLATION		1	
1. 1	GBT879. 1-3. 5X40	SPRING COLUMN PIN		1	
1. 2	GBT879. 1-6X40	SPRING COLUMN PIN		1	
1. 3	FT254. 42. 113	SPLINE BUSH		1	
1. 4	TE354. 422. 1. 1	REAR SLEEVE PIPE WELDMENT		1	
1. 5	TE354. 422. 1-01	TRANSFER CASE TRANSMISSION SHAFT		1	
1. 6	GBT879. 1-3. 5X35	SPRING COLUMN PIN		1	
1. 7	GBT879. 1-6X35	SPRING COLUMN PIN		1	
1. 8	FT254. 42F. 120	FRONT SPLINE BUSH		1	
1. 9	GBT3452. 1-46. 2X3. 55G	RUBBER O-SEAL RING		1	
1. 10	TE254. 422A. 1. 1	FRONT SLEEVE PIPE WELDMENT		1	
2	GBT93-8-A0P	STANDARD SPRING WASHER		5	
3	GBT5783-M8X16-8. 8-A2L	HEXAGON BOLT		5	

TL02423020000 TRANSFER CASE CONTROL ASSEMBLY

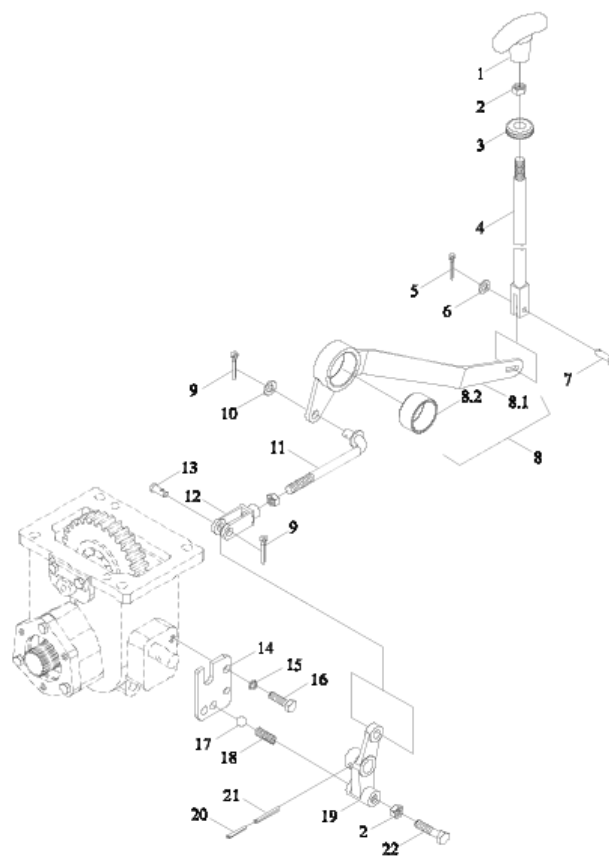


TL02423020000 TRANSFER CASE CONTROL ASSEMBLY

No.	Part No.	Description	Version	QTY.	Remark
	TL02423020000	TRANSFER CASE CONTROL ASSEMBLY		1	
1	FT65. 38. 051	PULL/PRESS HANDLE		1	
2	GBT6170-M10-8-A3L	HEXAGON NUT, TYPE-1		3	
3	TE254. 423A-01	THROUGH HARNESS WASHER		1	
4	TL02423020001	CONTROL ROD WELDMENT		1	
5	GBT91-1. 6X16-A3L	SPLIT PIN		1	
6	GBT97. 1-6-A3L	FLAT WASHER		1	
7	GBT882-B6X22	PIN SHAFT		1	
8	TL02423020003	MIDDLE ROCKER UNIT		1	
8.1	TL02423020004	MIDDLE ROCKER WELDMENT		1	
8.2	TE254. 423A. 2-02	MIDDLE ROCKER BUSH		1	
9	GBT91-3. 2X20-A3L	SPLIT PIN		2	
10	GBT97. 1-10-A3L	FLAT WASHER		2	
11	TE254. 423A. 4	MIDDLE PULL ROD WELDMENT		1	
12	FT800A. 43B. 116	RIGHT REVOLVING PULL ROD FORK		1	
13	GBT882-B10X30-A3L	PIN SHAFT		1	
14	TE254. 423A-05	LOCATING PLATE		1	
15	GBT93-8-A3L	STANDARD SPRING WASHER		2	
16	GBT5783-M8X20-8. 8-A2L	HEXAGON BOLT		2	
17	GBT308-8-G100-b	STEEL BALL		1	
18	FT304. 42. 124	LOCATING SPRING		1	
19	TE254. 423A. 1	ROCKER UNIT		1	
20	GBT879. 1-3. 5X24	SPRING COLUMN PIN		1	

TL02423020000 TRANSFER CASE CONTROL ASSEMBLY (cont'd.)

No.	Part No.	Description	Version	QTY.	Remark
21	GBT879.1-6X24	SPRING COLUMN PIN		1	
22	GBT5783-M10X25-8.8-A3L	HEXAGON BOLT		1	


TE2S431010000K LEFT BRAKE ASSEMBLY

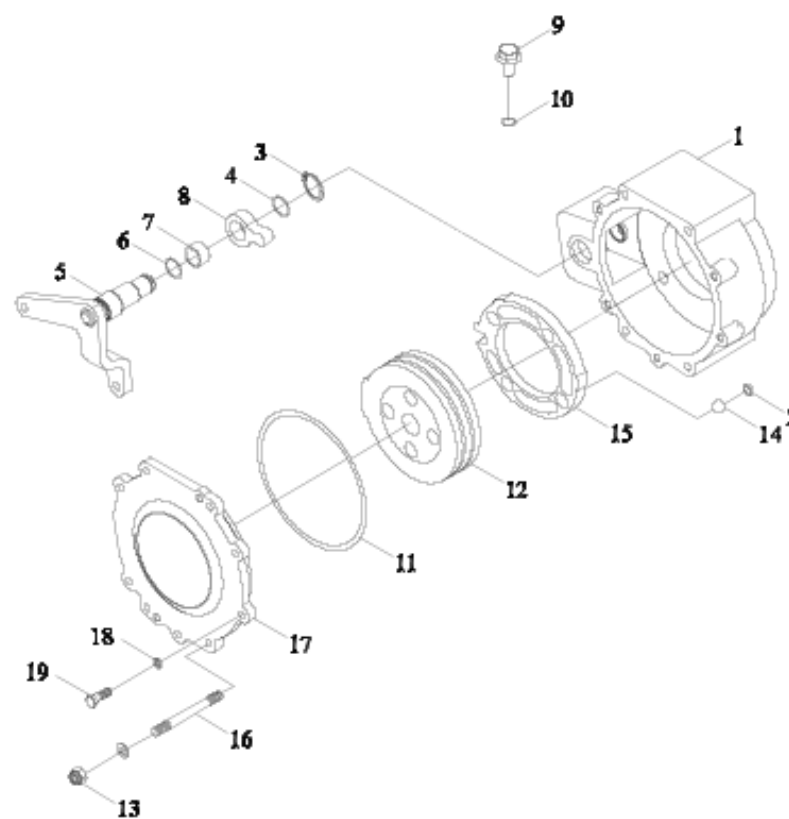

TE2S431010000K LEFT BRAKE ASSEMBLY

No.	Part No.	Description	Version	QTY.	Remark
	TE2S431010000K	LEFT BRAKE ASSEMBLY		1	
1	TL02431020009K	LEFT BRAKE HOUSING		1	
2	TL02431020005K	BOWL PLUG		4	
3	GBT894. 1-18	CIRCLIP FOR SHAFT		1	
4	GBT3452. 1-18. 0X2. 65G	RUBBER O-SEAL RING		1	
5	TE2S431010001K	LEFT ROCKER WELDMENT		1	
6	GBT3452. 1-20. 0X2. 65G	RUBBER O-SEAL RING		1	
7	FT300. 43. 107	SPACER BUSH		1	
8	TL02431020014K	DIAL BLOCK		1	
9	TE354. 431B-07	SCREW PLUG		1	
10	TS09580010003	O-RING 9. 3X2. 2-M12X1. 5		1	
11	GBT3452. 1-152. 5X3. 55G	RUBBER O-SEAL RING		1	
12	TL01431020008K	SPACER PLATE		1	
13	GBT6176-M8X1-10-A2L	HEXAGON NUT, TYPE-2		4	
14	GBT308-13-G200-b	STEEL BALL		4	
15	TL02431020003K	LEFT BRAKE PRESSURE PLATE		1	
16	TL02431020004K	STUD		4	
17	TL02431020011K	LEFT PRESSURE COVER		1	
18	GBT93-8-A3L	STANDARD SPRING WASHER		9	
19	GBT5783-M8X25-8. 8-A2L	HEXAGON BOLT		5	

TE2S432010000K RIGHT BRAKE ASSEMBLY

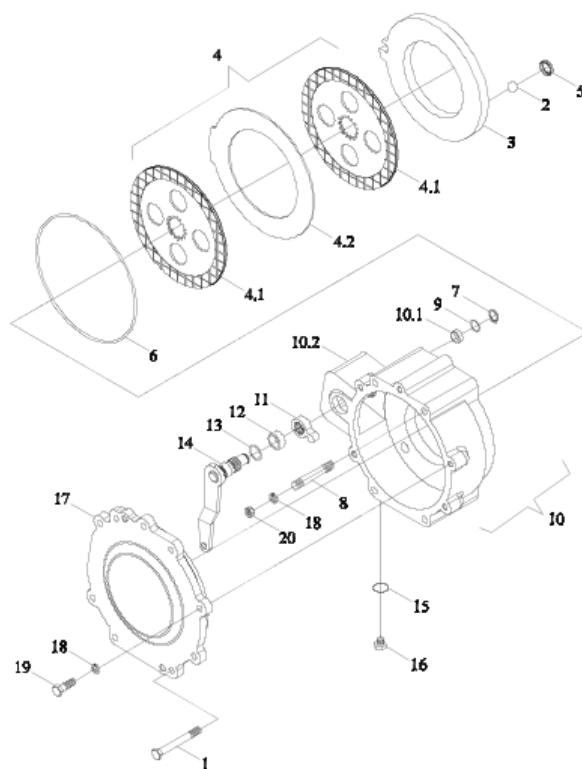

TE2S432010000K RIGHT BRAKE ASSEMBLY

No.	Part No.	Description	Version	QTY.	Remark
	TE2S432010000K	RIGHT BRAKE ASSEMBLY		1	
1	TE354. 431B-06	BOLT		1	
2	GBT308-13-G200-b	STEEL BALL		4	
3	TL02432020003K	RIGHT BRAKE PRESSURE PLATE		1	
4	TL01431020008K	SPACER PLATE		1	
4.1	TE354. 431B. 3	BRAKE FRICTION PLATE ASSEMBLY		3	
4.2	TE354. 431B-03	SPACER PLATE		3	
5	TL02431020005K	BOWL PLUG		4	
6	GBT3452. 1-152. 5X3. 55G	RUBBER O-SEAL RING		1	
7	GBT894. 1-18	CIRCLIP FOR SHAFT		1	
8	TL02431020004K	STUD		3	
9	GBT3452. 1-18. 0X2. 65G	RUBBER O-SEAL RING		1	
10	TE2S432010003K	RIGHT BRAKE HOUSING		1	
10.1	TB550. 431. 1-02	CRANK SHAFT BUSH		1	
10.2	TE2S432010004K	RIGHT BRAKE HOUSING		1	
11	TL02431020014K	DIAL BLOCK		1	
12	FT300. 43. 107	SPACER BUSH		1	
13	GBT3452. 1-20. 0X2. 65G	RUBBER O-SEAL RING		1	
14	TE2S432010001K	RIGHT ROCKER WELDMENT		1	
15	TS09580010003	O-RING 9. 3X2. 2-M12X1. 5		1	
16	TE354. 431B-07	SCREW PLUG		1	
17	TE2S432010005K	RIGHT PRESSURE COVER		1	
18	GBT93-8-A3L	STANDARD SPRING WASHER		9	


TE2S432010000K RIGHT BRAKE ASSEMBLY (cont'd.)

No.	Part No.	Description	Version	QTY.	Remark
19	GBT5783-M8X25-8.8-A2L	HEXAGON BOLT		5	
20	GBT6176-M8X1-10-A2L	HEXAGON NUT, TYPE-2		3	

TE2S433010000K BRAKE CONTROL ASSEMBLY-1

No.	Part No.	Description	Version	QTY.	Remark
	TE2S433010000K	BRAKECONTROLASSEMBLY		1	
1	GBT5783-M10X50-A3L	HEXAGONHEADBOLT, FULLTHREAD		2	
2	TL02433050003	ROTARY SHAFT OF BRAKE		1	
3	TL02433050002	LEFT ROCKER WELDMENT		1	
4	TE250. 212D-05	CLUTCH PEDAL RETURN SPRING		2	
5	GBT894. 1-25	CIRCLIP FOR SHAFT		1	
6	GBT97. 1-24-A3L	FLAT WASHER		1	
7	TL02433050016	RIGHT BRAKE PEDAL UNIT		1	
7.1	TL02433050015	RIGHT BRAKE PEDAL WELDMENT		1	
7.2	TL02433050034	RIGHT BRAKE PEDAL BUSH		1	
7.3	GBT879. 1-5X16	SPRING COLUMN PIN		1	
7.4	TE250. 433C. 2. 2	BRAKE CONNECTING LOCK ROD WELDMENT		1	
8	TE2S433010017K	LEFT BRAKE PEDAL WELDMENT		1	
9	TE250. 433C-02	WASHER		3	
10	QLWZB140-10X45	PIN		2	
11	FT800A. 43. 401	LOCK PIN		1	
12	JBT7940. 1-M8X1	STRAIGHT FORCED FILLING OIL CUP		2	
13	TD800. 311C. 1-01	DUSTPROOF CAP OF OIL CUP		2	

TE2S433010000K BRAKE CONTROL ASSEMBLY-2

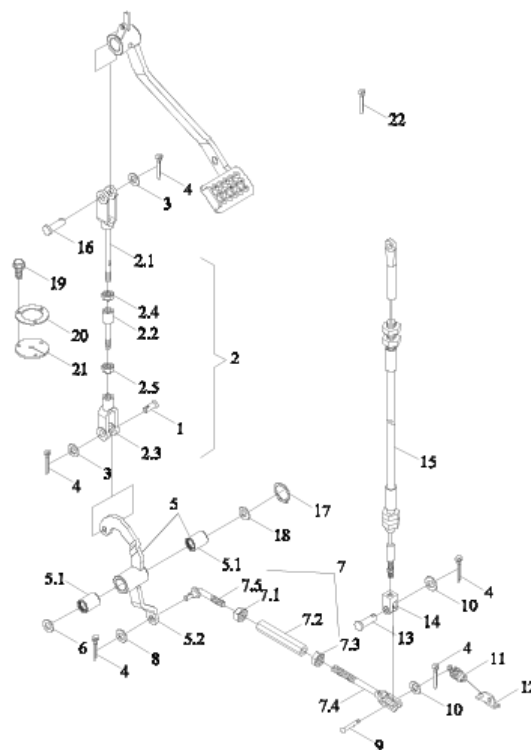


TE2S433010000K BRAKE CONTROL ASSEMBLY-2

No.	Part No.	Description	Version	QTY.	Remark
	TE2S433010000K	BRAKECONTROLASSEMBLY		1	
1	GBT882-B10X30-A3L	PIN SHAFT		2	
2	TL02433050038	LEFT UPPER PULL ROD ASSEMBLY		1	
2.1	TL02212040016	RELEASE UPPER TIE ROD WELD		1	
2.2	TL02433050023	BRAKE SHORT PULL ROD WELDMENT		1	
2.3	FT300. 43. 110	PULL ROD REAR FORK		1	
2.4	GBT6171-M10X1-8-A2L	HEXAGON NUT, TYPE-1		1	
2.5	GBT6171-M10X1-LH-8-A2L	HEXAGON NUT, TYPE-1		1	
3	GBT97. 1-10-A3L	FLAT WASHER		7	
4	GBT91-3. 2X22-A3L	SPLIT PIN		9	
5	TE2S433010008K	RIGHT LOWER ROCKER		1	
5.1	TL02433050004	SLEEVE		2	
5.2	TE2S433010009K	RIGHT LOWER ROCKER WELDMENT		1	
6	TL02433060005	WASHER		2	
7	TE2S433010001K	BRAKE PULL ROD		2	
7.1	GBT6171-M12X1. 5-LH-8-A3L	HEXAGON NUT, TYPE-1		1	
7.2	TE354. 433-03	CONNECTING ROD		1	
7.3	GBT6171-M12X1. 5-8-A3L	HEXAGON NUT, TYPE-1		1	
7.4	TE2S433010010K	BRAKE LONG PULL ROD WELDMENT		1	
7.5	TE354. 433B. 3	RIGHT BRAKE PULL ROD WELDMENT		1	
8	GBT97. 1-12-A3L	FLAT WASHER		2	
9	TL02433010004K	CONNECTING PIN		2	
10	GBT97. 1-8-A3L	FLAT WASHER		4	

TE2S433010000K BRAKE CONTROL ASSEMBLY-2 (cont'd.)

No.	Part No.	Description	Version	QTY.	Remark
11	TB504. 433-10	RETURN SPRING		2	
12	TL02433010008K	RIGHT RETURN SPRING FIXED PLATE WELDMENT		1	
13	GBT882-B8X30-A3L	PIN SHAFT		2	
14	TE250. 433C-11	CONNECTING FORK		2	
15	TE2S433010007K	RIGHT BRAKE PULL WIRE ASSEMBLY		1	
16	GBT882-B10X26-A3L	PIN SHAFT		2	
17	GBT894. 1-20	CIRCLIP FOR SHAFT		1	
18	GBT97. 1-20-A3L	FLAT WASHER		1	
19	GBT16674. 1-M6X16-8. 8-A2L	HEXAGON FLANGE NUT		7	
20	TL02433060002	SEAL GASKET 1		1	
21	TL02433060001	PRESSURE PLATE 1		1	
22	GBT91-2X20-A3L	SPLIT PIN		2	

TE2S433010000K BRAKE CONTROL ASSEMBLY-3

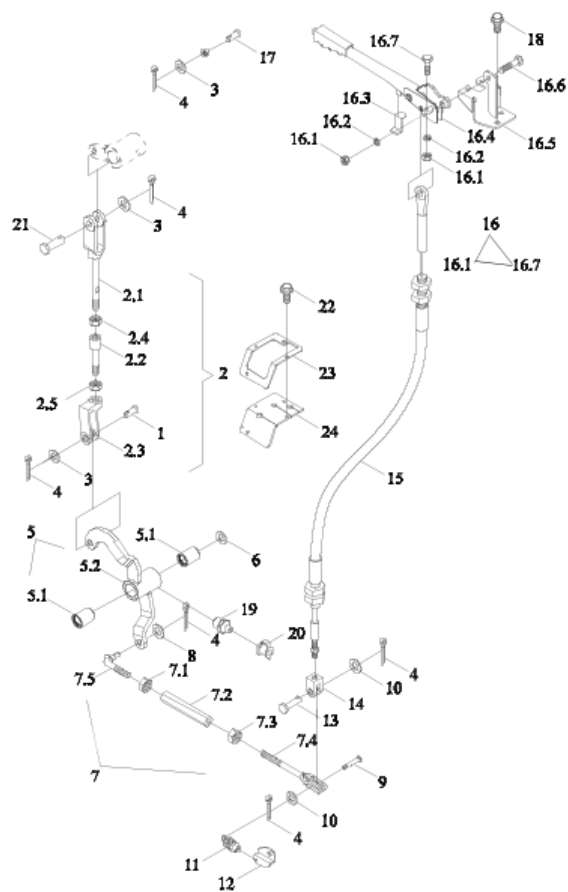


TE2S433010000K BRAKE CONTROL ASSEMBLY-3

No.	Part No.	Description	Version	QTY.	Remark
	TE2S433010000K	BRAKECONTROLASSEMBLY		1	
1	GBT882-B10X30-A3L	PIN SHAFT		2	
2	TL02433050039	RIGHT UPPER PULL ROD ASSEMBLY		1	
2.1	TL02212040016	RELEASE UPPER TIE ROD WELD		1	
2.2	TL02433050023	BRAKE SHORT PULL ROD WELDMENT		1	
2.3	TL02433050021	PULL ROD FORK		1	
2.4	GBT6171-M10X1-8-A2L	HEXAGON NUT, TYPE-1		1	
2.5	GBT6171-M10X1-LH-8-A2L	HEXAGON NUT, TYPE-1		1	
3	GBT97. 1-10-A3L	FLAT WASHER		7	
4	GBT91-3. 2X22-A3L	SPLIT PIN		9	
5	TE2S433010014K	LEFT LOWER ROCKER UNIT		1	
5.1	TL02433050004	SLEEVE		1	
5.2	TE2S433010015K	LEFT LOWER ROCKER WELDMENT		1	
6	TL02433060005	WASHER		2	
7	TE2S433010001K	BRAKE PULL ROD		2	
7.1	GBT6171-M12X1. 5-LH-8-A3L	HEXAGON NUT, TYPE-1		1	
7.2	TE354. 433-03	CONNECTING ROD		1	
7.3	GBT6171-M12X1. 5-8-A3L	HEXAGON NUT, TYPE-1		1	
7.4	TE2S433010010K	BRAKE LONG PULL ROD WELDMENT		1	
7.5	TE354. 433B. 3	RIGHT BRAKE PULL ROD WELDMENT		1	
8	GBT97. 1-12-A3L	FLAT WASHER		2	
9	TL02433010004K	CONNECTING PIN		2	
10	GBT97. 1-8-A3L	FLAT WASHER		4	

TE2S433010000K BRAKE CONTROL ASSEMBLY-3 (cont'd.)

No.	Part No.	Description	Version	QTY.	Remark
11	TB504. 433-10	RETURN SPRING		2	
12	TL02433010007K	RETURN SPRING FIXED PLATE WELDMENT		1	
13	GBT882-B8X30-A3L	PIN SHAFT		2	
14	TE250. 433C-11	CONNECTING FORK		2	
15	TE2S433010006K	LEFT BRAKE WIRE ASSEMBLY		1	
16	TE2S433010003K	HAND BRAKE HANDLE ASSEMBLY		1	
16. 1	GBT6170-M8-8-A2L	HEXAGON NUT, TYPE-1		3	
16. 2	GBT93-8-A3L	STANDARD SPRING WASHER		3	
16. 3	TE2S433010005K	SEAT		1	
16. 4	TE2S433010004K	HAND BRAKE HANDLE		1	
16. 5	TE2S433010011K	SEAT WELDMENT		1	
16. 6	GBT5783-M8X35-8. 8-A2L	HEXAGON BOLT		1	
16. 7	GBT5783-M8X30-8. 8-A2L	HEXAGON BOLT		2	
17	GBT882-B10X45-A3L	PIN SHAFT		1	
18	GBT16674. 1-M10X20-8. 8-A3L	HEXAGON FLANGE NUT		2	
19	JBT7940. 1-M8X1	STRAIGHT FORCED FILLING OIL CUP		2	
20	TD800. 311C. 1-01	DUSTPROOF CAP OF OIL CUP		2	
21	GBT882-B10X26-A3L	PIN SHAFT		2	
22	GBT16674. 1-M6X16-8. 8-A2L	HEXAGON FLANGE NUT		7	
23	TL02433060004	SEAL GASKET 2		1	
24	TL02433060003	PRESSURE PLATE 2		1	


TE2S440010000K SEAT INSTALLATION ASSEMBLY

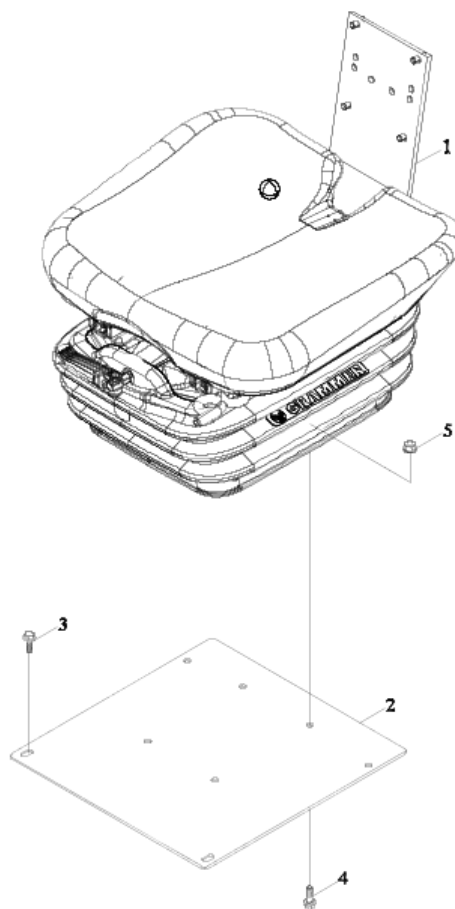

TE2S440010000K SEAT INSTALLATION ASSEMBLY

No.	Part No.	Description	Version	QTY.	Remark
	TE2S440010000K	SEAT INSTALLATION ASSEMBLY		1	
1	TB1S440020001K	SEAT ASSEMBLY		1	
2	TE2S440010003K	INSTALLATION PLATE		1	
3	GBT16674. 1-M8X20-8. 8-A2L	HEXAGON FLANGE NUT		4	
4	GBT16674. 1-M8X16-8. 8-A2L	HEXAGON FLANGE NUT		4	
5	GBT6177. 1-M8-8-A2L	HEXAGON FLANGE NUT		4	


TE2S451010000K DRIVER' S CAB ASSEMBLY-1

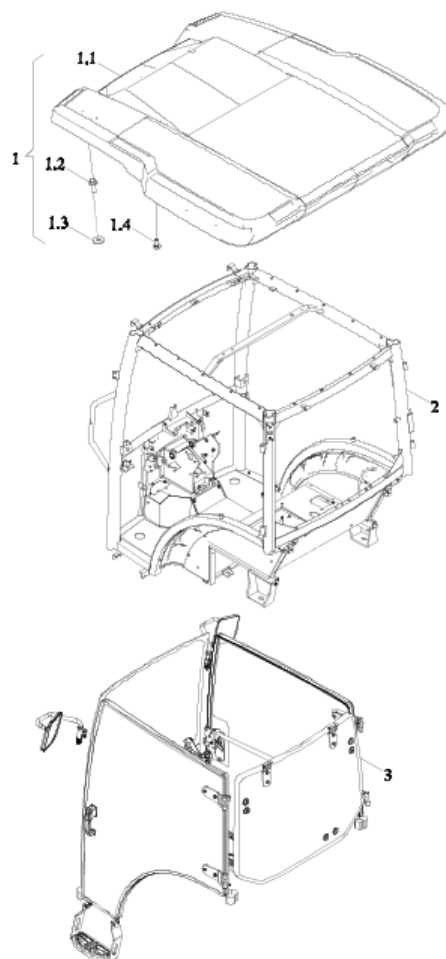

TE2S451010000K DRIVER' S CAB ASSEMBLY-1

No.	Part No.	Description	Version	QTY.	Remark
	TE2S451010000K	DRIVER' S CAB ASSEMBLY		1	
1	TL02451015100	TOP COVER ASSEMBLY		1	
1.1	TL02451015000	TOP COVER ASSEMBLY		1	
1.2	GBT16674. 1-M6X20-8. 8-A2L	HEXAGON FLANGE NUT		16	
1.3	GBT96. 1-6-A3L	BIG WASHER		10	
1.4	GBT818-M6X12-4. 8-A2L	CROSS SCREW		1	
2	TE2S451010001Ka	CAB WELDMENT		1	
3	TE2S451010002Ka	CAB ACCESSORY		1	


TE2S451010000K DRIVER' S CAB ASSEMBLY-2

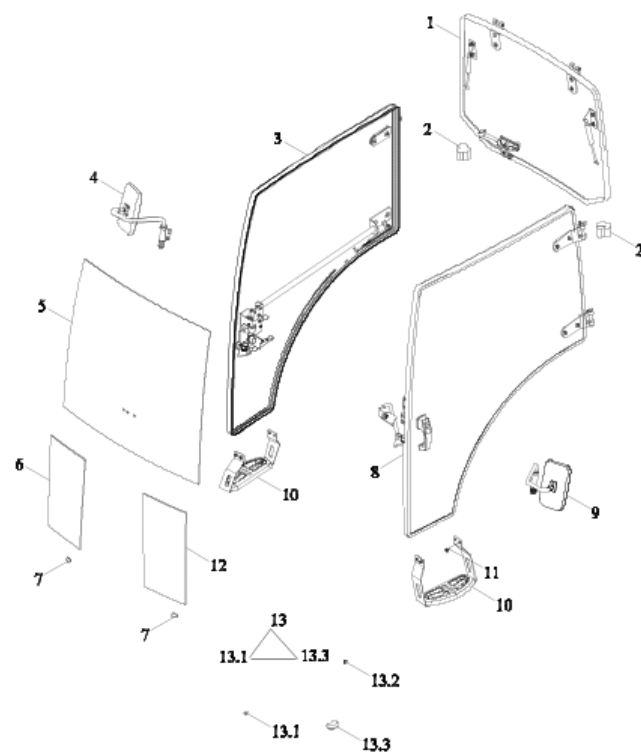

TE2S451010000K DRIVER' S CAB ASSEMBLY-2

No.	Part No.	Description	Version	QTY.	Remark
	TE2S451010000K	DRIVER' S CAB ASSEMBLY		1	
	TE2S451010002Ka	CAB ACCESSORY		1	
1	TE2S451010024Ka	REAR WINDOW ASSEMBLY		1	
2	TL02451019002	SEAL SPONGE		4	
3	TE2S451010009Ka	RIGHT DOOR ASSEMBLY		1	
4	TE2S451010029K	RIGHT REAR MIRROR INSTALLATION ASSEMBLY		1	
5	TE2S451010021Ka	FRONT WINDSHIELD		1	
6	TE2S451010023K	RIGHT LOWER FRONT WINDSHIELD		1	
7	TS06451011269	GLASS MOUNTINGS MAT		4	
8	TE2S451010018Ka	LEFT DOOR ASSEMBLY		1	
9	TE2S451010027K	LEFT REAR VIEW MIRROR INSTALLATION ASSEMBLY		1	
10	TL02451017000	LEFT LADDER		2	
11	GBT16674. 1-M8X20-8. 8-A2L	HEXAGON FLANGE NUT		8	
12	TE2S451010022K	LEFT LOWER FRONT WINDSHIELD		1	
13	TL02451019000	CAB SEAL		1	
13. 1	TS06451019001	PROCESS PLUG COVER 1		2	
13. 2	QLWZL002-20X1. 0	3M GLUE PIECE		18	
13. 3	TL02451019001	PLUG COVER		1	


TE2S451010000K DRIVER' S CAB ASSEMBLY-3

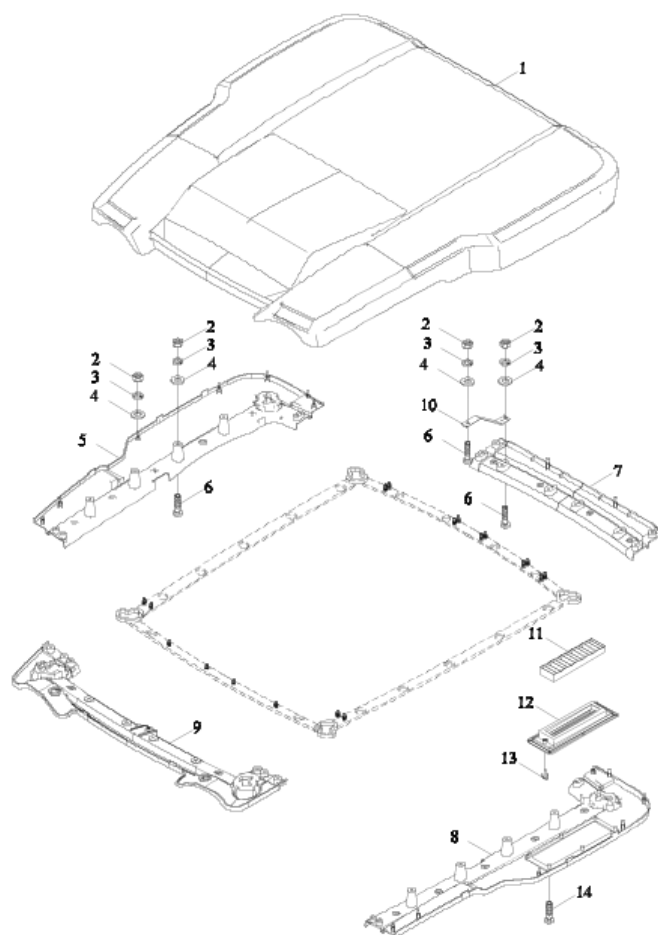

TE2S451010000K DRIVER' S CAB ASSEMBLY-3

No.	Part No.	Description	Version	QTY.	Remark
	TE2S451010000K	DRIVER' S CAB ASSEMBLY		1	
	TL02451015000	TOP COVER ASSEMBLY		1	
1	TL02451015004	OUTER TOP COVER		1	
2	GBT6170-M6-8-A2L	HEXAGON NUT, TYPE-1		48	
3	GBT93-6-A3L	STANDARD SPRING WASHER		48	
4	GBT97. 1-6-A3L	FLAT WASHER		48	
5	TL02451015008	RIGHT TOP COVER		1	
6	GBT818-M6X20-4. 8-A2L	CROSS SCREW		32	
7	TL02451015006	REAR TOP COVER		1	
8	TL02451015007	LEFT TOP COVER		1	
9	TL02451015005	FRONT TOP COVER		1	
10	TL02451015009	CONNECTING PLATE		4	
11	TL02451015012	FILTER ELEMENT		1	
12	TL02451015011	WIND MOUTH		1	
13	TS06453015105	PLUG		2	
14	GBT818-M5X10-4. 8-A2L	CROSS SCREW		9	


TE2S451010000K DRIVER' S CAB ASSEMBLY-4

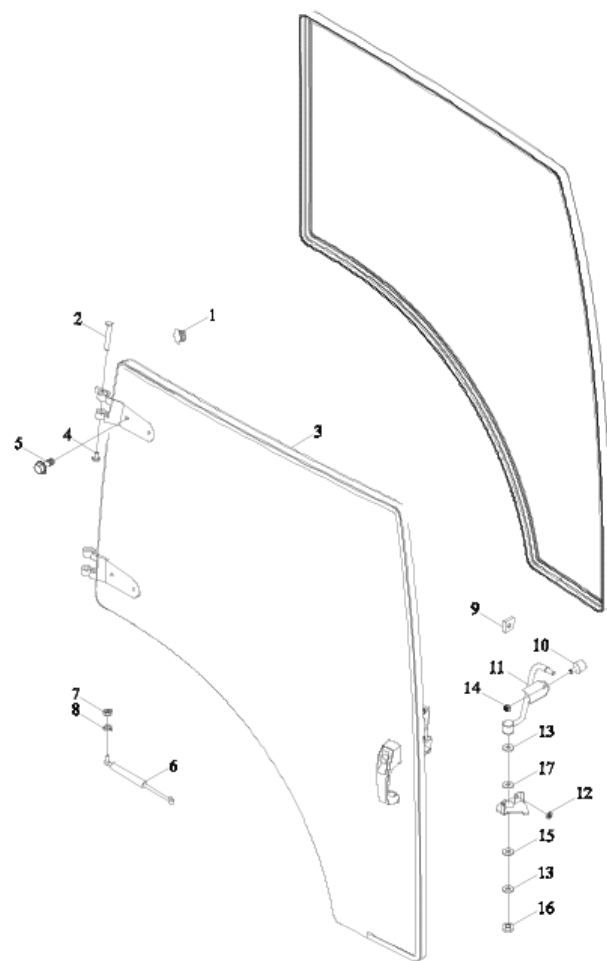

TE2S451010000K DRIVER' S CAB ASSEMBLY-4

No.	Part No.	Description	Version	QTY.	Remark
	TE2S451010000K	DRIVER' S CAB ASSEMBLY		1	
	TE2S451010009Ka	RIGHT DOOR ASSEMBLY		1	
	TE2S451010018Ka	LEFT DOOR ASSEMBLY		1	
1	TB400. 46C-01	PLUG COVER		1	
2	TL02451013018	PIN SHAFT		2	
3	TE2S451010010Ka	RIGHT DOOR		1	
3	TE2S451010019Ka	LEFT DOOR		1	
4	TL02451013017	BOLT		2	
5	GBT16674. 1-M8X30-8. 8-A2L	HEXAGON FLANGE NUT		4	
6	TD904. 451C. 2-12	DOOR PNEUMATIC SPRING		1	
7	GBT6170-M8-8-A2L	HEXAGON NUT, TYPE-1		1	
8	GBT93-8-A3L	STANDARD SPRING WASHER		1	
9	TS04451013002	DOOR LOCK NUT SEAT		1	
10	TS04451012130	STOPPER		1	
11	TE2S451010052K	RIGHT BRACKET WELDMENT		1	
11	TL02451011667	LEFT BRACKET WELDMENT		1	
12	TS06471014003	PROCESS PLUG COVER		2	
13	GBT96. 1-10-A3L	BIG WASHER		3	
14	GBT6170-M10-8-A3L	HEXAGON NUT, TYPE-1		1	
15	TS04451012128	NYLON WASHER		1	
16	GBT6187. 1-M10-8-A2L	FULL METAL HEXAGON FLANGE LOCKING NUT		1	
17	TS04451012127	NYLON SLEEVE		1	


TE2S451010000K DRIVER'S CAB ASSEMBLY-5

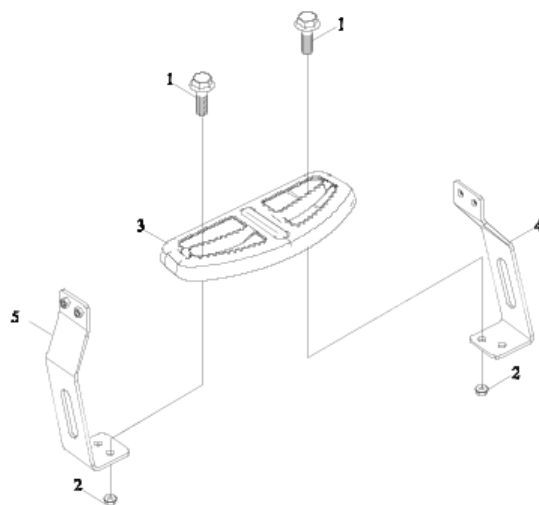

TE2S451010000K DRIVER' S CAB ASSEMBLY-5

No.	Part No.	Description	Version	QTY.	Remark
	TE2S451010000K	DRIVER' S CAB ASSEMBLY		1	
	TL02451017000	LEFT LADDER		2	
1	GBT16674. 1-M8X20-8. 8-A2L	HEXAGON FLANGE NUT		4	
2	GBT6177. 1-M8-8-A2L	HEXAGON FLANGE NUT		4	
3	TS06451017100	LEFT LADDER		1	
4	TL02451017003	RIGHT SIDE PLATE WELDMENT		1	
5	TL02451017004	LEFT SIDE PLATE		1	

TE2S451010000K DRIVER' S CAB ASSEMBLY-6

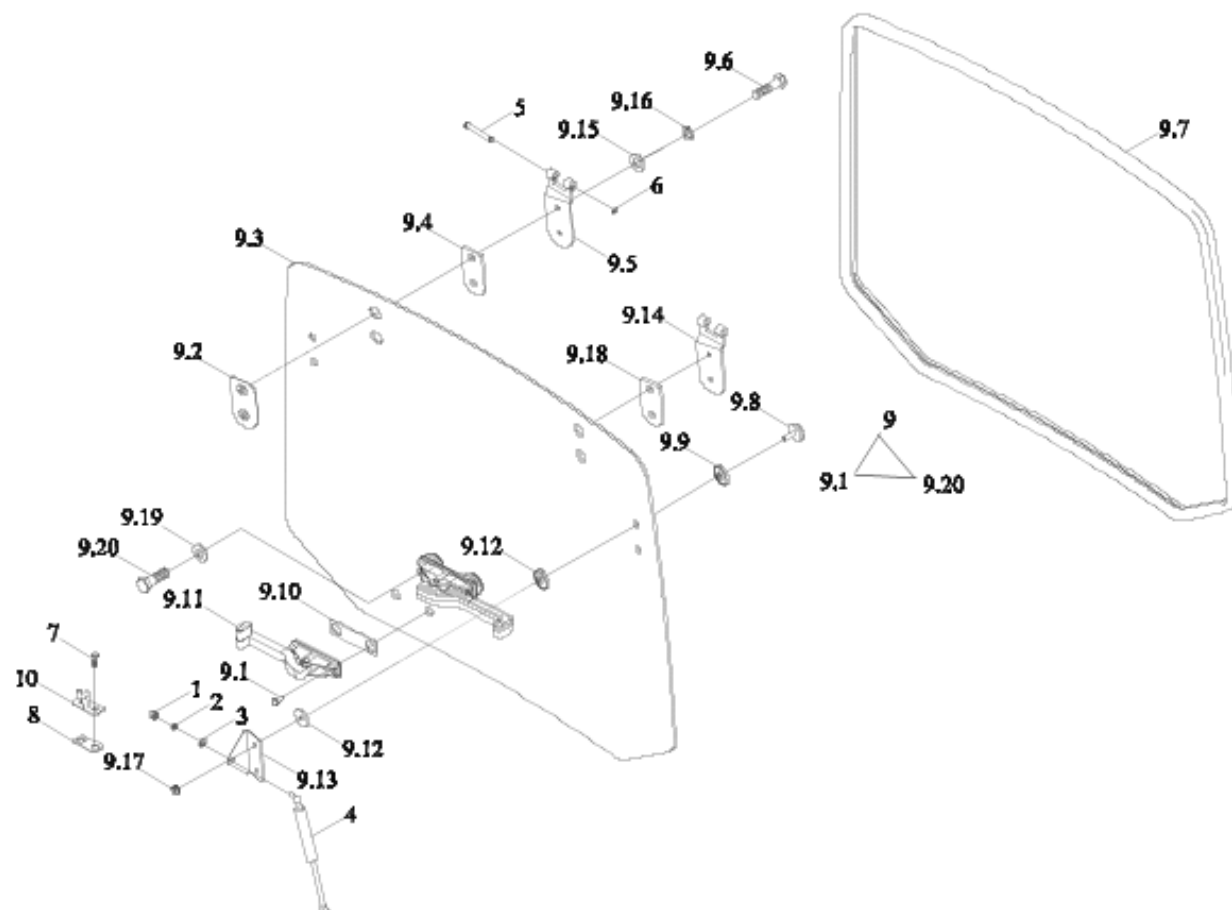


TE2S451010000K DRIVER' S CAB ASSEMBLY-6

No.	Part No.	Description	Version	QTY.	Remark
	TE2S451010000K	DRIVER' S CAB ASSEMBLY		1	
	TE2S451010024Ka	REAR WINDOW ASSEMBLY		1	
1	GBT923-M8-5	CAP NUT		2	
2	GBT93-8-A3L	STANDARD SPRING WASHER		2	
3	GBT97. 1-8-A3L	FLAT WASHER		2	
4	TL02451016010	REAR WINDOW PNEUMATIC SPRING		2	
5	TS06451016004	BACK WINDOWS HINGED PIN SHAFT		2	
6	GBT896-6-A3L	SPLIT RETAINER RING		2	
7	GBT16674. 1-M6X20-8. 8-A2L	HEXAGON FLANGE NUT		2	
8	TL02451016011	RUBBER WASHER		1	
9	TE2S451010025Ka	BACK WIND WINDOWS		1	
9. 1	GBT5783-M8X16-8. 8-A2L	HEXAGON BOLT		2	
9. 2	TL02451016007	REAR WINDOW HINGE INNER PLATE		2	
9. 3	TE2S451010026Ka	BACK WIND WINDOW GLASS		1	
9. 4	TL02451016005	RUBBER WASHER		2	
9. 5	TL02451016002	REAR WINDOW HINGE -RIGHT		1	
9. 6	GBT5783-M8X25-8. 8-A2L	HEXAGON BOLT		4	
9. 7	TL02451016004	REAR WINDOW SEAL STRIP		1	
9. 8	TS04451013106	CAST BOLT		4	
9. 9	TS06453015605	FIXING SLEEVE OUT MAT		4	
9. 10	TL02451016017	REAR WINDOW HADDLE INNER RUBBER WASHER		1	
9. 11	TL02451016101	REAR WINDOW ARMREST		1	
9. 12	TS06453015606	FIXING SLEEVE IN MAT		4	

TE2S451010000K DRIVER' S CAB ASSEMBLY-6 (cont'd.)

No.	Part No.	Description	Version	QTY.	Remark
9. 13	TL02451016016	PNEUMATIC SPRING BRACKET		2	
9. 14	TL02451016001	REAR WINDOW HINGE -LEFT		1	
9. 15	GBT97. 1-8-A3L	FLAT WASHER		4	
9. 16	GBT93-8-A3L	STANDARD SPRING WASHER		4	
9. 17	GBT6177. 1-M8-8-A2L	HEXAGON FLANGE NUT		4	
9. 18	TL02451016006	REAR WINDOW HINGE INNER RUBBER WASHER		2	
9. 19	FT65. 45. 720	RUBBER WASHER		2	
9. 20	FT65. 45. 719	SIDE WINDOW CAST NUT		2	
10	TL02451016012	REAR WINDOW LOCKING SEAT		1	


TE2S453010000K UPHOLSTERY ASSEMBLY

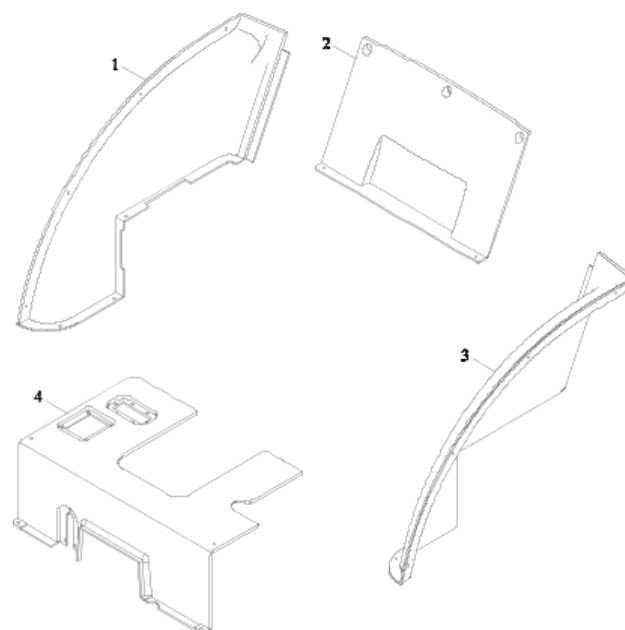

TE2S453010000K UPHOLSTERY ASSEMBLY

No.	Part No.	Description	Version	QTY.	Remark
	TE2S453010000K	UPHOLSTERY ASSEMBLY		1	
1	TE2S453010002K	RIGHT REAR MUD GUARD DECORATION PART		1	
2	TE2S453010003K	INTO UPHOLSTERY		1	
3	TE2S453010001K	LEFT REAR MUD GUARD DECORATION PART		1	
4	TE2S453010004K	MIDDLE FLOOR MAT		1	


TE2S453020000K UPHOLSTERY ASSEMBLY

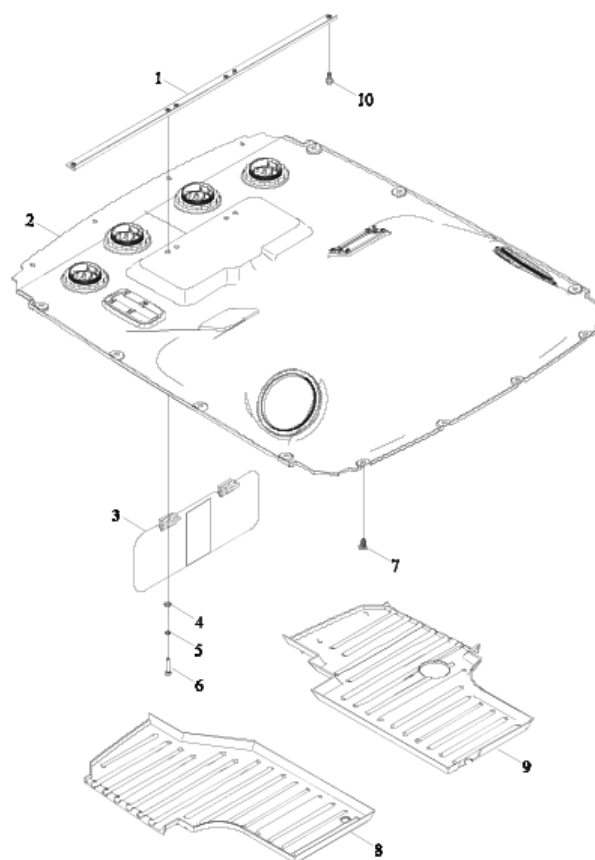

TE2S453020000K UPHOLSTERY ASSEMBLY

No.	Part No.	Description	Version	QTY.	Remark
	TE2S453020000K	UPHOLSTERY ASSEMBLY		1	
1	TL02453020005	SHADOW INSTALLATION PLATE WELDMENT		1	
2	TL02453020011	UPHOLSTERY		1	
3	TL02453020002	SHADOW		1	
4	GBT97. 1-5-A3L	FLAT WASHER		4	
5	GBT93-5-A3L	STANDARD SPRING WASHER		4	
6	GBT818-M5X25-4. 8-A2L	CROSS SCREW		4	
7	Q69208	PLASTIC SPLIT PIN		16	
8	TE2S453020001K	LEFT FLOOR MAT		1	
9	TE2S453020002K	RIGHT FLOOR MAT		1	
10	GBT16674. 1-M6X20-8. 8-A2L	HEXAGON FLANGE NUT		2	


TL02455010000 BACK REAR MUD GUARD DECORATION PART

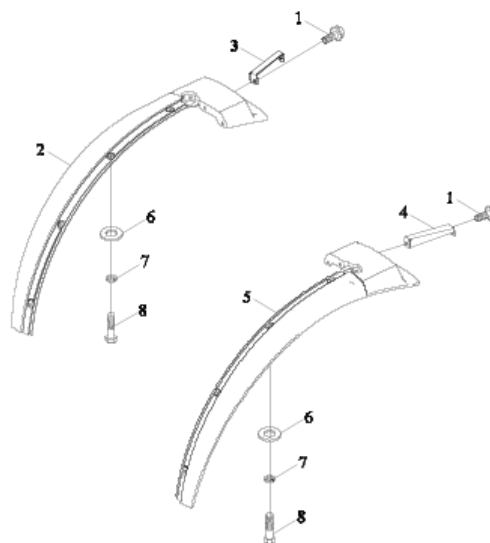

TL02455010000 BACK REAR MUD GUARD DECORATION PART

No.	Part No.	Description	Version	QTY.	Remark
	TL02455010000	BACK REAR MUD GUARD DECORATION PART		1	
1	GBT16674. 1-M6X16-8. 8-A2L	HEXAGON FLANGE NUT		4	
2	TL02455012000	RIGHT REAR MUD GUARD DECORATION PART		1	
3	TL02455011006	REAR MUD GUARD RIGHT BRACKET		1	
4	TL02455011005	REAR MUD GUARD LEFT BRACKET		1	
5	TL02455011000	LEFT REAR MUD GUARD DECORATION PART		1	
6	GBT96. 1-6-A3L	BIG WASHER		8	
7	GBT93-6-A3L	STANDARD SPRING WASHER		8	
8	GBT5783-M6X25-8. 8-A2L	HEXAGON BOLT		8	


TE2S456010000K DASHBOARD ASSEMBLY

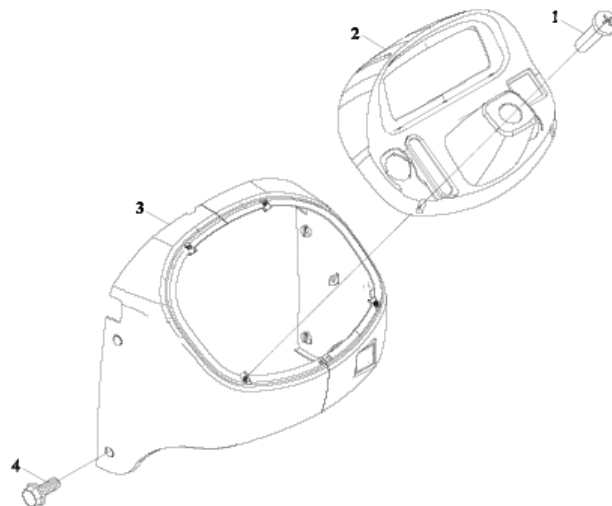

TE2S456010000K DASHBOARD ASSEMBLY

No.	Part No.	Description	Version	QTY.	Remark
	TE2S456010000K	DASHBOARD ASSEMBLY		1	
1	GBT818-M5X20-4. 8-A2L	CROSS SCREW		4	
2	TE4S456020002	UPPER COVER PLATE		1	
3	TL02456010001	DASHBOARD LOWER COVER		1	
4	GBT16674. 1-M6X20-8. 8-A2L	HEXAGON FLANGE NUT		4	


TL02457020000 FRONT CONNECTING ASSEMBLY

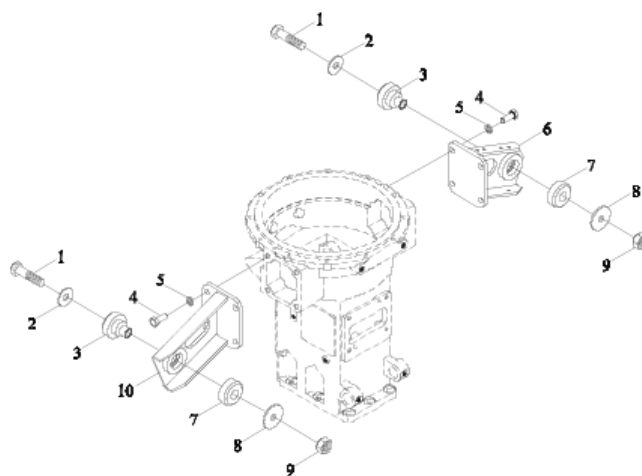

TL02457020000 FRONT CONNECTING ASSEMBLY

No.	Part No.	Description	Version	QTY.	Remark
	TL02457020000	FRONT CONNECTING ASSEMBLY		1	
1	GBT5782-M16X100-10.9-A3L	HEXAGON BOLT		2	
2	GBT96.1-16-A3L	BIG WASHER		2	
3	TL02457030001	UPPER SHOCK ABSORBER		2	
4	GBT5783-M14X35-10.9-A3L	HEXAGON BOLT		8	
5	GBT93-14-A3L	STANDARD SPRING WASHER		8	
6	TL02457021000	LEFT FRONT CONNECTION WELDMENT		1	
7	TL02457030002	LOWER SHOCK ABSORBER		2	
8	TL02457030003	WASHER		2	
9	GBT6184-M16-8-A3L	I -HEXAGON BLOCKNUT		2	
10	TL02457022000	RIGHT FRONT CONNECTION WELDMENT		1	


TL02458030000 REAR CONNECTING ASSEMBLY

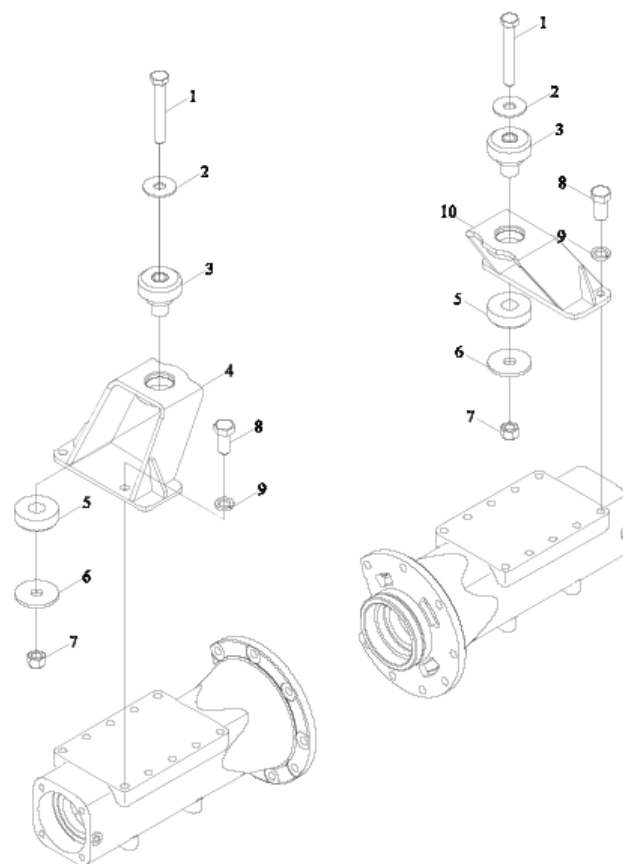

TL02458030000 REAR CONNECTING ASSEMBLY

No.	Part No.	Description	Version	QTY.	Remark
	TL02458030000	REAR CONNECTING ASSEMBLY		1	
1	GBT5782-M16X110-10.9-A3L	HEXAGON BOLT		2	
2	GBT96.1-16-A0P	BIG WASHER		2	
3	TL02457030001	UPPER SHOCK ABSORBER		2	
4	TL02458030001	LEFT REAR CONNECTING WELDMENT		1	
5	TL02457030002	LOWER SHOCK ABSORBER		2	
6	TL02457030003	WASHER		2	
7	GBT6184-M16-8-A3L	I -HEXAGON BLOCKNUT		2	
8	GBT5783-M12X25-10.9-A3L	HEXAGON BOLT		8	
9	GBT93-12-A3L	STANDARD SPRING WASHER		8	
10	TL02458030005	RIGHT REAR CONNECTING WELDMENT		1	

TE2S471010000K BONNET INSTALLATION ASSEMBLY

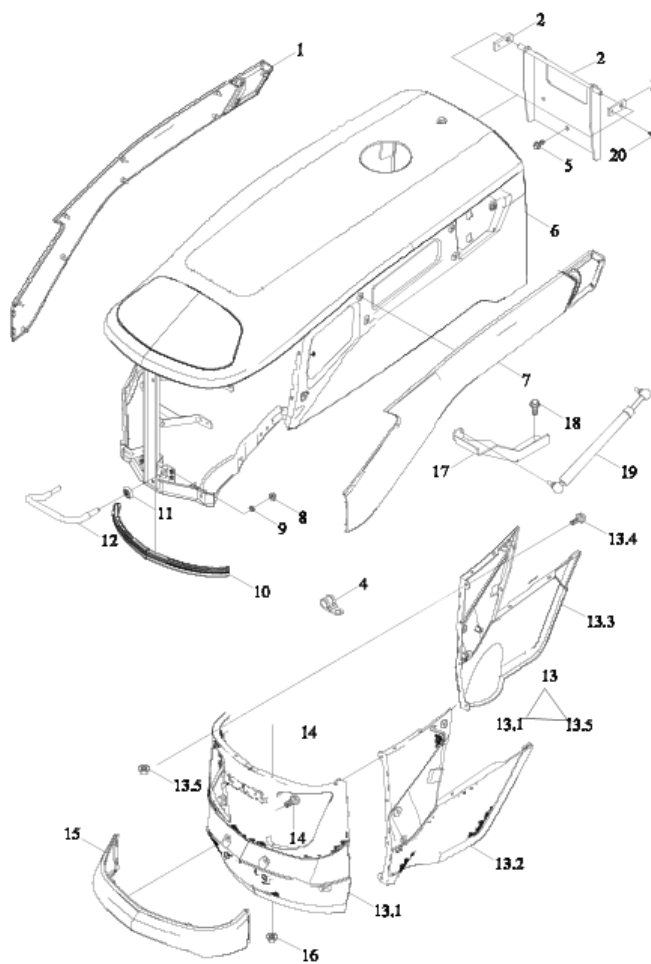


TE2S471010000K BONNET INSTALLATION ASSEMBLY

No.	Part No.	Description	Version	QTY.	Remark
	TE2S471010000K	BONNET INSTALLATION ASSEMBLY		1	
1	TL02471040007	BONNET RIGHT FRONT ADORN BOARD		1	
2	TL02471041029	PLATE		1	
3	TL02471041026	RETAINER BLOCK		2	
4	FT65. 48. 095	HARNESSTIGHTEN CLIP		3	
5	GBT16674. 1-M8X16-8. 8-A2L	HEXAGON FLANGE NUT		3	
6	TE2S471010001K	BONNET WELDMENT		1	
7	TL02471040006	BONNET LEFT FRONT ADORN BOARD		1	
8	GBT6170-M12-8-A3L	HEXAGON NUT, TYPE-1		2	
9	GBT93-12-A3L	STANDARD SPRING WASHER		2	
10	TL02471040008	FRONT LOWER CUSHION STRIP		1	
11	TD800. 471A-05	WASHER		2	
12	TL02471040010	HANDLE		1	
13	TL02471040020	BONNET MESH PLATE		1	
13. 1	TL02471040002	BONNET FRONT MESH PLATE		1	
13. 2	TL02471040003	BONNET LEFT MESH PLATE		1	
13. 3	TL02471040004	BONNET RIGHT MESH PLATE		1	
13. 4	GBT16674. 1-M6X16-8. 8-A2L	HEXAGON FLANGE NUT		8	
13. 5	GBT6177. 1-M6-8-A2L	HEXAGON FLANGE NUT		8	
14	GBT16674. 1-M6X12-8. 8-A2L	HEXAGON FLANGE NUT		25	
15	TL02471040005	BONNET FRONT ADORN BOARD		1	
16	GBT6177. 1-M6-8-A2L	HEXAGON FLANGE NUT		34	
17	TE2S471010005K	PNEUMATIC SPRING BRACKET WELDMENT		1	

TE2S471010000K BONNET INSTALLATION ASSEMBLY (cont'd.)

No.	Part No.	Description	Version	QTY.	Remark
18	GBT16674.1-M8X25-8.8-A2L	HEXAGON FLANGE NUT		2	
19	TL02471040022	BONNET PNEUMATIC SPRING ASSEMBLY		1	
20	GBT16674.1-M6X16-8.8-A2L	HEXAGON FLANGE NUT		2	


TE2S473010000K BONNET LOCKING DEVICE ASSEMBLY

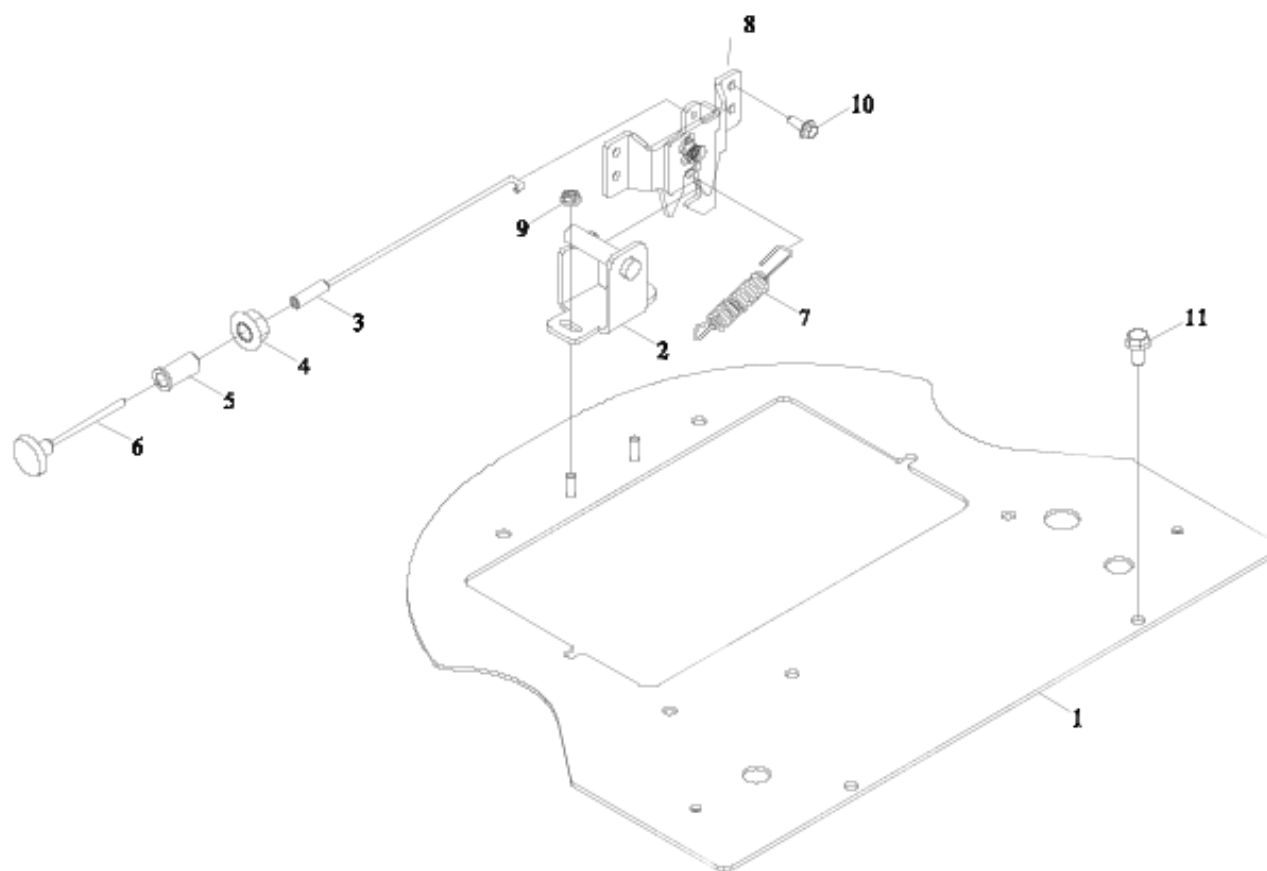

TE2S473010000K BONNET LOCKING DEVICE ASSEMBLY

No.	Part No.	Description	Version	QTY.	Remark
	TE2S473010000K	BONNET LOCKING DEVICE ASSEMBLY		1	
1	TE2S473010001K	BASE PLATE		1	
2	TL02473020013	LOCK COLUMN WELDMENT		1	
3	TE2S473010014K	PULL ROD WELDMENT		1	
4	GBT6177. 1-M14-10-A3L	HEXAGON FLANGE NUT		1	
5	TE2S473010008K	GUIDE SLEEVE		1	
6	TL02473020015	PULL ROD		1	
7	TL02473020009	BONNET LOCK SPRING		1	
8	TE2S473010011K	BONNET LOCK ASSEMBLY		1	
9	GBT6177. 1-M6-8-A2L	HEXAGON FLANGE NUT		2	
10	GBT16674. 1-M6X16-8. 8-A2L	HEXAGON FLANGE NUT		4	
11	GBT5789-M8X16-8. 8-A2L	HEXAGON FLANGE NUT		4	


TE2S475010000K BONNET SEAL INSTALLATION ASSEMBLY

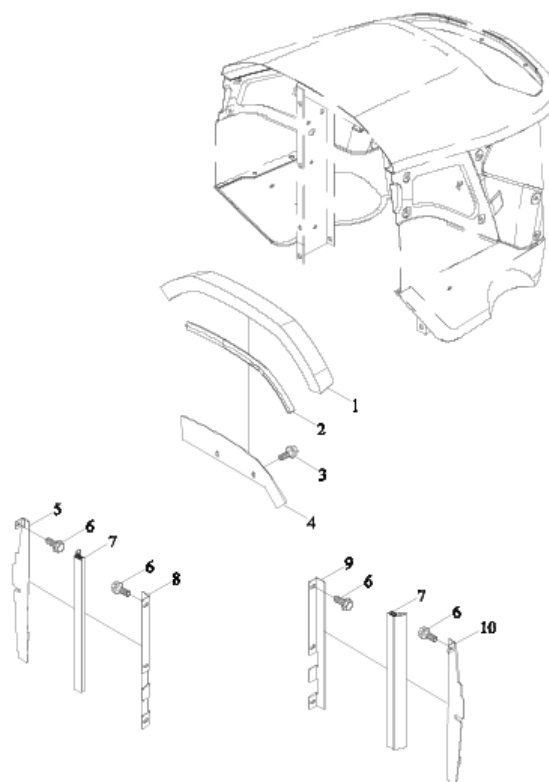

TE2S475010000K BONNET SEAL INSTALLATION ASSEMBLY

No.	Part No.	Description	Version	QTY.	Remark
	TE2S475010000K	BONNET SEAL INSTALLATION ASSEMBLY		1	
1	TL02475010003	UPPER SEAL SPONGE		1	
2	TE2S475010002K	UPPER SEAL RUBBER STRIP		1	
3	GBT5789-M8X16-8.8-A2L	HEXAGON FLANGE NUT		2	
4	TE2S475010001K	SEAL SPACER PLATE		1	
5	TL02475010004	LEFT SEAL PLATE		1	
6	GBT5789-M6X12-8.8-A2L	HEXAGON FLANGE NUT		10	
7	TL02475010012	RIGHT SEAL RUBBER STRIP		2	
8	TE2S475010003K	WATER TANK LEFT SEAL PLATE		1	
9	TE2S475010004K	WATER TANK RIGHT SEAL PLATE		1	
10	TL02475010007	RIGHT SEAL PLATE WELDMENT		1	


TE2S481010000K ENGINE HARNESS INSTALLATION ASSEMBLY

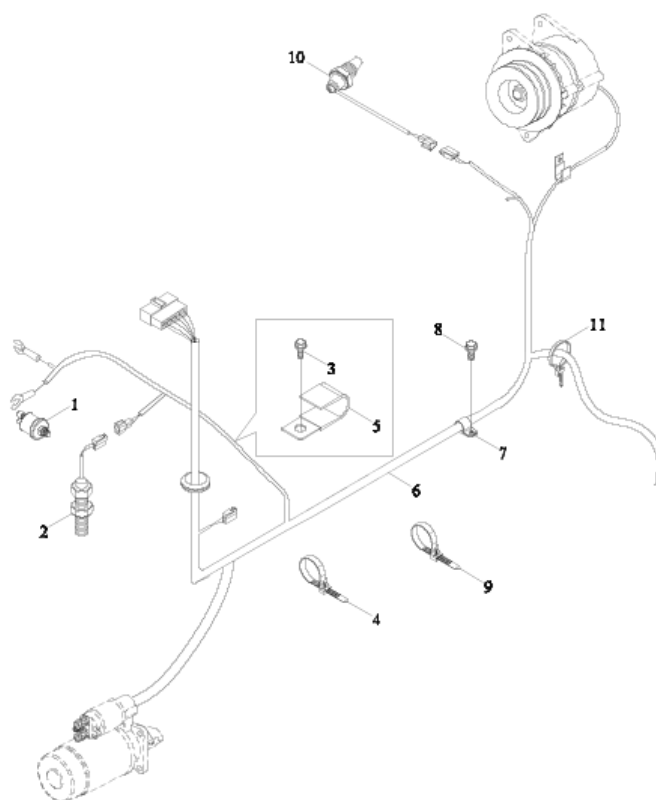

TE2S481010000K ENGINE HARNESS INSTALLATION ASSEMBLY

No.	Part No.	Description	Version	QTY.	Remark
	TE2S481010000K	ENGINE HARNESS INSTALLATION ASSEMBLY		1	
1	FT300. 48. 073a	OIL PRESSURE ALARM		1	
2	TS10481010002	RPM SENSOR		1	
3	GBT16674. 1-M10X16-8. 8-A3L	HEXAGON FLANGE NUT		2	
4	3203505D9-L	TIE		2	
5	FT304. 48L. 203	HARNESS TIGHTEN CLIP		2	
6	TE2S481010001K	ENGINE HARNESS ASSEMBLY		1	
7	TS04481010006	HARNESS TIGHTEN CLIP		2	
8	GBT16674. 1-M8X16-8. 8-A2L	HEXAGON FLANGE NUT		2	
9	Q67405400	PLASTIC FASTENING STRIP		2	
10	TL02481030006	WATER TEMPERATURE SENSOR ASSEMBLY		1	
11	Q67405100	PLASTIC FASTENING STRIP		2	

TE2S482010000K BODY HARNESS INSTALLATION ASSEMBLY

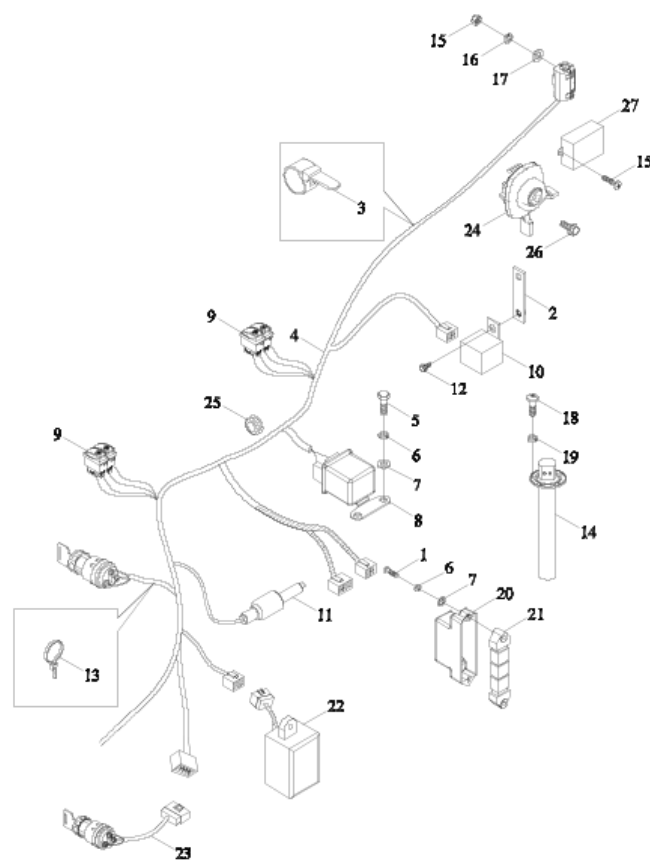


TE2S482010000K BODY HARNESS INSTALLATION ASSEMBLY

No.	Part No.	Description	Version	QTY.	Remark
	TE2S482010000K	BODY HARNESS INSTALLATION ASSEMBLY		1	
1	GBT818-M6X25-4.8-A2L	CROSS SCREW		4	
2	TE2S482010009K	FIXING PLATE WELDMENT		1	
3	3203505D9-L	TIE		14	
4	TE2S482010001K	BODY HARNESS ASSEMBLY		1	
5	GBT16674.1-M6X16-8.8-A2L	HEXAGON FLANGE NUT		2	
6	GBT93-6-A3L	STANDARD SPRING WASHER		4	
7	GBT97.1-6-A3L	FLAT WASHER		4	
8	FT300.48.055	STARTING RELAY		1	
9	TE2S482010006K	TWO GANG PADDLE SWITCH		1	
9	TE2S482010005K	TWO GANG PADDLE SWITCH		1	
10	TE2S482010007K	RELAY		1	
11	TB550.484.2	BRAKE LIGHT SWITCH		2	
12	GBT16674.1-M6X12-8.8-A2L	HEXAGON FLANGE NUT		1	
13	Q67405100	PLASTIC FASTENING STRIP		11	
14	TL02482110005	OIL QUANTITY SENSOR ASSEMBLY		1	
15	GBT818-M5X12-4.8-A2L	CROSS SCREW		2	
16	GBT93-5-A3L	STANDARD SPRING WASHER		2	
17	GBT97.1-5-A3L	FLAT WASHER		2	
18	TS04481050005	SCREW M4X12		5	
19	GBT93-4-A3L	STANDARD SPRING WASHER		5	
20	TE250.482A-02	RELAY BOX COVER		1	
21	TE2S482010004K	RELAY BOX ASSEMBLY		1	

TE2S482010000K BODY HARNESS INSTALLATION ASSEMBLY (cont'd.)

No.	Part No.	Description	Version	QTY.	Remark
21.1	TE250.482A.2.1	MAIN POWER RELAY		1	
21.2	TC05482010003	PREHEATING RELAY		1	
21.3	TE250.482A.2.2	FLASH RELAY		1	
22	TE2S482010002K	FUSE BOX ASSEMBLY		1	
22.1	TD9600000500	FUSE 5A		1	
22.2	TD9600000700	FUSE 10A		3	
22.3	TD9600000800	FUSE 15A		6	
22.4	TD9600000900	FUSE 20A		2	
23	TL01482150006K	IGNITION LOCK		1	
24	TE2S482010003K	COMBINED SWITCH ASSEMBLY		1	
25	TS04482010008	RUBBER RING		1	
26	GBT16674.1-M8X16-8.8-A2L	HEXAGON FLANGE NUT		2	
27	TB1S482020002K	CONTROL BOX		1	


TE2S483010000K FRONT LAMP HARNESS INSTALLATION ASSEMBLY

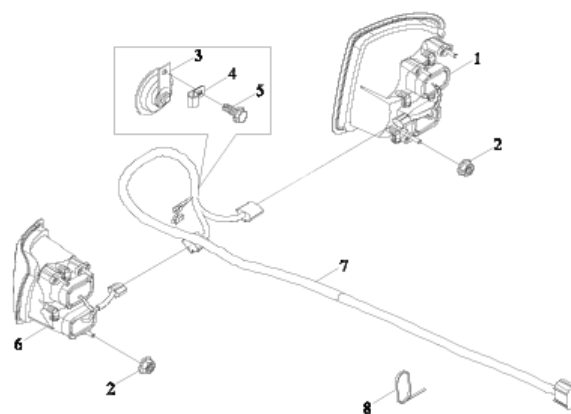

TE2S483010000K FRONT LAMP HARNESS INSTALLATION ASSEMBLY

No.	Part No.	Description	Version	QTY.	Remark
	TE2S483010000K	FRONT LAMP HARNESS INSTALLATION ASSEMBLY		1	
1	TE2S483010001K	RIGHT FRONT LAMP		1	
2	GBT6177. 1-M6-8-A2L	HEXAGON FLANGE NUT		6	
3	TD800. 483B. 3	ELECTRIC HORN		1	
4	TS04481010006	HARNESS TIGHTEN CLIP		1	
5	GBT16674. 1-M8X25-8. 8-A2L	HEXAGON FLANGE NUT		1	
6	TE2S483010002K	LEFT FRONT LAMP		1	
7	TL02483030003	FRONT LAMP HARNESS ASSEMBLY		1	
8	Q67405200	PLASTIC FASTENING STRIP		4	

TE2S484010000K REAR LAMP HARNESS INSTALLATION ASSEMBLY

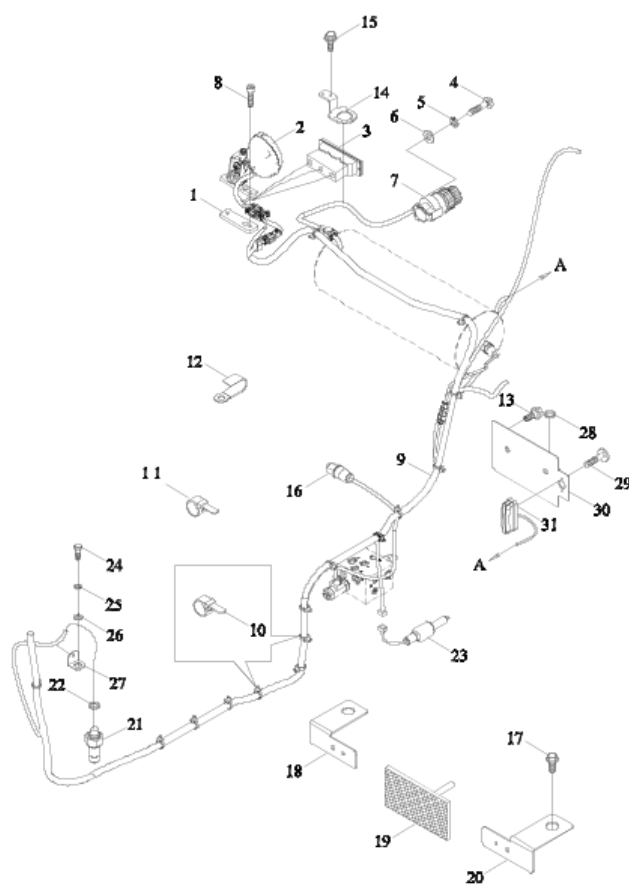


TE2S484010000K REAR LAMP HARNESS INSTALLATION ASSEMBLY

No.	Part No.	Description	Version	QTY.	Remark
	TE2S484010000K	REAR LAMP HARNESS INSTALLATION ASSEMBLY		1	
1	TS06484010015	BACK WORKING LIGHT SHOCK ABSORBER		1	
2	TS06484010004	RIGHT REAR LAMP ASSEMBLY		1	
3	TL01484230002K	TAIL LAMP ASSEMBLY		2	
4	GBT818-M5X35-4.8-A1L	CROSS SCREW		3	
5	GBT93-5-A3L	STANDARD SPRING WASHER		3	
6	GBT97.1-5-A3L	FLAT WASHER		3	
7	TD900.484.2	REAR TRAILER SOCKET		1	
8	GBT70.1-M8X25-8.8	INNER HEXAGON SCREW		2	
9	TE2S484010001K	REAR LAMP HARNESS ASSEMBLY		1	
10	3203505D9-L	TIE		34	
11	Q67405100	PLASTIC FASTENING STRIP		4	
12	FT65.48.095	HARNESS TIGHTEN CLIP		2	
13	GBT16674.1-M8X80-8.8-A2L	HEXAGON FLANGE NUT		2	
14	TL02484220002	BACK TRAILER SOCKET INSTALLATION PLATE		1	
15	GBT16674.1-M8X16-8.8-A2L	HEXAGON FLANGE NUT		4	
16	TB1S482020003K	STEERING LOWER PRESSURE ALARM SWITCH		1	
17	GBT16674.1-M12X20-8.8-A3L	HEXAGON FLANGE NUT		2	
18	TE2S484010005K	REFLECTOR INSTALLATION PLATE		1	
19	TD800.484B.5	REFLECTOR ASSEMBLY		2	
20	TE2S484010006K	INSTALLATION PLATE RIGHT		1	
21	TB1S482020005K	SWITCH		1	
22	JBT982-16	COMBINED SEAL GASKET		1	

TE2S484010000K REAR LAMP HARNESS INSTALLATION ASSEMBLY (cont'd.)

No.	Part No.	Description	Version	QTY.	Remark
23	TB550. 484. 2	BRAKE LIGHT SWITCH		1	
24	GBT5783-M16X30-10. 9-A3L	HEXAGON BOLT		2	
25	GBT93-16-A3L	STANDARD SPRING WASHER		2	
26	GBT97. 1-16-A3L	FLAT WASHER		2	
27	TE2S484010004K	HARNESS LOCKING PLATE		2	
28	JBT982-10	COMBINED SEAL GASKET		1	
29	GBT845-ST3. 5X16-A2L	SCREW		2	
30	TE2S484010003K	NAMEPLATE LAMP BRACKET WELDMENT		1	
31	TA700. 484A. 2. 1	LICENSELAMP		1	


TE2S485010000K BATTERY INSTALLATION ASSEMBLY

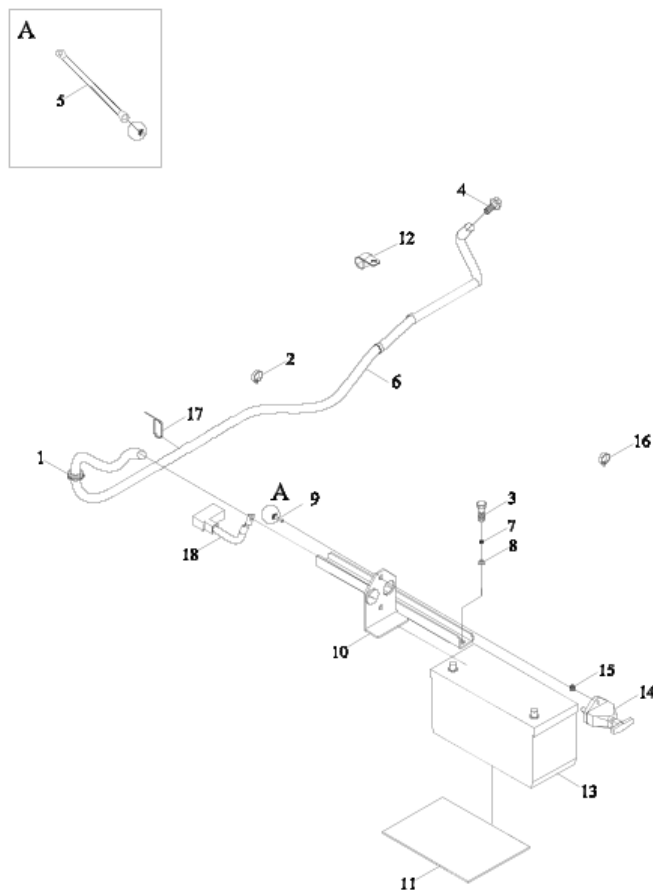

TE2S485010000K BATTERY INSTALLATION ASSEMBLY

No.	Part No.	Description	Version	QTY.	Remark
	TE2S485010000K	BATTERY INSTALLATION ASSEMBLY		1	
1	FT65. 48. 093	RUBBER RING-1		1	
2	TC05485050001	TIE		1	
3	GBT5783-M8X80-8. 8-A2L	HEXAGON BOLT		2	
4	GBT16674. 1-M8X16-8. 8-A2L	HEXAGON FLANGE NUT		1	
5	TE2S485010001K	GROUNDING WIRE		1	
6	TE2S485010006K	POWER WIRE ASSEMBLY		1	
7	GBT93-8-A3L	STANDARD SPRING WASHER		2	
8	GBT97. 1-8-A3L	FLAT WASHER		2	
9	GBT16674. 1-M8X30-8. 8-A2L	HEXAGON FLANGE NUT		2	
10	TE2S485010002K	PRESSURE PLATE WELDMENT		1	
11	FT250. 24B. 103	RUBBER SKIN		1	
12	FT65. 48. 095	HARNESS TIGHTEN CLIP		1	
13	TE250. 24B. 1L	BATTERY ASSEMBLY		1	
14	TG1454. 485. 4	POWER SWITCH		1	
15	GBT6177. 1-M8-8-A2L	HEXAGON FLANGE NUT		4	
16	3203505D9-L	TIE		3	
17	Q67405200	PLASTIC FASTENING STRIP		1	
18	TE2S485010005K	BATTERY GROUNDING WIRE		1	


TE2S486010000K TOP LIGHT HARNESS INSTALLATION ASSEMBLY

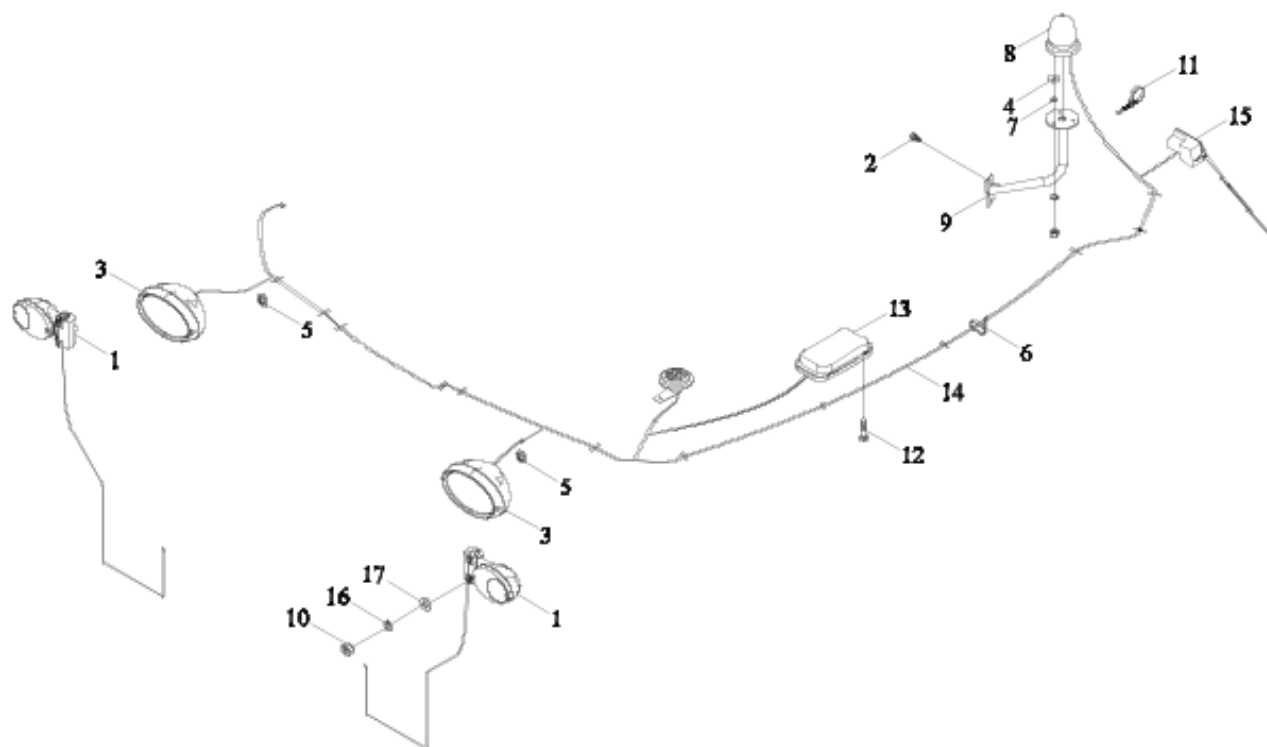

TE2S486010000K TOP LIGHT HARNESS INSTALLATION ASSEMBLY

No.	Part No.	Description	Version	QTY.	Remark
	TE2S486010000K	TOP LIGHT HARNESS INSTALLATION ASSEMBLY		1	
1	TS06486010001K	RIGHT ARMREST LIGHT ASSEMBLY		2	
2	GBT16674. 1-M8X16-8. 8-A2L	HEXAGON FLANGE NUT		2	
3	TS06486010003	TOP LIGHT ASSEMBLY		2	
4	TG1204. 486-01	RUBBER WASHER		3	
5	FT65. 48. 093	RUBBER RING-1		2	
6	3203505D9-L	TIE		9	
7	GBT96. 1-5-A3L	BIG WASHER		3	
8	TG1254. 486. 2	ROTATING ALARM LAMP		1	
9	TE2S486010002K	BRACKET WELDMENT		1	
10	GBT6170-M5-8-A2L	HEXAGON NUT, TYPE-1		5	
11	Q67405200	PLASTIC FASTENING STRIP		4	
12	GBT845-ST4. 8X16	SCREW		4	
13	TS06486010006	INNER TOP LIGHT ASSEMBLY		1	
14	TE2S486010001K	TOP LIGHT HARNESS ASSEMBLY		1	
15	TS06486010008	REAR SCRAPER ASSEMBLY		1	
16	GBT93-5-A3L	STANDARD SPRING WASHER		5	
17	GBT97. 1-5-A3L	FLAT WASHER		2	


TE2S487020000K COMBINED INSTRUMENT ASSEMBLY

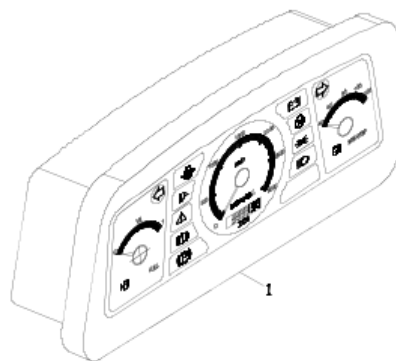

TE2S487020000K COMBINED INSTRUMENT ASSEMBLY

No.	Part No.	Description	Version	QTY.	Remark
1	TE2S487020000K	COMBINED INSTRUMENT ASSEMBLY		1	


FT250. 49. 001 TOOL BOX INSTALLATION ASSEMBLY

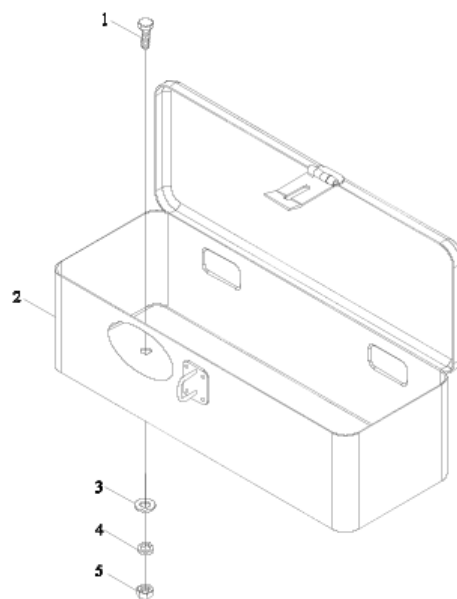

FT250. 49. 001 TOOL BOX INSTALLATION ASSEMBLY

No.	Part No.	Description	Version	QTY.	Remark
	FT250. 49. 001	TOOL BOX INSTALLATION ASSEMBLY			
1	GBT5781-M8X20-4. 8-A2L	BOLT		2	
2	FT250. 49. 010	TOOL BOX ASSEMBLY		1	
3	GBT97. 1-8-A0P	WASHER		2	
4	GBT93-8-A0P	WASHER		2	
5	GBT6170-M8-8-A2L	NUT		2	


TE2S501010000K OIL TANK INSTALLATION ASSEMBLY

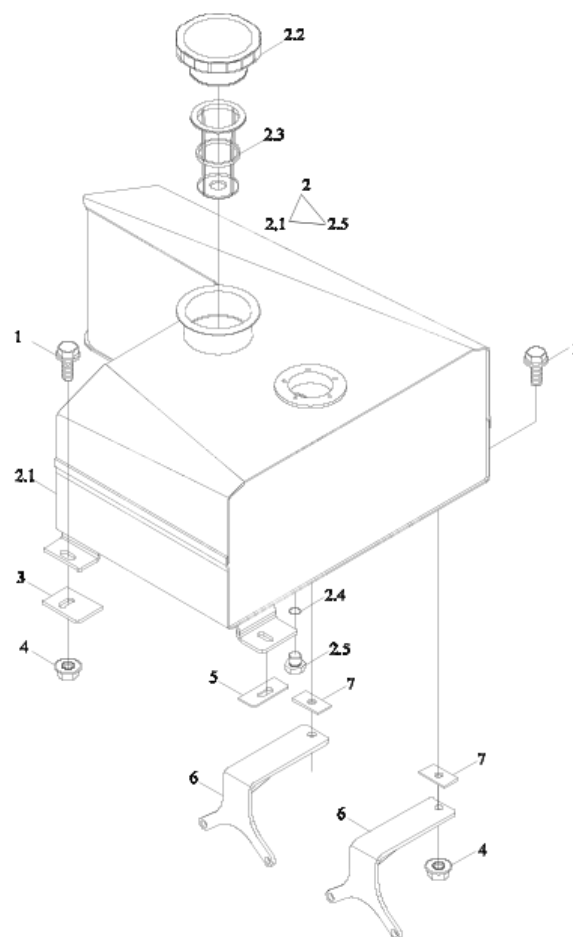

TE2S501010000K OIL TANK INSTALLATION ASSEMBLY

No.	Part No.	Description	Version	QTY.	Remark
	TE2S501010000K	OILTANKINSTALLATIONASSEMBLY		1	
1	GBT5789-M8X25-8. 8-A2L	HEXAGON FLANGE NUT		4	
2	TE2S501010001K	OIL TANK ASSEMBLY		1	
2.1	TE2S501010002K	OIL TANK WELDMENT		1	
2.2	TD800. 501A. 1. 1	OIL TANK COVER		1	
2.3	TE300. 50D. 1. 2	FILTER MESH ASSEMBLY		1	
2.4	TS09580010005	O-RING		1	
2.5	FT250. 50. 107	OIL DISCHARGING PLUG		1	
3	TL02501080010	SHOCK RING		1	
4	GBT6177. 1-M8-8-A2L	HEXAGON FLANGE NUT		4	
5	TL02502020028	SHOCK RING		1	
6	TE2S501010008K	OIL TANK BRACKET WELDMENT		2	
7	TE2S501010006K	SHOCK RING		2	


TE2S503010000K OIL CONVEYING PIPE ASSEMBLY

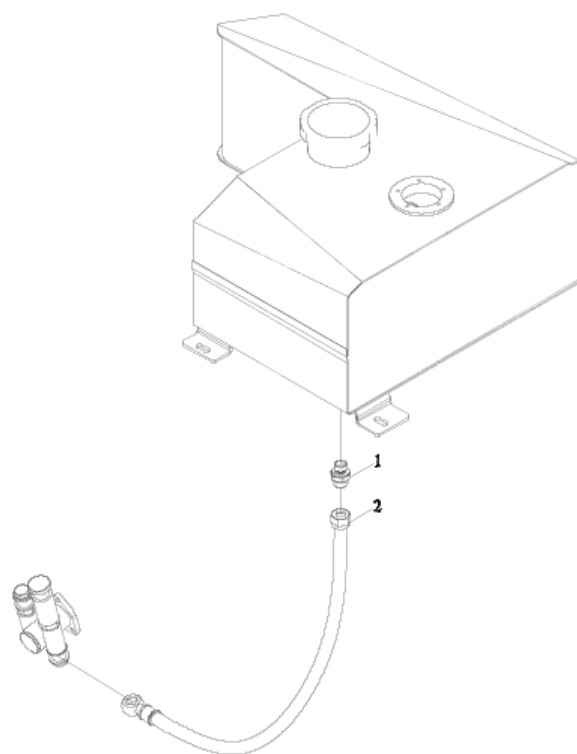

TE2S503010000K OIL CONVEYING PIPE ASSEMBLY

No.	Part No.	Description	Version	QTY.	Remark
1	TE2S503010000K	OIL CONVEYING PIPE ASSEMBLY		1	
	GV04701010039	END STRAIGHT THREAD CONNECTOR BODY 16-18		1	
	TE2S503010001K	OIL CONVEYING PIPE		1	


TL02551050000 LIFTER INSTALLATION ASSEMBLY-1

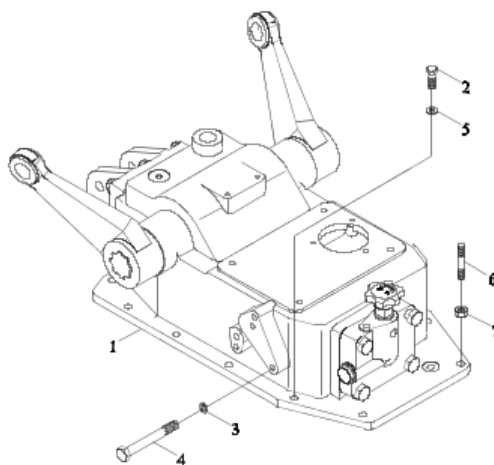

TL02551050000 LIFTER INSTALLATION ASSEMBLY-1

No.	Part No.	Description	Version	QTY.	Remark
	TL02551050000	LIFTER INSTALLATION ASSEMBLY		1	
1	TL02551050001	LIFTER ASSEMBLY		1	
2	GBT5783-M10X30-10.9-A3L	HEXAGON BOLT		10	
3	GBT93-10-A3L	STANDARD SPRING WASHER		3	
4	GBT5782-M10X80-8.8-A2L	HEXAGON BOLT		3	
5	TE250.55-03	WASHER		10	
6	GBT899-M10X25-10.9-A3L	DOUBLE END STUDS		2	
7	GBT6170-M10-10-A3L	HEXAGON NUT, TYPE-1		2	

TL02551050000 LIFTER INSTALLATION ASSEMBLY-2

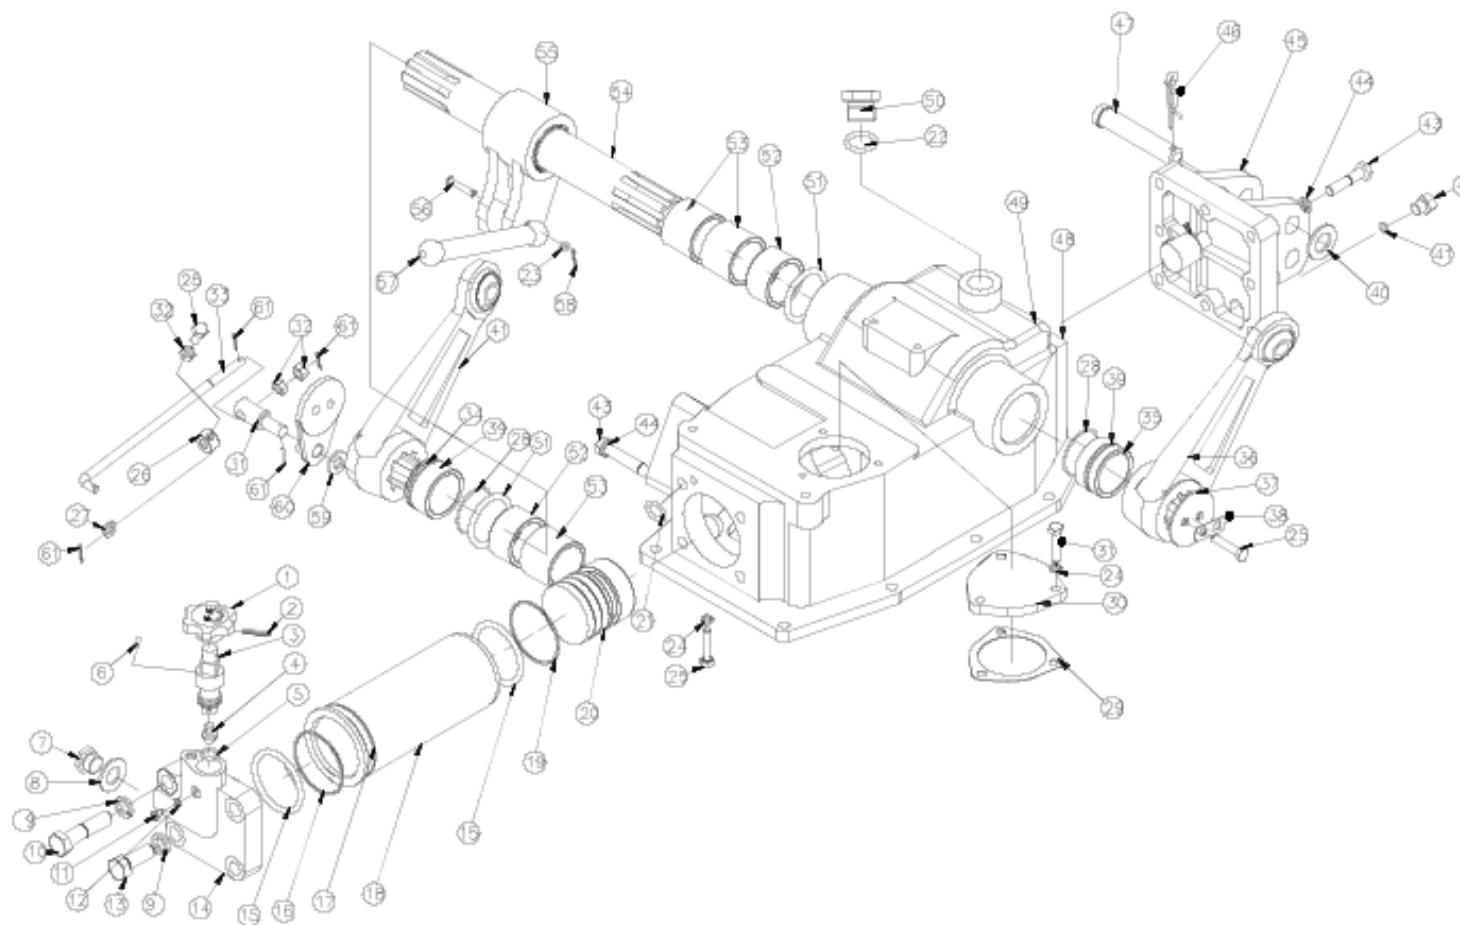

TL02551050000 LIFTER INSTALLATION ASSEMBLY-2

No.	Part No.	Description	Version	QTY.	Remark
	TL02551050001	LIFTER ASSEMBLY		1	
1	E300. 55. 140A	SPEED DROP VALVE HAND WHEEL		1	
2	GBT879-4X20	PIN		1	
3	FT250. 55. 128B	ADJUSTING VALVE ROD		1	
4	YT18. 55. 129	ADJUSTING VALVE		1	
5	GBT1235-22X2. 4	O-RING		1	
6	300. 55. 138	PIN		1	
7	25. 55. 109A	HEXAGON SCREW PLUG		1	
8	JBT982-18	WASHER		1	
9	GBT93-14	WASHER		4	
10	GBT5782-M14X60	BOLT		1	
11	GBT828-M5X6X4-22H	SCREW		1	
12	GBT97. 1-5	WASHER		1	
13	GBT5782-M14X50	BOLT		3	
14	TE300. 55. 126-2	CYLINDER HEAD		1	
15	GBT3452. 1-65X5. 3	O-RING		2	
16	GBT3452. 1-77. 5X3. 55	O-RING		1	
17	DF250. 55. 121	RECTANGULAR RETAINER RING		1	
18	TE300. 55. 102B	CYLINDER TRUNK		1	
19	DF250. 55. 161	RETAINER RING		1	
20	DF250. 55. 013	PISTON ASSEMBLY		1	
21	GBT1235-18X2. 4	O-RING		1	
22	GBT3765-23. 6X2. 9	O-RING		1	


TL02551050000 LIFTER INSTALLATION ASSEMBLY-2 (cont'd.)

No.	Part No.	Description	Version	QTY.	Remark
23	GBT97. 1-6	WASHER		1	
24	GBT93-8	SPRING WASHER		15	
25	GBT5783-M8X20	BOLT		17	
26	18. 55. 110	RETAINER BLOCK		1	
27	GBT97. 1-8	WASHER		1	
28	GBT3452. 1-43. 7X1. 8	O-RING		2	
29	YT18. 54. 125	OIL SUCTION PIPE JOINT PAPER WASHER		1	
30	160. 55. 168	COVER PLATE		1	
31	14. 55. 107A	LIMITING PIN SHAFT		1	
32	GBT6170-M8	NUT		3	
33	DF400. 55. 108	LIFTING ADJUSTING ROD		1	
34	GBT5783-M8X25	BOLT		3	
35	TE250. 55. 132	SEAL SLEEVE		2	
36	TE300. 55. 013	LIFTING ARM ASSEMBLY		2	
37	18. 55. 109	LIFTING SHAFT PRESSURE PLATE		1	
38	18. 55. 111	THRUST WASHER		1	
39	GBT3452. 1-48. 7X1. 8	O-RING		2	
40	GBT97. 1-20	WASHER		1	
41	JBT982-12	COMBINED SEAL WASHER		1	
42	18. 55. 108	OIL DISCHARGING PLUG		1	
43	GBT5782-M10X45	BOLT		8	
44	GBT93-10	WASHER		11	

TL02551050000 LIFTER INSTALLATION ASSEMBLY-2 (cont'd.)

No.	Part No.	Description	Version	QTY.	Remark
45	FT250. 55. 015A	REAR END COVER ASSEMBLY		1	
46	FT800. 55A. 237	SPRING LOCK PIN		1	
47	18. 55. 107	UPPER PULL ROD FRONT CONNECTING PIN		1	
48	18. 55. 159A	REAR END COVER PAPER GASKET		1	
49	TE300. 55. 101-3A	LIFTER HOUSING		1	
50	TE300. 55. 109	PLUG		1	
51	TE250. 55. 110	O-SEAL RING		2	
52	TE250. 55. 111	LIFTING SHAFT SLEEVE		2	
53	TE250. 55. 114	SPACER BUSH		3	
54	TE300. 55. 103	LIFTING SHAFT		1	
55	18. 55. 133-1	INNER LIFTING ARM		1	
56	GBT882-B6X50	PIN SHAFT		1	
57	TE300. 55. 132	TOP ROD		1	
58	GBT91-2X12	PIN		1	
59	GBT97. 1-12	WASHER		1	
60	FWX18. 55. 016	RETURN RETAINER PLATE		1	
61	GBT91-2X16	SPLIT PIN		3	

TL02561050000 SUSPENSION ASSEMBLY-1

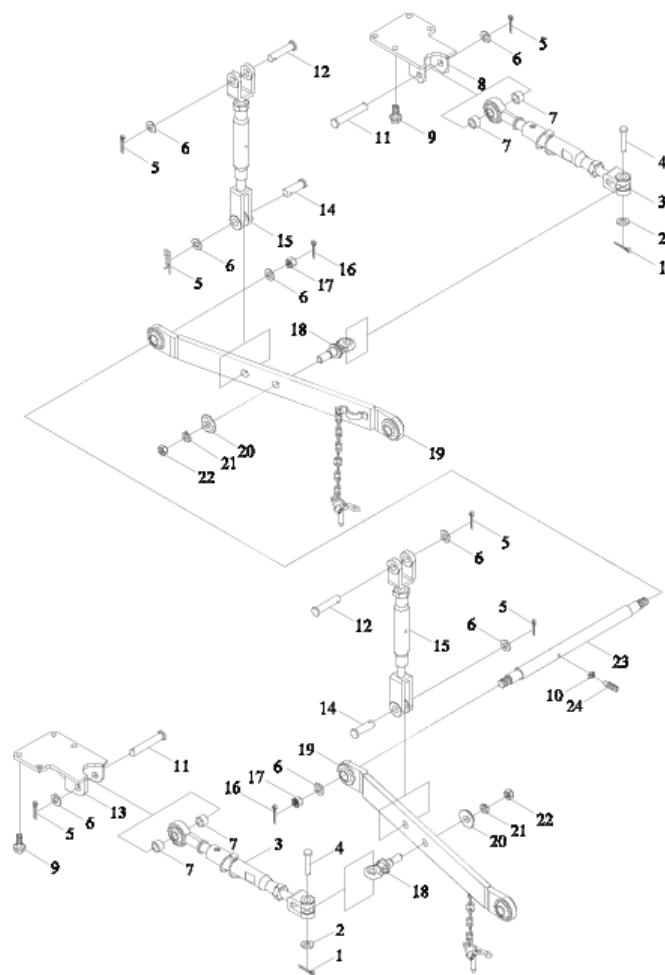


TL02561050000 SUSPENSION ASSEMBLY-1

No.	Part No.	Description	Version	QTY.	Remark
	TL02561050000	SUSPENSION ASSEMBLY		1	
1	GBT91-5X32-A3L	SPLIT PIN		2	
2	GBT97. 1-18-A3L	FLAT WASHER		2	
3	TE300. 56. 3a	LIMIT ROD ASSEMBLY		2	
4	GBT882-B18X55-A3L	PIN SHAFT		2	
5	GBT91-3. 2X36-A3L	SPLIT PIN		6	
6	GBT97. 1-20-A3L	FLAT WASHER		8	
7	FT300. 56A. 103	BUSH		4	
8	TE300. 56. 4a	RIGHT LIMITING ROD BRACKET WELDMENT		1	
9	GBT16674. 1-M14X30-10. 9-A3L	HEXAGON FLANGE NUT		8	
10	GBT6172. 1-M12-04-A3L	HEXAGON THIN NUT		1	
11	TE300. 56-07	LIMITING ROD CONNECTING PIN		2	
12	FT300. 56A. 101	LIFTING ROD UPPER CONNECTING PIN		2	
13	TE300. 56. 5a	LEFT LIMITING ROD BRACKET WELDMENT		1	
14	TE300. 56-03	LIFTING ROD LOWER CONNECTING PIN		2	
15	TE300. 56. 2	LIFTING ROD ASSEMBLY		2	
16	GBT91-4X40-A3L	SPLIT PIN		2	
17	GBT6178-M20-8-A9L	HEXAGON SLOTTED NUT, STYLE 1		2	
18	TE300. 56-11	LIMITING ROD REAR CONNECTING PIN		2	
19	TE300. 56. 1	LOWER PULL ROD ASSEMBLY		2	
20	TE300. 56-02	CIRCULAR PLATE		2	
21	GBT93-16-A3L	STANDARD SPRING WASHER		2	
22	GBT6170-M16-8-A3L	HEXAGON NUT, TYPE-1		2	

TL02561050000 SUSPENSION ASSEMBLY-1 (cont'd.)

No.	Part No.	Description	Version	QTY.	Remark
23	TE300.56-04	LOWER PULL ROD FIXING SHAFT		1	
24	FT250.56.125	THRUST SCREW		1	

TL02561050000 SUSPENSION ASSEMBLY-2

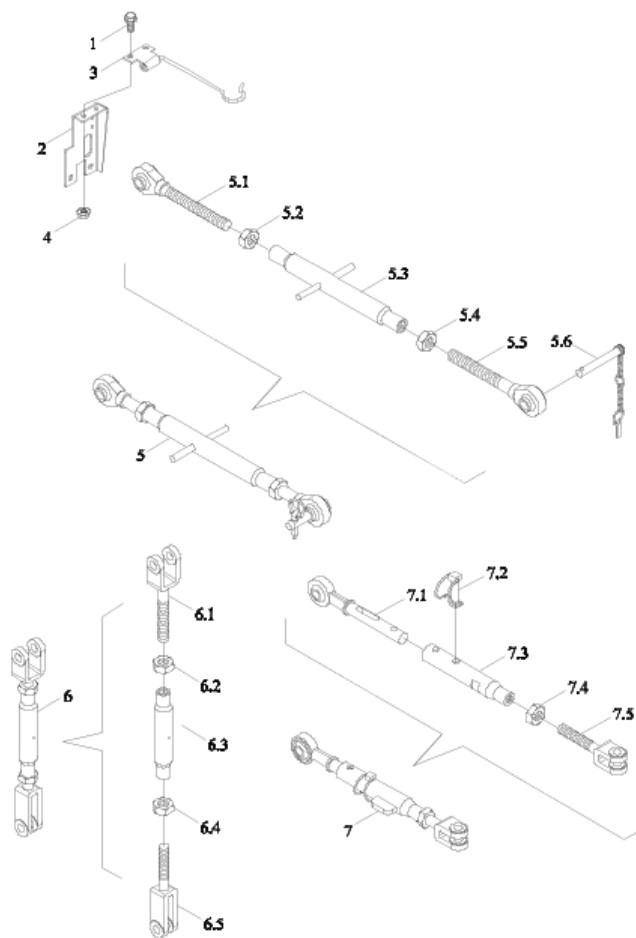


TL02561050000 SUSPENSION ASSEMBLY-2

No.	Part No.	Description	Version	QTY.	Remark
	TL02561050000	SUSPENSION ASSEMBLY		1	
1	GBT16674. 1-M8X20-8. 8-A2L	HEXAGON FLANGE NUT		2	
2	TE3C561040001	UPPER PULL ROD FIXED CLIP COMBINATION BRACKET		1	
3	TL02561020003a	UPPER PULL ROD FIXED CLIP COMBINATION		1	
4	GBT6177. 1-M8-8-A2L	HEXAGON FLANGE NUT		2	
5	FT250. 56. 012a	UPPER PULL ROD ASSEMBLY		1	
5. 1	FT250. 56. 017	UPPER PULL ROD FRONT ADJUSTING ROD ASSEMBLY		1	
5. 2	GBT6171-M22X1. 5-8-A3L	HEXAGON NUT, TYPE-1		1	
5. 3	FT250. 56. 031	ADJUSTING SCREW WELDMENT		1	
5. 4	GBT6171-M22X1. 5-LH-8-A3L	HEXAGON NUT, TYPE-1		1	
5. 5	FT250. 56. 019	UPPER PULL ROD REAR ADJUSTING ROD ASSEMBLY		1	
5. 6	FT300. 56A. 113	LOCKING PIN CHAIN ASSEMBLY		1	
6	TE300. 56. 2	LIFTING ROD ASSEMBLY		2	
6. 1	TE300. 56. 2-02a	LIFTING ROD UPPER CONNECTING FORK		1	
6. 2	TE300. 56. 2-03	NUT		1	
6. 3	TE300. 56. 2. 1a-01	RAISING ROD COIL		1	
6. 4	TE300. 56. 2-04	NUT		1	
6. 5	TE300. 56. 2-01a	LIFTING ROD LOWER CONNECTING FORK		1	
7	TE300. 56. 3a	LIMIT ROD ASSEMBLY		2	
7. 1	TE300. 56. 3a. 1	EXTENSIBLE ROD BALL ASSEMBLY		1	
7. 2	FT300. 56A. 023	LIMITING ROD LOCK PIN ASSEMBLY		1	
7. 3	TE300. 56. 3a-01	EXTENSIBLE GUIDE PIPE		1	

TL02561050000 SUSPENSION ASSEMBLY-2 (cont'd.)

No.	Part No.	Description	Version	QTY.	Remark
7.4	GBT6170-M22-8-A9L	HEXAGON NUT, TYPE-1		1	
7.5	TE300.56.3a-02	LIMITING ROD ADJUSTING SCREW		1	


TL02570050000 DISTRIBUTOR ASSEMBLY-1

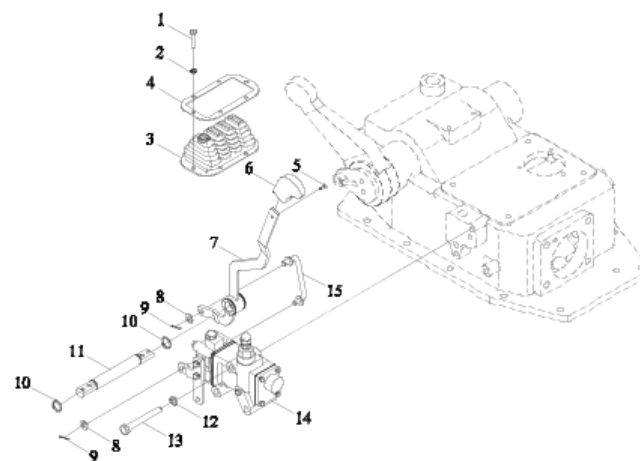

TL02570050000 DISTRIBUTOR ASSEMBLY-1

No.	Part No.	Description	Version	QTY.	Remark
	TL02570050000	DISTRIBUTOR ASSEMBLY		1	
1	GBT5782-M6X30-8. 8-A2L	HEXAGON BOLT		4	
2	GBT93-6-A3L	STANDARD SPRING WASHER		4	
3	TE254. 582H-09a	SEAL SLEEVE		1	
4	TE254. 582H-10	STEEL PLATE MAT		1	
5	GBT68-M4X10-4. 8-A2L	SLOTTED SCREW		1	
6	TB504. 552-04	HANDLE HEAD		1	
7	TL02570050001	CONTROL ARM ASSEMBLY		1	
8	GBT97. 1-8-A3L	FLAT WASHER		2	
9	GBT91-2X16-A3L	SPLIT PIN		2	
10	GBT894. 1-18	CIRCLIP FOR SHAFT		2	
11	TL02570050009	FIXING SHAFT		1	
12	GBT93-10-A3L	STANDARD SPRING WASHER		3	
13	GBT5782-M10X80-10. 9-A3L	HEXAGON BOLT		3	
14	TL02570050013	DISTRIBUTOR INSTALLATION ASSEMBLY		1	
15	TL02570050007	DISTRIBUTOR CONTROL PULL ROD ASSEMBLY		1	


TL02570050000 DISTRIBUTOR ASSEMBLY-2

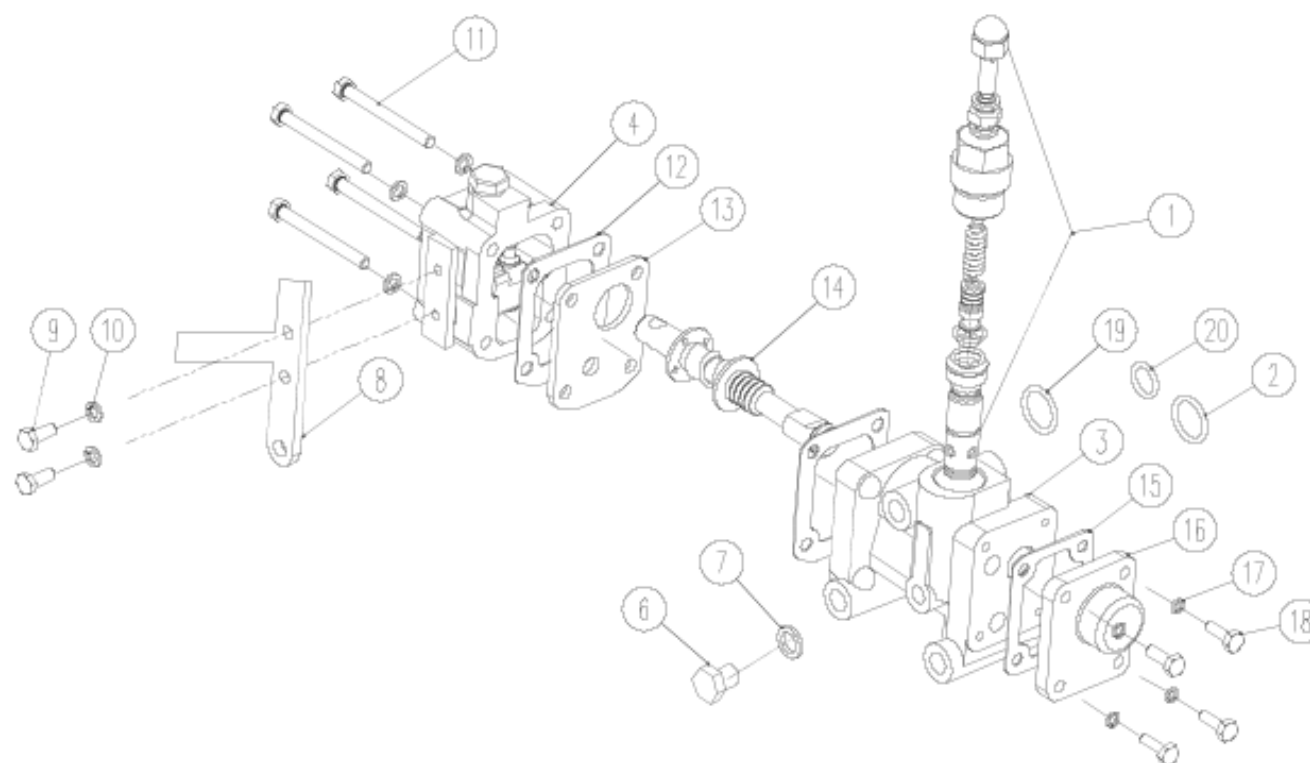

TL02570050000 DISTRIBUTOR ASSEMBLY-2

No.	Part No.	Description	Version	QTY.	Remark
	TL02570050013	DISTRIBUTOR INSTALLATION ASSEMBLY		1	
1	18FP. 57A. 012	SAFETY VALVE ASSEMBLY		1	
2	GBT3452. 1-21. 2X2. 65	O-RING		1	
3	18FP. 57A. 104B-1	DISTRIBUTOR HOUSING		1	
4	TE250. 57. 013	REARCOVERASSEMBLY		1	
6	TE250. 55. 300	PLUG M10X1		1	
7	GBT3765-8. 1X1. 6	O-RING		1	
8	TL02570050006	CONTROL ARM 3		1	
9	GBT5783-M6X14	BOLT		2	
10	GBT93-6	WASHER		6	
11	GBT5782-M6X60	BOLT		4	
12	18FP. 57. 107B	REAR COVER PAPER GASKET		2	
13	18FP. 57. 106	RETAINER PLATE		1	
14	18FP. 57. 010B	SLIDING VALVE ASSEMBLY		1	
15	18FP. 57. 103B	FRONT COVER PAPER GASKET		1	
16	18FP. 57. 102	FRONT COVER		1	
17	GBT93-5	WASHER		4	
18	GBT5783-M5X18	BOLT		4	
19	GBT3452. 1-19X2. 65	O-RING		1	
20	GBT3452. 1-13. 2X2. 65	O-RING		1	

TE2S581010000K OIL PUMP/PIPE/FILTER ASSEMBLY

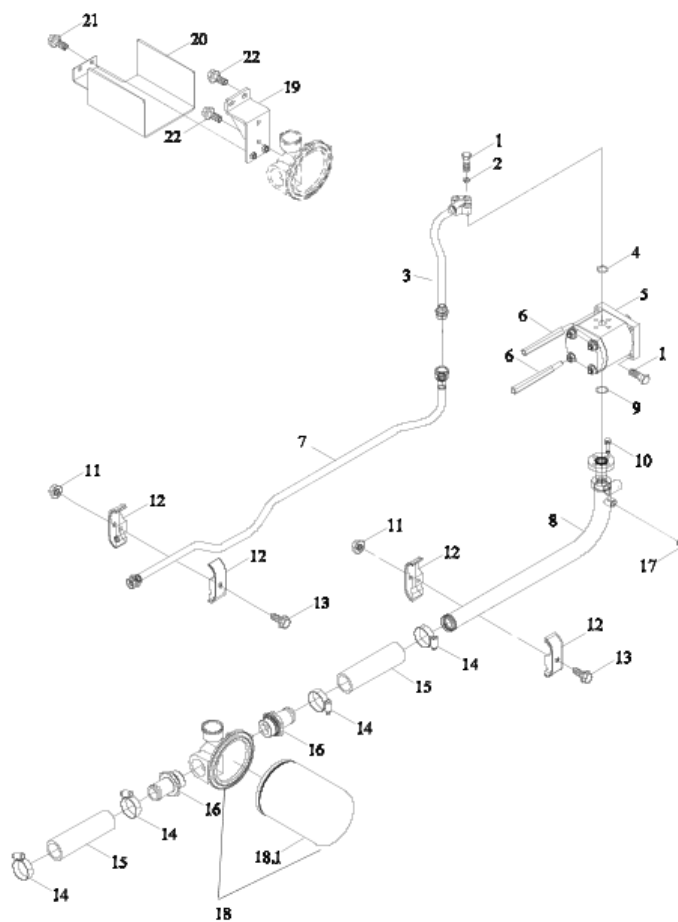


TE2S581010000K OIL PUMP/PIPE/FILTER ASSEMBLY

No.	Part No.	Description	Version	QTY.	Remark
	TE2S581010000K	OIL PUMP/PIPE/FILTER ASSEMBLY		1	
1	GBT5783-M8X30-8. 8-A2L	HEXAGON BOLT		5	
2	GBT93-8-A3L	STANDARD SPRING WASHER		11	
3	TE2S581010006K	PRESSURE OIL PIPE ASSEMBLY		1	
4	GBT3452. 1-18. 0X2. 65G	RUBBER O-SEAL RING		1	
5	TC02581240001K	GEAR PUMP		1	
6	TL02581010001	BOLT		2	
7	TE2S581010008K	PRESSURE OIL PIPE ASSEMBLY 1		1	
8	TE2S581010001K	GEAR PUMP INLET PIPE WELDMENT		1	
9	GBT3452. 1-21. 2X1. 80G	RUBBER O-SEAL RING		1	
10	GBT70. 1-M8X25-8. 8-A2L	INNER HEXAGON SCREW		4	
11	GBT6177. 1-M8-8-A2L	HEXAGON FLANGE NUT		2	
12	TE2S581010014K	OIL PIPE CLAMP AND RUBBER WASHER 35-15		4	
13	GBT16674. 1-M8X60-8. 8-A2L	HEXAGON FLANGE NUT		2	
14	Q67645	B-TYPE WORM TRANSMISSION HOSE CLAMP		4	
15	TS06581110003	OIL SUCTION RUBBER HOSE 1		2	
16	TE2S581010019K	ED STRAIGHT JOINT		2	
17	GV04701010035	SCREW PLUG M10X1		1	
18	TB1S581010017K	FILTER ASSEMBLY		1	
18. 1	TB1S581010018K	OIL SUCTION FILTER ELEMENT		1	
19	TE2S581010011K	OIL FILTER BRACKET WELDMENT		1	
20	TE2S581010017K	FILTER BONNET		1	

TE2S581010000K OIL PUMP/PIPE/FILTER ASSEMBLY (cont'd.)

No.	Part No.	Description	Version	QTY.	Remark
21	GBT16674.1-M8X16-8.8-A2L	HEXAGON FLANGE NUT		2	
22	GBT16674.1-M8X20-8.8-A2L	HEXAGON FLANGE NUT		4	

TE2S582010000K MULTI-WAY VALVE OIL PIPE ASSEMBLY-1

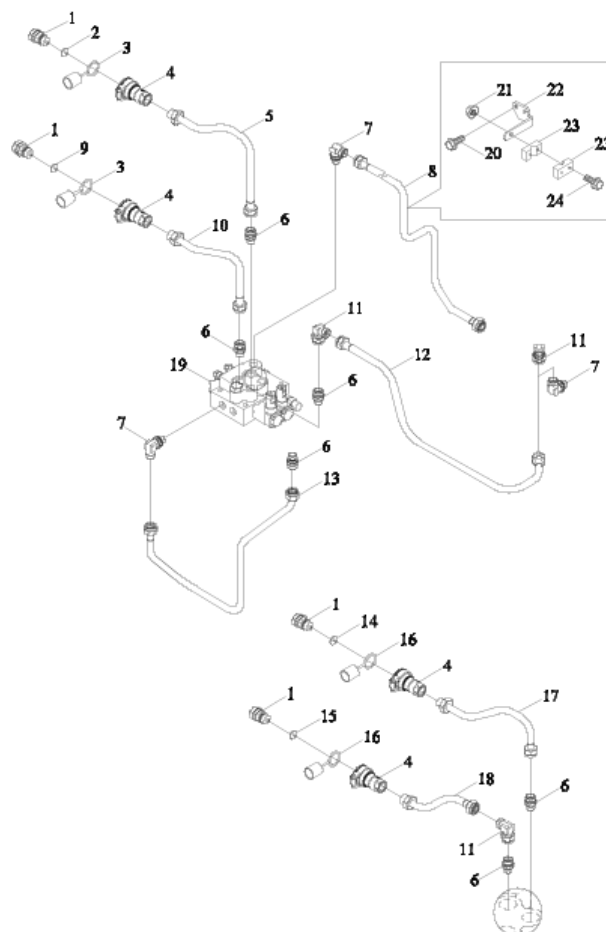


TE2S582010000K MULTI-WAY VALVE OIL PIPE ASSEMBLY-1

No.	Part No.	Description	Version	QTY.	Remark
	TE2S582010000K	MULTI-WAY VALVE OIL PIPE ASSEMBLY		1	
1	FT354. 58A. 032	JOINT		4	
2	TB1S582010003K	DUSTPROOF COVER R+		1	
3	TC02580010003K	DUSTPROOF COVER		2	
4	TB1S582010020K	JOINT		4	
5	TE2S582010007K	OUT STEEL PIPE ASSEMBLY 1		1	
6	TS06582130048	END STRAIGHT THREAD CONNECTOR BODY		6	
7	TC04582140012	CONNECTING JOINT M18-15		3	
8	TE2S582010004K	MULTI-WAY VALVE OIL INLET PIPE ASSEMBLY		1	
9	TB1S582010004K	DUSTPROOF COVER R-		1	
10	TE2S582010008K	OUT STEEL PIPE ASSEMBLY 2		1	
11	GBT3754-L15	JOINT		3	
12	TE2S582010012K	MULTI-WAY VALVE OIL RETURN PIPE ASSEMBLY		1	
13	TE2S582010018K	DISTRIBUTOR OIL INLET PIPE ASSEMBLY		1	
14	TB1S582010006K	DUSTPROOF COVER B-		1	
15	TB1S582010005K	DUSTPROOF COVER B+		1	
16	FT354. 58A. 302	DUSTPROOF COVER		2	
17	TE2S582010010K	OUT STEEL PIPE ASSEMBLY 4		1	
18	TE2S582010009K	OUT STEEL PIPE ASSEMBLY 3		1	
19	TL02582230001	MULTI-WAY VALVE ASSEMBLY		1	
20	GBT16674. 1-M8X16-8. 8-A2L	HEXAGON FLANGE NUT		2	
21	GBT6177. 1-M6-8-A2L	HEXAGON FLANGE NUT		2	
22	TE2S582010011K	PIPE CLAMP BRACKET		1	

TE2S582010000K MULTI-WAY VALVE OIL PIPE ASSEMBLY-1 (cont'd.)

No.	Part No.	Description	Version	QTY.	Remark
23	TH04402010061	SINGLE HOLE PIPE CLAMP 15		2	
24	GBT16674. 1-M6X50-8. 8-A2L	HEXAGON FLANGE NUT		2	


TE2S582010000K MULTI-WAY VALVE OIL PIPE ASSEMBLY-2

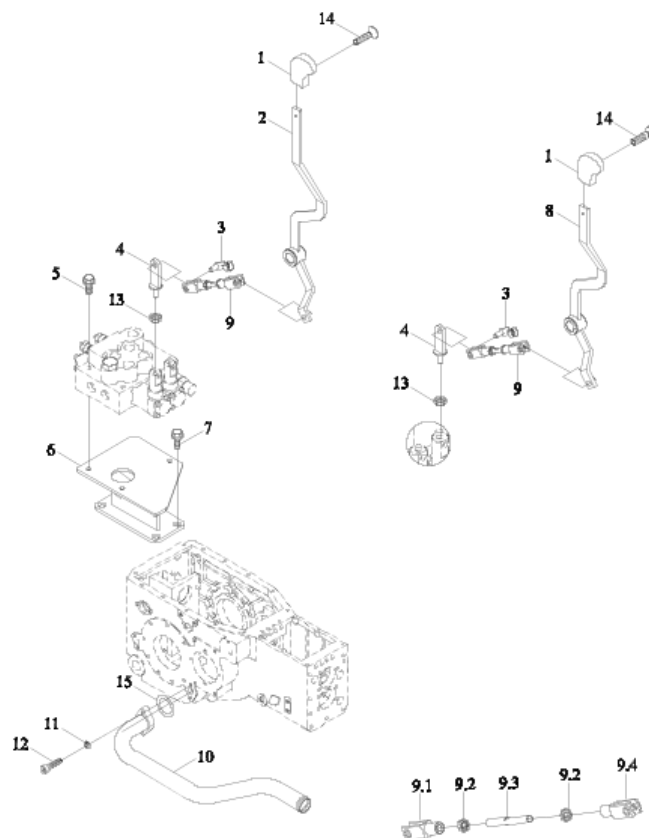

TE2S582010000K MULTI-WAY VALVE OIL PIPE ASSEMBLY-2

No.	Part No.	Description	Version	QTY.	Remark
	TE2S582010000K	MULTI-WAY VALVE OIL PIPE ASSEMBLY		1	
1	TB504.552-04	HANDLE HEAD		2	
2	TL02582280023	CONTROL ARM 1		1	
3	TS10552010005	LOCK PIN ASSEMBLY		4	
4	TL02582280020	SEAT		2	
5	GBT16674.1-M6X60-8.8-A2L	HEXAGON FLANGE NUT		3	
6	TL02582280015	MULTI-WAY VALVE BRACKET WELDMENT		1	
7	GBT16674.1-M12X20-8.8-A3L	HEXAGON FLANGE NUT		4	
8	TL02582280028	CONTROL ARM 2		1	
9	TL02582280021	MULTI-WAY VALVE CONTROL PULL ROD ASSEMBLY		2	
9.1	TS10552010004	RIGHT REVOLVING PULL ROD FORK		1	
9.2	GBT6172.1-M8-04-A2L	HEXAGON THIN NUT		2	
9.3	TL02582280022	MULTI-WAY VALVE CONTROL PULL ROD		1	
9.4	TS10552010003	LEFT REVOLVING PULL ROD FORK		1	
10	TE2S582010001K	OIL SUCTION PIPE ASSEMBLY		1	
11	GBT93-8-A3L	STANDARD SPRING WASHER		4	
12	GBT70.1-M8X30-8.8-A2L	INNER HEXAGON SCREW		2	
13	GBT6172.1-M8-04-A2L	HEXAGON THIN NUT		2	
14	GBT68-M4X10-4.8-A2L	SLOTTED SCREW		2	
15	GBT3452.1-32.5X2.65G	RUBBER O-SEAL RING		1	


TC03620010000K SAFETY BELT INSTALLATION ASSEMBLY

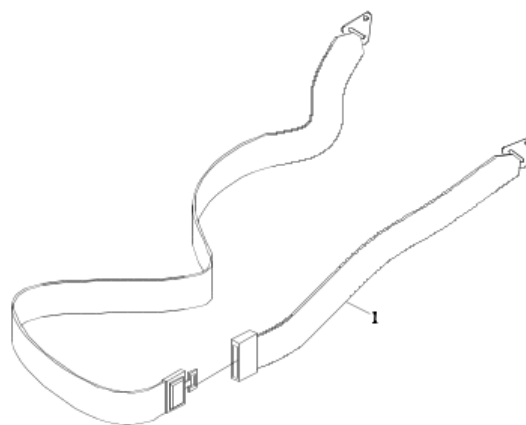

TC03620010000K SAFETY BELT INSTALLATION ASSEMBLY

No.	Part No.	Description	Version	QTY.	Remark
1	TC03620010000K	SAFETY BELT INSTALLATION ASSEMBLY		1	


TE254. 742 FRONT BALLAST ASSEMBLY

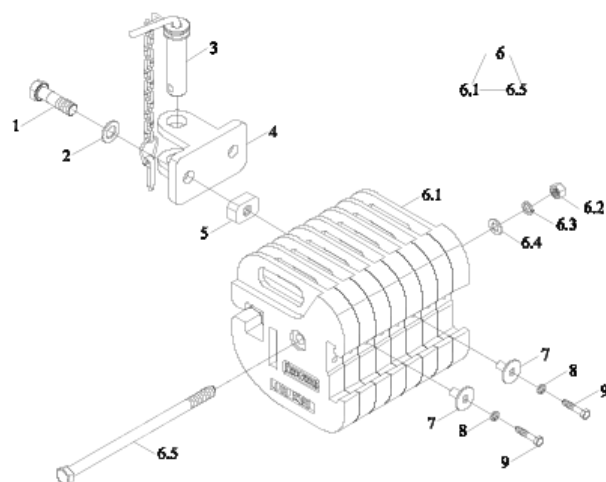

TE254. 742 FRONT BALLAST ASSEMBLY

No.	Part No.	Description	Version	QTY.	Remark
1	TE254. 742-04	TOWING BOLT		2	
2	GBT97. 1-20-A0P	FLAT WASHER		2	
3	TB400. 74A. 2	TOWING PIN AND LOCK PIN ASSEMBLY		1	
4	TE254. 742-02	TOWING LUG		1	
5	FT650. 74. 108	TOWING NUT		2	
6	TE254. 742. 2	FRONT BALLAST SMALL ASSEMBLY		1	
6. 1	TE254. 742-01	BALLAST BLOCK		8	
6. 2	GBT6170-M16-8-A3L	HEXAGON NUT, TYPE-1		1	
6. 3	GBT93-16-A0P	STANDARD SPRING WASHER		1	
6. 4	GBT97. 1-16-A0P	FLAT WASHER		1	
6. 5	TE254. 742-03	CONNECTING BOLT		1	
7	TE254. 742. 3	BASE PLATE		2	
8	GBT93-10-A0P	STANDARD SPRING WASHER		2	
9	GBT5783-M10X45-8. 8-A3L	HEXAGON BOLT		2	


TE2S810010000K HEATER INSTALLATION

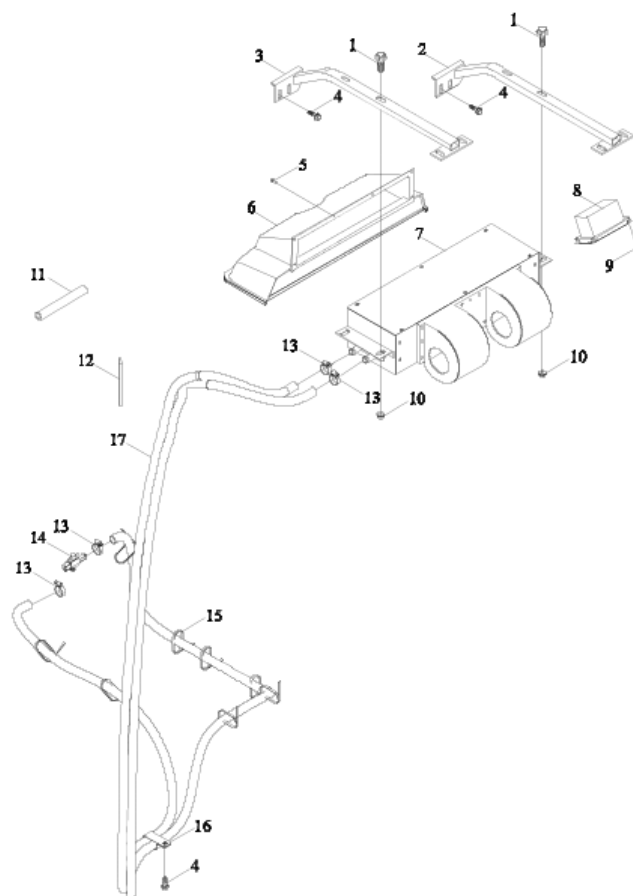

TE2S810010000K HEATER INSTALLATION

No.	Part No.	Description	Version	QTY.	Remark
	TE2S810010000K	HEATER INSTALLATION		1	
1	GBT16674. 1-M8X35-8. 8-A2L	HEXAGON FLANGE NUT		8	
2	TE2S810010003K	RIGHT BEAM		1	
3	TE2S810010004K	LEFT BEAM		1	
4	GBT16674. 1-M8X20-8. 8-A2L	HEXAGON FLANGE NUT		5	
5	GBT845-ST4. 2X16	SCREW		6	
6	TE2S810010013K	WINDWAY		1	
7	TE2S810010001K	HEATER ASSEMBLY		1	
8	TE2S810010002K	CONTROL PANEL		1	
9	GBT819. 2-M5X20-8. 8-A2L	SCREW		4	
10	GBT6177. 1-M8-8-A2L	HEXAGON FLANGE NUT		4	
11	TC03811030004	WATER OUT HOSE OF WARM AIR		1	
12	TE2S810010012K	GLUE PIECE		1	
13	Q676B25	C-TYPE WORM TRANSMISSION HOSE CLAMP		4	
14	TS04812010010	HEATER WATER INLET VALVE		1	
15	Q67405200	PLASTIC FASTENING STRIP		8	
16	TS06811010007	LOCKING CLAMP		1	
17	TE2S810010011K	WATER OUTLET HOSE OF WARM AIR		1	

FT250. 91B. 001 REAR BALLAST ASSEMBLY

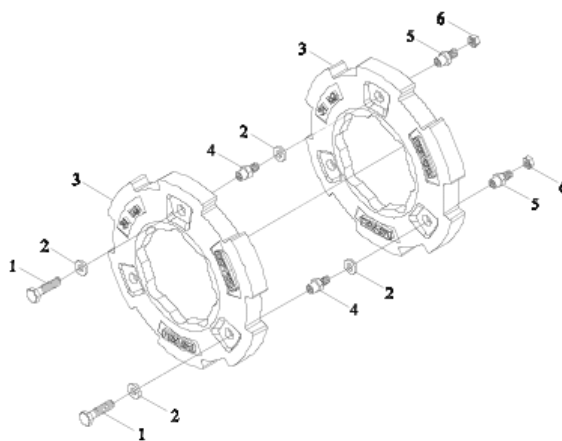

FT250. 91B. 001 REAR BALLAST ASSEMBLY

No.	Part No.	Description	Version	QTY.	Remark
	FT250. 91B. 001	REAR BALLAST ASSEMBLY			
1	TE350. 91-04	HEXAGON BOLT		3	
2	FT650. 34. 104	WASHER		6	
3	FT250. 91B. 101	REAR BALLAST		2	
4	FT250. 91B. 103	BALLAST SCREW II		3	
5	FT250. 91B. 102	BALLAST SCREW I		3	
6	GBT6171-M16X1. 5-8-A3L	HEXAGON NUT, TYPE-1		3	